SAND2006-4056
Unlimited Release
October 2006
Updated November 6, 2008

DAKOTA, A Multilevel Parallel Object-Oriented Framework for Design Optimization, Parameter Estimation, Uncertainty Quantification, and Sensitivity Analysis

Version 4.2 Developers Manual

Michael S. Eldred, Brian M. Adams, David M. Gay, Laura P. Swiler
Optimization and Uncertainty Estimation Department

Karen Haskell
Scientific Applications and User Support Department

William J. Bohnhoff
Radiation Transport Department

John P. Eddy
System Readiness and Sustainment Technologies Department

William E. Hart, Jean-Paul Watson
Discrete Algorithms and Math Department

Sandia National Laboratories
P.O. Box 5800
Albuquerque, New Mexico 87185

Patricia D. Hough, Tammy G. Kolda
Informatics and Decision Sciences Department

Sandia National Laboratories
P.O. Box 969
Livermore, CA 94551

Abstract

The DAKOTA (Design Analysis Kit for Optimization and Terascale Applications) toolkit provides a flexible and extensible interface between simulation codes and iterative analysis methods. DAKOTA contains algorithms for optimization with gradient and nongradient-based methods; uncertainty quantification with sampling, reliability, and stochastic finite element methods; parameter estimation with nonlinear least squares methods; and sensitivity/variance analysis with design of experiments and parameter study methods. These capabilities may be used on their own or as components within advanced strategies such as surrogate-based optimization, mixed integer nonlinear programming, or optimization under uncertainty. By employing object-oriented design to implement abstractions of the key components required for iterative systems analyses, the DAKOTA toolkit provides a flexible and extensible problem-solving environment for design and performance analysis of computational models on high performance computers.

This report serves as a developers manual for the DAKOTA software and describes the DAKOTA class hierarchies and their interrelationships. It derives directly from annotation of the actual source code and provides detailed class documentation, including all member functions and attributes.

Contents

1 DAKOTA Developers Manual **13**

1.1 Introduction 13

1.2 Overview of DAKOTA 13

1.3 Services 17

1.4 Additional Resources 18

2 DAKOTA Namespace Index **21**

2.1 DAKOTA Namespace List 21

3 DAKOTA Hierarchical Index **23**

3.1 DAKOTA Class Hierarchy 23

4 DAKOTA Class Index **27**

4.1 DAKOTA Class List 27

5 DAKOTA File Index **31**

5.1 DAKOTA File List 31

6 DAKOTA Page Index **33**

6.1 DAKOTA Related Pages 33

7 DAKOTA Namespace Documentation **35**

7.1 Dakota Namespace Reference 35

7.2 SIM Namespace Reference 141

8 DAKOTA Class Documentation **143**

8.1 ActiveSet Class Reference 143

8.2 AllConstraints Class Reference 146

8.3 AllVariables Class Reference . . . 150
8.4 AnalysisCode Class Reference . . . 155
8.5 Analyzer Class Reference . . . 159
8.6 ApplicationInterface Class Reference . . . 163
8.7 Approximation Class Reference . . . 174
8.8 ApproximationInterface Class Reference . . . 181
8.9 APPSEvalMgr Class Reference . . . 185
8.10 APPSOptimizer Class Reference . . . 188
8.11 Array Class Template Reference . . . 191
8.12 BaseConstructor Struct Reference . . . 195
8.13 BaseVector Class Template Reference . . . 196
8.14 BasisPolyApproximation Class Reference . . . 200
8.15 BasisPolynomial Class Reference . . . 204
8.16 BiStream Class Reference . . . 210
8.17 BoStream Class Reference . . . 214
8.18 COLINApplication Class Reference . . . 217
8.19 COLINOptimizer Class Template Reference . . . 220
8.20 ColinPoint Class Reference . . . 224
8.21 CollaborativeHybridStrategy Class Reference . . . 225
8.22 CommandLineHandler Class Reference . . . 227
8.23 CommandShell Class Reference . . . 229
8.24 ConcurrentStrategy Class Reference . . . 231
8.25 CONMINOptimizer Class Reference . . . 234
8.26 Constraints Class Reference . . . 242
8.27 CtelRegexp Class Reference . . . 251
8.28 DataFitSurrModel Class Reference . . . 253
8.29 DataInterface Class Reference . . . 261
8.30 DataMethod Class Reference . . . 263
8.31 DataMethodRep Class Reference . . . 265
8.32 DataModel Class Reference . . . 277
8.33 DataModelRep Class Reference . . . 279
8.34 DataResponses Class Reference . . . 283
8.35 DataResponsesRep Class Reference . . . 285
8.36 DataStrategy Class Reference . . . 289

8.37 DataStrategyRep Class Reference . . . 291
8.38 DataVariables Class Reference . . . 294
8.39 DataVariablesRep Class Reference . . . 296
8.40 DDACEDesignCompExp Class Reference . . . 302
8.41 DirectApplicInterface Class Reference . . . 306
8.42 DistinctConstraints Class Reference . . . 312
8.43 DistinctVariables Class Reference . . . 316
8.44 DOTOptimizer Class Reference . . . 323
8.45 EffGlobalMinimizer Class Reference . . . 328
8.46 EmbeddedHybridStrategy Class Reference . . . 331
8.47 ErrorTable Struct Reference . . . 333
8.48 ForkAnalysisCode Class Reference . . . 334
8.49 ForkApplicInterface Class Reference . . . 336
8.50 FSUDesignCompExp Class Reference . . . 339
8.51 FunctionCompare Class Template Reference . . . 343
8.52 GaussProcApproximation Class Reference . . . 344
8.53 GenLaguerreOrthogPolynomial Class Reference . . . 350
8.54 GetLongOpt Class Reference . . . 352
8.55 Graphics Class Reference . . . 356
8.56 GridApplicInterface Class Reference . . . 360
8.57 HermiteOrthogPolynomial Class Reference . . . 363
8.58 HierarchSurrModel Class Reference . . . 365
8.59 HybridStrategy Class Reference . . . 369
8.60 Interface Class Reference . . . 371
8.61 InterpPolyApproximation Class Reference . . . 381
8.62 Iterator Class Reference . . . 387
8.63 JacobiOrthogPolynomial Class Reference . . . 399
8.64 JEGAOptimizer Class Reference . . . 401
8.65 JEGAOptimizer::Driver Class Reference . . . 409
8.66 JEGAOptimizer::Evaluator Class Reference . . . 412
8.67 JEGAOptimizer::EvaluatorCreator Class Reference . . . 420
8.68 LagrangeInterpPolynomial Class Reference . . . 422
8.69 LaguerreOrthogPolynomial Class Reference . . . 425
8.70 LeastSq Class Reference . . . 427

8.71 LegendreOrthogPolynomial Class Reference . . . 431
8.72 List Class Template Reference . . . 433
8.73 Matrix Class Template Reference . . . 437
8.74 MergedConstraints Class Reference . . . 440
8.75 MergedVariables Class Reference . . . 443
8.76 Minimizer Class Reference . . . 448
8.77 Model Class Reference . . . 456
8.78 MPIPackBuffer Class Reference . . . 486
8.79 MPIUnpackBuffer Class Reference . . . 489
8.80 NCSUOptimizer Class Reference . . . 492
8.81 NestedModel Class Reference . . . 495
8.82 NIDRProblemDescDB Class Reference . . . 501
8.83 NL2Res Struct Reference . . . 506
8.84 NL2SOLLeastSq Class Reference . . . 507
8.85 NLPQLPOptimizer Class Reference . . . 510
8.86 NLSSOLLeastSq Class Reference . . . 515
8.87 NoDBBaseConstructor Struct Reference . . . 517
8.88 NonD Class Reference . . . 518
8.89 NonDAdaptImpSampling Class Reference . . . 525
8.90 NonDEvidence Class Reference . . . 529
8.91 NonDExpansion Class Reference . . . 535
8.92 NonDGlobalReliability Class Reference . . . 538
8.93 NonDIncremLHSSampling Class Reference . . . 541
8.94 NonDIntegration Class Reference . . . 544
8.95 NonDLHSSampling Class Reference . . . 547
8.96 NonDLocalReliability Class Reference . . . 550
8.97 NonDPolynomialChaos Class Reference . . . 557
8.98 NonDQuadrature Class Reference . . . 559
8.99 NonDReliability Class Reference . . . 562
8.100 NonDSampling Class Reference . . . 566
8.101 NonDSparseGrid Class Reference . . . 572
8.102 NonDStochCollocation Class Reference . . . 576
8.103 NPSOLOptimizer Class Reference . . . 577
8.104 Optimizer Class Reference . . . 581

8.105OrthogonalPolynomial Class Reference 586
8.106OrthogPolyApproximation Class Reference 588
8.107ParallelConfiguration Class Reference 595
8.108ParallelDirectApplicInterface Class Reference 597
8.109ParallelLevel Class Reference 599
8.110ParallelLibrary Class Reference 602
8.111ParamResponsePair Class Reference 613
8.112ParamStudy Class Reference 617
8.113partial_prp_equality Struct Reference 620
8.114partial_prp_hash Struct Reference 621
8.115ProblemDescDB Class Reference 622
8.116PStudyDACE Class Reference 633
8.117PSUADEDesignCompExp Class Reference 636
8.118RecastBaseConstructor Struct Reference 639
8.119RecastModel Class Reference 640
8.120Response Class Reference 647
8.121ResponseRep Class Reference 652
8.122SequentialHybridStrategy Class Reference 659
8.123SerialDirectApplicInterface Class Reference 664
8.124SingleMethodStrategy Class Reference 666
8.125SingleModel Class Reference 668
8.126SNLLBase Class Reference 671
8.127SNLLLeastSq Class Reference 674
8.128SNLLOptimizer Class Reference 678
8.129SOLBase Class Reference 685
8.130Strategy Class Reference 688
8.131String Class Reference 696
8.132SurfpackApproximation Class Reference 699
8.133SurrBasedGlobalMinimizer Class Reference 703
8.134SurrBasedLocalMinimizer Class Reference 705
8.135SurrBasedMinimizer Class Reference 712
8.136SurrogateDataPoint Class Reference 717
8.137SurrogateDataPointRep Class Reference 719
8.138SurrogateModel Class Reference 721

8.139 SysCallAnalysisCode Class Reference . . . 727
8.140 SysCallApplicInterface Class Reference . . . 729
8.141 TANA3Approximation Class Reference . . . 732
8.142 TaylorApproximation Class Reference . . . 735
8.143 Variables Class Reference . . . 737
8.144 Vector Class Template Reference . . . 746

9 DAKOTA File Documentation **751**
9.1 dll_api.C File Reference . . . 751
9.2 dll_api.h File Reference . . . 753
9.3 JEGAOptimizer.C File Reference . . . 754
9.4 JEGAOptimizer.H File Reference . . . 755
9.5 library_mode.C File Reference . . . 756
9.6 main.C File Reference . . . 758
9.7 restart_util.C File Reference . . . 759

10 Recommended Practices for DAKOTA Development **763**
10.1 Introduction . . . 763
10.2 Style Guidelines . . . 763
10.3 File Naming Conventions . . . 766
10.4 Class Documentation Conventions . . . 766

11 Instructions for Modifying DAKOTA's Input Specification **769**
11.1 Modify dakota.input.nspec . . . 769
11.2 Rebuild NIDR_keywds.H . . . 770
11.3 Update NIDRProblemDescDB.C in Dakota/src . . . 770
11.4 Update ProblemDescDB.C in Dakota/src . . . 772
11.5 Update Corresponding Data Classes . . . 773
11.6 Use get_<data_type>() Functions . . . 773
11.7 Update the Documentation . . . 774

12 Interfacing with DAKOTA as a Library **775**
12.1 Introduction . . . 775
12.2 Quick start: examples and test code . . . 776
12.3 Comparison to main.C . . . 776

12.4 Problem database population 777
12.5 Instantiating the strategy 780
12.6 Defining the direct application interface 780
12.7 Additional updates 782
12.8 Executing the strategy 783
12.9 Retrieving data after a run 783
12.10 Summary 783

13 Performing Function Evaluations **785**
13.1 Synchronous function evaluations 785
13.2 Asynchronous function evaluations 785
13.3 Analyses within each function evaluation 786

14 Software Tools for DAKOTA Development **787**
14.1 Introduction 787
14.2 Subversion for Version Control 787
14.3 GNU Autotools for Configuration Management 788

Chapter 1

DAKOTA Developers Manual

Author:

Michael S. Eldred, Brian M. Adams, Karen Haskell, William J. Bohnhoff, John P. Eddy, David M. Gay, William E. Hart, Patricia D. Hough, Tamara G. Kolda, Laura P. Swiler, Jean-Paul Watson

1.1 Introduction

The DAKOTA (Design Analysis Kit for Optimization and Terascale Applications) toolkit provides a flexible, extensible interface between analysis codes and iteration methods. DAKOTA contains algorithms for optimization with gradient and nongradient-based methods, uncertainty quantification with sampling, reliability, and stochastic finite element methods, parameter estimation with nonlinear least squares methods, and sensitivity/variance analysis with design of experiments and parameter study capabilities. These capabilities may be used on their own or as components within advanced strategies such as surrogate-based optimization, mixed integer nonlinear programming, or optimization under uncertainty. By employing object-oriented design to implement abstractions of the key components required for iterative systems analyses, the DAKOTA toolkit provides a flexible problem-solving environment as well as a platform for rapid prototyping of new solution approaches.

The Developers Manual focuses on documentation of the class structures used by the DAKOTA system. It derives directly from annotation of the actual source code. For information on input command syntax, refer to the `Reference Manual`, and for a tour of DAKOTA features and capabilities, refer to the Users Manual.

1.2 Overview of DAKOTA

In the DAKOTA system, the *strategy* creates and manages *iterators* and *models*. In the simplest case, the strategy creates a single iterator and a single model and executes the iterator on the model to perform a single study. In a more advanced case, a hybrid optimization strategy might manage a global optimizer operating on a low-fidelity model in coordination with a local optimizer operating on a high-fidelity model. And on the high end, a surrogate-based optimization under uncertainty strategy would employ an uncertainty quantification iterator nested within

an optimization iterator and would employ truth models layered within surrogate models. Thus, iterators and models provide both stand-alone capabilities as well as building blocks for more sophisticated studies.

A model contains a set of *variables*, an *interface*, and a set of *responses*, and the iterator operates on the model to map the variables into responses using the interface. Each of these components is a flexible abstraction with a variety of specializations for supporting different types of iterative studies. In a DAKOTA input file, the user specifies these components through strategy, method, model, variables, interface, and responses keyword specifications.

The use of class hierarchies provides a mechanism for extensibility in DAKOTA components. In each of the various class hierarchies, adding a new capability typically involves deriving a new class and providing a small number of virtual function redefinitions. These redefinitions define the coding portions specific to the new derived class, with the common portions already defined at the base class. Thus, with a small amount of new code, the existing facilities can be extended, reused, and leveraged for new purposes.

The software components are presented in the following sections using a top-down order.

1.2.1 Strategies

Class hierarchy: Strategy.

Strategies provide a control layer for creation and management of iterators and models. Specific strategies include:

- SingleMethodStrategy: the simplest strategy. A single iterator is run on a single model to perform a single study.
- HybridStrategy: hybrid minimization using a set of iterators employing a corresponding set of models of varying fidelity. Coordination approaches among the iterators include collaborative, embedded, and sequential approaches, as embodied in the CollaborativeHybridStrategy, EmbeddedHybridStrategy, and SequentialHybridStrategy derived classes.
- ConcurrentStrategy: two similar algorithms are available: (1) multi-start iteration from several different starting points, and (2) pareto set optimization for several different multiobjective weightings. Employs a single iterator with a single model, but runs multiple instances of the iterator concurrently for different settings within the model.

1.2.2 Iterators

Class hierarchy: Iterator.

The iterator hierarchy contains a variety of iterative algorithms for optimization, uncertainty quantification, nonlinear least squares, design of experiments, and parameter studies. The hierarchy is divided into Minimizer and Analyzer branches. The Minimizer classes include:

- Optimization: Optimizer provides a base class for the DOTOptimizer, CONMINOptimizer, NPSOLOptimizer, NLPQLPOptimizer, and SNLLOptimizer gradient-based optimization libraries and the APPSOptimizer, COLINOptimizer, JEGAOptimizer, and NCSUOptimizer nongradient-based optimization methods and libraries.

- Parameter estimation: LeastSq provides a base class for NL2SOLLeastSq, a least-squares solver based on NL2SOL, SNLLLeastSq, a Gauss-Newton least-squares solver, and NLSSOLLeastSq, an SQP-based least-squares solver.
- Surrogate-based minimization (optimization and nonlinear least squares): SurrBasedMinimizer provides a base class for SurrBasedLocalMinimizer, SurrBasedGlobalMinimizer, and EffGlobalMinimizer. The surrogate-based local and global methods employ a single iterator with any of the available SurrogateModel capabilities (local, multipoint, or global data fits or hierarchical approximations) and perform a sequence of approximate optimizations, each involving build, optimize, and verify steps. The efficient global method, on the other hand, hard-wires a recursion involving Gaussian process surrogate models coupled with the DIRECT global optimizer to maximize an expected improvement function.

and the Analyzer classes include:

- Uncertainty quantification: NonD provides a base class for NonDReliability (reliability analysis), NonDEvidence (Dempster-Shafer Theory of Evidence), NonDPolynomialChaos (generalized polynomial chaos expansions), NonDSampling, and NonDIntegration. NonDReliability is further specialized with local and global methods (NonDLocalReliability and NonDGlobalReliability), NonDIntegration is further specialized with quadrature and cubature methods (NonDQuadrature and NonDCubature), and NonDSampling is further specialized with the NonDLHSSampling class for Latin hypercube and Monte Carlo sampling, the NonDIncremLHSSampling class for incremental Latin hypercube sampling, and NonDAdaptImpSampling for multimodal adaptive importance sampling.
- Parameter studies and design of experiments: PStudyDACE provides a base class for ParamStudy, which provides capabilities for directed parameter space interrogation, PSUADEDesignCompExp, which provides access to the Morris One-At-a-Time (MOAT) method for parameter screening, and DDACEDesignCompExp and FSUDesignCompExp, which provide for parameter space exploration through design and analysis of computer experiments. NonDLHSSampling from the uncertainty quantification branch also supports a design of experiments mode.

1.2.3 Models

Class hierarchy: Model.

The model classes are responsible for mapping variables into responses when an iterator makes a function evaluation request. There are several types of models, some supporting sub-iterators and sub-models for enabling layered and nested relationships. When sub-models are used, they may be of arbitrary type so that a variety of recursions are supported.

- SingleModel: variables are mapped into responses using a single Interface object. No sub-iterators or sub-models are used.
- SurrogateModel: variables are mapped into responses using an approximation. The approximation is built and/or corrected using data from a sub-model (the truth model) and the data may be obtained using a sub-iterator (a design of experiments iterator). SurrogateModel has two derived classes: DataFitSurrModel for data fit surrogates and HierarchSurrModel for hierarchical models of varying fidelity. The relationship of the sub-iterators and sub-models is considered to be "layered" since they are not used as part of every response evaluation on the top level model, but rather used periodically in surrogate update and verification steps.

- NestedModel: variables are mapped into responses using a combination of an optional Interface and a sub-iterator/sub-model pair. The relationship of the sub-iterators and sub-models is considered to be "nested" since they are used to perform a complete iterative study as part of every response evaluation on the top level model.
- RecastModel: recasts the inputs and outputs of a sub-model for the purposes of variable transformations (e.g., variable scaling, transformations to standardized random variables) and problem reformulation (e.g., multiobjective optimization, response scaling, augmented Lagrangian merit functions, expected improvement).

1.2.4 Variables

Class hierarchy: Variables.

The Variables class hierarchy manages design, uncertain, and state variable types for continuous and discrete domain types. This hierarchy is specialized according to various views of the data.

- DistinctVariables: both variable and domain type distinctions are retained, i.e. separate arrays for design, uncertain, and state variables types and for continuous and discrete domains.
- AllVariables: variable types are combined and domain type distinction is retained, i.e. design, uncertain, and state variable types combined into a single continuous variables array and a single discrete variables array.
- MergedVariables: variable type distinction is retained and domain types are combined, i.e. continuous and discrete variables merged into continuous arrays (integrality is relaxed) for design, uncertain, and state variable types.

The variables view that is chosen depends on the type of iterative study. For design optimization and uncertainty quantification, for example, variable and domain type distinctions are important and a DistinctVariables view is used. For parameter studies and design of experiments, however, the variable type distinctions can be ignored and an AllVariables view is used.

The Constraints hierarchy manages bound, linear, and nonlinear constraints and utilizes the same specializations for managing bounds on the variables (see DistinctConstraints, AllConstraints, and MergedConstraints).

1.2.5 Interfaces

Class hierarchy: Interface.

Interfaces provide access to simulation codes or, conversely, approximations based on simulation code data. In the simulation case, an ApplicationInterface is used. ApplicationInterface is specialized according to the simulation invocation mechanism, for which the following nonintrusive approaches

- SysCallApplicInterface: the simulation is invoked using a system call (the C function `system()`). Asynchronous invocation utilizes a background system call. Utilizes the SysCallAnalysisCode class to define syntax for input filter, analysis code, output filter, or combined spawning, which in turn utilize the CommandShell utility.

- ForkApplicInterface: the simulation is invoked using a fork (the `fork/exec/wait` family of functions). Asynchronous invocation utilizes a nonblocking fork. Utilizes the ForkAnalysisCode class for lower level fork operations.
- GridApplicInterface: the simulation is invoked using distributed resource facilities. This capability is experimental and still under development. The design is evolving into the use of Condor and/or Globus tools.

and the following semi-intrusive approach

- DirectApplicInterface: the simulation is linked into the DAKOTA executable and is invoked using a procedure call. Asynchronous invocations will utilize nonblocking threads (capability not yet available).

are supported. Scheduling of jobs for asynchronous local, message passing, and hybrid parallelism approaches is performed in the ApplicationInterface class, with job initiation and job capture specifics implemented in the derived classes.

In the data fit approximation case, global, multipoint, or local approximations to simulation code response data can be built and used as surrogates for the actual, expensive simulation. The interface class providing this capability is

- ApproximationInterface: builds an approximation using data from a truth model and then employs the approximation for mapping variables to responses. This class contains an array of Approximation objects, one per response function, which permits the mixing of approximation types (using the Approximation derived classes: SurfpackApproximation (provides kriging, neural network, MARS, polynomial regression, and radial basis functions), GaussProcApproximation, OrthogPolyApproximation (utilizes an array of OrthogonalPolynomial instances to manage multivariate orthogonal polynomials from the Wiener-Askey scheme), TANA3Approximation, and TaylorApproximation).

Note: in the data fit approximation case, DataFitSurrModel provides the bulk of the surrogate management logic. It contains an ApproximationInterface object which provides the approximate parameter to response mappings. In the hierarchical approximation case, an ApproximationInterface object is not used since HierarchSurrModel uses low and high fidelity models to manage surrogate construction/usage.

1.2.6 Responses

Class: Response.

The Response class provides an abstract data representation of response functions and their first and second derivatives (gradient vectors and Hessian matrices). These response functions can be interpreted as an objective function and constraints (optimization data set), residual functions and constraints (least squares data set), or generic response functions (uncertainty quantification data set). This class is not currently part of a class hierarchy, since the abstraction has been sufficiently general and has not required specialization.

1.3 Services

A variety of services are provided in DAKOTA for parallel computing, failure capturing, restart, graphics, etc. An overview of the classes and member functions involved in performing these services is included below.

- Multilevel parallel computing: DAKOTA supports multiple levels of nested parallelism. A strategy can manage concurrent iterators, each of which manages concurrent function evaluations, each of which manages concurrent analyses executing on multiple processors. Partitioning of these levels with MPI communicators is managed in ParallelLibrary and scheduling routines for the levels are part of ConcurrentStrategy, ApplicationInterface, and ForkApplicInterface.

- Parsing: DAKOTA employs the NIDR parser (New Input Deck Reader) to retrieve information from user input files. Parsing options are processed in CommandLineHandler and parsing occurs in ProblemDescDB::manage_inputs() called from main.C. NIDR uses the keyword handlers in the NIDRProblemDescDB derived class to populate data within the ProblemDescDB base class, which maintains a DataStrategy specification and lists of DataMethod, DataModel, DataVariables, DataInterface, and DataResponses specifications. Procedures for modifying the parsing subsystem are described in Instructions for Modifying DAKOTA's Input Specification.

- Failure capturing: Simulation failures can be trapped and managed using exception handling in ApplicationInterface and its derived classes.

- Restart: DAKOTA maintains a record of all function evaluations both in memory (for capturing any duplication) and on the file system (for restarting runs). Restart options are processed in CommandLineHandler and retrieved in ParallelLibrary::specify_outputs_restart(), restart file management occurs in ParallelLibrary::manage_outputs_restart(), and restart file insertions occur in ApplicationInterface. The `dakota_restart_util` executable, built from restart_util.C, provides a variety of services for interrogating, converting, repairing, concatenating, and post-processing restart files.

- Memory management: DAKOTA employs the techniques of reference counting and representation sharing through the use of letter-envelope and handle-body idioms (Coplien, "Advanced C++"). The former idiom provides for memory efficiency and enhanced polymorphism in the following class hierarchies: Strategy, Iterator, Model, Variables, Constraints, Interface, ProblemDescDB, Approximation, and OrthogonalPolynomial. The latter idiom provides for memory efficiency in data-intensive classes which do not involve a class hierarchy. Currently, only the Response class uses this idiom. When managing reference-counted data containers (e.g., Variables or Response objects), it is important to properly manage shallow and deep copies, to allow for both efficiency and data independence as needed in a particular context.

- Graphics: DAKOTA provides 2D iteration history graphics using Motif widgets and 3D surface plotting graphics from the PLPLOT package. Graphics data can also be catalogued in a tabular data file for post-processing with 3rd party tools such as Matlab, Tecplot, etc. All of these capabilities are encapsulated within the Graphics class.

1.4 Additional Resources

Additional development resources include:

- Recommended Practices for DAKOTA Development
- Software Tools for DAKOTA Development
- Instructions for Modifying DAKOTA's Input Specification

- Interfacing with DAKOTA as a Library
- The execution of function evaluations is a core component of DAKOTA involving several class hierarchies. An overview of the classes and member functions involved in performing these evaluations is provided in Performing Function Evaluations.
- Project web pages are maintained at `http://www.cs.sandia.gov/dakota` with documentation pointers provided at `http://www.cs.sandia.gov/dakota/documentation.html`, and a list of publications provided at `http://www.cs.sandia.gov/dakota/publications.html`

Chapter 2

DAKOTA Namespace Index

2.1 DAKOTA Namespace List

Here is a list of all documented namespaces with brief descriptions:

Dakota (The primary namespace for DAKOTA) 35
SIM (Plug facilities into DAKOTA) 141

Chapter 3

DAKOTA Hierarchical Index

3.1 DAKOTA Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

ActiveSet . . . 143
AnalysisCode . . . 155
  ForkAnalysisCode . . . 334
  SysCallAnalysisCode . . . 727
Approximation . . . 174
  BasisPolyApproximation . . . 200
    InterpPolyApproximation . . . 381
    OrthogPolyApproximation . . . 588
  GaussProcApproximation . . . 344
  SurfpackApproximation . . . 699
  TANA3Approximation . . . 732
  TaylorApproximation . . . 735
APPSEvalMgr . . . 185
Array . . . 191
BaseConstructor . . . 195
BaseVector . . . 196
  Matrix . . . 437
  Vector . . . 746
BaseVector< Dakota::BaseVector< T > > . . . 196
BasisPolynomial . . . 204
  LagrangeInterpPolynomial . . . 422
  OrthogonalPolynomial . . . 586
    GenLaguerreOrthogPolynomial . . . 350
    HermiteOrthogPolynomial . . . 363
    JacobiOrthogPolynomial . . . 399
    LaguerreOrthogPolynomial . . . 425
    LegendreOrthogPolynomial . . . 431
BiStream . . . 210

BoStream . . . 214
COLINApplication . . . 217
ColinPoint . . . 224
CommandShell . . . 229
Constraints . . . 242
  AllConstraints . . . 146
  DistinctConstraints . . . 312
  MergedConstraints . . . 440
CtelRegexp . . . 251
DataInterface . . . 261
DataMethod . . . 263
DataMethodRep . . . 265
DataModel . . . 277
DataModelRep . . . 279
DataResponses . . . 283
DataResponsesRep . . . 285
DataStrategy . . . 289
DataStrategyRep . . . 291
DataVariables . . . 294
DataVariablesRep . . . 296
ErrorTable . . . 333
FunctionCompare . . . 343
GetLongOpt . . . 352
  CommandLineHandler . . . 227
Graphics . . . 356
Interface . . . 371
  ApplicationInterface . . . 163
    DirectApplicInterface . . . 306
      ParallelDirectApplicInterface . . . 597
      SerialDirectApplicInterface . . . 664
    ForkApplicInterface . . . 336
    GridApplicInterface . . . 360
    SysCallApplicInterface . . . 729
  ApproximationInterface . . . 181
Iterator . . . 387
  Analyzer . . . 159
    NonD . . . 518
      NonDEvidence . . . 529
      NonDExpansion . . . 535
        NonDPolynomialChaos . . . 557
        NonDStochCollocation . . . 576
      NonDIntegration . . . 544
        NonDQuadrature . . . 559
        NonDSparseGrid . . . 572
      NonDReliability . . . 562
        NonDGlobalReliability . . . 538
        NonDLocalReliability . . . 550
      NonDSampling . . . 566

NonDAdaptImpSampling . . . 525
NonDIncremLHSSampling . . . 541
NonDLHSSampling . . . 547
PStudyDACE . . . 633
DDACEDesignCompExp . . . 302
FSUDesignCompExp . . . 339
ParamStudy . . . 617
PSUADEDesignCompExp . . . 636
Minimizer . . . 448
LeastSq . . . 427
NL2SOLLeastSq . . . 507
NLSSOLLeastSq . . . 515
SNLLLeastSq . . . 674
Optimizer . . . 581
APPSOptimizer . . . 188
COLINOptimizer . . . 220
CONMINOptimizer . . . 234
DOTOptimizer . . . 323
JEGAOptimizer . . . 401
NCSUOptimizer . . . 492
NLPQLPOptimizer . . . 510
NPSOLOptimizer . . . 577
SNLLOptimizer . . . 678
SurrBasedMinimizer . . . 712
EffGlobalMinimizer . . . 328
SurrBasedGlobalMinimizer . . . 703
SurrBasedLocalMinimizer . . . 705
JEGAOptimizer::Driver . . . 409
JEGAOptimizer::Evaluator . . . 412
JEGAOptimizer::EvaluatorCreator . . . 420
List . . . 433
Model . . . 456
NestedModel . . . 495
RecastModel . . . 640
SingleModel . . . 668
SurrogateModel . . . 721
DataFitSurrModel . . . 253
HierarchSurrModel . . . 365
MPIPackBuffer . . . 486
MPIUnpackBuffer . . . 489
NL2Res . . . 506
NoDBBaseConstructor . . . 517
ParallelConfiguration . . . 595
ParallelLevel . . . 599
ParallelLibrary . . . 602
ParamResponsePair . . . 613
partial_prp_equality . . . 620
partial_prp_hash . . . 621
ProblemDescDB . . . 622

NIDRProblemDescDB . . . 501
RecastBaseConstructor . . . 639
Response . . . 647
ResponseRep . . . 652
SNLLBase . . . 671
SNLLLeastSq . . . 674
SNLLOptimizer . . . 678
SOLBase . . . 685
NLSSOLLeastSq . . . 515
NPSOLOptimizer . . . 577
Strategy . . . 688
ConcurrentStrategy . . . 231
HybridStrategy . . . 369
CollaborativeHybridStrategy . . . 225
EmbeddedHybridStrategy . . . 331
SequentialHybridStrategy . . . 659
SingleMethodStrategy . . . 666
String . . . 696
SurrogateDataPoint . . . 717
SurrogateDataPointRep . . . 719
Variables . . . 737
AllVariables . . . 150
DistinctVariables . . . 316
MergedVariables . . . 443

Chapter 4

DAKOTA Class Index

4.1 DAKOTA Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

ActiveSet (Active set request vector and the derivative variables vector) 143
AllConstraints (Employs the all data view) 146
AllVariables (All data view) 150
AnalysisCode (Processes for managing simulations) 155
Analyzer (Hierarchy) 159
ApplicationInterface (Interfaces to simulation codes) 163
Approximation (Base class for the approximation class hierarchy) 174
ApproximationInterface (Approximations to simulation-based results) 181
APPSEvalMgr (Evaluation manager class for APPSPACK) 185
APPSOptimizer (Wrapper class for APPSPACK) 188
Array (Template class for the Dakota bookkeeping array) 191
BaseConstructor (Dummy struct for overloading letter-envelope constructors) 195
BaseVector (Base class for the Dakota::Matrix and Dakota::Vector classes) 196
BasisPolyApproximation (Derived approximation class for global basis polynomials) 200
BasisPolynomial (Base class for the basis polynomial class hierarchy) 204
BiStream (Data types) 210
BoStream (Data types) 214
COLINApplication 217
COLINOptimizer (Wrapper class for optimizers defined using COLIN) 220
ColinPoint 224
CollaborativeHybridStrategy (Optimization and nonlinear least squares methods) 225
CommandLineHandler (Utility class for managing command line inputs to DAKOTA) 227
CommandShell (Processes with system calls) 229
ConcurrentStrategy (Strategy for multi-start iteration or pareto set optimization) 231
CONMINOptimizer (Wrapper class for the CONMIN optimization library) 234
Constraints (Base class for the variable constraints class hierarchy) 242
CtelRegexp 251
DataFitSurrModel (Data fit surrogates (global and local)) 253
DataInterface (Handle class for interface specification data) 261

DataMethod (Handle class for method specification data) . . . 263
DataMethodRep (Body class for method specification data) . . . 265
DataModel (Handle class for model specification data) . . . 277
DataModelRep (Body class for model specification data) . . . 279
DataResponses (Handle class for responses specification data) . . . 283
DataResponsesRep (Body class for responses specification data) . . . 285
DataStrategy (Handle class for strategy specification data) . . . 289
DataStrategyRep (Body class for strategy specification data) . . . 291
DataVariables (Handle class for variables specification data) . . . 294
DataVariablesRep (Body class for variables specification data) . . . 296
DDACEDesignCompExp (Wrapper class for the DDACE design of experiments library) . . . 302
DirectApplicInterface (And testers using direct procedure calls) . . . 306
DistinctConstraints (Default data view (no variable or domain type array merging)) . . . 312
DistinctVariables (Default data view (no variable or domain type array merging)) . . . 316
DOTOptimizer (Wrapper class for the DOT optimization library) . . . 323
EffGlobalMinimizer (Implementation of Efficient Global Optimization/Least Squares algorithms) . . . 328
EmbeddedHybridStrategy (Search methods) . . . 331
ErrorTable (Data structure to hold errors) . . . 333
ForkAnalysisCode (Simulations using forks) . . . 334
ForkApplicInterface (Using forks) . . . 336
FSUDesignCompExp (Wrapper class for the FSUDace QMC/CVT library) . . . 339
FunctionCompare . . . 343
GaussProcApproximation (Derived approximation class for Gaussian Process implementation) . . . 344
GenLaguerreOrthogPolynomial (Derived orthogonal polynomial class for generalized Laguerre polynomials) . . . 350
GetLongOpt ((Advanced Computer Research Institute, Lyon, France)) . . . 352
Graphics (For post-processing with Matlab, Tecplot, etc) . . . 356
GridApplicInterface (Using grid services such as Condor or Globus) . . . 360
HermiteOrthogPolynomial (Derived orthogonal polynomial class for Hermite polynomials) . . . 363
HierarchSurrModel (Hierarchical surrogates (models of varying fidelity)) . . . 365
HybridStrategy (Base class for hybrid minimization strategies) . . . 369
Interface (Base class for the interface class hierarchy) . . . 371
InterpPolyApproximation (Approximation)) . . . 381
Iterator (Base class for the iterator class hierarchy) . . . 387
JacobiOrthogPolynomial (Derived orthogonal polynomial class for Jacobi polynomials) . . . 399
JEGAOptimizer (A version of Dakota::Optimizer for instantiation of John Eddy's Genetic Algorithms (JEGA)) . . . 401
JEGAOptimizer::Driver (A subclass of the JEGA front end driver that exposes the individual protected methods to execute the algorithm) . . . 409
JEGAOptimizer::Evaluator (An evaluator specialization that knows how to interact with Dakota) . . . 412
JEGAOptimizer::EvaluatorCreator (A specialization of the JEGA::FrontEnd::EvaluatorCreator that creates a new instance of a Evaluator) . . . 420
LagrangeInterpPolynomial (Derived basis polynomial class for 1-D Lagrange interpolation polynomials) 422
LaguerreOrthogPolynomial (Derived orthogonal polynomial class for Laguerre polynomials) . . . 425
LeastSq (Base class for the nonlinear least squares branch of the iterator hierarchy) . . . 427
LegendreOrthogPolynomial (Derived orthogonal polynomial class for Legendre polynomials) . . . 431
List (Template class for the Dakota bookkeeping list) . . . 433
Matrix (Template class for the Dakota numerical matrix) . . . 437
MergedConstraints (Merged data view) . . . 440

MergedVariables (Merged data view) . . . 443
Minimizer (Iterator hierarchy) . . . 448
Model (Base class for the model class hierarchy) . . . 456
MPIPackBuffer (Class for packing MPI message buffers) . . . 486
MPIUnpackBuffer (Class for unpacking MPI message buffers) . . . 489
NCSUOptimizer (Wrapper class for the NCSU DIRECT optimization library) . . . 492
NestedModel (Execution within every evaluation of the model) . . . 495
NIDRProblemDescDB (The derived input file database utilizing the new IDR parser) . . . 501
NL2Res (Auxiliary information passed to calcr and calcj via ur) . . . 506
NL2SOLLeastSq (Wrapper class for the NL2SOL nonlinear least squares library) . . . 507
NLPQLPOptimizer (Wrapper class for the NLPQLP optimization library, Version 2.0) . . . 510
NLSSOLLeastSq (Wrapper class for the NLSSOL nonlinear least squares library) . . . 515
NoDBBaseConstructor (Dummy struct for overloading constructors used in on-the-fly instantiations) . . . 517
NonD (Base class for all nondetermistic iterators (the DAKOTA/UQ branch)) . . . 518
NonDAdaptImpSampling (Class for the Adaptive Importance Sampling methods within DAKOTA) . . . 525
NonDEvidence (Class for the Dempster-Shafer Evidence Theory methods within DAKOTA/UQ) . . . 529
NonDExpansion (Collocation (SC)) . . . 535
NonDGlobalReliability (Class for global reliability methods within DAKOTA/UQ) . . . 538
NonDIncremLHSSampling (Performs icremental LHS sampling for uncertainty quantification) . . . 541
NonDIntegration (Numerical integration points for evaluation of expectation integrals) . . . 544
NonDLHSSampling (Performs LHS and Monte Carlo sampling for uncertainty quantification) . . . 547
NonDLocalReliability (Class for the reliability methods within DAKOTA/UQ) . . . 550
NonDPolynomialChaos (Quantification) . . . 557
NonDQuadrature (Normals/uniforms/exponentials/betas/gammas) . . . 559
NonDReliability (Base class for the reliability methods within DAKOTA/UQ) . . . 562
NonDSampling (NonDIncremLHSSampling, and NonDAdaptImpSampling) . . . 566
NonDSparseGrid (Integrals over independent standard random variables) . . . 572
NonDStochCollocation (Quantification) . . . 576
NPSOLOptimizer (Wrapper class for the NPSOL optimization library) . . . 577
Optimizer (Base class for the optimizer branch of the iterator hierarchy) . . . 581
OrthogonalPolynomial (Base class for the orthogonal polynomial class hierarchy) . . . 586
OrthogPolyApproximation (Approximation)) . . . 588
ParallelConfiguration (Collectively identify a particular multilevel parallel configuration) . . . 595
ParallelDirectApplicInterface (Plug-ins using assign_rep()) . . . 597
ParallelLevel (Communicator partitioning) . . . 599
ParallelLibrary (Message passing within these levels) . . . 602
ParamResponsePair (Evaluation id) . . . 613
ParamStudy (Class for vector, list, centered, and multidimensional parameter studies) . . . 617
partial_prp_equality (Predicate for comparing ONLY the idInterface and Vars attributes of PRPair) . . . 620
partial_prp_hash (Wrapper to delegate to the ParamResponsePair hash_value function) . . . 621
ProblemDescDB (The database containing information parsed from the DAKOTA input file) . . . 622
PStudyDACE (Design of experiments methods) . . . 633
PSUADEDesignCompExp (Wrapper class for the PSUADE library) . . . 636
RecastBaseConstructor (Instantiations) . . . 639
RecastModel (In order to recast the form of its inputs and/or outputs) . . . 640
Response (Response provides the handle class) . . . 647
ResponseRep (ResponseRep provides the body class) . . . 652
SequentialHybridStrategy (Models of varying fidelity) . . . 659
SerialDirectApplicInterface (Plug-ins using assign_rep()) . . . 664

SingleMethodStrategy (Single model) 666
SingleModel (Variables into responses) 668
SNLLBase (Base class for OPT++ optimization and least squares methods) 671
SNLLLeastSq (Wrapper class for the OPT++ optimization library) 674
SNLLOptimizer (Wrapper class for the OPT++ optimization library) 678
SOLBase (Base class for Stanford SOL software) 685
Strategy (Base class for the strategy class hierarchy) 688
String (Dakota::String class, used as main string class for Dakota) 696
SurfpackApproximation (Interface between Surfpack and Dakota) 699
SurrBasedGlobalMinimizer (And updates a global surrogate model without trust region controls) . . . 703
SurrBasedLocalMinimizer (And nonlinear least squares) 705
SurrBasedMinimizer (Base class for local/global surrogate-based optimization/least squares) 712
SurrogateDataPoint (For defining a "truth" data point) 717
SurrogateDataPointRep (Or body, may be shared by multiple SurrogateDataPoint handle instances) . . 719
SurrogateModel (Base class for surrogate models (DataFitSurrModel and HierarchSurrModel)) 721
SysCallAnalysisCode (Simulations using system calls) 727
SysCallApplicInterface (Using system calls) 729
TANA3Approximation (Approximation (a multipoint approximation)) 732
TaylorApproximation (Series (a local approximation)) 735
Variables (Base class for the variables class hierarchy) 737
Vector (Template class for the Dakota numerical vector) 746

Chapter 5

DAKOTA File Index

5.1 DAKOTA File List

Here is a list of all documented files with brief descriptions:

dll_api.C (This file contains a DakotaRunner class, which launches DAKOTA) 751
dll_api.h (API for DLL interactions) 753
JEGAOptimizer.C (Contains the implementation of the JEGAOptimizer class) 754
JEGAOptimizer.H (Contains the definition of the JEGAOptimizer class) 755
library_mode.C (File containing a mock simulator main for testing DAKOTA in library mode) 756
main.C (File containing the main program for DAKOTA) 758
restart_util.C (File containing the DAKOTA restart utility main program) 759

Chapter 6

DAKOTA Page Index

6.1 DAKOTA Related Pages

Here is a list of all related documentation pages:

Recommended Practices for DAKOTA Development 763
Instructions for Modifying DAKOTA's Input Specification 769
Interfacing with DAKOTA as a Library 775
Performing Function Evaluations 785
Software Tools for DAKOTA Development 787
Todo List . . . . . **??**

Chapter 7

DAKOTA Namespace Documentation

7.1 Dakota Namespace Reference

The primary namespace for DAKOTA.

Classes

- class AllConstraints

  employs the all data view.

- class AllVariables

  the all data view.

- class AnalysisCode

  processes for managing simulations.

- class ApplicationInterface

  interfaces to simulation codes.

- class ApproximationInterface

  approximations to simulation-based results.

- class APPSEvalMgr

  Evaluation manager class for APPSPACK.

- class APPSOptimizer

  Wrapper class for APPSPACK.

- class BasisPolyApproximation

  Derived approximation class for global basis polynomials.

- class BasisPolynomial

  Base class for the basis polynomial class hierarchy.

- class COLINApplication
- class COLINOptimizer

  Wrapper class for optimizers defined using COLIN.

- class CollaborativeHybridStrategy

  optimization and nonlinear least squares methods.

- class GetLongOpt

  (Advanced Computer Research Institute, Lyon, France).

- class CommandLineHandler

  Utility class for managing command line inputs to DAKOTA.

- class CommandShell

  processes with system calls.

- class ConcurrentStrategy

  Strategy for multi-start iteration or pareto set optimization.

- class CONMINOptimizer

  Wrapper class for the CONMIN optimization library.

- class ActiveSet

  active set request vector and the derivative variables vector.

- class Analyzer

  hierarchy.

- class SurrogateDataPoint

  for defining a "truth" data point.

- class SurrogateDataPointRep

  or body, may be shared by multiple SurrogateDataPoint handle instances.

- class Approximation

  Base class for the approximation class hierarchy.

- class Array

  Template class for the Dakota bookkeeping array.

- class BaseVector

  Base class for the Dakota::Matrix and Dakota::Vector classes.

- class BiStream

  data types

- class BoStream

  data types

- class Constraints

  Base class for the variable constraints class hierarchy.

- class Graphics

  for post-processing with Matlab, Tecplot, etc.

- class Interface

  Base class for the interface class hierarchy.

- class Iterator

  Base class for the iterator class hierarchy.

- class LeastSq

  Base class for the nonlinear least squares branch of the iterator hierarchy.

- class List

  Template class for the Dakota bookkeeping list.

- class FunctionCompare
- class Matrix

  Template class for the Dakota numerical matrix.

- class Minimizer

  iterator hierarchy.

- class Model

  Base class for the model class hierarchy.

- class NonD

  Base class for all nondetermistic iterators (the DAKOTA/UQ branch).

- class Optimizer

  Base class for the optimizer branch of the iterator hierarchy.

- class PStudyDACE

  design of experiments methods.

- class ResponseRep

  ResponseRep provides the body class.

- class Response

  Response provides the handle class.

- class Strategy

  Base class for the strategy class hierarchy.

- class String

  Dakota::String class, used as main string class for Dakota.

- class Variables

  Base class for the variables class hierarchy.

- class Vector

  Template class for the Dakota numerical vector.

- class DataFitSurrModel

  data fit surrogates (global and local)

- class DataInterface

  Handle class for interface specification data.

- class DataMethodRep

  Body class for method specification data.

- class DataMethod

  Handle class for method specification data.

- class DataModelRep

  Body class for model specification data.

- class DataModel

  Handle class for model specification data.

- class DataResponsesRep

  Body class for responses specification data.

- class DataResponses

  Handle class for responses specification data.

- class DataStrategyRep

  Body class for strategy specification data.

- class DataStrategy

Handle class for strategy specification data.

- class DataVariablesRep

  Body class for variables specification data.

- class DataVariables

  Handle class for variables specification data.

- class DDACEDesignCompExp

  Wrapper class for the DDACE design of experiments library.

- class DirectApplicInterface

  and testers using direct procedure calls.

- class DistinctConstraints

  the default data view (no variable or domain type array merging).

- class DistinctVariables

  the default data view (no variable or domain type array merging).

- class DOTOptimizer

  Wrapper class for the DOT optimization library.

- class EffGlobalMinimizer

  Implementation of Efficient Global Optimization/Least Squares algorithms.

- class EmbeddedHybridStrategy

  search methods.

- class ForkAnalysisCode

  simulations using forks.

- class ForkApplicInterface

  using forks.

- class FSUDesignCompExp

  Wrapper class for the FSUDace QMC/CVT library.

- class GaussProcApproximation

  Derived approximation class for Gaussian Process implementation.

- class GenLaguerreOrthogPolynomial

  Derived orthogonal polynomial class for generalized Laguerre polynomials.

- struct BaseConstructor

  Dummy struct for overloading letter-envelope constructors.

- struct NoDBBaseConstructor

  Dummy struct for overloading constructors used in on-the-fly instantiations.

- struct RecastBaseConstructor

  instantiations.

- class GridApplicInterface

  using grid services such as Condor or Globus.

- class HermiteOrthogPolynomial

  Derived orthogonal polynomial class for Hermite polynomials.

- class HierarchSurrModel

  hierarchical surrogates (models of varying fidelity).

- class HybridStrategy

  Base class for hybrid minimization strategies.

- class InterpPolyApproximation

  approximation).

- class JacobiOrthogPolynomial

  Derived orthogonal polynomial class for Jacobi polynomials.

- class JEGAOptimizer

  A version of Dakota::Optimizer for instantiation of John Eddy's Genetic Algorithms (JEGA).

- class LagrangeInterpPolynomial

  Derived basis polynomial class for 1-D Lagrange interpolation polynomials.

- class LaguerreOrthogPolynomial

  Derived orthogonal polynomial class for Laguerre polynomials.

- class LegendreOrthogPolynomial

  Derived orthogonal polynomial class for Legendre polynomials.

- class MergedConstraints

  the merged data view.

- class MergedVariables

  merged data view.

- class MPIPackBuffer

  Class for packing MPI message buffers.

- class MPIUnpackBuffer

  Class for unpacking MPI message buffers.

- class NCSUOptimizer

  Wrapper class for the NCSU DIRECT optimization library.

- class NestedModel

  execution within every evaluation of the model.

- class NIDRProblemDescDB

  The derived input file database utilizing the new IDR parser.

- struct NL2Res

  Auxiliary information passed to calcr and calcj via ur.

- class NL2SOLLeastSq

  Wrapper class for the NL2SOL nonlinear least squares library.

- class NLPQLPOptimizer

  Wrapper class for the NLPQLP optimization library, Version 2.0.

- class NLSSOLLeastSq

  Wrapper class for the NLSSOL nonlinear least squares library.

- class NonDAdaptImpSampling

  Class for the Adaptive Importance Sampling methods within DAKOTA.

- class NonDEvidence

  Class for the Dempster-Shafer Evidence Theory methods within DAKOTA/UQ.

- class NonDExpansion

  collocation (SC)

- class NonDGlobalReliability

  Class for global reliability methods within DAKOTA/UQ.

- class NonDIncremLHSSampling

  Performs icremental LHS sampling for uncertainty quantification.

- class NonDIntegration

  numerical integration points for evaluation of expectation integrals

- class NonDLHSSampling

  Performs LHS and Monte Carlo sampling for uncertainty quantification.

- class NonDLocalReliability

Class for the reliability methods within DAKOTA/UQ.

- class NonDPolynomialChaos

  quantification

- class NonDQuadrature

  normals/uniforms/exponentials/betas/gammas.

- class NonDReliability

  Base class for the reliability methods within DAKOTA/UQ.

- class NonDSampling

  NonDIncremLHSSampling, and NonDAdaptImpSampling.

- class NonDSparseGrid

  integrals over independent standard random variables.

- class NonDStochCollocation

  quantification

- class NPSOLOptimizer

  Wrapper class for the NPSOL optimization library.

- class OrthogonalPolynomial

  Base class for the orthogonal polynomial class hierarchy.

- class OrthogPolyApproximation

  approximation).

- class ParallelLevel

  communicator partitioning.

- class ParallelConfiguration

  collectively identify a particular multilevel parallel configuration.

- class ParallelLibrary

  message passing within these levels.

- class ParamResponsePair

  evaluation id.

- class ParamStudy

  Class for vector, list, centered, and multidimensional parameter studies.

- class ProblemDescDB

  The database containing information parsed from the DAKOTA input file.

- struct partial_prp_hash

  wrapper to delegate to the ParamResponsePair hash_value function

- struct partial_prp_equality

  predicate for comparing ONLY the idInterface and Vars attributes of PRPair

- class PSUADEDesignCompExp

  Wrapper class for the PSUADE library.

- class RecastModel

  in order to recast the form of its inputs and/or outputs.

- class SequentialHybridStrategy

  models of varying fidelity.

- class SingleMethodStrategy

  single model.

- class SingleModel

  variables into responses.

- class SNLLBase

  Base class for OPT++ optimization and least squares methods.

- class SNLLLeastSq

  Wrapper class for the OPT++ optimization library.

- class SNLLOptimizer

  Wrapper class for the OPT++ optimization library.

- class SOLBase

  Base class for Stanford SOL software.

- class SurfpackApproximation

  Interface between Surfpack and Dakota.

- class SurrBasedGlobalMinimizer

  and updates a global surrogate model without trust region controls

- class SurrBasedLocalMinimizer

  and nonlinear least squares.

- class SurrBasedMinimizer

  Base class for local/global surrogate-based optimization/least squares.

- class SurrogateModel

  Base class for surrogate models (DataFitSurrModel and HierarchSurrModel).

- class SysCallAnalysisCode

  simulations using system calls.

- class SysCallApplicInterface

  using system calls.

- class TANA3Approximation

  approximation (a multipoint approximation).

- class TaylorApproximation

  series (a local approximation).

Typedefs

- typedef double **Real**
- typedef Vector< Real > **RealVector**
- typedef Vector< int > **IntVector**
- typedef BaseVector< Real > **RealBaseVector**
- typedef Matrix< Real > **RealMatrix**
- typedef Matrix< int > **IntMatrix**
- typedef Teuchos::SerialDenseVector< int, Real > **RealDenseVector**
- typedef Teuchos::SerialDenseVector< int, int > **IntDenseVector**
- typedef Teuchos::SerialDenseMatrix< int, Real > **RealDenseMatrix**
- typedef Teuchos::SerialSymDenseMatrix< int, Real > **RealSymDenseMatrix**
- typedef Teuchos::SerialDenseSolver< int, Real > **RealDenseSolver**
- typedef Teuchos::SerialSpdDenseSolver< int, Real > **RealSpdDenseSolver**
- typedef std::deque< bool > **BoolDeque**
- typedef Array< BoolDeque > **BoolDequeArray**
- typedef Array< Real > **RealArray**
- typedef Array< int > **IntArray**
- typedef Array< IntArray > **Int2DArray**
- typedef Array< unsigned int > **UIntArray**
- typedef Array< short > **ShortArray**
- typedef Array< unsigned short > **UShortArray**
- typedef Array< UShortArray > **UShort2DArray**
- typedef Array< UShort2DArray > **UShort3DArray**
- typedef Array< size_t > **SizetArray**
- typedef Array< SizetArray > **Sizet2DArray**
- typedef Array< String > **StringArray**
- typedef Array< StringArray > **String2DArray**
- typedef Array< RealVector > **RealVectorArray**
- typedef Array< RealVectorArray > **RealVector2DArray**

- typedef Array< RealBaseVector > **RealBaseVectorArray**
- typedef Array< RealMatrix > **RealMatrixArray**
- typedef Array< RealDenseVector > **RealDenseVectorArray**
- typedef Array< RealDenseMatrix > **RealDenseMatrixArray**
- typedef Array< RealSymDenseMatrix > **RealSymDenseMatrixArray**
- typedef Array< Variables > **VariablesArray**
- typedef Array< Response > **ResponseArray**
- typedef Array< ParamResponsePair > **PRPArray**
- typedef Array< Model > **ModelArray**
- typedef Array< Iterator > **IteratorArray**
- typedef List< bool > **BoolList**
- typedef List< int > **IntList**
- typedef List< size_t > **SizetList**
- typedef List< Real > **RealList**
- typedef List< String > **StringList**
- typedef List< RealVector > **RealVectorList**
- typedef List< Variables > **VariablesList**
- typedef List< Interface > **InterfaceList**
- typedef List< Response > **ResponseList**
- typedef List< ParamResponsePair > **PRPList**
- typedef List< Model > **ModelList**
- typedef List< Iterator > **IteratorList**
- typedef std::set< int > **IntSet**
- typedef std::set< Real > **RealSet**
- typedef std::map< int, short > **IntShortMap**
- typedef std::map< int, int > **IntIntMap**
- typedef std::map< int, RealVector > **IntRealVectorMap**
- typedef std::map< int, ActiveSet > **IntActiveSetMap**
- typedef std::map< int, Variables > **IntVariablesMap**
- typedef std::map< int, Response > **IntResponseMap**
- typedef std::map< IntArray, size_t > **IntArraySizetMap**
- typedef IntList::iterator **ILIter**
- typedef IntList::const_iterator **ILCIter**
- typedef SizetList::iterator **StLIter**
- typedef SizetList::const_iterator **StLCIter**
- typedef RealList::iterator **RLIter**
- typedef RealList::const_iterator **RLCIter**
- typedef StringList::iterator **StringLIter**
- typedef StringList::const_iterator **StringLCIter**
- typedef RealVectorList::iterator **RVLIter**
- typedef RealVectorList::const_iterator **RVLCIter**
- typedef VariablesList::iterator **VarsLIter**
- typedef InterfaceList::iterator **InterfLIter**
- typedef ResponseList::iterator **RespLIter**
- typedef PRPList::iterator **PRPLIter**
- typedef PRPList::const_iterator **PRPLCIter**

- typedef ModelList::iterator **ModelLIter**
- typedef IteratorList::iterator **IterLIter**
- typedef List< ParallelLevel >::iterator **ParLevLIter**
- typedef List< ParallelConfiguration >::iterator **ParConfigLIter**
- typedef IntSet::iterator **ISIter**
- typedef IntSet::const_iterator **ISCIter**
- typedef IntShortMap::iterator **IntShMIter**
- typedef IntIntMap::iterator **IntIntMIter**
- typedef IntIntMap::const_iterator **IntIntMCIter**
- typedef IntRealVectorMap::iterator **IntRVMIter**
- typedef IntActiveSetMap::iterator **IntASMIter**
- typedef IntVariablesMap::iterator **IntVarsMIter**
- typedef IntVariablesMap::const_iterator **IntVarsMCIter**
- typedef IntResponseMap::iterator **IntRespMIter**
- typedef IntResponseMap::const_iterator **IntRespMCIter**
- typedef void(∗) **dl_find_optimum_t** (void ∗, Optimizer1 ∗, char ∗)
- typedef void(∗) **dl_destructor_t** (void ∗∗)
- typedef double **Real**
- typedef int(∗) **start_grid_computing_t** (char ∗analysis_driver_script, char ∗params_file, char ∗results_-file)
- typedef int(∗) **perform_analysis_t** (char ∗iteration_num)
- typedef int ∗(∗) **get_jobs_completed_t** ()
- typedef int(∗) **stop_grid_computing_t** ()
- typedef unsigned char **u_char**
- typedef unsigned short **u_short**
- typedef unsigned int **u_int**
- typedef unsigned long **u_long**
- typedef long long **long_long**
- typedef unsigned long **UL**
- typedef void(∗) **Calcrj** (int ∗n, int ∗p, Real ∗x, int ∗nf, Real ∗r, int ∗ui, void ∗ur, Vf vf)
- typedef void(∗) **Vf** ()
- typedef bmi::multi_index_container< ParamResponsePair, bmi::indexed_by< bmi::ordered_non_-unique< BOOST_MULTI_INDEX_CONST_MEM_FUN(Dakota::ParamResponsePair, int, eval_id), std::less< int > >, bmi::hashed_non_unique< bmi::identity< ParamResponsePair >, partial_prp_hash, partial_prp_equality > > > PRPHashSet

  Boost Multi-Index Container for fast lookup of ParamResponsePairs.

- typedef PRPHashSet **PRPCache**
- typedef PRPCache::nth_index_const_iterator< 0 >::type **PRPCacheOrderedConstIter**
- typedef PRPList **PRPCache**
- typedef PRPCache::const_iterator **PRPCacheOrderedConstIter**

Enumerations

- enum { **OBJECTIVE**, **INEQUALITY_CONSTRAINT**, **EQUALITY_CONSTRAINT** }

  define algebraic function types

- enum {

  SILENT_OUTPUT, **QUIET_OUTPUT**, **NORMAL_OUTPUT**, **VERBOSE_OUTPUT**,

  DEBUG_OUTPUT }
- enum {

  DESIGN, **NORMAL**, **BOUNDED_NORMAL**, **LOGNORMAL**,

  BOUNDED_LOGNORMAL, **UNIFORM**, **LOGUNIFORM**, **TRIANGULAR**,

  EXPONENTIAL, **BETA**, **GAMMA**, **GUMBEL**,

  FRECHET, **WEIBULL**, **STATE** }
- enum { **NO_REFINE**, **IS**, **AIS**, **MMAIS** }
- enum { **PROBABILITIES**, **RELIABILITIES**, **GEN_RELIABILITIES** }
- enum { **IGNORE_RANKS**, **SET_RANKS**, **GET_RANKS**, **SET_GET_RANKS** }
- enum {

  UNCERTAIN, **UNCERTAIN_UNIFORM**, **ACTIVE**, **ACTIVE_UNIFORM**,

  ALL, **ALL_UNIFORM** }
- enum {

  MV, **AMV_X**, **AMV_U**, **AMV_PLUS_X**,

  AMV_PLUS_U, **TANA_X**, **TANA_U**, **NO_APPROX** }
- enum { **BREITUNG**, **HOHENRACK**, **HONG** }
- enum { **EGRA_X**, **EGRA_U** }
- enum { **ORIGINAL_PRIMARY**, **SINGLE_OBJECTIVE**, **LAGRANGIAN_OBJECTIVE**, **AUGMENTED_LAGRANGIAN_OBJECTIVE** }
- enum { **NO_CONSTRAINTS**, **LINEARIZED_CONSTRAINTS**, **ORIGINAL_CONSTRAINTS** }
- enum { **NO_RELAX**, **HOMOTOPY**, **COMPOSITE_STEP** }
- enum { **PENALTY_MERIT**, **ADAPTIVE_PENALTY_MERIT**, **LAGRANGIAN_MERIT**, **AUGMENTED_LAGRANGIAN_MERIT** }
- enum { **FILTER**, **TR_RATIO** }
- enum { **SCALE_NONE**, **SCALE_VALUE**, **SCALE_LOG** }
- enum { **CDV**, **LINEAR**, **NONLIN**, **FN_LSQ** }
- enum { **DISALLOW**, **TARGET**, **BOUNDS** }
- enum {

  NO_TARGET, **CDV_LWR_BND**, **CDV_UPR_BND**, **DDV_LWR_BND**,

  DDV_UPR_BND, **N_MEAN**, **N_STD_DEV**, **N_LWR_BND**,

  N_UPR_BND, **LN_MEAN**, **LN_STD_DEV**, **LN_ERR_FACT**,

  LN_LWR_BND, **LN_UPR_BND**, **U_LWR_BND**, **U_UPR_BND**,

  LU_LWR_BND, **LU_UPR_BND**, **T_MODE**, **T_LWR_BND**,

  T_UPR_BND, **E_BETA**, **B_ALPHA**, **B_BETA**,

  B_LWR_BND, **B_UPR_BND**, **GA_ALPHA**, **GA_BETA**,

GU_ALPHA, **GU_BETA**, **F_ALPHA**, **F_BETA**,
W_ALPHA, **W_BETA**, **CSV_LWR_BND**, **CSV_UPR_BND**,
DSV_LWR_BND, **DSV_UPR_BND** }

- enum {
  HERMITE, **LEGENDRE**, **LAGUERRE**, **JACOBI**,
  GENERALIZED_LAGUERRE, **LAGRANGE** }

  uncertain variable spec order of normal, uniform, exponential, beta, gamma)

- enum { **QUADRATURE**, **SPARSE_GRID**, **REGRESSION**, **SAMPLING** }

  solution approaches for calculating the polynomial chaos coefficients

- enum {
  EMPTY, **MERGED_ALL**, **MIXED_ALL**, **MERGED_DISTINCT_DESIGN**,
  MERGED_DISTINCT_UNCERTAIN, **MERGED_DISTINCT_STATE**, **MIXED_DISTINCT_-DESIGN**, **MIXED_DISTINCT_UNCERTAIN**,
  MIXED_DISTINCT_STATE }
- enum { **SETUP_MODEL**, **SETUP_USERFUNC** }
- enum {
  UncVar_normal = 0, **UncVar_lognormal** = 1, **UncVar_uniform** = 2, **UncVar_loguniform** = 3,
  UncVar_triangular = 4, **UncVar_exponential** = 5, **UncVar_beta** = 6, **UncVar_gamma** = 7,
  UncVar_gumbel = 8, **UncVar_frechet** = 9, **UncVar_weibull** = 10, **UncVar_histogram** = 11,
  UncVar_interval = 12, **UncVar_Nkinds** = 13 }
- enum EvalType { **NLFEvaluator**, **CONEvaluator** }

  enumeration for the type of evaluator function

Functions

- bool operator== (const AllVariables &vars1, const AllVariables &vars2)

  equality operator

- bool binary_equal_to (const AllVariables &vars1, const AllVariables &vars2)

  binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

- std::size_t hash_value (const AllVariables &vars)

  hash_value

- static void **cleanup_and_abort** (const String &resname, bool keepfiles, map< int, pair< String, String > > *fnames)
- CommandShell & flush (CommandShell &shell)

  convenient shell manipulator function to "flush" the shell

- bool operator== (const ActiveSet &set1, const ActiveSet &set2)

equality operator

- istream & operator>> (istream &s, ActiveSet &set)
  istream extraction operator for ActiveSet. Calls read(istream&).
- ostream & operator<< (ostream &s, const ActiveSet &set)
  ostream insertion operator for ActiveSet. Calls write(istream&).
- BiStream & operator>> (BiStream &s, ActiveSet &set)
  BiStream extraction operator for ActiveSet. Calls read(BiStream&).
- BoStream & operator<< (BoStream &s, const ActiveSet &set)
  BoStream insertion operator for ActiveSet. Calls write(BoStream&).
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, ActiveSet &set)
  Calls read(MPIUnpackBuffer&).
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const ActiveSet &set)
  MPIPackBuffer insertion operator for ActiveSet. Calls write(MPIPackBuffer&).
- bool operator!= (const ActiveSet &set1, const ActiveSet &set2)
  inequality operator
- template<class T> istream & operator>> (istream &s, Array< T > &data)
  global istream extraction operator for Vector
- template<class T> ostream & operator<< (ostream &s, const Array< T > &data)
  global ostream insertion operator for Array
- template<class T> BiStream & operator>> (BiStream &s, Array< T > &data)
  global BiStream extraction operator for Array
- template<class T> BoStream & operator<< (BoStream &s, const Array< T > &data)
  global BoStream insertion operator for Array
- template<class T> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Array< T > &data)
  global MPIUnpackBuffer extraction operator for Array
- template<class T> MPIPackBuffer & operator<< (MPIPackBuffer &s, const Array< T > &data)
  global MPIPackBuffer insertion operator for Array
- istream & operator>> (istream &s, Constraints &con)
  istream extraction operator for Constraints
- ostream & operator<< (ostream &s, const Constraints &con)
  ostream insertion operator for Constraints

- bool interface_id_compare (const Interface &interface, const void *id)
  global comparison function for Interface
- bool method_id_compare (const Iterator &iterator, const void *id)
  global comparison function for Iterator
- template<class T> ostream & operator<< (ostream &s, const List< T > &data)
  global ostream insertion operator for List
- template<class T> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, List< T > &data)
  global MPIUnpackBuffer extraction operator for List
- template<class T> MPIPackBuffer & operator<< (MPIPackBuffer &s, const List< T > &data)
  global MPIPackBuffer insertion operator for List
- template<class T> istream & operator>> (istream &s, Matrix< T > &data)
  global istream extraction operator for Matrix
- template<class T> ostream & operator<< (ostream &s, const Matrix< T > &data)
  global ostream insertion operator for Matrix
- template<class T> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Matrix< T > &data)
  global MPIUnpackBuffer extraction operator for Matrix
- template<class T> MPIPackBuffer & operator<< (MPIPackBuffer &s, const Matrix< T > &data)
  global MPIPackBuffer insertion operator for Matrix
- bool model_id_compare (const Model &model, const void *id)
  global comparison function for Model
- bool operator== (const ResponseRep &rep1, const ResponseRep &rep2)
  equality operator
- bool responses_id_compare (const Response &resp, const void *id)
  global comparison function for Response
- istream & operator>> (istream &s, Response &response)
  istream extraction operator for Response. Calls read(istream&).
- ostream & operator<< (ostream &s, const Response &response)
  ostream insertion operator for Response. Calls write(istream&).
- BiStream & operator>> (BiStream &s, Response &response)
  BiStream extraction operator for Response. Calls read(BiStream&).

- BoStream & operator<< (BoStream &s, const Response &response)
  BoStream insertion operator for Response. Calls write(BoStream&).
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Response &response)
  read(MPIUnpackBuffer&).
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const Response &response)
  MPIPackBuffer insertion operator for Response. Calls write(MPIPackBuffer&).
- bool operator== (const Response &resp1, const Response &resp2)
  equality operator
- bool operator!= (const Response &resp1, const Response &resp2)
  inequality operator
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const String &data)
  Reads String from buffer.
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, String &data)
  Writes String to buffer.
- String operator+ (const String &s1, const String &s2)
  Concatenate two Strings and return the resulting String.
- String operator+ (const char *s1, const String &s2)
  Append a String to a char and return the resulting String.*
- String operator+ (const String &s1, const char *s2)
  Append a char to a String and return the resulting String.*
- String operator+ (const DAKOTA_BASE_STRING &s1, const String &s2)
  Append a String to a DAKOTA_BASE_STRING and return the resulting String.
- String operator+ (const String &s1, const DAKOTA_BASE_STRING &s2)
  Append a DAKOTA_BASE_STRING to a String and return the resulting String.
- String toUpper (const String &str)
  Returns a String converted to upper case. Calls String::upper().
- String toLower (const String &str)
  Returns a String converted to lower case. Calls String::lower().
- bool operator== (const Variables &vars1, const Variables &vars2)
  equality operator
- bool binary_equal_to (const Variables &vars1, const Variables &vars2)

binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

- std::size_t hash_value (const Variables &vars)
  hash_value
- bool variables_id_compare (const Variables &vars, const void *id)
  global comparison function for Variables
- istream & operator>> (istream &s, Variables &vars)
  istream extraction operator for Variables.
- ostream & operator<< (ostream &s, const Variables &vars)
  ostream insertion operator for Variables.
- BiStream & operator>> (BiStream &s, Variables &vars)
  BiStream extraction operator for Variables.
- BoStream & operator<< (BoStream &s, const Variables &vars)
  BoStream insertion operator for Variables.
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Variables &vars)
  MPIUnpackBuffer extraction operator for Variables.
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const Variables &vars)
  MPIPackBuffer insertion operator for Variables.
- bool operator!= (const Variables &vars1, const Variables &vars2)
  inequality operator
- template<class T> istream & operator>> (istream &s, Vector< T > &data)
  global istream extraction operator for Vector
- template<class T> ostream & operator<< (ostream &s, const Vector< T > &data)
  global ostream insertion operator for Vector
- template<class T> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Vector< T > &data)
  global MPIUnpackBuffer extraction operator for Vector
- template<class T> MPIPackBuffer & operator<< (MPIPackBuffer &s, const Vector< T > &data)
  global MPIPackBuffer insertion operator for Vector
- bool operator== (const RealVector &drv1, const RealVector &drv2)
  equality operator for RealVector
- bool operator== (const IntVector &div1, const IntVector &div2)
  equality operator for IntVector

- bool operator== (const IntArray &dia1, const IntArray &dia2)
  equality operator for IntArray
- bool operator== (const ShortArray &dsa1, const ShortArray &dsa2)
  equality operator for ShortArray
- bool operator== (const RealMatrix &drm1, const RealMatrix &drm2)
  equality operator for RealMatrix
- bool operator== (const RealMatrixArray &drma1, const RealMatrixArray &drma2)
  equality operator for RealMatrixArray
- bool operator== (const StringArray &dsa1, const StringArray &dsa2)
  equality operator for StringArray
- void copy_data (const NEWMAT::ColumnVector &cv, RealBaseVector &drbv)
  copy NEWMAT::ColumnVector to RealBaseVector
- void copy_data (const RealBaseVector &drbv, NEWMAT::ColumnVector &cv)
  copy RealBaseVector to NEWMAT::ColumnVector
- void copy_data (const RealArray &dra, NEWMAT::ColumnVector &cv)
  copy RealArray to NEWMAT::ColumnVector
- void copy_data (const RealMatrix &drm, NEWMAT::SymmetricMatrix &sm)
  copy RealMatrix to NEWMAT::SymmetricMatrix
- void copy_data (const RealMatrix &drm, NEWMAT::Matrix &m)
  copy RealMatrix to NEWMAT::Matrix
- void copy_data (const NEWMAT::ColumnVector &cv, RealDenseVector &rdv)
  copy NEWMAT::ColumnVector to RealDenseVector
- void copy_data (const DDaceSamplePoint &dsp, RealVector &drva)
  copy DDACE point to RealVector
- void copy_data (const std::vector< DDaceSamplePoint > &dspa, RealVectorArray &drva)
  copy DDACE point array to RealVectorArray
- void copy_data (const std::vector< DDaceSamplePoint > &dspa, Real *ptr, const int ptr_len)
  *copy DDACE point array to Real**
- bool operator!= (const RealVector &drv1, const RealVector &drv2)
  inequality operator for RealVector

- bool operator!= (const IntVector &div1, const IntVector &div2)

  inequality operator for IntVector

- bool operator!= (const IntArray &dia1, const IntArray &dia2)

  inequality operator for IntArray

- bool operator!= (const ShortArray &dsa1, const ShortArray &dsa2)

  inequality operator for ShortArray

- bool operator!= (const RealMatrix &drm1, const RealMatrix &drm2)

  inequality operator for RealMatrix

- bool operator!= (const RealMatrixArray &drma1, const RealMatrixArray &drma2)

  inequality operator for RealMatrixArray

- bool operator!= (const StringArray &dsa1, const StringArray &dsa2)

  inequality operator for StringArray

- void build_label (String &label, const String &root_label, size_t tag)

  create a label by appending a numerical tag to the root_label

- void build_labels (StringArray &label_array, const String &root_label)

  label_array. Uses build_label().

- void build_labels_partial (StringArray &label_array, const String &root_label, size_t start_index, size_t num_items)

  of entries in label_array. Uses build_label().

- void aggregate_merged (const RealVector &c_array, const IntVector &d_array, RealVector &m_array)

  aggregate continuous and discrete arrays into a single merged array

- void separate_merged (const RealVector &m_array, RealVector &c_array, IntVector &d_array)

  separate a merged array into continuous and discrete arrays

- template<class T> ostream & operator<< (ostream &s, const std::set< T > &data)

  global ostream insertion operator for std::set

- template<class T> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, std::set< T > &data)

  global MPIUnpackBuffer extraction operator for std::set

- template<class T> MPIPackBuffer & operator<< (MPIPackBuffer &s, const std::set< T > &data)

  global MPIPackBuffer insertion operator for std::set

- template<typename OrdinalType, typename ScalarType> MPIPackBuffer & operator<< (MPIPackBuffer &s, const Teuchos::SerialDenseVector< OrdinalType, ScalarType > &data)

  global MPIPackBuffer insertion operator for Teuchos::SerialDenseVector

- template<typename OrdinalType, typename ScalarType> MPIPackBuffer & operator<< (MPIPackBuffer &s, const Teuchos::SerialDenseMatrix< OrdinalType, ScalarType > &data)

  global MPIPackBuffer insertion operator for Teuchos::SerialDenseMatrix

- template<typename OrdinalType, typename ScalarType> MPIPackBuffer & operator<< (MPIPackBuffer &s, const Teuchos::SerialSymDenseMatrix< OrdinalType, ScalarType > &data)

  global MPIPackBuffer insertion operator for Teuchos::SerialSymDenseMatrix

- template<typename OrdinalType, typename ScalarType> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Teuchos::SerialDenseVector< OrdinalType, ScalarType > &data)

  global MPIUnpackBuffer extraction operator for Teuchos::SerialDenseVector

- template<typename OrdinalType, typename ScalarType> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Teuchos::SerialDenseMatrix< OrdinalType, ScalarType > &data)

  global MPIUnpackBuffer extraction operator for Teuchos::SerialDenseMatrix

- template<typename OrdinalType, typename ScalarType> MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, Teuchos::SerialSymDenseMatrix< OrdinalType, ScalarType > &data)

  global MPIUnpackBuffer extraction operator for Teuchos::SerialSymDenseMatrix

- template<class T> void copy_data (const T *ptr, const int ptr_len, Vector< T > &dv)

  copy T to Vector<T>*

- template<class T> void copy_data (const T *ptr, const int ptr_len, BaseVector< T > &dbv)

  copy T to BaseVector<T>*

- template<class T> void copy_data (const T *ptr, const int ptr_len, const String &ptr_type, Matrix< T > &dm, size_t nr, size_t nc)

  copy T to Matrix<T>*

- template<class T> void copy_data (const T *ptr, const int ptr_len, const String &ptr_type, Array< Vector< T > > &dva, size_t num_vec, size_t vec_len)

  copy T to Array<Vector<T> >*

- template<class T> void copy_data (const Vector< T > &dv, T *ptr, const int ptr_len)

  *copy Vector<T> to T**

- template<class T> void copy_data (const BaseVector< T > &dbv, T *ptr, const int ptr_len)

  *copy BaseVector<T> to T**

- template<class T> void copy_data (const Matrix< T > &dm, T *ptr, const int ptr_len, const String &ptr_type)

  *copy Matrix<T> to T**

- template<class T> void copy_data (const Array< Vector< T > > &dva, T *ptr, const int ptr_len, const String &ptr_type)

copy Array<Vector<T> > to T∗

- template<class T> void copy_data (const Vector< T > &dv, Matrix< T > &dm, size_t nr, size_t nc)

  copy Vector<T> to Matrix<T>

- template<class T> void copy_data (const Vector< T > &dv, Array< Vector< T > > &dva, size_t num_-vec, size_t vec_len)

  copy Vector<T> to Array<Vector<T> >

- template<class T> void copy_data (const Array< T > &da, Vector< T > &dv)

  copy Array<T> to Vector<T>

- template<class T> void copy_data (const BaseVector< T > &dbv, Vector< T > &dv)

  copy BaseVector<T> to Vector<T>

- template<class T> void copy_data (const List< T > &dl, Array< T > &da)

  copy List<T> to Array<T>

- template<class T> void copy_data (const List< T > &dl, Array< Array< T > > &d2a, size_t num_a, size_t a_len)

  copy List<T> to Array<Array<T> >

- template<class T> void copy_data (const Array< Array< T > > &d2a, Array< T > &da)

  copy Array<Array<T> > to Array<T> (unroll 2D array into 1D array)

- template<typename OrdinalType, typename ScalarType> void copy_data (const Teuchos::SerialDense-Vector< OrdinalType, ScalarType > &sdv, Vector< ScalarType > &dv)

  Vector<ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Teuchos::SerialDense-Vector< OrdinalType, ScalarType > &sdv, BaseVector< ScalarType > &dbv)

  BaseVector<ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Teuchos::SerialDense-Matrix< OrdinalType, ScalarType > &sdm, Matrix< ScalarType > &dm)

  Matrix<ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Teuchos::SerialSym-DenseMatrix< OrdinalType, ScalarType > &ssdm, Matrix< ScalarType > &dm)

  Matrix<ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Vector< ScalarType > &dv, Teuchos::SerialDenseVector< OrdinalType, ScalarType > &sdv)

  Teuchos::SerialDenseVector<OrdinalType, ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Array< ScalarType > &da, Teuchos::SerialDenseVector< OrdinalType, ScalarType > &sdv)

Teuchos::SerialDenseVector<OrdinalType, ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const BaseVector< ScalarType > &dbv, Teuchos::SerialDenseVector< OrdinalType, ScalarType > &sdv)

  Teuchos::SerialDenseVector<OrdinalType, ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const ScalarType *ptr, const OrdinalType ptr_len, Teuchos::SerialDenseVector< OrdinalType, ScalarType > &sdv)

  copy ScalarType to Teuchos::SerialDenseVector<OrdinalType, ScalarType>*

- template<typename OrdinalType, typename ScalarType> void copy_data (const Matrix< ScalarType > &dm, Teuchos::SerialDenseMatrix< OrdinalType, ScalarType > &sdm)

  Teuchos::SerialDenseMatrix<OrdinalType, ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Matrix< ScalarType > &dm, Teuchos::SerialSymDenseMatrix< OrdinalType, ScalarType > &ssdm)

  Teuchos::SerialSymDenseMatrix<OrdinalType, ScalarType>.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Array< Vector< ScalarType > > &dva, Array< Teuchos::SerialDenseVector< OrdinalType, ScalarType > > &sdva)

  Array<Teuchos::SerialDenseVector<OrdinalType, ScalarType> >.

- template<typename OrdinalType, typename ScalarType> void copy_data (const Array< Matrix< ScalarType > > &dma, Array< Teuchos::SerialSymDenseMatrix< OrdinalType, ScalarType > > &ssdma)

  Array<Teuchos::SerialSymDenseMatrix<OrdinalType, ScalarType> >.

- template<class T> void copy_data_partial (const Vector< T > &dv1, size_t start_index, size_t num_items, Vector< T > &dv2)

  copy portion of first Vector<T> to all of second Vector<T>

- template<typename OrdinalType, typename ScalarType> void copy_data_partial (const Vector< ScalarType > &dv, size_t start_index, size_t num_items, Teuchos::SerialDenseVector< OrdinalType, ScalarType > &sdv)

  Teuchos::SerialDenseVector<OrdinalType, ScalarType>.

- template<class T> void copy_data_partial (const Vector< T > &dv1, Vector< T > &dv2, size_t start_index)

  copy all of first Vector<T> to portion of second Vector<T>

- template<class T> void copy_data_partial (const Vector< T > &dv1, size_t start_index1, size_t num_items, Vector< T > &dv2, size_t start_index2)

  copy portion of first Vector<T> to portion of second Vector<T>

- template<class T> void copy_data_partial (const Array< T > &da1, size_t start_index, size_t num_items, Array< T > &da2)

  copy portion of first Array<T> to all of second Array<T>

- template<class T> void copy_data_partial (const Array< T > &da1, Array< T > &da2, size_t start_index)

  copy all of first Array<T> to portion of second Array<T>

- template<class T> void copy_data_partial (const Array< T > &da1, size_t start_index1, size_t num_items, Array< T > &da2, size_t start_index2)

  copy portion of first Array<T> to portion of second Array<T>

- template<class T> void aggregate_data (const Array< T > &da1, const Array< T > &da2, Array< T > &all_da)

  aggregate two Array<T>'s into a single Array<T>

- template<class T> void aggregate_data (const Array< T > &da1, const Array< T > &da2, const Array< T > &da3, Array< T > &all_da)

  aggregate three Array<T>'s into a single Array<T>

- template<class T> void aggregate_data (const Vector< T > &dv1, const Vector< T > &dv2, Vector< T > &all_dv)

  aggregate two Vector<T>'s into a single Vector<T>

- template<class T> void aggregate_data (const Vector< T > &dv1, const Vector< T > &dv2, const Vector< T > &dv3, Vector< T > &all_dv)

  aggregate three Vector<T>'s into a single Vector<T>

- template<class T> void separate_data (const Array< T > &all_da, Array< T > &da1, Array< T > &da2)

  separate an Array<T> into two Array<T>'s

- template<class T> void separate_data (const Array< T > &all_da, Array< T > &da1, Array< T > &da2, Array< T > &da3)

  separate an Array<T> into three Array<T>'s

- template<class T> void separate_data (const Vector< T > &all_dv, Vector< T > &dv1, Vector< T > &dv2)

  separate an Vector<T> into two Vector<T>'s

- template<class T> void separate_data (const Vector< T > &all_dv, Vector< T > &dv1, Vector< T > &dv2, Vector< T > &dv3)

  separate an Vector<T> into three Vector<T>'s

- template<class T> void copy_data (const utilib::NumArray< T > &na, Vector< T > &dv)

  copy utilib::NumArray<T> to Vector<T>

- template<class T> void copy_data (const Vector< T > &dv, utilib::NumArray< T > &na)

  copy Vector<T> to utilib::NumArray<T>

- template<class T> void copy_data (const utilib::NumArray< T > &na, Array< T > &da)

copy utilib::NumArray<T> to Array<T>

- template<class T> void copy_data (const List< T > &dl, utilib::NumArray< T > &na)
  copy List<T> to utilib::NumArray<T>
- template<class T> void copy_data (const TNT::Vector< T > &tntv, Vector< T > &dv)
  copy TNT::Vector<T> to Vector<T>
- template<class T> void copy_data (const Vector< T > &dv, TNT::Vector< T > &tntv)
  copy Vector<T> to TNT::Vector<T>
- template<class T> void copy_data (const T *ptr, const int ptr_len, TNT::Vector< T > &tntv)
  copy T to TNT::Vector<T>*
- template<class T> void copy_data (const Matrix< T > &dm, TNT::Matrix< T > &tntm)
  copy Matrix<T> to TNT::Matrix<T>
- bool data_interface_id_compare (const DataInterface &di, const void *id)
  global comparison function for DataInterface
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const DataInterface &data)
  MPIPackBuffer insertion operator for DataInterface.
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, DataInterface &data)
  MPIUnpackBuffer extraction operator for DataInterface.
- ostream & operator<< (ostream &s, const DataInterface &data)
  ostream insertion operator for DataInterface
- bool data_method_id_compare (const DataMethod &dm, const void *id)
  global comparison function for DataMethod
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const DataMethod &data)
  MPIPackBuffer insertion operator for DataMethod.
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, DataMethod &data)
  MPIUnpackBuffer extraction operator for DataMethod.
- ostream & operator<< (ostream &s, const DataMethod &data)
  ostream insertion operator for DataMethod
- bool data_model_id_compare (const DataModel &dm, const void *id)
  global comparison function for DataModelRep
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const DataModel &data)
  MPIPackBuffer insertion operator for DataModel.

- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, DataModel &data)
  MPIUnpackBuffer extraction operator for DataModel.
- ostream & operator<< (ostream &s, const DataModel &data)
  ostream insertion operator for DataModel
- bool data_responses_id_compare (const DataResponses &dr, const void *id)
  global comparison function for DataResponses
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const DataResponses &data)
  MPIPackBuffer insertion operator for DataResponses.
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, DataResponses &data)
  MPIUnpackBuffer extraction operator for DataResponses.
- ostream & operator<< (ostream &s, const DataResponses &data)
  ostream insertion operator for DataResponses
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const DataStrategy &data)
  MPIPackBuffer insertion operator for DataStrategy.
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, DataStrategy &data)
  MPIUnpackBuffer extraction operator for DataStrategy.
- ostream & operator<< (ostream &s, const DataStrategy &data)
  ostream insertion operator for DataStrategy
- bool data_variables_id_compare (const DataVariables &dv, const void *id)
  global comparison function for DataVariables
- MPIPackBuffer & operator<< (MPIPackBuffer &s, const DataVariables &data)
  MPIPackBuffer insertion operator for DataVariables.
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, DataVariables &data)
  MPIUnpackBuffer extraction operator for DataVariables.
- ostream & operator<< (ostream &s, const DataVariables &data)
  ostream insertion operator for DataVariables
- int salinas_main (int argc, char *argv[ ], MPI_Comm *comm)
  subroutine interface to SALINAS simulation code
- bool operator== (const DistinctVariables &vars1, const DistinctVariables &vars2)
  equality operator

- bool binary_equal_to (const DistinctVariables &vars1, const DistinctVariables &vars2)

  binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

- std::size_t hash_value (const DistinctVariables &vars)

  hash_value

- int **dlsolver_option** (Opt_Info ∗)
- void abort_handler (int code)

  global function which handles serial or parallel aborts

- RealVector const ∗ **continuous_lower_bounds** (Optimizer1 ∗o)
- RealVector const ∗ **continuous_upper_bounds** (Optimizer1 ∗o)
- RealVector const ∗ **nonlinear_ineq_constraint_lower_bounds** (Optimizer1 ∗o)
- RealVector const ∗ **nonlinear_ineq_constraint_upper_bounds** (Optimizer1 ∗o)
- RealVector const ∗ **nonlinear_eq_constraint_targets** (Optimizer1 ∗o)
- RealVector const ∗ **linear_ineq_constraint_lower_bounds** (Optimizer1 ∗o)
- RealVector const ∗ **linear_ineq_constraint_upper_bounds** (Optimizer1 ∗o)
- RealVector const ∗ **linear_eq_constraint_targets** (Optimizer1 ∗o)
- RealMatrix const ∗ **linear_ineq_constraint_coeffs** (Optimizer1 ∗o)
- RealMatrix const ∗ **linear_eq_constraint_coeffs** (Optimizer1 ∗o)
- void **ComputeResponses** (Optimizer1 ∗o, int mode, int n, double ∗x)
- void **GetFuncs** (Optimizer1 ∗o, int m0, int m1, double ∗f)
- void **GetGrads** (Optimizer1 ∗o, int m0, int m1, int n, int is, int js, double ∗g)
- void **GetContVars** (Optimizer1 ∗o, int n, double ∗x)
- void **SetBestContVars** (Optimizer1 ∗o, int n, double ∗x)
- void **SetBestRespFns** (Optimizer1 ∗o, int n, double ∗x)
- void ∗ **dl_constructor** (Optimizer1 ∗, Dakota_funcs ∗, dl_find_optimum_t ∗, dl_destructor_t ∗)
- static RealVector const ∗ **continuous_lower_bounds1** (Optimizer1 ∗o)
- static RealVector const ∗ **continuous_upper_bounds1** (Optimizer1 ∗o)
- static RealVector const ∗ **nonlinear_ineq_constraint_lower_bounds1** (Optimizer1 ∗o)
- static RealVector const ∗ **nonlinear_ineq_constraint_upper_bounds1** (Optimizer1 ∗o)
- static RealVector const ∗ **nonlinear_eq_constraint_targets1** (Optimizer1 ∗o)
- static RealVector const ∗ **linear_ineq_constraint_lower_bounds1** (Optimizer1 ∗o)
- static RealVector const ∗ **linear_ineq_constraint_upper_bounds1** (Optimizer1 ∗o)
- static RealVector const ∗ **linear_eq_constraint_targets1** (Optimizer1 ∗o)
- static RealMatrix const ∗ **linear_eq_constraint_coeffs1** (Optimizer1 ∗o)
- static RealMatrix const ∗ **linear_ineq_constraint_coeffs1** (Optimizer1 ∗o)
- static void **ComputeResponses1** (Optimizer1 ∗o, int mode, int n, double ∗x)
- static void **GetFuncs1** (Optimizer1 ∗o, int m0, int m1, double ∗f)
- static void **GetGrads1** (Optimizer1 ∗o, int m0, int m1, int n, int is, int js, double ∗g)
- static void **GetContVars1** (Optimizer1 ∗o, int n, double ∗x)
- static void **SetBestContVars1** (Optimizer1 ∗o, int n, double ∗x)
- static void **SetBestDiscVars1** (Optimizer1 ∗o, int n, int ∗x)
- static void **SetBestRespFns1** (Optimizer1 ∗o, int n, double ∗x)
- static double **Get_Real1** (Optimizer1 ∗o, const char ∗name)
- static int **Get_Int1** (Optimizer1 ∗o, const char ∗name)

- static bool **Get_Bool1** (Optimizer1 ∗o, const char ∗name)
- Real getdist (RealVector &x1, RealVector &x2)
- Real mindist (RealVector &x, RealMatrix &xset, int except)
- Real mindistindx (RealVector &x, RealMatrix &xset, IntVector &indx)
- Real getRmax (RealMatrix &xset)
- int **Isfinite** (const Real &x)
- template<typename T> T **abort_handler_t** (int code)
- int **start_grid_computing** (char ∗analysis_driver_script, char ∗params_file, char ∗results_file)
- int **stop_grid_computing** ()
- int **perform_analysis** (char ∗iteration_num)
- template<typename T> string asstring (const T &val)

  Creates a string from the argument val *using an ostringstream.*

- bool operator== (const MergedVariables &vars1, const MergedVariables &vars2)

  equality operator

- bool binary_equal_to (const MergedVariables &vars1, const MergedVariables &vars2)

  binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

- std::size_t hash_value (const MergedVariables &vars)

  hash_value

- **PACKBUF** (int, MPI_INT)
- **UNPACKBUF** (int, MPI_INT)
- **PACKSIZE** (int, MPI_INT)
- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const int &data)

  insert an int

- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const u_int &data)

  insert a u_int

- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const long &data)

  insert a long

- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const u_long &data)

  insert a u_long

- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const short &data)

  insert a short

- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const u_short &data)

  insert a u_short

- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const char &data)

  insert a char

- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const u_char &data)
  insert a u_char
- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const double &data)
  insert a double
- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const float &data)
  insert a float
- MPIPackBuffer & operator<< (MPIPackBuffer &buff, const bool &data)
  insert a bool
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, int &data)
  extract an int
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, u_int &data)
  extract a u_int
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, long &data)
  extract a long
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, u_long &data)
  extract a u_long
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, short &data)
  extract a short
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, u_short &data)
  extract a u_short
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, char &data)
  extract a char
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, u_char &data)
  extract a u_char
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, double &data)
  extract a double
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, float &data)
  extract a float
- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &buff, bool &data)
  extract a bool
- int MPIPackSize (const int &data, const int num=1)

return packed size of an int

- int MPIPackSize (const u_int &data, const int num=1)

  return packed size of a u_int

- int MPIPackSize (const long &data, const int num=1)

  return packed size of a long

- int MPIPackSize (const u_long &data, const int num=1)

  return packed size of a u_long

- int MPIPackSize (const short &data, const int num=1)

  return packed size of a short

- int MPIPackSize (const u_short &data, const int num=1)

  return packed size of a u_short

- int MPIPackSize (const char &data, const int num=1)

  return packed size of a char

- int MPIPackSize (const u_char &data, const int num=1)

  return packed size of a u_char

- int MPIPackSize (const double &data, const int num=1)

  return packed size of a double

- int MPIPackSize (const float &data, const int num=1)

  return packed size of a float

- int MPIPackSize (const bool &data, const int num=1)

  return packed size of a bool

- int **nidr_parse** (const char ∗)
- static void **scale_chk** (StringArray &ST, RealVector &S, const char ∗what, const char ∗∗univ)
- static void **BuildLabels** (StringArray ∗sa, size_t nsa, size_t n1, size_t n2, const char ∗stub)
- static int **flist_check** (IntList ∗L, int n, IntVector ∗iv, const char ∗what)
- static void **flist_check2** (size_t n, IntVector ∗iv, const char ∗what)
- static int **wronglen** (size_t n, RealDenseVector ∗V, const char ∗what)
- static void **Vcopyup** (RealVector ∗V, RealDenseVector ∗M, size_t i, size_t n)
- static void **Set_rdv** (RealDenseVector ∗V, double d, size_t n)
- static void **Vadj_Normal** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Lognormal** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Uniform** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Loguniform** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Triangular** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Exponential** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)

- static void **Vadj_Beta** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Gamma** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Gumbel** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Frechet** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Weibull** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Histogram** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Vadj_Interval** (DataVariablesRep ∗dv, size_t i0, Var_Info ∗vi)
- static void **Rdv_copy** (RealDenseVector ∗∗prdv, RealDenseVectorArray ∗rdva)
- static Iface_mp_Rlit **MP3** (failAction, recoveryFnVals, recover)
- static Iface_mp_ilit **MP3** (failAction, retryLimit, retry)
- static Iface_mp_lit **MP2** (analysisScheduling, self)
- static Iface_mp_lit **MP2** (analysisScheduling, static)
- static Iface_mp_lit **MP2** (evalScheduling, self)
- static Iface_mp_lit **MP2** (evalScheduling, static)
- static Iface_mp_lit **MP2** (failAction, abort)
- static Iface_mp_lit **MP2** (failAction, continuation)
- static Iface_mp_lit **MP2** (interfaceSynchronization, asynchronous)
- static Iface_mp_lit **MP2** (interfaceType, direct)
- static Iface_mp_lit **MP2** (interfaceType, fork)
- static Iface_mp_lit **MP2** (interfaceType, grid)
- static Iface_mp_lit **MP2** (interfaceType, system)
- static bool **MP_** (activeSetVectorFlag)
- static bool **MP_** (apreproFlag)
- static bool **MP_** (verbatimFlag)
- static bool **MP_** (evalCacheFlag)
- static bool **MP_** (fileSaveFlag)
- static bool **MP_** (fileTagFlag)
- static bool **MP_** (restartFileFlag)
- static int **MP_** (analysisServers)
- static int **MP_** (asynchLocalAnalysisConcurrency)
- static int **MP_** (asynchLocalEvalConcurrency)
- static int **MP_** (evalServers)
- static int **MP_** (procsPerAnalysis)
- static Method_mp_Ii **MP3x** (numSteps, paramStudyType, 2)
- static Method_mp_Ii **MP3x** (numSteps, paramStudyType, 3)
- static Method_mp_Ri **MP3x** (stepLength, paramStudyType, 1)
- static Method_mp_ilit2 **MP3** (replacementType, numberRetained, chc)
- static Method_mp_ilit2 **MP3** (replacementType, numberRetained, elitist)
- static Method_mp_ilit2 **MP3** (replacementType, numberRetained, random)
- static Method_mp_ilit2z **MP3** (crossoverType, numCrossPoints, multi_point_binary)
- static Method_mp_ilit2z **MP3** (crossoverType, numCrossPoints, multi_point_parameterized_binary)
- static Method_mp_ilit2z **MP3** (crossoverType, numCrossPoints, multi_point_real)
- static Method_mp_lit **MP2** (boxDivision, all_dimensions)
- static Method_mp_lit **MP2** (boxDivision, major_dimension)
- static Method_mp_lit **MP2** (collocSampleReuse, all)
- static Method_mp_lit **MP2** (convergenceType, average_fitness_tracker)

- static Method_mp_lit **MP2** (convergenceType, best_fitness_tracker)
- static Method_mp_lit **MP2** (convergenceType, metric_tracker)
- static Method_mp_lit **MP2** (crossoverType, blend)
- static Method_mp_lit **MP2** (crossoverType, two_point)
- static Method_mp_lit **MP2** (crossoverType, uniform)
- static Method_mp_lit **MP2** (daceMethod, box_behnken)
- static Method_mp_lit **MP2** (daceMethod, central_composite)
- static Method_mp_lit **MP2** (daceMethod, grid)
- static Method_mp_lit **MP2** (daceMethod, lhs)
- static Method_mp_lit **MP2** (daceMethod, oa_lhs)
- static Method_mp_lit **MP2** (daceMethod, oas)
- static Method_mp_lit **MP2** (daceMethod, random)
- static Method_mp_lit **MP2** (distributionType, complementary)
- static Method_mp_lit **MP2** (distributionType, cumulative)
- static Method_mp_lit **MP2** (evalSynchronization, blocking)
- static Method_mp_lit **MP2** (evalSynchronization, nonblocking)
- static Method_mp_lit **MP2** (evalSynchronize, blocking)
- static Method_mp_lit **MP2** (evalSynchronize, nonblocking)
- static Method_mp_lit **MP2** (expansionSampleType, incremental_lhs)
- static Method_mp_lit **MP2** (exploratoryMoves, adaptive)
- static Method_mp_lit **MP2** (exploratoryMoves, multi_step)
- static Method_mp_lit **MP2** (exploratoryMoves, simple)
- static Method_mp_lit **MP2** (fitnessType, domination_count)
- static Method_mp_lit **MP2** (fitnessType, layer_rank)
- static Method_mp_lit **MP2** (fitnessType, linear_rank)
- static Method_mp_lit **MP2** (fitnessType, merit_function)
- static Method_mp_lit **MP2** (fitnessType, proportional)
- static Method_mp_lit **MP2** (initializationType, random)
- static Method_mp_lit **MP2** (initializationType, unique_random)
- static Method_mp_lit **MP2** (meritFunction, merit_max)
- static Method_mp_lit **MP2** (meritFunction, merit_max_smooth)
- static Method_mp_lit **MP2** (meritFunction, merit1)
- static Method_mp_lit **MP2** (meritFunction, merit1_smooth)
- static Method_mp_lit **MP2** (meritFunction, merit2)
- static Method_mp_lit **MP2** (meritFunction, merit2_smooth)
- static Method_mp_lit **MP2** (meritFunction, merit2_squared)
- static Method_mp_lit **MP2** (methodName, asynch_pattern_search)
- static Method_mp_lit **MP2** (methodName, coliny_cobyla)
- static Method_mp_lit **MP2** (methodName, coliny_direct)
- static Method_mp_lit **MP2** (methodName, coliny_pattern_search)
- static Method_mp_lit **MP2** (methodName, coliny_solis_wets)
- static Method_mp_lit **MP2** (methodName, conmin_frcg)
- static Method_mp_lit **MP2** (methodName, conmin_mfd)
- static Method_mp_lit **MP2** (methodName, dace)
- static Method_mp_lit **MP2** (methodName, dot_bfgs)
- static Method_mp_lit **MP2** (methodName, dot_frcg)

- static Method_mp_lit **MP2** (methodName, dot_mmfd)
- static Method_mp_lit **MP2** (methodName, dot_slp)
- static Method_mp_lit **MP2** (methodName, dot_sqp)
- static Method_mp_lit **MP2** (methodName, efficient_global)
- static Method_mp_lit **MP2** (methodName, fsu_cvt)
- static Method_mp_lit **MP2** (methodName, fsu_halton)
- static Method_mp_lit **MP2** (methodName, fsu_hammersley)
- static Method_mp_lit **MP2** (methodName, ncsu_direct)
- static Method_mp_lit **MP2** (methodName, nl2sol)
- static Method_mp_lit **MP2** (methodName, nlpql_sqp)
- static Method_mp_lit **MP2** (methodName, nlssol_sqp)
- static Method_mp_lit **MP2** (methodName, nond_evidence)
- static Method_mp_lit **MP2** (methodName, nond_global_reliability)
- static Method_mp_lit **MP2** (methodName, nond_polynomial_chaos)
- static Method_mp_lit **MP2** (methodName, nond_sampling)
- static Method_mp_lit **MP2** (methodName, nond_stoch_collocation)
- static Method_mp_lit **MP2** (methodName, npsol_sqp)
- static Method_mp_lit **MP2** (methodName, optpp_cg)
- static Method_mp_lit **MP2** (methodName, optpp_fd_newton)
- static Method_mp_lit **MP2** (methodName, optpp_g_newton)
- static Method_mp_lit **MP2** (methodName, optpp_newton)
- static Method_mp_lit **MP2** (methodName, optpp_pds)
- static Method_mp_lit **MP2** (methodName, optpp_q_newton)
- static Method_mp_lit **MP2** (methodName, psuade_moat)
- static Method_mp_lit **MP2** (methodName, surrogate_based_global)
- static Method_mp_lit **MP2** (methodName, surrogate_based_local)
- static Method_mp_lit **MP2** (methodName, vector_parameter_study)
- static Method_mp_lit **MP2** (minMaxType, maximize)
- static Method_mp_lit **MP2** (minMaxType, minimize)
- static Method_mp_lit **MP2** (mutationType, bit_random)
- static Method_mp_lit **MP2** (mutationType, offset_cauchy)
- static Method_mp_lit **MP2** (mutationType, offset_normal)
- static Method_mp_lit **MP2** (mutationType, offset_uniform)
- static Method_mp_lit **MP2** (mutationType, replace_uniform)
- static Method_mp_lit **MP2** (patternBasis, coordinate)
- static Method_mp_lit **MP2** (patternBasis, simplex)
- static Method_mp_lit **MP2** (reliabilityIntegration, first_order)
- static Method_mp_lit **MP2** (reliabilityIntegration, second_order)
- static Method_mp_lit **MP2** (reliabilityIntegrationRefine, ais)
- static Method_mp_lit **MP2** (reliabilityIntegrationRefine, is)
- static Method_mp_lit **MP2** (reliabilityIntegrationRefine, mmais)
- static Method_mp_lit **MP2** (reliabilitySearchAlgorithm, nip)
- static Method_mp_lit **MP2** (reliabilitySearchAlgorithm, sqp)
- static Method_mp_lit **MP2** (reliabilitySearchType, amv_plus_u)
- static Method_mp_lit **MP2** (reliabilitySearchType, amv_plus_x)
- static Method_mp_lit **MP2** (reliabilitySearchType, amv_u)

- static Method_mp_lit **MP2** (reliabilitySearchType, amv_x)
- static Method_mp_lit **MP2** (reliabilitySearchType, egra_u)
- static Method_mp_lit **MP2** (reliabilitySearchType, egra_x)
- static Method_mp_lit **MP2** (reliabilitySearchType, no_approx)
- static Method_mp_lit **MP2** (reliabilitySearchType, tana_u)
- static Method_mp_lit **MP2** (reliabilitySearchType, tana_x)
- static Method_mp_lit **MP2** (replacementType, elitist)
- static Method_mp_lit **MP2** (replacementType, favor_feasible)
- static Method_mp_lit **MP2** (replacementType, roulette_wheel)
- static Method_mp_lit **MP2** (replacementType, unique_roulette_wheel)
- static Method_mp_lit **MP2** (responseLevelMappingType, gen_reliabilities)
- static Method_mp_lit **MP2** (responseLevelMappingType, probabilities)
- static Method_mp_lit **MP2** (responseLevelMappingType, reliabilities)
- static Method_mp_lit **MP2** (sampleType, incremental_lhs)
- static Method_mp_lit **MP2** (sampleType, incremental_random)
- static Method_mp_lit **MP2** (sampleType, lhs)
- static Method_mp_lit **MP2** (sampleType, random)
- static Method_mp_lit **MP2** (searchMethod, gradient_based_line_search)
- static Method_mp_lit **MP2** (searchMethod, tr_pds)
- static Method_mp_lit **MP2** (searchMethod, trust_region)
- static Method_mp_lit **MP2** (searchMethod, value_based_line_search)
- static Method_mp_lit **MP2** (trialType, grid)
- static Method_mp_lit **MP2** (trialType, halton)
- static Method_mp_lit **MP2** (trialType, random)
- static Method_mp_lit2 **MP4** (methodName, reliabilitySearchType, nond_local_reliability,"mv")
- static Method_mp_litc **MP3** (crossoverType, crossoverRate, shuffle_random)
- static Method_mp_litc **MP3** (crossoverType, crossoverRate, null_crossover)
- static Method_mp_litc **MP3** (mutationType, mutationRate, null_mutation)
- static Method_mp_litc **MP3** (mutationType, mutationRate, offset_cauchy)
- static Method_mp_litc **MP3** (mutationType, mutationRate, offset_normal)
- static Method_mp_litc **MP3** (mutationType, mutationRate, offset_uniform)
- static Method_mp_litc **MP3** (replacementType, fitnessLimit, below_limit)
- static Method_mp_liti **MP4** (methodName, paramStudyType, list_parameter_study,-1)
- static Method_mp_liti **MP4** (methodName, paramStudyType, centered_parameter_study, 4)
- static Method_mp_liti **MP4** (methodName, paramStudyType, multidim_parameter_study, 5)
- static Method_mp_litrv **MP3** (nichingType, nicheVector, distance)
- static Method_mp_litrv **MP3** (nichingType, nicheVector, radial)
- static Method_mp_litrv **MP3** (postProcessorType, distanceVector, distance_postprocessor)
- static Method_mp_slit **MP2a** (methodOutput, DEBUG_OUTPUT)
- static Method_mp_slit **MP2a** (methodOutput, QUIET_OUTPUT)
- static Method_mp_slit **MP2a** (methodOutput, SILENT_OUTPUT)
- static Method_mp_slit **MP2a** (methodOutput, VERBOSE_OUTPUT)
- static Method_mp_slit **MP2a** (surrBasedLocalAcceptLogic, FILTER)
- static Method_mp_slit **MP2a** (surrBasedLocalAcceptLogic, TR_RATIO)
- static Method_mp_slit **MP2a** (surrBasedLocalConstrRelax, HOMOTOPY)
- static Method_mp_slit **MP2a** (surrBasedLocalMeritFn, ADAPTIVE_PENALTY_MERIT)

- static Method_mp_slit **MP2a** (surrBasedLocalMeritFn, AUGMENTED_LAGRANGIAN_MERIT)
- static Method_mp_slit **MP2a** (surrBasedLocalMeritFn, LAGRANGIAN_MERIT)
- static Method_mp_slit **MP2a** (surrBasedLocalMeritFn, PENALTY_MERIT)
- static Method_mp_slit **MP2a** (surrBasedLocalSubProbCon, LINEARIZED_CONSTRAINTS)
- static Method_mp_slit **MP2a** (surrBasedLocalSubProbCon, NO_CONSTRAINTS)
- static Method_mp_slit **MP2a** (surrBasedLocalSubProbCon, ORIGINAL_CONSTRAINTS)
- static Method_mp_slit **MP2a** (surrBasedLocalSubProbObj, AUGMENTED_LAGRANGIAN_-OBJECTIVE)
- static Method_mp_slit **MP2a** (surrBasedLocalSubProbObj, LAGRANGIAN_OBJECTIVE)
- static Method_mp_slit **MP2a** (surrBasedLocalSubProbObj, ORIGINAL_PRIMARY)
- static Method_mp_slit **MP2a** (surrBasedLocalSubProbObj, SINGLE_OBJECTIVE)
- static Method_mp_slit2 **MP3** (initializationType, flatFile, flat_file)
- static Method_mp_slit2 **MP3** (methodName, dlDetails, dl_solver)
- static Real **MP_** (absConvTol)
- static Real **MP_** (centeringParam)
- static Real **MP_** (collocationRatio)
- static Real **MP_** (constraintPenalty)
- static Real **MP_** (constrPenalty)
- static Real **MP_** (constraintTolerance)
- static Real **MP_** (contractFactor)
- static Real **MP_** (contractStepLength)
- static Real **MP_** (convergenceTolerance)
- static Real **MP_** (crossoverRate)
- static Real **MP_** (falseConvTol)
- static Real **MP_** (functionPrecision)
- static Real **MP_** (globalBalanceParam)
- static Real **MP_** (gradientTolerance)
- static Real **MP_** (initDelta)
- static Real **MP_** (initStepLength)
- static Real **MP_** (initTRRadius)
- static Real **MP_** (lineSearchTolerance)
- static Real **MP_** (localBalanceParam)
- static Real **MP_** (maxBoxSize)
- static Real **MP_** (maxStep)
- static Real **MP_** (minBoxSize)
- static Real **MP_** (mutationRate)
- static Real **MP_** (mutationScale)
- static Real **MP_** (percentDelta)
- static Real **MP_** (shrinkagePercent)
- static Real **MP_** (singConvTol)
- static Real **MP_** (singRadius)
- static Real **MP_** (smoothFactor)
- static Real **MP_** (solnAccuracy)
- static Real **MP_** (solnTarget)
- static Real **MP_** (stepLenToBoundary)
- static Real **MP_** (surrBasedLocalTRContract)

- static Real **MP_** (surrBasedLocalTRContractTrigger)
- static Real **MP_** (surrBasedLocalTRExpand)
- static Real **MP_** (surrBasedLocalTRExpandTrigger)
- static Real **MP_** (surrBasedLocalTRInitSize)
- static Real **MP_** (surrBasedLocalTRMinSize)
- static Real **MP_** (threshDelta)
- static Real **MP_** (threshStepLength)
- static Real **MP_** (volBoxSize)
- static Real **MP_** (xConvTol)
- static bool **MP_** (allVarsFlag)
- static bool **MP_** (constantPenalty)
- static bool **MP_** (expansionFlag)
- static bool **MP_** (fixedSeedFlag)
- static bool **MP_** (fixedSequenceFlag)
- static bool **MP_** (latinizeFlag)
- static bool **MP_** (mainEffectsFlag)
- static bool **MP_** (methodScaling)
- static bool **MP_** (mutationAdaptive)
- static bool **MP_** (printPopFlag)
- static bool **MP_** (randomizeOrderFlag)
- static bool **MP_** (regressDiag)
- static bool **MP_** (showMiscOptions)
- static bool **MP_** (speculativeFlag)
- static bool **MP_** (surrBasedGlobalReplacePts)
- static bool **MP_** (surrBasedLocalLayerBypass)
- static bool **MP_** (varBasedDecompFlag)
- static bool **MP_** (volQualityFlag)
- static int **MP_** (collocationPoints)
- static int **MP_** (contractAfterFail)
- static int **MP_** (covarianceType)
- static int **MP_** (deltasPerVariable)
- static int **MP_** (expandAfterSuccess)
- static int **MP_** (expansionSamples)
- static int **MP_** (expansionTerms)
- static int **MP_** (maxFunctionEvaluations)
- static int **MP_** (maxIterations)
- static int **MP_** (mutationRange)
- static int **MP_** (newSolnsGenerated)
- static int **MP_** (numSamples)
- static int **MP_** (numSymbols)
- static int **MP_** (numTrials)
- static int **MP_** (populationSize)
- static int **MP_** (previousSamples)
- static int **MP_** (randomSeed)
- static int **MP_** (searchSchemeSize)
- static int **MP_** (surrBasedLocalSoftConvLimit)

- static int **MP_** (totalPatternSize)
- static int **MP_** (verifyLevel)
- static short **MP_** (expansionOrder)
- static size_t **MP_** (numGenerations)
- static size_t **MP_** (numOffspring)
- static size_t **MP_** (numParents)
- static IntSet **MP_** (surrogateFnIndices)
- static Model_mp_lit **MP2** (approxCorrectionType, additive)
- static Model_mp_lit **MP2** (approxCorrectionType, combined)
- static Model_mp_lit **MP2** (approxCorrectionType, multiplicative)
- static Model_mp_lit **MP2** (approxSampleReuse, all)
- static Model_mp_lit **MP2** (approxSampleReuse, none)
- static Model_mp_lit **MP2** (approxSampleReuse, region)
- static Model_mp_lit **MP2** (marsInterpolation, linear)
- static Model_mp_lit **MP2** (marsInterpolation, cubic)
- static Model_mp_lit **MP2** (modelType, nested)
- static Model_mp_lit **MP2** (modelType, single)
- static Model_mp_lit **MP2** (modelType, surrogate)
- static Model_mp_lit **MP2** (surrogateType, hierarchical)
- static Model_mp_lit **MP2** (surrogateType, global_gaussian)
- static Model_mp_lit **MP2** (surrogateType, global_kriging)
- static Model_mp_lit **MP2** (surrogateType, global_mars)
- static Model_mp_lit **MP2** (surrogateType, global_moving_least_squares)
- static Model_mp_lit **MP2** (surrogateType, global_neural_network)
- static Model_mp_lit **MP2** (surrogateType, global_polynomial)
- static Model_mp_lit **MP2** (surrogateType, global_radial_basis)
- static Model_mp_lit **MP2** (surrogateType, local_taylor)
- static Model_mp_lit **MP2** (surrogateType, multipoint_tana)
- static Model_mp_ord **MP2s** (approxCorrectionOrder, 0)
- static Model_mp_ord **MP2s** (approxCorrectionOrder, 1)
- static Model_mp_ord **MP2s** (approxCorrectionOrder, 2)
- static Model_mp_ord **MP2s** (polynomialOrder, 1)
- static Model_mp_ord **MP2s** (polynomialOrder, 2)
- static Model_mp_ord **MP2s** (polynomialOrder, 3)
- static Model_mp_ord **MP2s** (trendOrder, 0)
- static Model_mp_ord **MP2s** (trendOrder, 1)
- static Model_mp_ord **MP2s** (trendOrder, 2)
- static Real **MP_** (annRange)
- bool **MP_** (approxGradUsageFlag)
- bool **MP_** (pointSelection)
- short **MP_** (annNodes)
- short **MP_** (annRandomWeight)
- short **MP_** (krigingMaxTrials)
- short **MP_** (marsMaxBases)
- short **MP_** (mlsPolyOrder)
- short **MP_** (mlsWeightFunction)

- short **MP_** (rbfBases)
- short **MP_** (rbfMaxPts)
- short **MP_** (rbfMaxSubsets)
- short **MP_** (rbfMinPartition)
- static Resp_mp_lit **MP2** (gradientType, analytic)
- static Resp_mp_lit **MP2** (gradientType, mixed)
- static Resp_mp_lit **MP2** (gradientType, none)
- static Resp_mp_lit **MP2** (gradientType, numerical)
- static Resp_mp_lit **MP2** (hessianType, analytic)
- static Resp_mp_lit **MP2** (hessianType, mixed)
- static Resp_mp_lit **MP2** (hessianType, none)
- static Resp_mp_lit **MP2** (hessianType, numerical)
- static Resp_mp_lit **MP2** (hessianType, quasi)
- static Resp_mp_lit **MP2** (intervalType, central)
- static Resp_mp_lit **MP2** (intervalType, forward)
- static Resp_mp_lit **MP2** (methodSource, dakota)
- static Resp_mp_lit **MP2** (methodSource, vendor)
- static Resp_mp_lit **MP2** (quasiHessianType, bfgs)
- static Resp_mp_lit **MP2** (quasiHessianType, damped_bfgs)
- static Resp_mp_lit **MP2** (quasiHessianType, sr1)
- static size_t **MP_** (numLeastSqTerms)
- static size_t **MP_** (numNonlinearEqConstraints)
- static size_t **MP_** (numNonlinearIneqConstraints)
- static size_t **MP_** (numObjectiveFunctions)
- static size_t **MP_** (numResponseFunctions)
- static Real **MP_** (hybridLSProb)
- static Strategy_mp_lit **MP2** (hybridType, collaborative)
- static Strategy_mp_lit **MP2** (hybridType, embedded)
- static Strategy_mp_lit **MP2** (hybridType, sequential)
- static Strategy_mp_lit **MP2** (iteratorScheduling, self)
- static Strategy_mp_lit **MP2** (iteratorScheduling, static)
- static Strategy_mp_lit **MP2** (strategyType, hybrid)
- static Strategy_mp_lit **MP2** (strategyType, multi_start)
- static Strategy_mp_lit **MP2** (strategyType, pareto_set)
- static Strategy_mp_lit **MP2** (strategyType, single_method)
- static bool **MP_** (graphicsFlag)
- static bool **MP_** (tabularDataFlag)
- static int **MP_** (concurrentRandomJobs)
- static int **MP_** (concurrentSeed)
- static int **MP_** (iteratorServers)
- static size_t **MP_** (hybridNumSolnsTrans)
- static size_t **MP_** (numBetaUncVars)
- static size_t **MP_** (numContinuousDesVars)
- static size_t **MP_** (numContinuousStateVars)
- static size_t **MP_** (numDiscreteDesVars)
- static size_t **MP_** (numDiscreteStateVars)

- static size_t **MP_** (numExponentialUncVars)
- static size_t **MP_** (numFrechetUncVars)
- static size_t **MP_** (numGammaUncVars)
- static size_t **MP_** (numGumbelUncVars)
- static size_t **MP_** (numHistogramUncVars)
- static size_t **MP_** (numIntervalUncVars)
- static size_t **MP_** (numLognormalUncVars)
- static size_t **MP_** (numLoguniformUncVars)
- static size_t **MP_** (numNormalUncVars)
- static size_t **MP_** (numTriangularUncVars)
- static size_t **MP_** (numUniformUncVars)
- static size_t **MP_** (numWeibullUncVars)
- static RealDenseVector **MP_** (betaUncLowerBnds)
- static RealDenseVector **MP_** (betaUncUpperBnds)
- static RealDenseVector **MP_** (frechetUncBetas)
- static RealDenseVector **MP_** (gumbelUncBetas)
- static RealDenseVector **MP_** (normalUncLowerBnds)
- static RealDenseVector **MP_** (normalUncMeans)
- static RealDenseVector **MP_** (normalUncUpperBnds)
- static RealDenseVector **MP_** (triangularUncModes)
- static RealDenseVector **VP_** (Ivb)
- static RealDenseVector **VP_** (Ivp)
- static RealDenseVector **VP_** (bp)
- static RealDenseVector **VP_** (pp)
- static RealDenseVector **VP_** (ucm)
- static Var_brv **MP2s** (betaUncAlphas, 0.)
- static Var_brv **MP2s** (betaUncBetas, 0.)
- static Var_brv **MP2s** (exponentialUncBetas, 0.)
- static Var_brv **MP2s** (frechetUncAlphas, 2.)
- static Var_brv **MP2s** (gammaUncAlphas, 0.)
- static Var_brv **MP2s** (gammaUncBetas, 0.)
- static Var_brv **MP2s** (gumbelUncAlphas, 0.)
- static Var_brv **MP2s** (lognormalUncErrFacts, 1.)
- static Var_brv **MP2s** (lognormalUncLowerBnds, 0.)
- static Var_brv **MP2s** (lognormalUncMeans, 0.)
- static Var_brv **MP2s** (lognormalUncStdDevs, 0.)
- static Var_brv **MP2s** (lognormalUncUpperBnds, DBL_MAX)
- static Var_brv **MP2s** (loguniformUncLowerBnds, 0.)
- static Var_brv **MP2s** (loguniformUncUpperBnds, DBL_MAX)
- static Var_brv **MP2s** (normalUncStdDevs, 0.)
- static Var_brv **MP2s** (triangularUncLowerBnds,-DBL_MAX)
- static Var_brv **MP2s** (triangularUncUpperBnds, DBL_MAX)
- static Var_brv **MP2s** (uniformUncLowerBnds,-DBL_MAX)
- static Var_brv **MP2s** (uniformUncUpperBnds, DBL_MAX)
- static Var_brv **MP2s** (weibullUncAlphas, 0.)
- static Var_brv **MP2s** (weibullUncBetas, 0.)

- static const char * **Var_Name** (StringArray *sa, char *buf, size_t i)
- void **dn2f_** (int *n, int *p, Real *x, Calcrj, int *iv, int *liv, int *lv, Real *v, int *ui, void *ur, Vf)
- void **dn2fb_** (int *n, int *p, Real *x, Real *b, Calcrj, int *iv, int *liv, int *lv, Real *v, int *ui, void *ur, Vf)
- void **dn2g_** (int *n, int *p, Real *x, Calcrj, Calcrj, int *iv, int *liv, int *lv, Real *v, int *ui, void *ur, Vf)
- void **dn2gb_** (int *n, int *p, Real *x, Real *b, Calcrj, Calcrj, int *iv, int *liv, int *lv, Real *v, int *ui, void *ur, Vf)
- void **divset_** (int *, int *, int *, int *, Real *)
- double **dr7mdc_** (int *)
- static void **Rswapchk** (Nl2Misc *q)
- double **rnum1** (void)
- double **rnum2** (void)
- istream & operator>> (istream &s, ParamResponsePair &pair)

  istream extraction operator for ParamResponsePair

- ostream & operator<< (ostream &s, const ParamResponsePair &pair)

  ostream insertion operator for ParamResponsePair

- BiStream & operator>> (BiStream &s, ParamResponsePair &pair)

  BiStream extraction operator for ParamResponsePair.

- BoStream & operator<< (BoStream &s, const ParamResponsePair &pair)

  BoStream insertion operator for ParamResponsePair.

- MPIUnpackBuffer & operator>> (MPIUnpackBuffer &s, ParamResponsePair &pair)

  MPIUnpackBuffer extraction operator for ParamResponsePair.

- MPIPackBuffer & operator<< (MPIPackBuffer &s, const ParamResponsePair &pair)

  MPIPackBuffer insertion operator for ParamResponsePair.

- bool operator== (const ParamResponsePair &pair1, const ParamResponsePair &pair2)

  equality operator

- bool operator!= (const ParamResponsePair &pair1, const ParamResponsePair &pair2)

  inequality operator

- bool id_vars_exact_compare (const ParamResponsePair &database_pr, const ParamResponsePair &search_pr)

  search function for a particular ParamResponsePair within a PRPHashSet

- std::size_t hash_value (const ParamResponsePair &prp)

  hash_value for ParamResponsePairs stored in a PRPHashSet

- bool set_compare (const ParamResponsePair &database_pr, const ActiveSet &search_set)

  on ActiveSet content (request vector and derivative variables vector)

- bool set_compare_by_ptr (const ParamResponsePair &database_pr, const void *search_ptr)

is passed by void∗ pointer (as required by Dakota::List::find() API)

- bool id_vars_set_compare (const ParamResponsePair &database_pr, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set)

  based on interface id, variables, and ActiveSet

- bool id_vars_set_compare_by_ptr (const ParamResponsePair &database_pr, const void ∗search_ptr)

  is passed by void∗ pointer (as required by Dakota::List::find() API)

- bool id_vars_set_compare (const ParamResponsePair &database_pr, const ParamResponsePair &search_-pr)

  search_pr is passed by const reference

- bool eval_id_compare (const ParamResponsePair &pair, const int &id)

  by const reference

- bool eval_id_compare_by_ptr (const ParamResponsePair &pair, const void ∗id)

  PRPList/PRPHashSet based on evaluation id, where the id is passed by void∗.

- bool eval_id_sort_fn (const ParamResponsePair &pr1, const ParamResponsePair &pr2)

  sort function for ParamResponsePair

- PRPLIter lookup_by_val (PRPList &prp_list, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set)

  interface id, variables, and ActiveSet search data

- bool lookup_by_val (PRPList &prp_list, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set, int &found_eval_id)

  based on interface id, variables, and ActiveSet search data

- bool lookup_by_val (PRPList &prp_list, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set, Response &found_resp)

  based on interface id, variables, and ActiveSet search data

- bool lookup_by_val (PRPList &prp_list, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set, ParamResponsePair &found_pr)

  variables, and ActiveSet search data

- PRPLIter lookup_by_eval_id (PRPList &prp_list, const int &search_eval_id)

  evaluation id search data

- bool lookup_by_eval_id (PRPList &prp_list, const int &search_eval_id, Response &found_resp)

  evaluation id search data

- bool lookup_by_eval_id (PRPList &prp_list, const int &search_eval_id, ParamResponsePair &found_pr)

  search data

- PRPLIter lookup_by_set (PRPList &prp_list, const ActiveSet &search_set)

  ActiveSet search data.

- bool lookup_by_set (PRPList &prp_list, const ActiveSet &search_set, ParamResponsePair &found_pr)

  find a ParamResponsePair within a PRPList based on ActiveSet search data

- bool lookup_by_val (PRPHashSet &prp_cache, const ParamResponsePair &search_pr, ParamResponsePair &found_pr)

  ActiveSet search data within search_pr.

- bool lookup_by_val (PRPHashSet &prp_cache, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set, int &found_eval_id)

  based on interface id, variables, and ActiveSet search data

- bool lookup_by_val (PRPHashSet &prp_cache, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set, Response &found_resp)

  based on interface id, variables, and ActiveSet search data

- bool lookup_by_val (PRPHashSet &prp_cache, const String &search_interface_id, const Variables &search_vars, const ActiveSet &search_set, ParamResponsePair &found_pr)

  variables, and ActiveSet search data

- PRPCacheOrderedConstIter prpCacheBegin (const PRPCache &prp_cache)

  PRPList definition of prpCacheBegin.

- PRPCacheOrderedConstIter prpCacheEnd (const PRPCache &prp_cache)

  PRPList definition of prpCacheEnd.

- void print_restart (int argc, char **argv, String print_dest)

  print a restart file

- void print_restart_tabular (int argc, char **argv, String print_dest)

  print a restart file (tabular format)

- void read_neutral (int argc, char **argv)

  read a restart file (neutral file format)

- void repair_restart (int argc, char **argv, String identifier_type)

  repair a restart file by removing corrupted evaluations

- void concatenate_restart (int argc, char **argv)

  concatenate multiple restart files

Variables

- ProblemDescDB dummy_db

  dummy ProblemDescDB object used for mandatory reference initialization when a real ProblemDescDB instance is unavailable

- ParallelLibrary dummy_lib

  dummy ParallelLibrary object used for mandatory reference initialization when a real ParallelLibrary instance is unavailable

- ProblemDescDB dummy_db

  dummy ProblemDescDB object used for mandatory reference initialization when a real ProblemDescDB instance is unavailable

- Graphics dakota_graphics

  the global Dakota::Graphics object used by strategies, models, and approximations

- Interface dummy_interface

  dummy Interface object used for mandatory reference initialization or default virtual function return by reference when a real Interface instance is unavailable

- Model dummy_model

  dummy Model object used for mandatory reference initialization or default virtual function return by reference when a real Model instance is unavailable

- Iterator dummy_iterator

  dummy Iterator object used for mandatory reference initialization or default virtual function return by reference when a real Iterator instance is unavailable

- ProblemDescDB dummy_db

  dummy ProblemDescDB object used for mandatory reference initialization when a real ProblemDescDB instance is unavailable

- ParallelLibrary dummy_lib

  dummy ParallelLibrary object used for mandatory reference initialization when a real ParallelLibrary instance is unavailable

- const char ∗ **FIELD_NAMES** [ ]
- const int **NUMBER_OF_FIELDS** = 21
- Dakota_funcs ∗ **DF**
- Dakota_funcs **DakFuncs0**
- ostream ∗ dakota_cout = &cout

  DAKOTA stdout initially points to cout, but may be redirected to a tagged ofstream if there are concurrent iterators.

- ostream ∗ dakota_cerr = &cerr

  DAKOTA stderr initially points to cerr, but may be redirected to a tagged ofstream if there are concurrent iterators.

- PRPCache data_pairs

  contains all parameter/response pairs.

- BoStream write_restart

  the restart binary output stream (doesn't really need to be global anymore except for abort_handler()).

- Graphics dakota_graphics

  the global Dakota::Graphics object used by strategies, models, and approximations

- int write_precision = 10

  used in ostream data output functions (restart_util.C overrides this default value)

- ParallelLibrary dummy_lib (0)

  dummy ParallelLibrary object used for mandatory reference initialization when a real ParallelLibrary instance is unavailable

- ProblemDescDB dummy_db

  dummy ProblemDescDB object used for mandatory reference initialization when a real ProblemDescDB instance is unavailable

- int mc_ptr_int = 0

  global pointer for ModelCenter API

- std::ostream ∗ dakota_cout

  DAKOTA stdout initially points to cout, but may be redirected to a tagged ofstream if there are concurrent iterators.

- std::ostream ∗ dakota_cerr

  DAKOTA stderr initially points to cerr, but may be redirected to a tagged ofstream if there are concurrent iterators.

- int write_precision

  used in ostream data output functions (restart_util.C overrides this default value)

- int mc_ptr_int

  global pointer for ModelCenter API

- static KeyWord **kw_1** [3]
- static KeyWord **kw_2** [1]
- static KeyWord **kw_3** [4]
- static KeyWord **kw_4** [6]
- static KeyWord **kw_5** [9]
- static KeyWord **kw_6** [2]
- static KeyWord **kw_7** [10]
- static KeyWord **kw_8** [9]
- static KeyWord **kw_9** [7]
- static KeyWord **kw_10** [2]
- static KeyWord **kw_11** [10]

- static KeyWord **kw_12** [2]
- static KeyWord **kw_13** [4]
- static KeyWord **kw_14** [2]
- static KeyWord **kw_15** [4]
- static KeyWord **kw_16** [2]
- static KeyWord **kw_17** [8]
- static KeyWord **kw_18** [3]
- static KeyWord **kw_19** [2]
- static KeyWord **kw_20** [3]
- static KeyWord **kw_21** [2]
- static KeyWord **kw_22** [5]
- static KeyWord **kw_23** [4]
- static KeyWord **kw_24** [11]
- static KeyWord **kw_25** [2]
- static KeyWord **kw_26** [2]
- static KeyWord **kw_27** [1]
- static KeyWord **kw_28** [3]
- static KeyWord **kw_29** [2]
- static KeyWord **kw_30** [12]
- static KeyWord **kw_31** [8]
- static KeyWord **kw_32** [1]
- static KeyWord **kw_33** [1]
- static KeyWord **kw_34** [14]
- static KeyWord **kw_35** [2]
- static KeyWord **kw_36** [2]
- static KeyWord **kw_37** [3]
- static KeyWord **kw_38** [8]
- static KeyWord **kw_39** [10]
- static KeyWord **kw_40** [1]
- static KeyWord **kw_41** [2]
- static KeyWord **kw_42** [5]
- static KeyWord **kw_43** [3]
- static KeyWord **kw_44** [1]
- static KeyWord **kw_45** [6]
- static KeyWord **kw_46** [6]
- static KeyWord **kw_47** [3]
- static KeyWord **kw_48** [2]
- static KeyWord **kw_49** [2]
- static KeyWord **kw_50** [1]
- static KeyWord **kw_51** [2]
- static KeyWord **kw_52** [4]
- static KeyWord **kw_53** [7]
- static KeyWord **kw_54** [1]
- static KeyWord **kw_55** [3]
- static KeyWord **kw_56** [9]
- static KeyWord **kw_57** [2]

- static KeyWord **kw_58** [1]
- static KeyWord **kw_59** [1]
- static KeyWord **kw_60** [3]
- static KeyWord **kw_61** [2]
- static KeyWord **kw_62** [2]
- static KeyWord **kw_63** [4]
- static KeyWord **kw_64** [2]
- static KeyWord **kw_65** [1]
- static KeyWord **kw_66** [1]
- static KeyWord **kw_67** [3]
- static KeyWord **kw_68** [2]
- static KeyWord **kw_69** [2]
- static KeyWord **kw_70** [6]
- static KeyWord **kw_71** [5]
- static KeyWord **kw_72** [3]
- static KeyWord **kw_73** [9]
- static KeyWord **kw_74** [1]
- static KeyWord **kw_75** [3]
- static KeyWord **kw_76** [2]
- static KeyWord **kw_77** [5]
- static KeyWord **kw_78** [1]
- static KeyWord **kw_79** [3]
- static KeyWord **kw_80** [2]
- static KeyWord **kw_81** [2]
- static KeyWord **kw_82** [2]
- static KeyWord **kw_83** [1]
- static KeyWord **kw_84** [1]
- static KeyWord **kw_85** [2]
- static KeyWord **kw_86** [14]
- static KeyWord **kw_87** [1]
- static KeyWord **kw_88** [4]
- static KeyWord **kw_89** [7]
- static KeyWord **kw_90** [2]
- static KeyWord **kw_91** [8]
- static KeyWord **kw_92** [4]
- static KeyWord **kw_93** [2]
- static KeyWord **kw_94** [3]
- static KeyWord **kw_95** [2]
- static KeyWord **kw_96** [4]
- static KeyWord **kw_97** [7]
- static KeyWord **kw_98** [4]
- static KeyWord **kw_99** [3]
- static KeyWord **kw_100** [2]
- static KeyWord **kw_101** [2]
- static KeyWord **kw_102** [2]
- static KeyWord **kw_103** [2]

- static KeyWord **kw_104** [4]
- static KeyWord **kw_105** [5]
- static KeyWord **kw_106** [3]
- static KeyWord **kw_107** [2]
- static KeyWord **kw_108** [7]
- static KeyWord **kw_109** [1]
- static KeyWord **kw_110** [4]
- static KeyWord **kw_111** [6]
- static KeyWord **kw_112** [10]
- static KeyWord **kw_113** [2]
- static KeyWord **kw_114** [1]
- static KeyWord **kw_115** [2]
- static KeyWord **kw_116** [54]
- static KeyWord **kw_117** [1]
- static KeyWord **kw_118** [4]
- static KeyWord **kw_119** [2]
- static KeyWord **kw_120** [1]
- static KeyWord **kw_121** [6]
- static KeyWord **kw_122** [3]
- static KeyWord **kw_123** [2]
- static KeyWord **kw_124** [5]
- static KeyWord **kw_125** [2]
- static KeyWord **kw_126** [2]
- static KeyWord **kw_127** [2]
- static KeyWord **kw_128** [3]
- static KeyWord **kw_129** [3]
- static KeyWord **kw_130** [4]
- static KeyWord **kw_131** [3]
- static KeyWord **kw_132** [13]
- static KeyWord **kw_133** [6]
- static KeyWord **kw_134** [3]
- static KeyWord **kw_135** [1]
- static KeyWord **kw_136** [2]
- static KeyWord **kw_137** [2]
- static KeyWord **kw_138** [5]
- static KeyWord **kw_139** [6]
- static KeyWord **kw_140** [2]
- static KeyWord **kw_141** [2]
- static KeyWord **kw_142** [5]
- static KeyWord **kw_143** [1]
- static KeyWord **kw_144** [1]
- static KeyWord **kw_145** [2]
- static KeyWord **kw_146** [3]
- static KeyWord **kw_147** [3]
- static KeyWord **kw_148** [4]
- static KeyWord **kw_149** [6]

- static KeyWord **kw_150** [3]
- static KeyWord **kw_151** [4]
- static KeyWord **kw_152** [5]
- static KeyWord **kw_153** [2]
- static KeyWord **kw_154** [2]
- static KeyWord **kw_155** [3]
- static KeyWord **kw_156** [1]
- static KeyWord **kw_157** [1]
- static KeyWord **kw_158** [2]
- static KeyWord **kw_159** [15]
- static KeyWord **kw_160** [1]
- static KeyWord **kw_161** [3]
- static KeyWord **kw_162** [2]
- static KeyWord **kw_163** [5]
- static KeyWord **kw_164** [1]
- static KeyWord **kw_165** [3]
- static KeyWord **kw_166** [1]
- static KeyWord **kw_167** [5]
- static KeyWord **kw_168** [1]
- static KeyWord **kw_169** [1]
- static KeyWord **kw_170** [9]
- static KeyWord **kw_171** [10]
- static KeyWord **kw_172** [12]
- static KeyWord **kw_173** [8]
- static KeyWord **kw_174** [8]
- static KeyWord **kw_175** [8]
- static KeyWord **kw_176** [4]
- static KeyWord **kw_177** [6]
- static KeyWord **kw_178** [6]
- static KeyWord **kw_179** [6]
- static KeyWord **kw_180** [2]
- static KeyWord **kw_181** [2]
- static KeyWord **kw_182** [6]
- static KeyWord **kw_183** [8]
- static KeyWord **kw_184** [12]
- static KeyWord **kw_185** [6]
- static KeyWord **kw_186** [10]
- static KeyWord **kw_187** [8]
- static KeyWord **kw_188** [6]
- static KeyWord **kw_189** [6]
- static KeyWord **kw_190** [19]
- static KeyWord **kw_191** [6]
- FILE ∗ **nidrin**
- static const char ∗ **aln_scaletypes** [ ] = { "auto", "log", "none", 0 }
- static Var_uinfo **UncLbl** [UncVar_Nkinds]
- static String **MP_** (algebraicMappings)

- static String **MP_** (idInterface)
- static String **MP_** (inputFilter)
- static String **MP_** (outputFilter)
- static String **MP_** (parametersFile)
- static String **MP_** (resultsFile)
- static String2DArray **MP_** (analysisComponents)
- static StringArray **MP_** (analysisDrivers)
- static IntArray **MP_** (varPartitions)
- static IntVector **MP_** (primeBase)
- static IntVector **MP_** (sequenceLeap)
- static IntVector **MP_** (sequenceStart)
- static RealVector **MP_** (finalPoint)
- static RealVector **MP_** (linearEqConstraintCoeffs)
- static RealVector **MP_** (linearEqScales)
- static RealVector **MP_** (linearEqTargets)
- static RealVector **MP_** (linearIneqConstraintCoeffs)
- static RealVector **MP_** (linearIneqLowerBnds)
- static RealVector **MP_** (linearIneqScales)
- static RealVector **MP_** (linearIneqUpperBnds)
- static RealVector **MP_** (listOfPoints)
- static RealVector **MP_** (stepVector)
- static RealVectorArray **MP_** (genReliabilityLevels)
- static RealVectorArray **MP_** (probabilityLevels)
- static RealVectorArray **MP_** (reliabilityLevels)
- static RealVectorArray **MP_** (responseLevels)
- static UShortArray **MP_** (sparseGridLevel)
- static UShortArray **MP_** (quadratureOrder)
- static String **MP_** (centralPath)
- static String **MP_** (expansionImportFile)
- static String **MP_** (idMethod)
- static String **MP_** (logFile)
- static String **MP_** (meritFn)
- static String **MP_** (modelPointer)
- static String **MP_** (subMethodName)
- static String **MP_** (subMethodPointer)
- static StringArray **MP_** (linearEqScaleTypes)
- static StringArray **MP_** (linearIneqScaleTypes)
- static StringArray **MP_** (miscOptions)
- static RealVector **MP_** (krigingConminSeed)
- static RealVector **MP_** (krigingCorrelations)
- static RealVector **MP_** (krigingMaxCorrelations)
- static RealVector **MP_** (krigingMinCorrelations)
- static RealVector **MP_** (primaryRespCoeffs)
- static RealVector **MP_** (secondaryRespCoeffs)
- static String **MP_** (approxSampleReuseFile)
- static String **MP_** (idModel)

- static String **MP_** (interfacePointer)
- static String **MP_** (lowFidelityModelPointer)
- static String **MP_** (optionalInterfRespPointer)
- static String **MP_** (responsesPointer)
- static String **MP_** (subMethodPointer)
- static String **MP_** (truthModelPointer)
- static String **MP_** (variablesPointer)
- static StringArray **MP_** (primaryVarMaps)
- static StringArray **MP_** (secondaryVarMaps)
- static StringArray **MP_** (diagMetrics)
- static IntList **MP_** (idAnalyticGrads)
- static IntList **MP_** (idAnalyticHessians)
- static IntList **MP_** (idNumericalGrads)
- static IntList **MP_** (idNumericalHessians)
- static IntList **MP_** (idQuasiHessians)
- static RealVector **MP_** (fdGradStepSize)
- static RealVector **MP_** (fdHessStepSize)
- static RealVector **MP_** (primaryRespFnScales)
- static RealVector **MP_** (primaryRespFnWeights)
- static RealVector **MP_** (nonlinearEqScales)
- static RealVector **MP_** (nonlinearEqTargets)
- static RealVector **MP_** (nonlinearIneqLowerBnds)
- static RealVector **MP_** (nonlinearIneqScales)
- static RealVector **MP_** (nonlinearIneqUpperBnds)
- static String **MP_** (idResponses)
- static String **MP_** (leastSqDataFile)
- static StringArray **MP_** (primaryRespFnScaleTypes)
- static StringArray **MP_** (nonlinearEqScaleTypes)
- static StringArray **MP_** (nonlinearIneqScaleTypes)
- static StringArray **MP_** (responseLabels)
- static RealVector **MP_** (concurrentParameterSets)
- static String **MP_** (hybridGlobalMethodPointer)
- static String **MP_** (hybridLocalMethodPointer)
- static String **MP_** (methodPointer)
- static String **MP_** (tabularDataFile)
- static StringArray **MP_** (hybridMethodList)
- static IntVector **MP_** (discreteDesignLowerBnds)
- static IntVector **MP_** (discreteDesignUpperBnds)
- static IntVector **MP_** (discreteDesignVars)
- static IntVector **MP_** (discreteStateLowerBnds)
- static IntVector **MP_** (discreteStateUpperBnds)
- static IntVector **MP_** (discreteStateVars)
- static IntVector **VP_** (nIv)
- static IntVector **VP_** (nbp)
- static IntVector **VP_** (npp)
- static RealVector **MP_** (continuousDesignLowerBnds)

- static RealVector **MP_** (continuousDesignScales)
- static RealVector **MP_** (continuousDesignUpperBnds)
- static RealVector **MP_** (continuousDesignVars)
- static RealVector **MP_** (continuousStateLowerBnds)
- static RealVector **MP_** (continuousStateUpperBnds)
- static RealVector **MP_** (continuousStateVars)
- static String **MP_** (idVariables)
- static StringArray **MP_** (continuousDesignLabels)
- static StringArray **MP_** (continuousDesignScaleTypes)
- static StringArray **MP_** (continuousStateLabels)
- static StringArray **MP_** (discreteDesignLabels)
- static StringArray **MP_** (discreteStateLabels)
- static Var_bchk **var_mp_bndchk** [ ]
- static Var_bchku **var_mp_bndchku** [ ]
- static Var_ibchk **var_mp_ibndchk** [ ]
- Dakota::GSL_Singleton **GSL_RNG**
- ParallelLibrary dummy_lib

  dummy ParallelLibrary object used for mandatory reference initialization when a real ParallelLibrary instance is unavailable

- const int **LARGE_SCALE** = 100
- const size_t _NPOS = ∼(size_t)0

  special value returned by index() when entry not found

7.1.1 Detailed Description

The primary namespace for DAKOTA.

The Dakota namespace encapsulates the core classes of the DAKOTA framework and prevents name clashes with third-party libraries from methods and packages. The C++ source files defining these core classes reside in Dakota/src as ∗.[CH].

7.1.2 Function Documentation

7.1.2.1 CommandShell & flush (CommandShell & *shell*)

convenient shell manipulator function to "flush" the shell

global convenience function for manipulating the shell; invokes the class member flush function.

7.1.2.2 bool Dakota::operator== (const DistinctVariables & *vars1*, const DistinctVariables & *vars2*)

equality operator

Checks each array using operator== from data_types.C. Labels are ignored.

7.1.2.3 Real Dakota::getdist (RealVector & *x1*, RealVector & *x2*)

Gets the Euclidean distance between x1 and x2

7.1.2.4 Real Dakota::mindist (RealVector & *x*, RealMatrix & *xset*, int *except*)

Returns the minimum distance between the point x and the points in the set xset (compares against all points in xset except point "except"): if except is not needed, pass 0.

7.1.2.5 Real Dakota::mindistindx (RealVector & *x*, RealMatrix & *xset*, IntVector & *indx*)

Gets the min distance between x and points in the set xset defined by the nindx values in indx.

7.1.2.6 Real Dakota::getRmax (RealMatrix & *xset*)

Gets the maximum of the min distance between each point and the rest of the set.

7.1.2.7 string Dakota::asstring (const T & *val*)

Creates a string from the argument *val* using an ostringstream.

This only gets used in this file and is only ever called with ints so no error checking is in place.

Parameters:

val The value of type T to convert to a string.

Returns:

The string representation of *val* created using an ostringstream.

7.1.2.8 bool Dakota::id_vars_exact_compare (const ParamResponsePair & *database_pr*, const ParamResponsePair & *search_pr*) `[inline]`

search function for a particular ParamResponsePair within a PRPHashSet

a global function to compare the interface id and variables of a particular database_pr (presumed to be in the global history list) with a passed in key of interface id and variables provided by search_pr.

7.1.2.9 bool Dakota::set_compare (const ParamResponsePair & *database_pr*, const ActiveSet & *search_set*) `[inline]`

on ActiveSet content (request vector and derivative variables vector)

a global function to compare the ActiveSet of a particular database_pr (presumed to be in the global history list) with a passed in ActiveSet (search_set).

7.1.2.10 bool Dakota::set_compare_by_ptr (const ParamResponsePair & *database_pr*, const void * *search_ptr*) [inline]

is passed by void* pointer (as required by Dakota::List::find() API)

a global function to compare the ActiveSet of a particular database_pr (presumed to be in the global history list) with a passed in ActiveSet (search_ptr).

7.1.2.11 bool Dakota::id_vars_set_compare (const ParamResponsePair & *database_pr*, const String & *search_interface_id*, const Variables & *search_vars*, const ActiveSet & *search_set*) [inline]

based on interface id, variables, and ActiveSet

a global function to compare the interface id, variables, and ActiveSet of a particular database_pr (presumed to be in the global history list) with a passed in interface id, variables, and ActiveSet.

7.1.2.12 bool Dakota::id_vars_set_compare_by_ptr (const ParamResponsePair & *database_pr*, const void * *search_ptr*) [inline]

is passed by void* pointer (as required by Dakota::List::find() API)

a global function to compare the interface id, variables, and ActiveSet, and interface id of a particular database_pr (presumed to be in the global history list) with a passed in interface id, variables, and ActiveSet provided by search_ptr.

7.1.2.13 bool Dakota::id_vars_set_compare (const ParamResponsePair & *database_pr*, const ParamResponsePair & *search_pr*) [inline]

search_pr is passed by const reference

a global function to compare the interface id, variables, and ActiveSet of a particular database_pr (presumed to be in the global history list) with a passed in interface id, variables, and ActiveSet provided by search_pr.

7.1.2.14 bool Dakota::eval_id_compare (const ParamResponsePair & *pair*, const int & *id*) [inline]

by const reference

a global function to compare the evalId of a particular ParamResponsePair (from a container) with a passed in evaluation id.

7.1.2.15 bool Dakota::eval_id_compare_by_ptr (const ParamResponsePair & *pair*, const void * *id*) [inline]

PRPList/PRPHashSet based on evaluation id, where the id is passed by void*.

a global function to compare the evalId of a particular ParamResponsePair (from a container) with a passed in evaluation id.

7.1.2.16 bool Dakota::eval_id_sort_fn (const ParamResponsePair & *pr1*, const ParamResponsePair & *pr2*) [inline]

sort function for ParamResponsePair

a global function used to sort a PRPList by evalId's.

7.1.2.17 bool Dakota::lookup_by_val (PRPHashSet & *prp_cache*, const ParamResponsePair & *search_pr*, ParamResponsePair & *found_pr*) [inline]

ActiveSet search data within search_pr.

Lookup occurs in two steps: (1) PRPHashSet lookup based on strict equality in interface id and variables, and (2) PRPList post-processing based on ActiveSet subset logic.

7.1.2.18 void print_restart (int *argc*, char ** *argv*, String *print_dest*)

print a restart file

Usage: "dakota_restart_util print dakota.rst"

"dakota_restart_util to_neutral dakota.rst dakota.neu"

Prints all evals. in full precision to either stdout or a neutral file. The former is useful for ensuring that duplicate detection is successful in a restarted run (e.g., starting a new method from the previous best), and the latter is used for translating binary files between platforms.

7.1.2.19 void print_restart_tabular (int *argc*, char ** *argv*, String *print_dest*)

print a restart file (tabular format)

Usage: "dakota_restart_util to_pdb dakota.rst dakota.pdb"

"dakota_restart_util to_tabular dakota.rst dakota.txt"

Unrolls all data associated with a particular tag for all evaluations and then writes this data in a tabular format (e.g., to a PDB database or MATLAB/TECPLOT data file).

7.1.2.20 void read_neutral (int *argc*, char ** *argv*)

read a restart file (neutral file format)

Usage: "dakota_restart_util from_neutral dakota.neu dakota.rst"

Reads evaluations from a neutral file. This is used for translating binary files between platforms.

7.1.2.21 void repair_restart (int *argc*, char ** *argv*, String *identifier_type*)

repair a restart file by removing corrupted evaluations

Usage: "dakota_restart_util remove 0.0 dakota_old.rst dakota_new.rst"

"dakota_restart_util remove_ids 2 7 13 dakota_old.rst dakota_new.rst"

Repairs a restart file by removing corrupted evaluations. The identifier for evaluation removal can be either a double precision number (all evaluations having a matching response function value are removed) or a list of integers (all evaluations with matching evaluation ids are removed).

7.1.2.22 void concatenate_restart (int *argc*, char ∗∗ *argv*)

concatenate multiple restart files

Usage: "dakota_restart_util cat dakota_1.rst ... dakota_n.rst dakota_new.rst"

Combines multiple restart files into a single restart database.

7.1.3 Variable Documentation

7.1.3.1 const char∗ FIELD_NAMES[ ]

Initial value:

```
{ "numFns", "numVars", "numACV", "numADV",
                              "numDerivVars", "xC", "xD", "xCLabels",
                              "xDLabels", "directFnASV", "directFnASM",
                              "directFnDVV", "directFnDVV_bool",
                              "fnFlag", "gradFlag", "hessFlag",
                              "fnVals",  "fnGrads",  "fnHessians",
                              "fnLabels", "failure" }
```

7.1.3.2 Dakota_funcs DakFuncs0

Initial value:

```
{
        fprintf,
        abort_handler,
        dlsolver_option,
        continuous_lower_bounds1,
        continuous_upper_bounds1,
        nonlinear_ineq_constraint_lower_bounds1,
        nonlinear_ineq_constraint_upper_bounds1,
        nonlinear_eq_constraint_targets1,
        linear_ineq_constraint_lower_bounds1,
        linear_ineq_constraint_upper_bounds1,
        linear_eq_constraint_targets1,
        linear_ineq_constraint_coeffs1,
        linear_eq_constraint_coeffs1,
        ComputeResponses1,
        GetFuncs1,
```

```
GetGrads1,
GetContVars1,
SetBestContVars1,
SetBestDiscVars1,
SetBestRespFns1,
Get_Real1,
Get_Int1,
Get_Bool1
}
```

7.1.3.3 KeyWord kw_1[3] [static]

Initial value:

```
{
                {"active_set_vector",0,0,1,0,0,N_ifm(false,activeSetVectorFlag)},
                {"evaluation_cache",0,0,2,0,0,N_ifm(false,evalCacheFlag)},
                {"restart_file",0,0,3,0,0,N_ifm(false,restartFileFlag)}
                }
```

7.1.3.4 KeyWord kw_2[1] [static]

Initial value:

```
{
                {"processors_per_analysis",1,0,1,0,0,N_ifm(int,procsPerAnalysis)}
                }
```

7.1.3.5 KeyWord kw_3[4] [static]

Initial value:

```
{
                {"abort",0,0,1,1,0,N_ifm(lit,failAction_abort)},
                {"continuation",0,0,1,1,0,N_ifm(lit,failAction_continuation)},
                {"recover",6,0,1,1,0,N_ifm(Rlit,3failAction_recover)},
                {"retry",1,0,1,1,0,N_ifm(ilit,3failAction_retry)}
                }
```

7.1.3.6 KeyWord kw_4[6] [static]

Initial value:

```
{
                {"aprepro",0,0,4,0,0,N_ifm(true,apreproFlag)},
                {"file_save",0,0,6,0,0,N_ifm(true,fileSaveFlag)},
                {"file_tag",0,0,5,0,0,N_ifm(true,fileTagFlag)},
                {"parameters_file",3,0,1,0,0,N_ifm(str,parametersFile)},
                {"results_file",3,0,2,0,0,N_ifm(str,resultsFile)},
                {"verbatim",0,0,3,0,0,N_ifm(true,verbatimFlag)}
                }
```

7.1.3.7 KeyWord kw_5[9] [static]

Initial value:

```
{
                {"analysis_components",7,0,1,0,0,N_ifm(str2D,analysisComponents)},
                {"deactivate",0,3,6,0,kw_1},
                {"direct",0,1,4,1,kw_2,N_ifm(lit,interfaceType_direct)},
                {"failure_capture",0,4,5,0,kw_3},
                {"fork",0,6,4,1,kw_4,N_ifm(lit,interfaceType_fork)},
                {"grid",0,0,4,1,0,N_ifm(lit,interfaceType_grid)},
                {"input_filter",3,0,2,0,0,N_ifm(str,inputFilter)},
                {"output_filter",3,0,3,0,0,N_ifm(str,outputFilter)},
                {"system",0,6,4,1,kw_4,N_ifm(lit,interfaceType_system)}
                }
```

7.1.3.8 KeyWord kw_6[2] [static]

Initial value:

```
{
                {"analysis_concurrency",1,0,2,0,0,N_ifm(int,asynchLocalAnalysisConcurrency)},
                {"evaluation_concurrency",1,0,1,0,0,N_ifm(int,asynchLocalEvalConcurrency)}
                }
```

7.1.3.9 KeyWord kw_7[10] [static]

Initial value:

```
{
                {"algebraic_mappings",3,0,2,0,0,N_ifm(str,algebraicMappings)},
                {"analysis_drivers",7,9,3,0,kw_5,N_ifm(strL,analysisDrivers)},
```

```
{"analysis_self_scheduling",0,0,8,0,0,N_ifm(lit,analysisScheduling_self)},
{"analysis_servers",1,0,7,0,0,N_ifm(int,analysisServers)},
{"analysis_static_scheduling",0,0,8,0,0,N_ifm(lit,analysisScheduling_static)},
{"asynchronous",0,2,4,0,kw_6,N_ifm(lit,interfaceSynchronization_asynchronous)},
{"evaluation_self_scheduling",0,0,6,0,0,N_ifm(lit,evalScheduling_self)},
{"evaluation_servers",1,0,5,0,0,N_ifm(int,evalServers)},
{"evaluation_static_scheduling",0,0,6,0,0,N_ifm(lit,evalScheduling_static)},
{"id_interface",3,0,1,0,0,N_ifm(str,idInterface)}
}
```

7.1.3.10 KeyWord kw_8[9] [static]

Initial value:

```
{
{"linear_equality_constraint_matrix",6,0,6,0,0,N_mdm(RealL,linearEqConstraintCoeffs)},
{"linear_equality_scale_types",7,0,8,0,0,N_mdm(strL,linearEqScaleTypes)},
{"linear_equality_scales",6,0,9,0,0,N_mdm(RealL,linearEqScales)},
{"linear_equality_targets",6,0,7,0,0,N_mdm(RealL,linearEqTargets)},
{"linear_inequality_constraint_matrix",6,0,1,0,0,N_mdm(RealL,linearIneqConstraintCoeffs)},
{"linear_inequality_lower_bounds",6,0,2,0,0,N_mdm(RealL,linearIneqLowerBnds)},
{"linear_inequality_scale_types",7,0,4,0,0,N_mdm(strL,linearIneqScaleTypes)},
{"linear_inequality_scales",6,0,5,0,0,N_mdm(RealL,linearIneqScales)},
{"linear_inequality_upper_bounds",6,0,3,0,0,N_mdm(RealL,linearIneqUpperBnds)}
}
```

7.1.3.11 KeyWord kw_9[7] [static]

Initial value:

```
{
{"merit1",0,0,1,1,0,N_mdm(lit,meritFunction_merit1)},
{"merit1_smooth",0,0,1,1,0,N_mdm(lit,meritFunction_merit1_smooth)},
{"merit2",0,0,1,1,0,N_mdm(lit,meritFunction_merit2)},
{"merit2_smooth",0,0,1,1,0,N_mdm(lit,meritFunction_merit2_smooth)},
{"merit2_squared",0,0,1,1,0,N_mdm(lit,meritFunction_merit2_squared)},
{"merit_max",0,0,1,1,0,N_mdm(lit,meritFunction_merit_max)},
{"merit_max_smooth",0,0,1,1,0,N_mdm(lit,meritFunction_merit_max_smooth)}
}
```

7.1.3.12 KeyWord kw_10[2] [static]

Initial value:

```
{
{"blocking",0,0,1,1,0,N_mdm(lit,evalSynchronize_blocking)},
{"nonblocking",0,0,1,1,0,N_mdm(lit,evalSynchronize_nonblocking)}
}
```

7.1.3.13 KeyWord kw_11[10] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {"constraint_penalty",2,0,7,0,0,N_mdm(Real,constrPenalty)},
                {"contraction_factor",2,0,2,0,0,N_mdm(Real,contractStepLength)},
                {"initial_delta",2,0,1,0,0,N_mdm(Real,initStepLength)},
                {"merit_function",0,7,6,0,kw_9},
                {"smoothing_factor",2,0,8,0,0,N_mdm(Real,smoothFactor)},
                {"solution_accuracy",2,0,4,0,0,N_mdm(Real,solnTarget)},
                {"solution_target",2,0,4,0,0,N_mdm(Real,solnTarget)},
                {"synchronization",0,2,5,0,kw_10},
                {"threshold_delta",2,0,3,0,0,N_mdm(Real,threshStepLength)}
                }
```

7.1.3.14 KeyWord kw_12[2] [static]

Initial value:

```
{
                {"deltas_per_variable",1,0,2,2,0,N_mdm(int,deltasPerVariable)},
                {"percent_delta",2,0,1,1,0,N_mdm(Real,percentDelta)}
                }
```

7.1.3.15 KeyWord kw_13[4] [static]

Initial value:

```
{
                {"misc_options",7,0,4,0,0,N_mdm(strL,miscOptions)},
                {"seed",1,0,2,0,0,N_mdm(pint,randomSeed)},
                {"show_misc_options",0,0,3,0,0,N_mdm(true,showMiscOptions)},
                {"solution_accuracy",2,0,1,0,0,N_mdm(Real,solnAccuracy)}
                }
```

7.1.3.16 KeyWord kw_14[2] [static]

Initial value:

```
{
                {"initial_delta",2,0,1,1,0,N_mdm(Real,initDelta)},
                {"threshold_delta",2,0,2,2,0,N_mdm(Real,threshDelta)}
                }
```

7.1.3.17 KeyWord kw_15[4] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {0,0,4,0,0,kw_13},
                {0,0,2,0,0,kw_14},
                {""}
                }
```

7.1.3.18 KeyWord kw_16[2] [static]

Initial value:

```
{
                {"all_dimensions",0,0,1,1,0,N_mdm(lit,boxDivision_all_dimensions)},
                {"major_dimension",0,0,1,1,0,N_mdm(lit,boxDivision_major_dimension)}
                }
```

7.1.3.19 KeyWord kw_17[8] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {0,0,4,0,0,kw_13},
                {"constraint_penalty",2,0,6,0,0,N_mdm(Real,constraintPenalty)},
                {"division",0,2,1,0,kw_16},
                {"global_balance_parameter",2,0,2,0,0,N_mdm(Real,globalBalanceParam)},
                {"local_balance_parameter",2,0,3,0,0,N_mdm(Real,localBalanceParam)},
                {"max_boxsize_limit",2,0,4,0,0,N_mdm(Real,maxBoxSize)},
                {"min_boxsize_limit",2,0,5,0,0,N_mdm(Real,minBoxSize)}
                }
```

7.1.3.20 KeyWord kw_18[3] [static]

Initial value:

```
{
                {"blend",0,0,1,1,0,N_mdm(lit,crossoverType_blend)},
                {"two_point",0,0,1,1,0,N_mdm(lit,crossoverType_two_point)},
                {"uniform",0,0,1,1,0,N_mdm(lit,crossoverType_uniform)}
                }
```

7.1.3.21 KeyWord kw_19[2] [static]

Initial value:

```
{
                {"linear_rank",0,0,1,1,0,N_mdm(lit,fitnessType_linear_rank)},
                {"merit_function",0,0,1,1,0,N_mdm(lit,fitnessType_proportional)}
                }
```

7.1.3.22 KeyWord kw_20[3] [static]

Initial value:

```
{
                {"flat_file",3,0,1,1,0,N_mdm(slit2,3initializationType_flat_file)},
                {"simple_random",0,0,1,1,0,N_mdm(lit,initializationType_random)},
                {"unique_random",0,0,1,1,0,N_mdm(lit,initializationType_unique_random)}
                }
```

7.1.3.23 KeyWord kw_21[2] [static]

Initial value:

```
{
                {"mutation_range",1,0,2,0,0,N_mdm(int,mutationRange)},
                {"mutation_scale",2,0,1,0,0,N_mdm(Real,mutationScale)}
                }
```

7.1.3.24 KeyWord kw_22[5] [static]

Initial value:

```
{
                {"non_adaptive",0,0,2,0,0,N_mdm(false,mutationAdaptive)},
                {"offset_cauchy",0,2,1,1,kw_21,N_mdm(lit,mutationType_offset_cauchy)},
                {"offset_normal",0,2,1,1,kw_21,N_mdm(lit,mutationType_offset_normal)},
                {"offset_uniform",0,2,1,1,kw_21,N_mdm(lit,mutationType_offset_uniform)},
                {"replace_uniform",0,0,1,1,0,N_mdm(lit,mutationType_replace_uniform)}
                }
```

7.1.3.25 KeyWord kw_23[4] [static]

Initial value:

```
{
                {"chc",1,0,1,1,0,N_mdm(ilit2,3replacementType_chc)},
                {"elitist",1,0,1,1,0,N_mdm(ilit2,3replacementType_elitist)},
                {"new_solutions_generated",1,0,2,0,0,N_mdm(int,newSolnsGenerated)},
                {"random",1,0,1,1,0,N_mdm(ilit2,3replacementType_random)}
                }
```

7.1.3.26 KeyWord kw_24[11] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {0,0,4,0,0,kw_13},
                {"constraint_penalty",2,0,9,0,0,N_mdm(Real,constraintPenalty)},
                {"crossover_rate",2,0,5,0,0,N_mdm(Real,crossoverRate)},
                {"crossover_type",0,3,6,0,kw_18},
                {"fitness_type",0,2,3,0,kw_19},
                {"initialization_type",0,3,2,0,kw_20},
                {"mutation_rate",2,0,7,0,0,N_mdm(Real,mutationRate)},
                {"mutation_type",0,5,8,0,kw_22},
                {"population_size",1,0,1,0,0,N_mdm(pint,populationSize)},
                {"replacement_type",0,4,4,0,kw_23}
                }
```

7.1.3.27 KeyWord kw_25[2] [static]

Initial value:

```
{
                {"constraint_penalty",2,0,2,0,0,N_mdm(Real,constraintPenalty)},
                {"contraction_factor",2,0,1,0,0,N_mdm(Real,contractFactor)}
                }
```

7.1.3.28 KeyWord kw_26[2] [static]

Initial value:

```
{
                {"blocking",0,0,1,1,0,N_mdm(lit,evalSynchronization_blocking)},
                {"nonblocking",0,0,1,1,0,N_mdm(lit,evalSynchronization_nonblocking)}
                }
```

7.1.3.29 KeyWord kw_27[1] [static]

Initial value:

```
{
                {"synchronization",0,2,1,0,kw_26}
                }
```

7.1.3.30 KeyWord kw_28[3] [static]

Initial value:

```
{
                {"adaptive_pattern",0,0,1,1,0,N_mdm(lit,exploratoryMoves_adaptive)},
                {"basic_pattern",0,0,1,1,0,N_mdm(lit,exploratoryMoves_simple)},
                {"multi_step",0,0,1,1,0,N_mdm(lit,exploratoryMoves_multi_step)}
                }
```

7.1.3.31 KeyWord kw_29[2] [static]

Initial value:

```
{
                {"coordinate",0,0,1,1,0,N_mdm(lit,patternBasis_coordinate)},
                {"simplex",0,0,1,1,0,N_mdm(lit,patternBasis_simplex)}
                }
```

7.1.3.32 KeyWord kw_30[12] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {0,0,4,0,0,kw_13},
                {0,0,2,0,0,kw_14},
                {0,0,2,0,0,kw_25},
                {0,0,1,0,0,kw_27},
                {"constant_penalty",0,0,1,0,0,N_mdm(true,constantPenalty)},
                {"expand_after_success",1,0,3,0,0,N_mdm(int,expandAfterSuccess)},
                {"exploratory_moves",0,3,7,0,kw_28},
                {"no_expansion",0,0,2,0,0,N_mdm(false,expansionFlag)},
                {"pattern_basis",0,2,4,0,kw_29},
                {"stochastic",0,0,5,0,0,N_mdm(true,randomizeOrderFlag)},
                {"total_pattern_size",1,0,6,0,0,N_mdm(int,totalPatternSize)}
                }
```

7.1.3.33 KeyWord kw_31[8] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {0,0,4,0,0,kw_13},
                {0,0,2,0,0,kw_14},
                {0,0,2,0,0,kw_25},
                {"constant_penalty",0,0,4,0,0,N_mdm(true,constantPenalty)},
                {"contract_after_failure",1,0,1,0,0,N_mdm(int,contractAfterFail)},
                {"expand_after_success",1,0,3,0,0,N_mdm(int,expandAfterSuccess)},
                {"no_expansion",0,0,2,0,0,N_mdm(false,expansionFlag)}
                }
```

7.1.3.34 KeyWord kw_32[1] [static]

Initial value:

```
{
                {"seed",1,0,1,0,0,N_mdm(pint,randomSeed)}
                }
```

7.1.3.35 KeyWord kw_33[1] [static]

Initial value:

```
{
                {"samples",1,0,1,0,0,N_mdm(int,numSamples)}
                }
```

7.1.3.36 KeyWord kw_34[14] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,1,0,0,kw_33},
                {"box_behnken",0,0,1,1,0,N_mdm(lit,daceMethod_box_behnken)},
                {"central_composite",0,0,1,1,0,N_mdm(lit,daceMethod_central_composite)},
                {"fixed_seed",0,0,5,0,0,N_mdm(true,fixedSeedFlag)},
                {"grid",0,0,1,1,0,N_mdm(lit,daceMethod_grid)},
                {"lhs",0,0,1,1,0,N_mdm(lit,daceMethod_lhs)},
                {"main_effects",0,0,2,0,0,N_mdm(true,mainEffectsFlag)},
                {"oa_lhs",0,0,1,1,0,N_mdm(lit,daceMethod_oa_lhs)},
                {"oas",0,0,1,1,0,N_mdm(lit,daceMethod_oas)},
                {"quality_metrics",0,0,3,0,0,N_mdm(true,volQualityFlag)},
                {"random",0,0,1,1,0,N_mdm(lit,daceMethod_random)},
                {"symbols",1,0,6,0,0,N_mdm(int,numSymbols)},
                {"variance_based_decomp",0,0,4,0,0,N_mdm(true,varBasedDecompFlag)}
                }
```

7.1.3.37 KeyWord kw_35[2] [static]

Initial value:

```
{
                {"maximize",0,0,1,1,0,N_mdm(lit,minMaxType_maximize)},
                {"minimize",0,0,1,1,0,N_mdm(lit,minMaxType_minimize)}
                }
```

7.1.3.38 KeyWord kw_36[2] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {"optimization_type",0,2,1,0,kw_35}
                }
```

7.1.3.39 KeyWord kw_37[3] [static]

Initial value:

```
{
                {"grid",0,0,1,1,0,N_mdm(lit,trialType_grid)},
                {"halton",0,0,1,1,0,N_mdm(lit,trialType_halton)},
                {"random",0,0,1,1,0,N_mdm(lit,trialType_random)}
                }
```

7.1.3.40 KeyWord kw_38[8] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,1,0,0,kw_33},
                {"fixed_seed",0,0,4,0,0,N_mdm(true,fixedSeedFlag)},
                {"latinize",0,0,1,0,0,N_mdm(true,latinizeFlag)},
                {"num_trials",1,0,6,0,0,N_mdm(int,numTrials)},
                {"quality_metrics",0,0,2,0,0,N_mdm(true,volQualityFlag)},
                {"trial_type",0,3,5,0,kw_37},
                {"variance_based_decomp",0,0,3,0,0,N_mdm(true,varBasedDecompFlag)}
                }
```

7.1.3.41 KeyWord kw_39[10] [static]

Initial value:

```
{
                {"fixed_sequence",0,0,6,0,0,N_mdm(true,fixedSequenceFlag)},
                {"halton",0,0,1,1,0,N_mdm(lit,methodName_fsu_halton)},
                {"hammersley",0,0,1,1,0,N_mdm(lit,methodName_fsu_hammersley)},
                {"latinize",0,0,2,0,0,N_mdm(true,latinizeFlag)},
                {"prime_base",5,0,9,0,0,N_mdm(intL,primeBase)},
                {"quality_metrics",0,0,3,0,0,N_mdm(true,volQualityFlag)},
                {"samples",1,0,5,0,0,N_mdm(int,numSamples)},
                {"sequence_leap",5,0,8,0,0,N_mdm(intL,sequenceLeap)},
                {"sequence_start",5,0,7,0,0,N_mdm(intL,sequenceStart)},
                {"variance_based_decomp",0,0,4,0,0,N_mdm(true,varBasedDecompFlag)}
                }
```

7.1.3.42 KeyWord kw_40[1] [static]

Initial value:

```
{
                {"list_of_points",6,0,1,1,0,N_mdm(RealL,listOfPoints)}
                }
```

7.1.3.43 KeyWord kw_41[2] [static]

Initial value:

```
{
                {"num_offspring",1,0,2,0,0,N_mdm(pintz,numOffspring)},
                {"num_parents",1,0,1,0,0,N_mdm(pintz,numParents)}
                }
```

7.1.3.44 KeyWord kw_42[5] [static]

Initial value:

```
{
                {"crossover_rate",2,0,2,0,0,N_mdm(litz,3crossoverType_null_crossover)},
                {"multi_point_binary",1,0,1,1,0,N_mdm(ilit2p,3crossoverType_multi_point_binary)},
                {"multi_point_parameterized_binary",1,0,1,1,0,N_mdm(ilit2p,3crossoverType_multi_point_paramet
                {"multi_point_real",1,0,1,1,0,N_mdm(ilit2p,3crossoverType_multi_point_real)},
                {"shuffle_random",0,2,1,1,kw_41,N_mdm(litc,3crossoverType_shuffle_random)}
                }
```

7.1.3.45 KeyWord kw_43[3] [static]

Initial value:

```
{
                {"flat_file",3,0,1,1,0,N_mdm(slit2,3initializationType_flat_file)},
                {"simple_random",0,0,1,1,0,N_mdm(lit,initializationType_random)},
                {"unique_random",0,0,1,1,0,N_mdm(lit,initializationType_unique_random)}
                }
```

7.1.3.46 KeyWord kw_44[1] [static]

Initial value:

```
{
                {"mutation_scale",2,0,1,0,0,N_mdm(Real01,mutationScale)}
                }
```

7.1.3.47 KeyWord kw_45[6] [static]

Initial value:

```
{
                {"bit_random",0,0,1,1,0,N_mdm(lit,mutationType_bit_random)},
                {"mutation_rate",2,0,2,0,0,N_mdm(litz,3mutationType_null_mutation)},
                {"offset_cauchy",0,1,1,1,kw_44,N_mdm(litc,3mutationType_offset_cauchy)},
                {"offset_normal",0,1,1,1,kw_44,N_mdm(litc,3mutationType_offset_normal)},
                {"offset_uniform",0,1,1,1,kw_44,N_mdm(litc,3mutationType_offset_uniform)},
                {"replace_uniform",0,0,1,1,0,N_mdm(lit,mutationType_replace_uniform)}
                }
```

7.1.3.48 KeyWord kw_46[6] [static]

Initial value:

```
{
                {"crossover_type",0,5,5,0,kw_42},
                {"initialization_type",0,3,4,0,kw_43},
                {"log_file",3,0,2,0,0,N_mdm(str,logFile)},
                {"mutation_type",0,6,6,0,kw_45},
                {"population_size",1,0,1,0,0,N_mdm(nnint,populationSize)},
                {"print_each_pop",0,0,3,0,0,N_mdm(true,printPopFlag)}
                }
```

7.1.3.49 KeyWord kw_47[3] [static]

Initial value:

```
{
                {"metric_tracker",0,0,1,1,0,N_mdm(lit,convergenceType_metric_tracker)},
                {"num_generations",1,0,3,0,0,N_mdm(nnintz,numGenerations)},
                {"percent_change",2,0,2,0,0,N_mdm(Realz,convergenceTolerance)}
                }
```

7.1.3.50 KeyWord kw_48[2] [static]

Initial value:

```
{
                {"domination_count",0,0,1,1,0,N_mdm(lit,fitnessType_domination_count)},
                {"layer_rank",0,0,1,1,0,N_mdm(lit,fitnessType_layer_rank)}
                }
```

7.1.3.51 KeyWord kw_49[2] [static]

Initial value:

```
{
                {"distance",6,0,1,1,0,N_mdm(RealLlit,3nichingType_distance)},
                {"radial",6,0,1,1,0,N_mdm(RealLlit,3nichingType_radial)}
                }
```

7.1.3.52 KeyWord kw_50[1] [static]

Initial value:

```
{
                {"orthogonal_distance",6,0,1,1,0,N_mdm(RealLlit,3postProcessorType_distance_postprocessor)}
                }
```

7.1.3.53 KeyWord kw_51[2] [static]

Initial value:

```
{
                {"shrinkage_fraction",2,0,1,0,0,N_mdm(Real01,shrinkagePercent)},
                {"shrinkage_percentage",2,0,1,0,0,N_mdm(Real01,shrinkagePercent)}
                }
```

7.1.3.54 KeyWord kw_52[4] [static]

Initial value:

```
{
                {"below_limit",2,2,1,1,kw_51,N_mdm(litp,3replacementType_below_limit)},
                {"elitist",0,0,1,1,0,N_mdm(lit,replacementType_elitist)},
                {"roulette_wheel",0,0,1,1,0,N_mdm(lit,replacementType_roulette_wheel)},
                {"unique_roulette_wheel",0,0,1,1,0,N_mdm(lit,replacementType_unique_roulette_wheel)}
                }
```

7.1.3.55 KeyWord kw_53[7] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,6,0,0,kw_46},
                {"convergence_type",0,3,4,0,kw_47},
                {"fitness_type",0,2,1,0,kw_48},
                {"niching_type",0,2,3,0,kw_49},
                {"postprocessor_type",0,1,5,0,kw_50},
                {"replacement_type",0,4,2,0,kw_52}
                }
```

7.1.3.56 KeyWord kw_54[1] [static]

Initial value:

```
{
                {"partitions",5,0,1,1,0,N_mdm(intL,varPartitions)}
                }
```

7.1.3.57 KeyWord kw_55[3] [static]

Initial value:

```
{
                {"min_boxsize_limit",2,0,2,0,0,N_mdm(Real,minBoxSize)},
                {"solution_accuracy",2,0,1,0,0,N_mdm(Real,solnAccuracy)},
                {"volume_boxsize_limit",2,0,3,0,0,N_mdm(Real,volBoxSize)}
                }
```

7.1.3.58 KeyWord kw_56[9] [static]

Initial value:

```
{
                {"absolute_conv_tol",2,0,2,0,0,N_mdm(Real,absConvTol)},
                {"covariance",1,0,8,0,0,N_mdm(int,covarianceType)},
                {"false_conv_tol",2,0,6,0,0,N_mdm(Real,falseConvTol)},
                {"function_precision",2,0,1,0,0,N_mdm(Real,functionPrecision)},
                {"initial_trust_radius",2,0,7,0,0,N_mdm(Real,initTRRadius)},
                {"regression_diagnostics",0,0,9,0,0,N_mdm(true,regressDiag)},
                {"singular_conv_tol",2,0,4,0,0,N_mdm(Real,singConvTol)},
                {"singular_radius",2,0,5,0,0,N_mdm(Real,singRadius)},
                {"x_conv_tol",2,0,3,0,0,N_mdm(Real,xConvTol)}
                }
```

7.1.3.59 KeyWord kw_57[2] [static]

Initial value:

```
{
                {"complementary",0,0,1,1,0,N_mdm(lit,distributionType_complementary)},
                {"cumulative",0,0,1,1,0,N_mdm(lit,distributionType_cumulative)}
                }
```

7.1.3.60 KeyWord kw_58[1] [static]

Initial value:

```
{
                {"num_gen_reliability_levels",5,0,1,0,0,N_mdm(num_resplevs,genReliabilityLevels)}
                }
```

7.1.3.61 KeyWord kw_59[1] [static]

Initial value:

```
{
                {"num_probability_levels",5,0,1,0,0,N_mdm(num_resplevs,probabilityLevels)}
                }
```

7.1.3.62 KeyWord kw_60[3] [static]

Initial value:

```
{
                {"distribution",0,2,1,0,kw_57},
                {"gen_reliability_levels",6,1,3,0,kw_58,N_mdm(resplevs,genReliabilityLevels)},
                {"probability_levels",6,1,2,0,kw_59,N_mdm(resplevs01,probabilityLevels)}
                }
```

7.1.3.63 KeyWord kw_61[2] [static]

Initial value:

```
{
                {"gen_reliabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_gen_reliabilities)},
                {"probabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_probabilities)}
                }
```

7.1.3.64 KeyWord kw_62[2] [static]

Initial value:

```
{
                {"compute",0,2,2,0,kw_61},
                {"num_response_levels",5,0,1,0,0,N_mdm(num_resplevs,responseLevels)}
                }
```

7.1.3.65 KeyWord kw_63[4] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,1,0,0,kw_33},
                {0,0,3,0,0,kw_60},
                {"response_levels",6,2,1,0,kw_62,N_mdm(resplevs,responseLevels)}
                }
```

7.1.3.66 KeyWord kw_64[2] [static]

Initial value:

```
{
                {"complementary",0,0,1,1,0,N_mdm(lit,distributionType_complementary)},
                {"cumulative",0,0,1,1,0,N_mdm(lit,distributionType_cumulative)}
                }
```

7.1.3.67 KeyWord kw_65[1] [static]

Initial value:

```
{
                {"num_gen_reliability_levels",5,0,1,0,0,N_mdm(num_resplevs,genReliabilityLevels)}
                }
```

7.1.3.68 KeyWord kw_66[1] [static]

Initial value:

```
{
                {"num_probability_levels",5,0,1,0,0,N_mdm(num_resplevs,probabilityLevels)}
                }
```

7.1.3.69 KeyWord kw_67[3] [static]

Initial value:

```
{
                {"distribution",0,2,1,0,kw_64},
                {"gen_reliability_levels",6,1,3,0,kw_65,N_mdm(resplevs,genReliabilityLevels)},
                {"probability_levels",6,1,2,0,kw_66,N_mdm(resplevs01,probabilityLevels)}
                }
```

7.1.3.70 KeyWord kw_68[2] [static]

Initial value:

```
{
                {"gen_reliabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_gen_reliabilities)},
                {"probabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_probabilities)}
                }
```

7.1.3.71 KeyWord kw_69[2] [static]

Initial value:

```
{
                {"compute",0,2,2,0,kw_68},
                {"num_response_levels",5,0,1,0,0,N_mdm(num_resplevs,responseLevels)}
                }
```

7.1.3.72 KeyWord kw_70[6] [static]

Initial value:

```
{
                {0,0,3,0,0,kw_67},
                {"all_variables",0,0,2,0,0,N_mdm(true,allVarsFlag)},
                {"response_levels",6,2,4,0,kw_69,N_mdm(resplevs,responseLevels)},
                {"seed",1,0,3,0,0,N_mdm(pint,randomSeed)},
                {"u_gaussian_process",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_egra_u)},
                {"x_gaussian_process",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_egra_x)}
                }
```

7.1.3.73 KeyWord kw_71[5] [static]

Initial value:

```
{
                {"adapt_import",0,0,1,1,0,N_mdm(lit,reliabilityIntegrationRefine_ais)},
                {"import",0,0,1,1,0,N_mdm(lit,reliabilityIntegrationRefine_is)},
                {"mm_adapt_import",0,0,1,1,0,N_mdm(lit,reliabilityIntegrationRefine_mmais)},
                {"samples",1,0,2,0,0,N_mdm(int,numSamples)},
                {"seed",1,0,3,0,0,N_mdm(pint,randomSeed)}
                }
```

7.1.3.74 KeyWord kw_72[3] [static]

Initial value:

```
{
                {"first_order",0,0,1,1,0,N_mdm(lit,reliabilityIntegration_first_order)},
                {"refinement",0,5,2,0,kw_71},
                {"second_order",0,0,1,1,0,N_mdm(lit,reliabilityIntegration_second_order)}
                }
```

7.1.3.75 KeyWord kw_73[9] [static]

Initial value:

```
{
                {"nip",0,0,3,0,0,N_mdm(lit,reliabilitySearchAlgorithm_nip)},
                {"no_approx",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_no_approx)},
                {"sqp",0,0,2,0,0,N_mdm(lit,reliabilitySearchAlgorithm_sqp)},
                {"u_taylor_mean",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_amv_u)},
                {"u_taylor_mpp",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_amv_plus_u)},
                {"u_two_point",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_tana_u)},
                {"x_taylor_mean",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_amv_x)},
                {"x_taylor_mpp",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_amv_plus_x)},
                {"x_two_point",0,0,1,1,0,N_mdm(lit,reliabilitySearchType_tana_x)}
                }
```

7.1.3.76 KeyWord kw_74[1] [static]

Initial value:

```
{
                {"num_reliability_levels",5,0,1,0,0,N_mdm(num_resplevs,reliabilityLevels)}
                }
```

7.1.3.77 KeyWord kw_75[3] [static]

Initial value:

```
{
                {"gen_reliabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_gen_reliabilities)},
                {"probabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_probabilities)},
                {"reliabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_reliabilities)}
                }
```

7.1.3.78 KeyWord kw_76[2] [static]

Initial value:

```
{
                {"compute",0,3,2,0,kw_75},
                {"num_response_levels",5,0,1,0,0,N_mdm(num_resplevs,responseLevels)}
                }
```

7.1.3.79 KeyWord kw_77[5] [static]

Initial value:

```
{
                {0,0,3,0,0,kw_67},
                {"integration",0,3,2,0,kw_72},
                {"mpp_search",0,9,1,0,kw_73},
                {"reliability_levels",6,1,4,0,kw_74,N_mdm(resplevs,reliabilityLevels)},
                {"response_levels",6,2,3,0,kw_76,N_mdm(resplevs,responseLevels)}
                }
```

7.1.3.80 KeyWord kw_78[1] [static]

Initial value:

```
{
                {"num_reliability_levels",5,0,1,0,0,N_mdm(num_resplevs,reliabilityLevels)}
                }
```

7.1.3.81 KeyWord kw_79[3] [static]

Initial value:

```
{
                {"gen_reliabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_gen_reliabilities)},
                {"probabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_probabilities)},
                {"reliabilities",0,0,1,1,0,N_mdm(lit,responseLevelMappingType_reliabilities)}
                }
```

7.1.3.82 KeyWord kw_80[2] [static]

Initial value:

```
{
                {"compute",0,3,2,0,kw_79},
                {"num_response_levels",5,0,1,0,0,N_mdm(num_resplevs,responseLevels)}
                }
```

7.1.3.83 KeyWord kw_81[2] [static]

Initial value:

```
{
                {"reliability_levels",6,1,1,0,kw_78,N_mdm(resplevs,reliabilityLevels)},
                {"response_levels",6,2,2,0,kw_80,N_mdm(resplevs,responseLevels)}
                }
```

7.1.3.84 KeyWord kw_82[2] [static]

Initial value:

```
{
                {"all_variables",0,0,1,0,0,N_mdm(true,allVarsFlag)},
                {"fixed_seed",0,0,2,0,0,N_mdm(true,fixedSeedFlag)}
                }
```

7.1.3.85 KeyWord kw_83[1] [static]

Initial value:

```
{
                {"reuse_samples",0,0,1,0,0,N_mdm(lit,collocSampleReuse_all)}
                }
```

7.1.3.86 KeyWord kw_84[1] [static]

Initial value:

```
{
                {"incremental_lhs",0,0,1,0,0,N_mdm(lit,expansionSampleType_incremental_lhs)}
                }
```

7.1.3.87 KeyWord kw_85[2] [static]

Initial value:

```
{
                {"lhs",0,0,1,1,0,N_mdm(lit,sampleType_lhs)},
                {"random",0,0,1,1,0,N_mdm(lit,sampleType_random)}
                }
```

7.1.3.88 KeyWord kw_86[14] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,1,0,0,kw_33},
                {0,0,3,0,0,kw_60},
                {0,0,2,0,0,kw_81},
                {0,0,2,0,0,kw_82},
                {"collocation_points",1,1,1,1,kw_83,N_mdm(int,collocationPoints)},
```

```
                {"collocation_ratio",2,1,1,1,kw_83,N_mdm(Realp,collocationRatio)},
                {"expansion_import_file",3,0,1,1,0,N_mdm(str,expansionImportFile)},
                {"expansion_order",1,0,2,2,0,N_mdm(shint,expansionOrder)},
                {"expansion_samples",1,1,1,1,kw_84,N_mdm(int,expansionSamples)},
                {"expansion_terms",1,0,2,2,0,N_mdm(int,expansionTerms)},
                {"quadrature_order",5,0,1,1,0,N_mdm(ushintL,quadratureOrder)},
                {"sample_type",0,2,3,0,kw_85},
                {"sparse_grid_level",5,0,1,1,0,N_mdm(ushintL,sparseGridLevel)}
                }
```

7.1.3.89 KeyWord kw_87[1] [static]

Initial value:

```
{
                {"previous_samples",1,0,1,1,0,N_mdm(int,previousSamples)}
                }
```

7.1.3.90 KeyWord kw_88[4] [static]

Initial value:

```
{
                {"incremental_lhs",0,1,1,1,kw_87,N_mdm(lit,sampleType_incremental_lhs)},
                {"incremental_random",0,1,1,1,kw_87,N_mdm(lit,sampleType_incremental_random)},
                {"lhs",0,0,1,1,0,N_mdm(lit,sampleType_lhs)},
                {"random",0,0,1,1,0,N_mdm(lit,sampleType_random)}
                }
```

7.1.3.91 KeyWord kw_89[7] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,1,0,0,kw_33},
                {0,0,3,0,0,kw_60},
                {0,0,2,0,0,kw_81},
                {0,0,2,0,0,kw_82},
                {"sample_type",0,4,1,0,kw_88},
                {"variance_based_decomp",0,0,2,0,0,N_mdm(true,varBasedDecompFlag)}
                }
```

7.1.3.92 KeyWord kw_90[2] [static]

Initial value:

```
{
                {"lhs",0,0,1,1,0,N_mdm(lit,sampleType_lhs)},
                {"random",0,0,1,1,0,N_mdm(lit,sampleType_random)}
                }
```

7.1.3.93 KeyWord kw_91[8] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,1,0,0,kw_33},
                {0,0,3,0,0,kw_60},
                {0,0,2,0,0,kw_81},
                {0,0,2,0,0,kw_82},
                {"quadrature_order",5,0,1,1,0,N_mdm(ushintL,quadratureOrder)},
                {"sample_type",0,2,2,0,kw_90},
                {"sparse_grid_level",5,0,1,1,0,N_mdm(ushintL,sparseGridLevel)}
                }
```

7.1.3.94 KeyWord kw_92[4] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {"function_precision",2,0,2,0,0,N_mdm(Real,functionPrecision)},
                {"linesearch_tolerance",2,0,3,0,0,N_mdm(Real,lineSearchTolerance)},
                {"verify_level",1,0,1,0,0,N_mdm(int,verifyLevel)}
                }
```

7.1.3.95 KeyWord kw_93[2] [static]

Initial value:

```
{
                {"gradient_tolerance",2,0,2,0,0,N_mdm(Real,gradientTolerance)},
                {"max_step",2,0,1,0,0,N_mdm(Real,maxStep)}
                }
```

7.1.3.96 KeyWord kw_94[3] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {0,0,2,0,0,kw_93},
                {""}
                }
```

7.1.3.97 KeyWord kw_95[2] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {"search_scheme_size",1,0,1,0,0,N_mdm(int,searchSchemeSize)}
                }
```

7.1.3.98 KeyWord kw_96[4] [static]

Initial value:

```
{
                {"gradient_based_line_search",0,0,1,1,0,N_mdm(lit,searchMethod_gradient_based_line_search)},
                {"tr_pds",0,0,1,1,0,N_mdm(lit,searchMethod_tr_pds)},
                {"trust_region",0,0,1,1,0,N_mdm(lit,searchMethod_trust_region)},
                {"value_based_line_search",0,0,1,1,0,N_mdm(lit,searchMethod_value_based_line_search)}
                }
```

7.1.3.99 KeyWord kw_97[7] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {0,0,2,0,0,kw_93},
                {"centering_parameter",2,0,5,0,0,N_mdm(Real,centeringParam)},
                {"central_path",3,0,3,0,0,N_mdm(meritFn,centralPath)},
                {"merit_function",3,0,2,0,0,N_mdm(meritFn,meritFn)},
                {"search_method",0,4,1,0,kw_96},
                {"steplength_to_boundary",2,0,4,0,0,N_mdm(Real,stepLenToBoundary)}
                }
```

7.1.3.100 KeyWord kw_98[4] [static]

Initial value:

```
{
                {"debug",0,0,1,1,0,N_mdm(slit,methodOutput_DEBUG_OUTPUT)},
                {"quiet",0,0,1,1,0,N_mdm(slit,methodOutput_QUIET_OUTPUT)},
                {"silent",0,0,1,1,0,N_mdm(slit,methodOutput_SILENT_OUTPUT)},
                {"verbose",0,0,1,1,0,N_mdm(slit,methodOutput_VERBOSE_OUTPUT)}
                }
```

7.1.3.101 KeyWord kw_99[3] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,1,0,0,kw_33},
                {"partitions",5,0,1,0,0,N_mdm(intLa,varPartitions)}
                }
```

7.1.3.102 KeyWord kw_100[2] [static]

Initial value:

```
{
                {"num_generations",1,0,2,0,0,N_mdm(nnintz,numGenerations)},
                {"percent_change",2,0,1,0,0,N_mdm(Realz,convergenceTolerance)}
                }
```

7.1.3.103 KeyWord kw_101[2] [static]

Initial value:

```
{
                {"num_generations",1,0,2,0,0,N_mdm(nnintz,numGenerations)},
                {"percent_change",2,0,1,0,0,N_mdm(Realz,convergenceTolerance)}
                }
```

7.1.3.104 KeyWord kw_102[2] [static]

Initial value:

```
{
                {"average_fitness_tracker",0,2,1,1,kw_100,N_mdm(lit,convergenceType_average_fitness_tracker)},
                {"best_fitness_tracker",0,2,1,1,kw_101,N_mdm(lit,convergenceType_best_fitness_tracker)}
                }
```

7.1.3.105 KeyWord kw_103[2] [static]

Initial value:

```
{
                {"constraint_penalty",2,0,2,0,0,N_mdm(Realp,constraintTolerance)},
                {"merit_function",0,0,1,1,0,N_mdm(lit,fitnessType_merit_function)}
                }
```

7.1.3.106 KeyWord kw_104[4] [static]

Initial value:

```
{
                {"elitist",0,0,1,1,0,N_mdm(lit,replacementType_elitist)},
                {"favor_feasible",0,0,1,1,0,N_mdm(lit,replacementType_favor_feasible)},
                {"roulette_wheel",0,0,1,1,0,N_mdm(lit,replacementType_roulette_wheel)},
                {"unique_roulette_wheel",0,0,1,1,0,N_mdm(lit,replacementType_unique_roulette_wheel)}
                }
```

7.1.3.107 KeyWord kw_105[5] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_32},
                {0,0,6,0,0,kw_46},
                {"convergence_type",0,2,3,0,kw_102},
                {"fitness_type",0,2,1,0,kw_103},
                {"replacement_type",0,4,2,0,kw_104}
                }
```

7.1.3.108 KeyWord kw_106[3] [static]

Initial value:

```
{
                {"approx_method_name",3,0,1,1,0,N_mdm(str,subMethodName)},
                {"approx_method_pointer",3,0,1,1,0,N_mdm(str,subMethodPointer)},
                {"replace_points",0,0,2,0,0,N_mdm(true,surrBasedGlobalReplacePts)}
                }
```

7.1.3.109 KeyWord kw_107[2] [static]

Initial value:

```
{
                {"filter",0,0,1,1,0,N_mdm(slit,surrBasedLocalAcceptLogic_FILTER)},
                {"tr_ratio",0,0,1,1,0,N_mdm(slit,surrBasedLocalAcceptLogic_TR_RATIO)}
                }
```

7.1.3.110 KeyWord kw_108[7] [static]

Initial value:

```
{
                {"augmented_lagrangian_objective",0,0,1,1,0,N_mdm(slit,surrBasedLocalSubProbObj_AUGMENTED_LAG
                {"lagrangian_objective",0,0,1,1,0,N_mdm(slit,surrBasedLocalSubProbObj_LAGRANGIAN_OBJECTIVE)},
                {"linearized_constraints",0,0,2,2,0,N_mdm(slit,surrBasedLocalSubProbCon_LINEARIZED_CONSTRAINT
                {"no_constraints",0,0,2,2,0,N_mdm(slit,surrBasedLocalSubProbCon_NO_CONSTRAINTS)},
                {"original_constraints",0,0,2,2,0,N_mdm(slit,surrBasedLocalSubProbCon_ORIGINAL_CONSTRAINTS)},
                {"original_primary",0,0,1,1,0,N_mdm(slit,surrBasedLocalSubProbObj_ORIGINAL_PRIMARY)},
                {"single_objective",0,0,1,1,0,N_mdm(slit,surrBasedLocalSubProbObj_SINGLE_OBJECTIVE)}
                }
```

7.1.3.111 KeyWord kw_109[1] [static]

Initial value:

```
{
                {"homotopy",0,0,1,1,0,N_mdm(slit,surrBasedLocalConstrRelax_HOMOTOPY)}
                }
```

7.1.3.112 KeyWord kw_110[4] [static]

Initial value:

```
{
                {"adaptive_penalty_merit",0,0,1,1,0,N_mdm(slit,surrBasedLocalMeritFn_ADAPTIVE_PENALTY_MERIT)},
                {"augmented_lagrangian_merit",0,0,1,1,0,N_mdm(slit,surrBasedLocalMeritFn_AUGMENTED_LAGRANGIAN_MER
                {"lagrangian_merit",0,0,1,1,0,N_mdm(slit,surrBasedLocalMeritFn_LAGRANGIAN_MERIT)},
                {"penalty_merit",0,0,1,1,0,N_mdm(slit,surrBasedLocalMeritFn_PENALTY_MERIT)}
                }
```

7.1.3.113 KeyWord kw_111[6] [static]

Initial value:

```
{
                {"contract_threshold",2,0,3,0,0,N_mdm(Real,surrBasedLocalTRContractTrigger)},
                {"contraction_factor",2,0,5,0,0,N_mdm(Real,surrBasedLocalTRContract)},
                {"expand_threshold",2,0,4,0,0,N_mdm(Real,surrBasedLocalTRExpandTrigger)},
                {"expansion_factor",2,0,6,0,0,N_mdm(Real,surrBasedLocalTRExpand)},
                {"initial_size",2,0,1,0,0,N_mdm(Real,surrBasedLocalTRInitSize)},
                {"minimum_size",2,0,2,0,0,N_mdm(Real,surrBasedLocalTRMinSize)}
                }
```

7.1.3.114 KeyWord kw_112[10] [static]

Initial value:

```
{
                {0,0,9,0,0,kw_8},
                {"acceptance_logic",0,2,7,0,kw_107},
                {"approx_method_name",3,0,1,1,0,N_mdm(str,subMethodName)},
                {"approx_method_pointer",3,0,1,1,0,N_mdm(str,subMethodPointer)},
                {"approx_subproblem",0,7,5,0,kw_108},
                {"constraint_relax",0,1,8,0,kw_109},
                {"merit_function",0,4,6,0,kw_110},
                {"soft_convergence_limit",1,0,2,0,0,N_mdm(int,surrBasedLocalSoftConvLimit)},
                {"trust_region",0,6,4,0,kw_111,0,0,NIDRProblemDescDB::method_tr_final},
                {"truth_surrogate_bypass",0,0,3,0,0,N_mdm(true,surrBasedLocalLayerBypass)}
                }
```

7.1.3.115 KeyWord kw_113[2] [static]

Initial value:

```
{
                {"num_steps",1,0,1,1,0,N_mdm(Ii,numSteps_2)},
                {"step_length",2,0,1,1,0,N_mdm(Ri,stepLength_1)}
                }
```

7.1.3.116 KeyWord kw_114[1] [static]

Initial value:

```
{
                {"num_steps",1,0,1,1,0,N_mdm(Ii,numSteps_3)}
                }
```

7.1.3.117 KeyWord kw_115[2] [static]

Initial value:

```
{
                {"final_point",6,2,1,1,kw_113,N_mdm(RealL,finalPoint)},
                {"step_vector",6,1,1,1,kw_114,N_mdm(RealL,stepVector)}
                }
```

7.1.3.118 KeyWord kw_117[1] [static]

Initial value:

```
{
                {"optional_interface_responses_pointer",3,0,1,0,0,N_mom(str,optionalInterfRespPointer)}
                }
```

7.1.3.119 KeyWord kw_118[4] [static]

Initial value:

```
{
                {"primary_response_mapping",6,0,3,0,0,N_mom(RealL,primaryRespCoeffs)},
                {"primary_variable_mapping",7,0,1,0,0,N_mom(strL,primaryVarMaps)},
                {"secondary_response_mapping",6,0,4,0,0,N_mom(RealL,secondaryRespCoeffs)},
                {"secondary_variable_mapping",7,0,2,0,0,N_mom(strL,secondaryVarMaps)}
                }
```

7.1.3.120 KeyWord kw_119[2] [static]

Initial value:

```
{
                {"optional_interface_pointer",3,1,1,0,kw_117,N_mom(str,interfacePointer)},
                {"sub_method_pointer",3,4,2,1,kw_118,N_mom(str,subMethodPointer)}
                }
```

7.1.3.121 KeyWord kw_120[1] [static]

Initial value:

```
{
                {"interface_pointer",3,0,1,0,0,N_mom(str,interfacePointer)}
                }
```

7.1.3.122 KeyWord kw_121[6] [static]

Initial value:

```
{
                {"additive",0,0,2,2,0,N_mom(lit,approxCorrectionType_additive)},
                {"combined",0,0,2,2,0,N_mom(lit,approxCorrectionType_combined)},
                {"first_order",0,0,1,1,0,N_mom(order,approxCorrectionOrder_1)},
                {"multiplicative",0,0,2,2,0,N_mom(lit,approxCorrectionType_multiplicative)},
                {"second_order",0,0,1,1,0,N_mom(order,approxCorrectionOrder_2)},
                {"zeroth_order",0,0,1,1,0,N_mom(order,approxCorrectionOrder_0)}
                }
```

7.1.3.123 KeyWord kw_122[3] [static]

Initial value:

```
{
                {"constant",0,0,1,1,0,N_mom(order,trendOrder_0)},
                {"linear",0,0,1,1,0,N_mom(order,trendOrder_1)},
                {"quadratic",0,0,1,1,0,N_mom(order,trendOrder_2)}
                }
```

7.1.3.124 KeyWord kw_123[2] [static]

Initial value:

```
{
                {"point_selection",0,0,1,0,0,N_mom(true,pointSelection)},
                {"trend",0,3,2,0,kw_122}
                }
```

7.1.3.125 KeyWord kw_124[5] [static]

Initial value:

```
{
                {"conmin_seed",6,0,2,0,0,N_mom(RealL,krigingConminSeed)},
                {"correlations",6,0,1,0,0,N_mom(RealL,krigingCorrelations)},
                {"max_correlations",6,0,4,0,0,N_mom(RealL,krigingMaxCorrelations)},
                {"max_trials",1,0,3,0,0,N_mom(shint,krigingMaxTrials)},
                {"min_correlations",6,0,5,0,0,N_mom(RealL,krigingMinCorrelations)}
                }
```

7.1.3.126 KeyWord kw_125[2] [static]

Initial value:

```
{
                {"cubic",0,0,1,1,0,N_mom(lit,marsInterpolation_cubic)},
                {"linear",0,0,1,1,0,N_mom(lit,marsInterpolation_linear)}
                }
```

7.1.3.127 KeyWord kw_126[2] [static]

Initial value:

```
{
                {"interpolation",0,2,2,0,kw_125},
                {"max_bases",1,0,1,0,0,N_mom(shint,marsMaxBases)}
                }
```

7.1.3.128 KeyWord kw_127[2] [static]

Initial value:

```
{
                {"poly_order",1,0,1,0,0,N_mom(shint,mlsPolyOrder)},
                {"weight_function",1,0,2,0,0,N_mom(shint,mlsWeightFunction)}
                }
```

7.1.3.129 KeyWord kw_128[3] [static]

Initial value:

```
{
                {"nodes",1,0,1,0,0,N_mom(shint,annNodes)},
                {"random_weight",1,0,3,0,0,N_mom(shint,annRandomWeight)},
                {"range",2,0,2,0,0,N_mom(Real,annRange)}
                }
```

7.1.3.130 KeyWord kw_129[3] [static]

Initial value:

```
{
                {"cubic",0,0,1,1,0,N_mom(order,polynomialOrder_3)},
                {"linear",0,0,1,1,0,N_mom(order,polynomialOrder_1)},
                {"quadratic",0,0,1,1,0,N_mom(order,polynomialOrder_2)}
                }
```

7.1.3.131 KeyWord kw_130[4] [static]

Initial value:

```
{
                {"bases",1,0,1,0,0,N_mom(shint,rbfBases)},
                {"max_pts",1,0,2,0,0,N_mom(shint,rbfMaxPts)},
                {"max_subsets",1,0,4,0,0,N_mom(shint,rbfMaxSubsets)},
                {"min_partition",1,0,3,0,0,N_mom(shint,rbfMinPartition)}
                }
```

7.1.3.132 KeyWord kw_131[3] [static]

Initial value:

```
{
                {"all",0,0,1,1,0,N_mom(lit,approxSampleReuse_all)},
                {"none",0,0,1,1,0,N_mom(lit,approxSampleReuse_none)},
                {"region",0,0,1,1,0,N_mom(lit,approxSampleReuse_region)}
                }
```

7.1.3.133 KeyWord kw_132[13] [static]

Initial value:

```
{
                {"correction",0,6,6,0,kw_121},
                {"dace_method_pointer",3,0,2,0,0,N_mom(str,subMethodPointer)},
                {"diagnostics",7,0,7,0,0,N_mom(strL,diagMetrics)},
                {"gaussian_process",0,2,1,1,kw_123,N_mom(lit,surrogateType_global_gaussian)},
                {"kriging",0,5,1,1,kw_124,N_mom(lit,surrogateType_global_kriging)},
                {"mars",0,2,1,1,kw_126,N_mom(lit,surrogateType_global_mars)},
                {"moving_least_squares",0,2,1,1,kw_127,N_mom(lit,surrogateType_global_moving_least_squares)},
                {"neural_network",0,3,1,1,kw_128,N_mom(lit,surrogateType_global_neural_network)},
                {"polynomial",0,3,1,1,kw_129,N_mom(lit,surrogateType_global_polynomial)},
                {"radial_basis",0,4,1,1,kw_130,N_mom(lit,surrogateType_global_radial_basis)},
                {"reuse_samples",0,3,3,0,kw_131},
                {"samples_file",3,0,4,0,0,N_mom(str,approxSampleReuseFile)},
                {"use_gradients",0,0,5,0,0,N_mom(true,approxGradUsageFlag)}
                }
```

7.1.3.134 KeyWord kw_133[6] [static]

Initial value:

```
{
                {"additive",0,0,2,2,0,N_mom(lit,approxCorrectionType_additive)},
                {"combined",0,0,2,2,0,N_mom(lit,approxCorrectionType_combined)},
                {"first_order",0,0,1,1,0,N_mom(order,approxCorrectionOrder_1)},
                {"multiplicative",0,0,2,2,0,N_mom(lit,approxCorrectionType_multiplicative)},
                {"second_order",0,0,1,1,0,N_mom(order,approxCorrectionOrder_2)},
                {"zeroth_order",0,0,1,1,0,N_mom(order,approxCorrectionOrder_0)}
                }
```

7.1.3.135 KeyWord kw_134[3] [static]

Initial value:

```
{
                {"correction",0,6,3,3,kw_133},
                {"high_fidelity_model_pointer",3,0,2,2,0,N_mom(str,truthModelPointer)},
                {"low_fidelity_model_pointer",3,0,1,1,0,N_mom(str,lowFidelityModelPointer)}
                }
```

7.1.3.136 KeyWord kw_135[1] [static]

Initial value:

```
{
                {"actual_model_pointer",3,0,1,1,0,N_mom(str,truthModelPointer)}
                }
```

7.1.3.137 KeyWord kw_136[2] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_135},
                {"taylor_series",0,0,1,1,0}
                }
```

7.1.3.138 KeyWord kw_137[2] [static]

Initial value:

```
{
                {0,0,1,0,0,kw_135},
                {"tana",0,0,1,1,0}
                }
```

7.1.3.139 KeyWord kw_138[5] [static]

Initial value:

```
{
                {"global",0,13,2,1,kw_132},
                {"hierarchical",0,3,2,1,kw_134,N_mom(lit,surrogateType_hierarchical)},
                {"id_surrogates",5,0,1,0,0,N_mom(intset,surrogateFnIndices)},
                {"local",0,1,2,1,kw_136,N_mom(lit,surrogateType_local_taylor)},
                {"multipoint",0,1,2,1,kw_137,N_mom(lit,surrogateType_multipoint_tana)}
                }
```

7.1.3.140 KeyWord kw_139[6] [static]

Initial value:

```
{
                {"id_model",3,0,1,0,0,N_mom(str,idModel)},
                {"nested",0,2,4,1,kw_119,N_mom(lit,modelType_nested)},
                {"responses_pointer",3,0,3,0,0,N_mom(str,responsesPointer)},
                {"single",0,1,4,1,kw_120,N_mom(lit,modelType_single)},
                {"surrogate",0,5,4,1,kw_138,N_mom(lit,modelType_surrogate)},
                {"variables_pointer",3,0,2,0,0,N_mom(str,variablesPointer)}
                }
```

7.1.3.141 KeyWord kw_140[2] [static]

Initial value:

```
{
                {"central",0,0,1,1,0,N_rem(lit,intervalType_central)},
                {"forward",0,0,1,1,0,N_rem(lit,intervalType_forward)}
                }
```

7.1.3.142 KeyWord kw_141[2] [static]

Initial value:

```
{
                {"dakota",0,0,1,1,0,N_rem(lit,methodSource_dakota)},
                {"vendor",0,0,1,1,0,N_rem(lit,methodSource_vendor)}
                }
```

7.1.3.143 KeyWord kw_142[5] [static]

Initial value:

```
{
                {"fd_gradient_step_size",6,0,4,0,0,N_rem(RealL,fdGradStepSize)},
                {"id_analytic_gradients",5,0,5,2,0,N_rem(intL,idAnalyticGrads)},
                {"id_numerical_gradients",5,0,1,1,0,N_rem(intL,idNumericalGrads)},
                {"interval_type",0,2,3,0,kw_140},
                {"method_source",0,2,2,0,kw_141}
                }
```

7.1.3.144 KeyWord kw_143[1] [static]

Initial value:

```
{
                {"fd_hessian_step_size",6,0,1,0,0,N_rem(RealL,fdHessStepSize)}
                }
```

7.1.3.145 KeyWord kw_144[1] [static]

Initial value:

```
{
                {"damped",0,0,1,0,0,N_rem(lit,quasiHessianType_damped_bfgs)}
                }
```

7.1.3.146 KeyWord kw_145[2] [static]

Initial value:

```
{
                {"bfgs",0,1,1,1,kw_144,N_rem(lit,quasiHessianType_bfgs)},
                {"sr1",0,0,1,1,0,N_rem(lit,quasiHessianType_sr1)}
                }
```

7.1.3.147 KeyWord kw_146[3] [static]

Initial value:

```
{
                {"id_analytic_hessians",5,0,3,0,0,N_rem(intL,idAnalyticHessians)},
                {"id_numerical_hessians",5,1,1,0,kw_143,N_rem(intL,idNumericalHessians)},
                {"id_quasi_hessians",5,2,2,0,kw_145,N_rem(intL,idQuasiHessians)}
                }
```

7.1.3.148 KeyWord kw_147[3] [static]

Initial value:

```
{
                {"nonlinear_equality_scale_types",7,0,2,0,0,N_rem(strL,nonlinearEqScaleTypes)},
                {"nonlinear_equality_scales",6,0,3,0,0,N_rem(RealL,nonlinearEqScales)},
                {"nonlinear_equality_targets",6,0,1,0,0,N_rem(RealL,nonlinearEqTargets)}
                }
```

7.1.3.149 KeyWord kw_148[4] [static]

Initial value:

```
{
                {"nonlinear_inequality_lower_bounds",6,0,1,0,0,N_rem(RealL,nonlinearIneqLowerBnds)},
                {"nonlinear_inequality_scale_types",7,0,3,0,0,N_rem(strL,nonlinearIneqScaleTypes)},
                {"nonlinear_inequality_scales",6,0,4,0,0,N_rem(RealL,nonlinearIneqScales)},
                {"nonlinear_inequality_upper_bounds",6,0,2,0,0,N_rem(RealL,nonlinearIneqUpperBnds)}
                }
```

7.1.3.150 KeyWord kw_149[6] [static]

Initial value:

```
{
                {"least_squares_data_file",3,0,1,0,0,N_rem(str,leastSqDataFile)},
                {"least_squares_term_scale_types",7,0,2,0,0,N_rem(strL,primaryRespFnScaleTypes)},
                {"least_squares_term_scales",6,0,3,0,0,N_rem(RealL,primaryRespFnScales)},
                {"least_squares_weights",6,0,4,0,0,N_rem(RealL,primaryRespFnWeights)},
                {"num_nonlinear_equality_constraints",1,3,6,0,kw_147,N_rem(nnintz,numNonlinearEqConstraints)}
                {"num_nonlinear_inequality_constraints",1,4,5,0,kw_148,N_rem(nnintz,numNonlinearIneqConstrain
                }
```

7.1.3.151 KeyWord kw_150[3] [static]

Initial value:

```
{
                {"nonlinear_equality_scale_types",7,0,2,0,0,N_rem(strL,nonlinearEqScaleTypes)},
                {"nonlinear_equality_scales",6,0,3,0,0,N_rem(RealL,nonlinearEqScales)},
                {"nonlinear_equality_targets",6,0,1,0,0,N_rem(RealL,nonlinearEqTargets)}
                }
```

7.1.3.152 KeyWord kw_151[4] [static]

Initial value:

```
{
                {"nonlinear_inequality_lower_bounds",6,0,1,0,0,N_rem(RealL,nonlinearIneqLowerBnds)},
                {"nonlinear_inequality_scale_types",7,0,3,0,0,N_rem(strL,nonlinearIneqScaleTypes)},
                {"nonlinear_inequality_scales",6,0,4,0,0,N_rem(RealL,nonlinearIneqScales)},
                {"nonlinear_inequality_upper_bounds",6,0,2,0,0,N_rem(RealL,nonlinearIneqUpperBnds)}
                }
```

7.1.3.153 KeyWord kw_152[5] [static]

Initial value:

```
{
                {"multi_objective_weights",6,0,3,0,0,N_rem(RealL,primaryRespFnWeights)},
                {"num_nonlinear_equality_constraints",1,3,5,0,kw_150,N_rem(nnintz,numNonlinearEqConstraints)},
                {"num_nonlinear_inequality_constraints",1,4,4,0,kw_151,N_rem(nnintz,numNonlinearIneqConstraints)}
                {"objective_function_scale_types",7,0,1,0,0,N_rem(strL,primaryRespFnScaleTypes)},
                {"objective_function_scales",6,0,2,0,0,N_rem(RealL,primaryRespFnScales)}
                }
```

7.1.3.154 KeyWord kw_153[2] [static]

Initial value:

```
{
                {"central",0,0,1,1,0,N_rem(lit,intervalType_central)},
                {"forward",0,0,1,1,0,N_rem(lit,intervalType_forward)}
                }
```

7.1.3.155 KeyWord kw_154[2] [static]

Initial value:

```
{
                {"dakota",0,0,1,1,0,N_rem(lit,methodSource_dakota)},
                {"vendor",0,0,1,1,0,N_rem(lit,methodSource_vendor)}
                }
```

7.1.3.156 KeyWord kw_155[3] [static]

Initial value:

```
{
                {"fd_gradient_step_size",6,0,3,0,0,N_rem(RealL,fdGradStepSize)},
                {"interval_type",0,2,2,0,kw_153},
                {"method_source",0,2,1,0,kw_154}
                }
```

7.1.3.157 KeyWord kw_156[1] [static]

Initial value:

```
{
                {"fd_hessian_step_size",6,0,1,0,0,N_rem(RealL,fdHessStepSize)}
                }
```

7.1.3.158 KeyWord kw_157[1] [static]

Initial value:

```
{
                {"damped",0,0,1,0,0,N_rem(lit,quasiHessianType_damped_bfgs)}
                }
```

7.1.3.159 KeyWord kw_158[2] [static]

Initial value:

```
{
                {"bfgs",0,1,1,1,kw_157,N_rem(lit,quasiHessianType_bfgs)},
                {"sr1",0,0,1,1,0,N_rem(lit,quasiHessianType_sr1)}
                }
```

7.1.3.160 KeyWord kw_159[15] [static]

Initial value:

```
{
                {"analytic_gradients",0,0,4,2,0,N_rem(lit,gradientType_analytic)},
                {"analytic_hessians",0,0,5,3,0,N_rem(lit,hessianType_analytic)},
                {"descriptors",7,0,2,0,0,N_rem(strL,responseLabels)},
                {"id_responses",3,0,1,0,0,N_rem(str,idResponses)},
                {"mixed_gradients",0,5,4,2,kw_142,N_rem(lit,gradientType_mixed)},
                {"mixed_hessians",0,3,5,3,kw_146,N_rem(lit,hessianType_mixed)},
                {"no_gradients",0,0,4,2,0,N_rem(lit,gradientType_none)},
                {"no_hessians",0,0,5,3,0,N_rem(lit,hessianType_none)},
                {"num_least_squares_terms",1,6,3,1,kw_149,N_rem(nnintz,numLeastSqTerms)},
                {"num_objective_functions",1,5,3,1,kw_152,N_rem(nnintz,numObjectiveFunctions)},
                {"num_response_functions",1,0,3,1,0,N_rem(nnintz,numResponseFunctions)},
                {"numerical_gradients",0,3,4,2,kw_155,N_rem(lit,gradientType_numerical)},
                {"numerical_hessians",0,1,5,3,kw_156,N_rem(lit,hessianType_numerical)},
                {"quasi_hessians",0,2,5,3,kw_158,N_rem(lit,hessianType_quasi)},
                {"response_descriptors",7,0,2,0,0,N_rem(strL,responseLabels)}
                }
```

7.1.3.161 KeyWord kw_160[1] [static]

Initial value:

```
{
                {"method_list",7,0,1,1,0,N_stm(strL,hybridMethodList)}
                }
```

7.1.3.162 KeyWord kw_161[3] [static]

Initial value:

```
{
                {"global_method_pointer",3,0,1,1,0,N_stm(str,hybridGlobalMethodPointer)},
                {"local_method_pointer",3,0,2,2,0,N_stm(str,hybridLocalMethodPointer)},
                {"local_search_probability",2,0,3,0,0,N_stm(Real,hybridLSProb)}
                }
```

7.1.3.163 KeyWord kw_162[2] [static]

Initial value:

```
{
                {"method_list",7,0,2,1,0,N_stm(strL,hybridMethodList)},
                {"num_solutions_transferred",1,0,1,0,0,N_stm(int,hybridNumSolnsTrans)}
                }
```

7.1.3.164 KeyWord kw_163[5] [static]

Initial value:

```
{
                {"collaborative",0,1,1,1,kw_160,N_stm(lit,hybridType_collaborative)},
                {"coupled",0,3,1,1,kw_161,N_stm(lit,hybridType_embedded)},
                {"embedded",0,3,1,1,kw_161,N_stm(lit,hybridType_embedded)},
                {"sequential",0,2,1,1,kw_162,N_stm(lit,hybridType_sequential)},
                {"uncoupled",0,2,1,1,kw_162,N_stm(lit,hybridType_sequential)}
                }
```

7.1.3.165 KeyWord kw_164[1] [static]

Initial value:

```
{
                {"seed",1,0,1,0,0,N_stm(int,concurrentSeed)}
                }
```

7.1.3.166 KeyWord kw_165[3] [static]

Initial value:

```
{
                {"method_pointer",3,0,1,1,0,N_stm(str,methodPointer)},
                {"random_starts",1,1,2,0,kw_164,N_stm(int,concurrentRandomJobs)},
                {"starting_points",6,0,3,0,0,N_stm(RealL,concurrentParameterSets)}
                }
```

7.1.3.167 KeyWord kw_166[1] [static]

Initial value:

```
{
                {"seed",1,0,1,0,0,N_stm(int,concurrentSeed)}
                }
```

7.1.3.168 KeyWord kw_167[5] [static]

Initial value:

```
{
                {"method_pointer",3,0,1,1,0,N_stm(str,methodPointer)},
                {"multi_objective_weight_sets",6,0,3,0,0,N_stm(RealL,concurrentParameterSets)},
                {"opt_method_pointer",3,0,1,1,0,N_stm(str,methodPointer)},
                {"random_weight_sets",1,1,2,0,kw_166,N_stm(int,concurrentRandomJobs)},
                {"weight_sets",6,0,3,0,0,N_stm(RealL,concurrentParameterSets)}
                }
```

7.1.3.169 KeyWord kw_168[1] [static]

Initial value:

```
{
                {"method_pointer",3,0,1,0,0,N_stm(str,methodPointer)}
                }
```

7.1.3.170 KeyWord kw_169[1] [static]

Initial value:

```
{
                {"tabular_graphics_file",3,0,1,0,0,N_stm(str,tabularDataFile)}
                }
```

7.1.3.171 KeyWord kw_170[9] [static]

Initial value:

```
{
                {"graphics",0,0,1,0,0,N_stm(true,graphicsFlag)},
                {"hybrid",0,5,6,1,kw_163,N_stm(lit,strategyType_hybrid)},
                {"iterator_self_scheduling",0,0,4,0,0,N_stm(lit,iteratorScheduling_self)},
                {"iterator_servers",1,0,3,0,0,N_stm(int,iteratorServers)},
                {"iterator_static_scheduling",0,0,5,0,0,N_stm(lit,iteratorScheduling_static)},
                {"multi_start",0,3,6,1,kw_165,N_stm(lit,strategyType_multi_start)},
                {"pareto_set",0,5,6,1,kw_167,N_stm(lit,strategyType_pareto_set)},
                {"single_method",0,1,6,1,kw_168,N_stm(lit,strategyType_single_method)},
                {"tabular_graphics_data",0,1,2,0,kw_169,N_stm(true,tabularDataFlag)}
                }
```

7.1.3.172 KeyWord kw_171[10] [static]

Initial value:

```
{
                {"alphas",6,0,1,1,0,N_vam(RealLb,betaUncAlphas)},
                {"betas",6,0,2,2,0,N_vam(RealLb,betaUncBetas)},
                {"buv_alphas",6,0,1,1,0,N_vam(RealLb,betaUncAlphas)},
                {"buv_betas",6,0,2,2,0,N_vam(RealLb,betaUncBetas)},
                {"buv_descriptors",7,0,5,0,0,N_vae(ulbl,UncVar_beta)},
                {"buv_lower_bounds",6,0,3,3,0,N_vam(RealLd,betaUncLowerBnds)},
                {"buv_upper_bounds",6,0,4,4,0,N_vam(RealLd,betaUncUpperBnds)},
                {"descriptors",7,0,5,0,0,N_vae(ulbl,UncVar_beta)},
                {"lower_bounds",6,0,3,3,0,N_vam(RealLd,betaUncLowerBnds)},
                {"upper_bounds",6,0,4,4,0,N_vam(RealLd,betaUncUpperBnds)}
                }
```

7.1.3.173 KeyWord kw_172[12] [static]

Initial value:

```
{
                {"cdv_descriptors",7,0,6,0,0,N_vam(strL,continuousDesignLabels)},
                {"cdv_initial_point",6,0,1,0,0,N_vam(RealL,continuousDesignVars)},
                {"cdv_lower_bounds",6,0,2,0,0,N_vam(RealL,continuousDesignLowerBnds)},
                {"cdv_scale_types",7,0,4,0,0,N_vam(strL,continuousDesignScaleTypes)},
                {"cdv_scales",6,0,5,0,0,N_vam(RealL,continuousDesignScales)},
                {"cdv_upper_bounds",6,0,3,0,0,N_vam(RealL,continuousDesignUpperBnds)},
                {"descriptors",7,0,6,0,0,N_vam(strL,continuousDesignLabels)},
                {"initial_point",6,0,1,0,0,N_vam(RealL,continuousDesignVars)},
                {"lower_bounds",6,0,2,0,0,N_vam(RealL,continuousDesignLowerBnds)},
                {"scale_types",7,0,4,0,0,N_vam(strL,continuousDesignScaleTypes)},
                {"scales",6,0,5,0,0,N_vam(RealL,continuousDesignScales)},
                {"upper_bounds",6,0,3,0,0,N_vam(RealL,continuousDesignUpperBnds)}
                }
```

7.1.3.174 KeyWord kw_173[8] [static]

Initial value:

```
{
                {"csv_descriptors",7,0,4,0,0,N_vam(strL,continuousStateLabels)},
                {"csv_initial_state",6,0,1,0,0,N_vam(RealL,continuousStateVars)},
                {"csv_lower_bounds",6,0,2,0,0,N_vam(RealL,continuousStateLowerBnds)},
                {"csv_upper_bounds",6,0,3,0,0,N_vam(RealL,continuousStateUpperBnds)},
                {"descriptors",7,0,4,0,0,N_vam(strL,continuousStateLabels)},
                {"initial_state",6,0,1,0,0,N_vam(RealL,continuousStateVars)},
                {"lower_bounds",6,0,2,0,0,N_vam(RealL,continuousStateLowerBnds)},
                {"upper_bounds",6,0,3,0,0,N_vam(RealL,continuousStateUpperBnds)}
                }
```

7.1.3.175 KeyWord kw_174[8] [static]

Initial value:

```
{
                {"ddv_descriptors",7,0,4,0,0,N_vam(strL,discreteDesignLabels)},
                {"ddv_initial_point",5,0,1,0,0,N_vam(intL,discreteDesignVars)},
                {"ddv_lower_bounds",5,0,2,0,0,N_vam(intL,discreteDesignLowerBnds)},
                {"ddv_upper_bounds",5,0,3,0,0,N_vam(intL,discreteDesignUpperBnds)},
                {"descriptors",7,0,4,0,0,N_vam(strL,discreteDesignLabels)},
                {"initial_point",5,0,1,0,0,N_vam(intL,discreteDesignVars)},
                {"lower_bounds",5,0,2,0,0,N_vam(intL,discreteDesignLowerBnds)},
                {"upper_bounds",5,0,3,0,0,N_vam(intL,discreteDesignUpperBnds)}
                }
```

7.1.3.176 KeyWord kw_175[8] [static]

Initial value:

```
{
                {"descriptors",7,0,4,0,0,N_vam(strL,discreteStateLabels)},
                {"dsv_descriptors",7,0,4,0,0,N_vam(strL,discreteStateLabels)},
                {"dsv_initial_state",5,0,1,0,0,N_vam(intL,discreteStateVars)},
                {"dsv_lower_bounds",5,0,2,0,0,N_vam(intL,discreteStateLowerBnds)},
                {"dsv_upper_bounds",5,0,3,0,0,N_vam(intL,discreteStateUpperBnds)},
                {"initial_state",5,0,1,0,0,N_vam(intL,discreteStateVars)},
                {"lower_bounds",5,0,2,0,0,N_vam(intL,discreteStateLowerBnds)},
                {"upper_bounds",5,0,3,0,0,N_vam(intL,discreteStateUpperBnds)}
                }
```

7.1.3.177 KeyWord kw_176[4] [static]

Initial value:

```
{
                {"betas",6,0,1,1,0,N_vam(RealLb,exponentialUncBetas)},
                {"descriptors",7,0,2,0,0,N_vae(ulbl,UncVar_exponential)},
                {"euv_betas",6,0,1,1,0,N_vam(RealLb,exponentialUncBetas)},
                {"euv_descriptors",7,0,2,0,0,N_vae(ulbl,UncVar_exponential)}
                }
```

7.1.3.178 KeyWord kw_177[6] [static]

Initial value:

```
{
                {"alphas",6,0,1,1,0,N_vam(RealLb,frechetUncAlphas)},
                {"betas",6,0,2,2,0,N_vam(RealLd,frechetUncBetas)},
                {"descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_frechet)},
                {"fuv_alphas",6,0,1,1,0,N_vam(RealLb,frechetUncAlphas)},
                {"fuv_betas",6,0,2,2,0,N_vam(RealLd,frechetUncBetas)},
                {"fuv_descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_frechet)}
                }
```

7.1.3.179 KeyWord kw_178[6] [static]

Initial value:

```
{
                {"alphas",6,0,1,1,0,N_vam(RealLb,gammaUncAlphas)},
                {"betas",6,0,2,2,0,N_vam(RealLb,gammaUncBetas)},
                {"descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_gamma)},
                {"gauv_alphas",6,0,1,1,0,N_vam(RealLb,gammaUncAlphas)},
                {"gauv_betas",6,0,2,2,0,N_vam(RealLb,gammaUncBetas)},
                {"gauv_descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_gamma)}
                }
```

7.1.3.180 KeyWord kw_179[6] [static]

Initial value:

```
{
                {"alphas",6,0,1,1,0,N_vam(RealLb,gumbelUncAlphas)},
                {"betas",6,0,2,2,0,N_vam(RealLd,gumbelUncBetas)},
                {"descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_gumbel)},
                {"guuv_alphas",6,0,1,1,0,N_vam(RealLb,gumbelUncAlphas)},
                {"guuv_betas",6,0,2,2,0,N_vam(RealLd,gumbelUncBetas)},
                {"guuv_descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_gumbel)}
                }
```

7.1.3.181 KeyWord kw_180[2] [static]

Initial value:

```
{
                {"bin_pairs",6,0,1,1,0,N_vam(hbp,Var_Info_bp)},
                {"huv_bin_pairs",6,0,1,1,0,N_vam(hbp,Var_Info_bp)}
                }
```

7.1.3.182 KeyWord kw_181[2] [static]

Initial value:

```
{
                {"huv_point_pairs",6,0,1,1,0,N_vam(hbp,Var_Info_pp)},
                {"point_pairs",6,0,1,1,0,N_vam(hbp,Var_Info_pp)}
                }
```

7.1.3.183 KeyWord kw_182[6] [static]

Initial value:

```
{
                {"descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_histogram)},
                {"huv_descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_histogram)},
                {"huv_num_bin_pairs",5,2,1,0,kw_180,N_vam(nhbp,Var_Info_nbp)},
                {"huv_num_point_pairs",5,2,2,0,kw_181,N_vam(nhbp,Var_Info_npp)},
                {"num_bin_pairs",5,2,1,0,kw_180,N_vam(nhbp,Var_Info_nbp)},
                {"num_point_pairs",5,2,2,0,kw_181,N_vam(nhbp,Var_Info_npp)}
                }
```

7.1.3.184 KeyWord kw_183[8] [static]

Initial value:

```
{
                {"descriptors",7,0,4,0,0,N_vae(ulbl,UncVar_interval)},
                {"interval_bounds",6,0,3,3,0,N_vam(hbp,Var_Info_Ivb)},
                {"interval_probs",6,0,2,2,0,N_vam(hbp,Var_Info_Ivp)},
                {"iuv_descriptors",7,0,4,0,0,N_vae(ulbl,UncVar_interval)},
                {"iuv_interval_bounds",6,0,3,3,0,N_vam(hbp,Var_Info_Ivb)},
                {"iuv_interval_probs",6,0,2,2,0,N_vam(hbp,Var_Info_Ivp)},
                {"iuv_num_intervals",5,0,1,1,0,N_vam(nhbp,Var_Info_nIv)},
                {"num_intervals",5,0,1,1,0,N_vam(nhbp,Var_Info_nIv)}
                }
```

7.1.3.185 KeyWord kw_184[12] [static]

Initial value:

```
{
                {"descriptors",7,0,5,0,0,N_vae(ulbl,UncVar_lognormal)},
                {"error_factors",6,0,2,2,0,N_vam(RealLb,lognormalUncErrFacts)},
                {"lnuv_descriptors",7,0,5,0,0,N_vae(ulbl,UncVar_lognormal)},
```

```
{"lnuv_error_factors",6,0,2,2,0,N_vam(RealLb,lognormalUncErrFacts)},
{"lnuv_lower_bounds",6,0,3,0,0,N_vam(RealLb,lognormalUncLowerBnds)},
{"lnuv_means",6,0,1,1,0,N_vam(RealLb,lognormalUncMeans)},
{"lnuv_std_deviations",6,0,2,2,0,N_vam(RealLb,lognormalUncStdDevs)},
{"lnuv_upper_bounds",6,0,4,0,0,N_vam(RealUb,lognormalUncUpperBnds)},
{"lower_bounds",6,0,3,0,0,N_vam(RealLb,lognormalUncLowerBnds)},
{"means",6,0,1,1,0,N_vam(RealLb,lognormalUncMeans)},
{"std_deviations",6,0,2,2,0,N_vam(RealLb,lognormalUncStdDevs)},
{"upper_bounds",6,0,4,0,0,N_vam(RealUb,lognormalUncUpperBnds)}
}
```

7.1.3.186 KeyWord kw_185[6] [static]

Initial value:

```
{
{"descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_loguniform)},
{"lower_bounds",6,0,1,1,0,N_vam(RealLb,loguniformUncLowerBnds)},
{"luuv_descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_loguniform)},
{"luuv_lower_bounds",6,0,1,1,0,N_vam(RealLb,loguniformUncLowerBnds)},
{"luuv_upper_bounds",6,0,2,2,0,N_vam(RealUb,loguniformUncUpperBnds)},
{"upper_bounds",6,0,2,2,0,N_vam(RealUb,loguniformUncUpperBnds)}
}
```

7.1.3.187 KeyWord kw_186[10] [static]

Initial value:

```
{
{"descriptors",7,0,5,0,0,N_vae(ulbl,UncVar_normal)},
{"lower_bounds",6,0,3,0,0,N_vam(RealLd,normalUncLowerBnds)},
{"means",6,0,1,1,0,N_vam(RealLd,normalUncMeans)},
{"nuv_descriptors",7,0,5,0,0,N_vae(ulbl,UncVar_normal)},
{"nuv_lower_bounds",6,0,3,0,0,N_vam(RealLd,normalUncLowerBnds)},
{"nuv_means",6,0,1,1,0,N_vam(RealLd,normalUncMeans)},
{"nuv_std_deviations",6,0,2,2,0,N_vam(RealLb,normalUncStdDevs)},
{"nuv_upper_bounds",6,0,4,0,0,N_vam(RealLd,normalUncUpperBnds)},
{"std_deviations",6,0,2,2,0,N_vam(RealLb,normalUncStdDevs)},
{"upper_bounds",6,0,4,0,0,N_vam(RealLd,normalUncUpperBnds)}
}
```

7.1.3.188 KeyWord kw_187[8] [static]

Initial value:

```
{
```

```
                {"descriptors",7,0,4,0,0,N_vae(ulbl,UncVar_triangular)},
                {"lower_bounds",6,0,2,2,0,N_vam(RealLb,triangularUncLowerBnds)},
                {"modes",6,0,1,1,0,N_vam(RealLd,triangularUncModes)},
                {"tuv_descriptors",7,0,4,0,0,N_vae(ulbl,UncVar_triangular)},
                {"tuv_lower_bounds",6,0,2,2,0,N_vam(RealLb,triangularUncLowerBnds)},
                {"tuv_modes",6,0,1,1,0,N_vam(RealLd,triangularUncModes)},
                {"tuv_upper_bounds",6,0,3,3,0,N_vam(RealUb,triangularUncUpperBnds)},
                {"upper_bounds",6,0,3,3,0,N_vam(RealUb,triangularUncUpperBnds)}
                }
```

7.1.3.189 KeyWord kw_188[6] [static]

Initial value:

```
{
                {"descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_uniform)},
                {"lower_bounds",6,0,1,1,0,N_vam(RealLb,uniformUncLowerBnds)},
                {"upper_bounds",6,0,2,2,0,N_vam(RealUb,uniformUncUpperBnds)},
                {"uuv_descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_uniform)},
                {"uuv_lower_bounds",6,0,1,1,0,N_vam(RealLb,uniformUncLowerBnds)},
                {"uuv_upper_bounds",6,0,2,2,0,N_vam(RealUb,uniformUncUpperBnds)}
                }
```

7.1.3.190 KeyWord kw_189[6] [static]

Initial value:

```
{
                {"alphas",6,0,1,1,0,N_vam(RealLb,weibullUncAlphas)},
                {"betas",6,0,2,2,0,N_vam(RealLb,weibullUncBetas)},
                {"descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_weibull)},
                {"wuv_alphas",6,0,1,1,0,N_vam(RealLb,weibullUncAlphas)},
                {"wuv_betas",6,0,2,2,0,N_vam(RealLb,weibullUncBetas)},
                {"wuv_descriptors",7,0,3,0,0,N_vae(ulbl,UncVar_weibull)}
                }
```

7.1.3.191 KeyWord kw_190[19] [static]

Initial value:

```
{
                {"beta_uncertain",1,10,10,0,kw_171,N_vam(intz,numBetaUncVars)},
                {"continuous_design",1,12,2,0,kw_172,N_vam(intz,numContinuousDesVars)},
                {"continuous_state",1,8,18,0,kw_173,N_vam(intz,numContinuousStateVars)},
                {"discrete_design",1,8,3,0,kw_174,N_vam(intz,numDiscreteDesVars)},
                {"discrete_state",1,8,19,0,kw_175,N_vam(intz,numDiscreteStateVars)},
```

```
                {"exponential_uncertain",1,4,9,0,kw_176,N_vam(intz,numExponentialUncVars)},
                {"frechet_uncertain",1,6,13,0,kw_177,N_vam(intz,numFrechetUncVars)},
                {"gamma_uncertain",1,6,11,0,kw_178,N_vam(intz,numGammaUncVars)},
                {"gumbel_uncertain",1,6,12,0,kw_179,N_vam(intz,numGumbelUncVars)},
                {"histogram_uncertain",1,6,15,0,kw_182,N_vam(intz,numHistogramUncVars)},
                {"id_variables",3,0,1,0,0,N_vam(str,idVariables)},
                {"interval_uncertain",1,8,16,0,kw_183,N_vam(intz,numIntervalUncVars)},
                {"lognormal_uncertain",1,12,5,0,kw_184,N_vam(intz,numLognormalUncVars)},
                {"loguniform_uncertain",1,6,7,0,kw_185,N_vam(intz,numLoguniformUncVars)},
                {"normal_uncertain",1,10,4,0,kw_186,N_vam(intz,numNormalUncVars)},
                {"triangular_uncertain",1,8,8,0,kw_187,N_vam(intz,numTriangularUncVars)},
                {"uncertain_correlation_matrix",6,0,17,0,0,N_vam(hbp,Var_Info_ucm)},
                {"uniform_uncertain",1,6,6,0,kw_188,N_vam(intz,numUniformUncVars)},
                {"weibull_uncertain",1,6,14,0,kw_189,N_vam(intz,numWeibullUncVars)}
                }
```

7.1.3.192 KeyWord kw_191[6] [static]

Initial value:

```
{
                {"interface",0,10,5,5,kw_7,N_ifm3(start,0,stop)},
                {"method",0,54,2,2,kw_116,N_mdm3(start,0,stop)},
                {"model",0,6,3,3,kw_139,N_mom3(start,0,stop)},
                {"responses",0,15,6,6,kw_159,N_rem3(start,0,stop)},
                {"strategy",0,9,1,1,kw_170,NIDRProblemDescDB::strategy_start},
                {"variables",0,19,4,4,kw_190,N_vam3(start,0,stop)}
                }
```

7.1.3.193 Var_uinfo UncLbl[UncVar_Nkinds] [static]

Initial value:

```
{
        UncInfo(nuv_, Normal),
        UncInfo(lnuv_, Lognormal),
        UncInfo(uuv_, Uniform),
        UncInfo(luuv_, Loguniform),
        UncInfo(tuv_, Triangular),
        UncInfo(euv_, Exponential),
        UncInfo(buv_, Beta),
        UncInfo(gauv_, Gamma),
        UncInfo(guuv_, Gumbel),
        UncInfo(fuv_, Frechet),
        UncInfo(wuv_, Weibull),
        UncInfo(huv_, Histogram),
        UncInfo(iuv_, Interval)
        }
```

7.1.3.194 Var_bchk var_mp_bndchk[ ] [static]

Initial value:

```
{
        Vchv(continuous_design,numContinuousDesVars,continuousDesign),




        Vchv(continuous_state,numContinuousStateVars,continuousState)
        }
```

7.1.3.195 Var_bchku var_mp_bndchku[ ] [static]

Initial value:

```
{
        Vchu(normal_uncertain,numNormalUncVars,normalUnc),
        Vchu(lognormal_uncertain,numLognormalUncVars,lognormalUnc),
        Vchu(uniform_uncertain,numUniformUncVars,uniformUnc),
        Vchu(loguniform_uncertain,numLoguniformUncVars,loguniformUnc),
        Vchu(triangular_uncertain,numTriangularUncVars,triangularUnc),
        Vchu(exponential_uncertain,numExponentialUncVars,triangularUnc),
        Vchu(beta_uncertain,numBetaUncVars,betaUnc),
        }
```

7.1.3.196 Var_ibchk var_mp_ibndchk[ ] [static]

Initial value:

```
{
        Vchv(discrete_design,numDiscreteDesVars,discreteDesign),
        Vchv(discrete_state,numDiscreteStateVars,discreteState)
        }
```

7.2 SIM Namespace Reference

plug facilities into DAKOTA.

Classes

- class ParallelDirectApplicInterface

  plug-ins using assign_rep().

- class SerialDirectApplicInterface

  plug-ins using assign_rep().

7.2.1 Detailed Description

plug facilities into DAKOTA.

A typical use of plug-ins with assign_rep() is to publish a simulation interface for use in library mode See Interfacing with DAKOTA as a Library for more information.

Chapter 8

DAKOTA Class Documentation

8.1 ActiveSet Class Reference

active set request vector and the derivative variables vector.

Public Member Functions

- ActiveSet ()

  default constructor

- ActiveSet (size_t num_fns, size_t num_deriv_vars)

  standard constructor

- ActiveSet (const ActiveSet &set)

  copy constructor

- ~ActiveSet ()

  destructor

- ActiveSet & operator= (const ActiveSet &set)

  assignment operator

- void reshape (size_t num_fns, size_t num_deriv_vars)

  reshape requestVector and derivVarsVector

- const ShortArray & request_vector () const

  return the request vector

- void request_vector (const ShortArray &rv)
  set the request vector
- void request_values (const short rv_val)
  set all request vector values
- void request_value (const size_t index, const short rv_val)
  set the value of an entry in the request vector
- const UIntArray & derivative_vector () const
  return the derivative variables vector
- void derivative_vector (const UIntArray &dvv)
  set the derivative variables vector
- void derivative_start_value (const unsigned int dvv_start_val)
  set the derivative variables vector values
- void read (istream &s)
  read an active set object from an istream
- void write (ostream &s) const
  write an active set object to an ostream
- void write_annotated (ostream &s) const
  write an active set object to an ostream in annotated format
- void read (BiStream &s)
  read an active set object from the binary restart stream
- void write (BoStream &s) const
  write an active set object to the binary restart stream
- void read (MPIUnpackBuffer &s)
  read an active set object from a packed MPI buffer
- void write (MPIPackBuffer &s) const
  write an active set object to a packed MPI buffer

Private Attributes

- ShortArray requestVector
  the vector of response requests
- UIntArray derivVarsVector
  the vector of variable ids used for computing derivatives

Friends

- bool operator== (const ActiveSet &set1, const ActiveSet &set2)

  equality operator

- bool operator!= (const ActiveSet &set1, const ActiveSet &set2)

  inequality operator

8.1.1 Detailed Description

active set request vector and the derivative variables vector.

The ActiveSet class is a small class whose initial design function is to avoid having to pass the ASV and DVV separately. It is not part of a class hierarchy and does not employ reference-counting/ representation-sharing idioms (e.g., handle-body).

8.1.2 Member Data Documentation

8.1.2.1 ShortArray requestVector [private]

the vector of response requests

It uses a 0 value for inactive functions and sums 1 (value), 2 (gradient), and 4 (Hessian) for active functions.

8.1.2.2 UIntArray derivVarsVector [private]

the vector of variable ids used for computing derivatives

These ids will generally identify either the active continuous variables or the inactive continuous variables.

The documentation for this class was generated from the following files:

- DakotaActiveSet.H
- DakotaActiveSet.C

8.2 AllConstraints Class Reference

employs the all data view.

Inheritance diagram for AllConstraints::

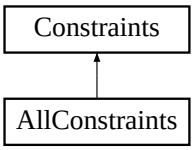

Public Member Functions

- AllConstraints ()
  default constructor
- AllConstraints (const ProblemDescDB &problem_db, const pair< short, short > &view)
  standard constructor
- ~AllConstraints ()
  destructor
- const RealVector & continuous_lower_bounds () const
  return the active continuous variable lower bounds
- void continuous_lower_bounds (const RealVector &c_l_bnds)
  set the active continuous variable lower bounds
- const RealVector & continuous_upper_bounds () const
  return the active continuous variable upper bounds
- void continuous_upper_bounds (const RealVector &c_u_bnds)
  set the active continuous variable upper bounds
- const IntVector & discrete_lower_bounds () const
  return the active discrete variable lower bounds
- void discrete_lower_bounds (const IntVector &d_l_bnds)
  set the active discrete variable lower bounds
- const IntVector & discrete_upper_bounds () const
  return the active discrete variable upper bounds

- void discrete_upper_bounds (const IntVector &d_u_bnds)

  set the active discrete variable upper bounds

- RealVector all_continuous_lower_bounds () const

  returns a single array with all continuous lower bounds

- void all_continuous_lower_bounds (const RealVector &a_c_l_bnds)

  sets all continuous lower bounds using a single array

- RealVector all_continuous_upper_bounds () const

  returns a single array with all continuous upper bounds

- void all_continuous_upper_bounds (const RealVector &a_c_u_bnds)

  sets all continuous upper bounds using a single array

- IntVector all_discrete_lower_bounds () const

  returns a single array with all discrete lower bounds

- void all_discrete_lower_bounds (const IntVector &a_d_l_bnds)

  sets all discrete lower bounds using a single array

- IntVector all_discrete_upper_bounds () const

  returns a single array with all discrete upper bounds

- void all_discrete_upper_bounds (const IntVector &a_d_u_bnds)

  sets all discrete upper bounds using a single array

- void write (ostream &s) const

  write a variable constraints object to an ostream

- void read (istream &s)

  read a variable constraints object from an istream

Protected Member Functions

- void copy_rep (const Constraints *con_rep)

  Used by copy() to copy the contents of a letter class.

- void reshape_rep (const Sizet2DArray &vars_comps)

  Used by reshape(Sizet2DArray&) to rehape the contents of a letter class.

Private Attributes

- RealVector allContinuousLowerBnds

  uncertain, and continuous state variable types (all view).

- RealVector allContinuousUpperBnds

  uncertain, and continuous state variable types (all view).

- IntVector allDiscreteLowerBnds

  discrete state variable types (all view).

- IntVector allDiscreteUpperBnds

  discrete state variable types (all view).

- size_t numCDV

  number of continuous design variables

- size_t numDDV

  number of discrete design variables

8.2.1 Detailed Description

employs the all data view.

Derived variable constraints classes take different views of the design, uncertain, and state variable types and the continuous and discrete domain types. The AllConstraints derived class combines design, uncertain, and state variable types but separates continuous and discrete domain types. The result is combined continuous bounds arrays (allContinuousLowerBnds, allContinuousUpperBnds) and combined discrete bounds arrays (allDiscreteLowerBnds, allDiscreteUpperBnds). Parameter and DACE studies currently use this approach (see Variables::get_variables(problem_db) for variables view selection; variables view is passed to the Constraints constructor in Model).

8.2.2 Constructor & Destructor Documentation

8.2.2.1 AllConstraints (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*)

standard constructor

In this class, the all data approach (design, uncertain, and state types are combined) is used. Iterators/strategies which use this class include: parameter studies, dace, and nond_sampling in all_variables mode. Extract fundamental lower and upper bounds and combine them into allContinuousLowerBnds, allContinuousUpperBnds, allDiscreteLowerBnds, and allDiscreteUpperBnds.

The documentation for this class was generated from the following files:

- AllConstraints.H
- AllConstraints.C

8.3 AllVariables Class Reference

the all data view.

Inheritance diagram for AllVariables::

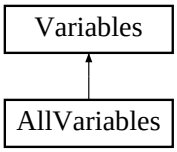

Public Member Functions

- AllVariables ()
  default constructor
- AllVariables (const ProblemDescDB &problem_db, const pair< short, short > &view)
  standard constructor
- ~AllVariables ()
  destructor
- size_t tv () const
  Returns total number of vars.
- const RealVector & continuous_variables () const
  return the active continuous variables
- void continuous_variable (const Real &c_var, const size_t &i)
  set an active continuous variable
- void continuous_variables (const RealVector &c_vars)
  set the active continuous variables
- const IntVector & discrete_variables () const
  return the active discrete variables
- void discrete_variable (const int &d_var, const size_t &i)
  set an active discrete variable
- void discrete_variables (const IntVector &d_vars)
  set the active discrete variables

- const StringArray & continuous_variable_labels () const
  return the active continuous variable labels
- void continuous_variable_labels (const StringArray &cv_labels)
  set the active continuous variable labels
- const StringArray & discrete_variable_labels () const
  return the active discrete variable labels
- void discrete_variable_labels (const StringArray &dv_labels)
  set the active discrete variable labels
- const StringArray & continuous_variable_types () const
  return the active continuous variable types
- const StringArray & discrete_variable_types () const
  return the active discrete variable types
- const UIntArray & continuous_variable_ids () const
  return the active continuous variable position identifiers
- size_t acv () const
  returns total number of continuous vars
- size_t adv () const
  returns total number of discrete vars
- RealVector all_continuous_variables () const
  returns a single array with all continuous variables
- void all_continuous_variables (const RealVector &a_c_vars)
  sets all continuous variables using a single array
- IntVector all_discrete_variables () const
  returns a single array with all discrete variables
- void all_discrete_variables (const IntVector &a_d_vars)
  sets all discrete variables using a single array
- StringArray all_continuous_variable_labels () const
  returns a single array with all continuous variable labels
- void all_continuous_variable_labels (const StringArray &a_c_v_labels)
  sets all continuous variable labels using a single array

- StringArray all_discrete_variable_labels () const

  returns a single array with all discrete variable labels

- void all_discrete_variable_labels (const StringArray &a_d_v_labels)

  sets all discrete variable labels using a single array

- StringArray all_variable_labels () const

  returns a single array with all variable labels

- const StringArray & all_discrete_variable_types () const

  return the all discrete variable types

- void read (istream &s)

  read a variables object from an istream

- void write (ostream &s) const

  write a variables object to an ostream

- void write_aprepro (ostream &s) const

  write a variables object to an ostream in aprepro format

- void read_annotated (istream &s)

  read a variables object in annotated format from an istream

- void write_annotated (ostream &s) const

  write a variables object in annotated format to an ostream

- void write_tabular (ostream &s) const

  write a variables object in tabular format to an ostream

- void read (BiStream &s)

  read a variables object from the binary restart stream

- void write (BoStream &s) const

  write a variables object to the binary restart stream

- void read (MPIUnpackBuffer &s)

  read a variables object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a variables object to a packed MPI buffer

Protected Member Functions

- void copy_rep (const Variables *vars_rep)

  Used by copy() to copy the contents of a letter class.

- void reshape_rep (const Sizet2DArray &vars_comps)

  Used by reshape() to reshape the contents of a letter class.

Private Member Functions

- void build_types_ids ()

  construct VarTypes and VarIds arrays using variablesComponents

Private Attributes

- RealVector allContinuousVars

  (design, uncertain, and state).

- IntVector allDiscreteVars

  (design and state).

- StringArray allContinuousLabels

  (design, uncertain, and state).

- StringArray allDiscreteLabels

  (design and state).

- StringArray allDiscreteVarTypes

  array of variable types for all of the discrete variables

Friends

- bool operator== (const AllVariables &vars1, const AllVariables &vars2)

  equality operator

- std::size_t hash_value (const AllVariables &vars)

  hash_value

- bool binary_equal_to (const AllVariables &vars1, const AllVariables &vars2)

  binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

8.3.1 Detailed Description

the all data view.

Derived variables classes take different views of the design, uncertain, and state variable types and the continuous and discrete domain types. The AllVariables derived class combines design, uncertain, and state variable types but separates continuous and discrete domain types. The result is a single array of continuous variables (allContinuousVars) and a single array of discrete variables (allDiscreteVars). Parameter and DACE studies currently use this approach (see Variables::get_variables(problem_db)).

8.3.2 Constructor & Destructor Documentation

8.3.2.1 AllVariables (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*)

standard constructor

In this class, the all data approach (design, uncertain, and state types are combined) is used. Iterators/strategies which use this class include: parameter studies, DACE, and the all_variables mode of nond_sampling. Extract fundamental variable types and labels and combine them into allContinuousVars, allDiscreteVars, allContinuousLabels, and allDiscreteLabels.

The documentation for this class was generated from the following files:

- AllVariables.H
- AllVariables.C

8.4 AnalysisCode Class Reference

processes for managing simulations.

Inheritance diagram for AnalysisCode::

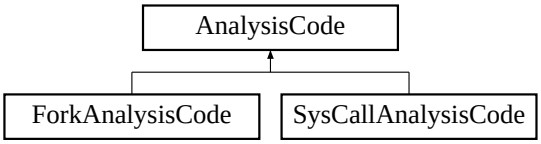

Public Member Functions

- void define_filenames (const int id)
  file and tagging options
- void write_parameters_files (const Variables &vars, const ActiveSet &set, const int id)
  write_parameters_file()) in either standard or aprepro format
- void read_results_files (Response &response, const int id)
  read the response object from one or more results files
- const StringArray & program_names () const
  return programNames
- const String & input_filter_name () const
  return iFilterName
- const String & output_filter_name () const
  return oFilterName
- const String & parameters_filename () const
  return paramsFileName
- const String & results_filename () const
  return resultsFileName
- const String & results_filename (const int id)
  return the results filename entry in fileNameMap corresponding to id
- void suppress_output_flag (const bool flag)
  set suppressOutputFlag

- bool suppress_output_flag () const

  return suppressOutputFlag

- bool command_line_arguments () const

  return commandLineArgs

- bool multiple_parameters_filenames () const

  return multipleParamsFiles

Protected Member Functions

- AnalysisCode (const ProblemDescDB &problem_db)

  constructor

- virtual ~AnalysisCode ()

  destructor

Protected Attributes

- bool suppressOutputFlag

  flag set by master processor to suppress output from slave processors

- short outputLevel

  output verbosity level: {SILENT,QUIET,NORMAL,VERBOSE,DEBUG}_OUTPUT

- bool fileTagFlag

  flags tagging of parameter/results files

- bool fileSaveFlag

  flags retention of parameter/results files

- bool commandLineArgs

  the analysis drivers and input/output filters

- bool apreproFlag

  format for parameter files

- bool multipleParamsFiles

  analysis drivers

- String iFilterName

  the name of the input filter (input_filter user specification)

- String oFilterName

  the name of the output filter (output_filter user specification)

- StringArray programNames

  specification)

- size_t numPrograms

  the number of analysis code programs (length of programNames)

- String specifiedParamsFileName

  the name of the parameters file from user specification

- String paramsFileName

  temp files)

- String specifiedResultsFileName

  the name of the results file from user specification

- String resultsFileName

  the results file name actually used (modified with tagging or temp files)

- map< int, pair< String, String > > fileNameMap

  evaluations. Map key is the function evaluation identifier.

Private Member Functions

- void write_parameters_file (const Variables &vars, const ActiveSet &set, const StringArray &an_comps, const String &params_fname)

  standard or aprepro format

Private Attributes

- ParallelLibrary & parallelLib

  reference to the ParallelLibrary object. Used in define_filenames().

- String2DArray analysisComponents

  (from the analysis_components interface specification)

8.4.1 Detailed Description

processes for managing simulations.

The AnalysisCode class hierarchy provides simulation spawning services for ApplicationInterface derived classes and alleviates these classes of some of the specifics of simulation code management. The hierarchy does not employ the letter-envelope technique since the ApplicationInterface derived classes instantiate the appropriate derived AnalysisCode class directly.

The documentation for this class was generated from the following files:

- AnalysisCode.H
- AnalysisCode.C

8.5 Analyzer Class Reference

hierarchy.

Inheritance diagram for Analyzer::

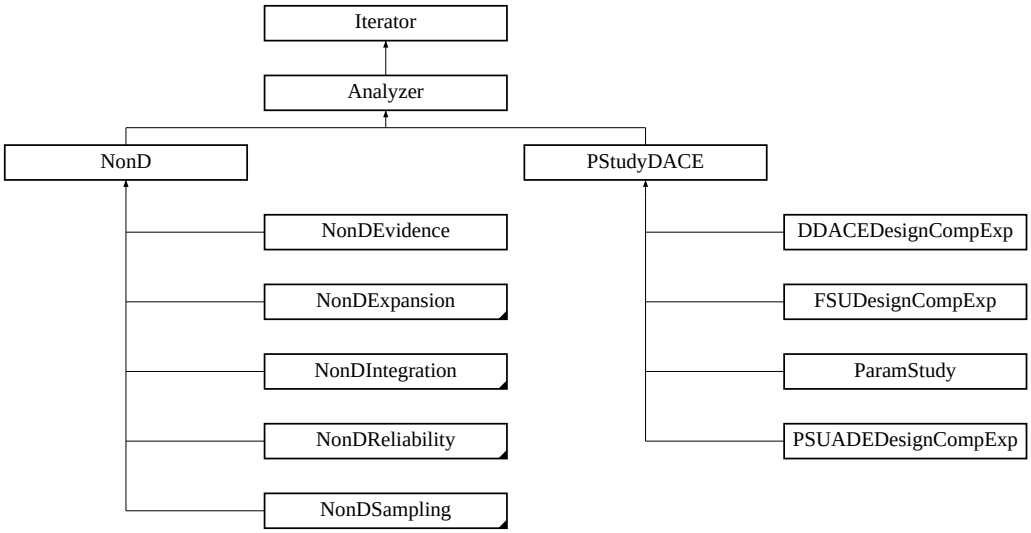

Public Member Functions

- const VariablesArray & all_variables () const

  return the complete set of evaluated variables

- const ResponseArray & all_responses () const

  return the complete set of computed responses

- const VariablesArray & variables_array_results () const

  return multiple final iterator solutions (variables)

- const ResponseArray & response_array_results () const

  return multiple final iterator solutions (response)

Protected Member Functions

- Analyzer ()

  default constructor

- Analyzer (Model &model)

  standard constructor

- Analyzer (NoDBBaseConstructor, Model &model)

  alternate constructor for instantiations "on the fly" with a Model

- Analyzer (NoDBBaseConstructor)

  alternate constructor for instantiations "on the fly" without a Model

- ~Analyzer ()

  destructor

- virtual void update_best (const RealVector &vars, const Response &response, const int eval_num)

  compares current evaluation to best evaluation and updates best

- virtual void vary_pattern (bool pattern_flag)

  sets varyPattern in derived classes that support it

- virtual void get_parameter_sets (const Model &model)

  Returns one block of samples (ndim ∗ num_samples).

- void evaluate_parameter_sets (Model &model, bool log_resp_flag, bool log_best_flag)

  into response sets (allResponses)

- void var_based_decomp (const int ndim, const int num_samples)
- void volumetric_quality (int ndim, int num_samples, double ∗sample_points)

  Calculation of volumetric quality measures.

- void print_vbd (ostream &s, const RealVectorArray &S, const RealVectorArray &T) const

  Printing of VBD results.

Protected Attributes

- VariablesArray allVariables

  array of all variables evaluated

- ResponseArray allResponses

  array of all responses computed

- StringArray allHeaders

  array of headers to insert into output while evaluating allVariables

- bool qualityFlag

flag to indicated if quality metrics were calculated

- double chiMeas

  quality measure

- double dMeas

  quality measure

- double hMeas

  quality measure

- double tauMeas

  quality measure

8.5.1 Detailed Description

hierarchy.

The Analyzer class provides common data and functionality for various types of systems analysis, including nondeterministic analysis, design of experiments, and parameter studies.

8.5.2 Member Function Documentation

8.5.2.1 void evaluate_parameter_sets (Model & *model*, bool *log_resp_flag*, bool *log_best_flag*) [protected]

into response sets (allResponses)

Convenience function for derived classes with sets of function evaluations to perform (e.g., NonDSampling, DDACEDesignCompExp, FSUDesignCompExp, ParamStudy).

8.5.2.2 void var_based_decomp (const int *ndim*, const int *num_samples*) [protected]

Calculation of sensitivity indices obtained by variance based decomposition. These indices are obtained by the Saltelli version of the Sobol VBD which uses (K+2)∗N function evaluations, where K is the number of dimensions (uncertain vars) and N is the number of samples.

8.5.2.3 void volumetric_quality (int *ndim*, int *num_samples*, double ∗ *sample_points*) [protected]

Calculation of volumetric quality measures.

Calculation of volumetric quality measures developed by FSU.

8.5.2.4 void print_vbd (ostream & *s*, const RealVectorArray & *S*, const RealVectorArray & *T*) const [protected]

Printing of VBD results.

printing of variance based decomposition indices.

The documentation for this class was generated from the following files:

- DakotaAnalyzer.H
- DakotaAnalyzer.C

8.6 ApplicationInterface Class Reference

interfaces to simulation codes.

Inheritance diagram for ApplicationInterface::

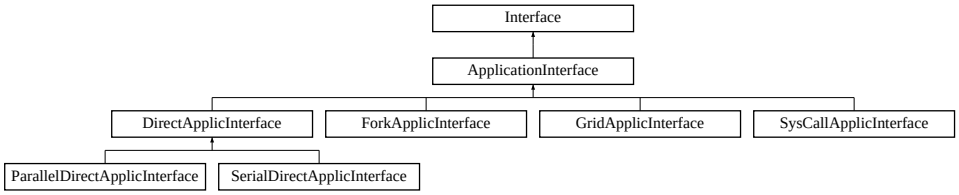

Public Member Functions

- ApplicationInterface (const ProblemDescDB &problem_db)

  constructor

- ~ApplicationInterface ()

  destructor

Protected Member Functions

- void init_communicators (const IntArray &message_lengths, const int &max_iterator_concurrency)

  iterator and concurrent multiprocessor analyses within an evaluation.

- void set_communicators (const IntArray &message_lengths)

  (the partitions are already allocated in ParallelLibrary).

- void free_communicators ()

  iterator and concurrent multiprocessor analyses within an evaluation.

- void init_serial ()
- int asynch_local_evaluation_concurrency () const

  return asynchLocalEvalConcurrency

- String interface_synchronization () const

  return interfaceSynchronization

- void map (const Variables &vars, const ActiveSet &set, Response &response, const bool asynch_-flag=false)

Protected due to Interface letter-envelope idiom.

- void manage_failure (const Variables &vars, const ActiveSet &set, Response &response, int failed_eval_id)

  manages a simulation failure using abort/retry/recover/continuation

- const ResponseArray & synch ()

  the beforeSynchCorePRPList queue and returns all jobs

- const IntResponseMap & synch_nowait ()

  beforeSynchCorePRPList queue and returns a partial list of completed jobs

- void serve_evaluations ()

  run on evaluation servers to serve the iterator master

- void stop_evaluation_servers ()

  used by the iterator master to terminate evaluation servers

- virtual void derived_map (const Variables &vars, const ActiveSet &set, Response &response, int fn_eval_id)

  that is specific to a derived class.

- virtual void derived_map_asynch (const ParamResponsePair &pair)

  asynchronous evaluation that is specific to a derived class.

- virtual void derived_synch (PRPList &prp_list)

  classes. This version waits for at least one completion.

- virtual void derived_synch_nowait (PRPList &prp_list)

  any completions if none are immediately available.

- void self_schedule_analyses ()

  evaluation using message passing

- void serve_analyses_synch ()

  analysis job at a time

- virtual int derived_synchronous_local_analysis (const int &analysis_id)

  ApplicationInterface::serve_analyses_synch().

Protected Attributes

- ParallelLibrary & parallelLib

  the concurrent evaluations and concurrent analyses parallelism levels

- bool suppressOutput

  flag for suppressing output on slave processors

- int evalCommSize

  size of evalComm

- int evalCommRank

  processor rank within evalComm

- int evalServerId

  evaluation server identifier

- bool eaDedMasterFlag

  flag for dedicated master partitioning at ea level

- int analysisCommSize

  size of analysisComm

- int analysisCommRank

  processor rank within analysisComm

- int analysisServerId

  analysis server identifier

- int numAnalysisServers

  number of analysis servers

- bool multiProcAnalysisFlag

  flag for multiprocessor analysis partitions

- bool asynchLocalAnalysisFlag

  flag for asynchronous local parallelism of analyses

- int asynchLocalAnalysisConcurrency

  scheduling and specifies hybrid concurrency when message passing

- int numAnalysisDrivers

  (from the analysis_drivers interface specification)

- IntSet completionSet

  and derived_synch_nowait()

Private Member Functions

- bool duplication_detect (const Variables &vars, Response &response, const bool asynch_flag)

  evaluation request has already been performed or queued

- void self_schedule_evaluations ()

  using message passing; executes on iteratorComm master

- void static_schedule_evaluations ()

  using message passing; executes on iteratorComm master

- void asynchronous_local_evaluations (PRPList &prp_list)

  the local processor

- void synchronous_local_evaluations (PRPList &prp_list)

  the local processor

- void asynchronous_local_evaluations_nowait (PRPList &prp_list)

  process any completed jobs

- void serve_evaluations_synch ()

  one synchronous evaluation at a time

- void serve_evaluations_asynch ()

  multiple asynchronous evaluations

- void serve_evaluations_peer ()

  one synchronous evaluation at a time as part of the 1st peer

- void set_evaluation_communicators (const IntArray &message_lengths)

  following ParallelLibrary::init_evaluation_communicators().

- void set_analysis_communicators ()

  following ParallelLibrary::init_analysis_communicators().

- void check_configuration (const int &max_iterator_concurrency)

  perform some error checks on the parallel configuration

- const ParamResponsePair & get_source_pair (const Variables &target_vars)

  evaluation to the failed "target"

- void continuation (const Variables &target_vars, const ActiveSet &set, Response &response, const ParamResponsePair &source_pair, int failed_eval_id)

  Invoked by manage_failure() for failAction == "continuation".

- void common_input_filtering (const Variables &vars)

common input filtering operations, e.g. mesh movement

- void common_output_filtering (Response &response)

  common output filtering operations, e.g. data filtering

Private Attributes

- int worldSize

  size of MPI_COMM_WORLD

- int worldRank

  processor rank within MPI_COMM_WORLD

- int iteratorCommSize

  size of iteratorComm

- int iteratorCommRank

  processor rank within iteratorComm

- bool ieMessagePass

  flag for message passing at ie scheduling level

- int numEvalServers

  number of evaluation servers

- bool eaMessagePass

  flag for message passing at ea scheduling level

- int procsPerAnalysis

  processors per analysis servers

- int lenVarsMessage

  computed in Model::init_communicators()

- int lenVarsActSetMessage

  ActiveSet object; computed in Model::init_communicators().

- int lenResponseMessage

  computed in Model::init_communicators()

- int lenPRPairMessage

  computed in Model::init_communicators()

- String evalScheduling

  auto-configure logic in ParallelLibrary::resolve_inputs().

- String analysisScheduling

  auto-configure logic in ParallelLibrary::resolve_inputs().

- int asynchLocalEvalConcurrency

  scheduling and specifies hybrid concurrency when message passing

- String interfaceSynchronization

  or asynchronous

- bool headerFlag

  function may be called many times prior to any completions)

- bool asvControlFlag

  on each evaluation.

- bool evalCacheFlag

  cache (i.e., queries and insertions using the data_pairs list).

- bool restartFileFlag

  insertions into write_restart).

- ShortArray defaultASV

  the static ASV values used when the user has selected asvControl = off

- String failAction

  retry, recover, or continuation

- int failRetryLimit

  limit on the number of retries for the retry failAction

- RealVector failRecoveryFnVals

  the dummy function values used for the recover failAction

- IntList beforeSynchIdList

  bookkeeps fnEvalId's of _all_ asynchronous evaluations (new & duplicate)

- IntResponseMap historyDuplicateMap

  evaluations. Map key is fnEvalId, mad data is corresponding response.

- std::map< int, std::pair< PRPLIter, Response > > beforeSynchDuplicateMap

  beforeSynchCorePRPList evaluations

- PRPList beforeSynchCorePRPList

  that is later scheduled in synch() or synch_nowait().

- PRPList beforeSynchAlgPRPList

  that is later evaluated in synch() or synch_nowait().

- ResponseList beforeSynchTotalRespList

  asynchronous map() and later used in synch() or synch_nowait().

- IntSet runningSet

  used by asynchronous_local_nowait to bookkeep which jobs are running

8.6.1 Detailed Description

interfaces to simulation codes.

ApplicationInterface provides an interface class for performing parameter to response mappings using simulation code(s). It provides common functionality for a number of derived classes and contains the majority of all of the scheduling algorithms in DAKOTA. The derived classes provide the specifics for managing code invocations using system calls, forks, direct procedure calls, or distributed resource facilities.

8.6.2 Member Function Documentation

8.6.2.1 void init_serial () `[inline, protected, virtual]`

DataInterface.C defaults of 0 servers are needed to distinguish an explicit user request for 1 server (serialization of a parallelism level) from no user request (use parallel auto-config). This default causes problems when init_communicators() is not called for an interface object (e.g., static scheduling fails in DirectApplicInterface::derived_map() for NestedModel::optionalInterface). This is the reason for this function: to reset certain defaults for interface objects that are used serially.

Reimplemented from Interface.

8.6.2.2 void map (const Variables & *vars*, const ActiveSet & *set*, Response & *response*, const bool *asynch_flag* = `false`) `[protected, virtual]`

Protected due to Interface letter-envelope idiom.

The function evaluator for application interfaces. Called from derived_compute_response() and derived_asynch_compute_response() in derived Model classes. If asynch_flag is not set, perform a blocking evaluation (using derived_map()). If asynch_flag is set, add the job to the beforeSynchCorePRPList queue for execution by one of the scheduler routines in synch() or synch_nowait(). Duplicate function evaluations are detected with duplication_detect().

Reimplemented from Interface.

8.6.2.3 const ResponseArray & synch () [protected, virtual]

the beforeSynchCorePRPList queue and returns all jobs

This function provides blocking synchronization for all cases of asynchronous evaluations, including the local asynchronous case (background system call, nonblocking fork, & multithreads), the message passing case, and the hybrid case. Called from derived_synchronize() in derived Model classes.

Reimplemented from Interface.

8.6.2.4 const IntResponseMap & synch_nowait () [protected, virtual]

beforeSynchCorePRPList queue and returns a partial list of completed jobs

This function will eventually provide nonblocking synchronization for all cases of asynchronous evaluations, however it currently supports only the local asynchronous case since nonblocking message passing schedulers have not yet been implemented. Called from derived_synchronize_nowait() in derived Model classes.

Reimplemented from Interface.

8.6.2.5 void serve_evaluations () [protected, virtual]

run on evaluation servers to serve the iterator master

Invoked by the serve() function in derived Model classes. Passes control to serve_evaluations_asynch(), serve_evaluations_peer(), or serve_evaluations_synch() according to specified concurrency and self/static scheduler configuration.

Reimplemented from Interface.

8.6.2.6 void stop_evaluation_servers () [protected, virtual]

used by the iterator master to terminate evaluation servers

This code is executed on the iteratorComm rank 0 processor when iteration on a particular model is complete. It sends a termination signal (tag = 0 instead of a valid fn_eval_id) to each of the slave analysis servers. NOTE: This function is called from the Strategy layer even when in serial mode. Therefore, use iteratorCommSize to provide appropriate fall through behavior.

Reimplemented from Interface.

8.6.2.7 void self_schedule_analyses () [protected]

evaluation using message passing

This code is called from derived classes to provide the master portion of a master-slave algorithm for the dynamic self-scheduling of analyses among slave servers. It is patterned after self_schedule_evaluations(). It performs no analyses locally and matches either serve_analyses_synch() or serve_analyses_asynch() on the slave servers, depending on the value of asynchLocalAnalysisConcurrency. Self-scheduling approach assigns jobs in 2 passes. The 1st pass gives each server the same number of jobs (equal to asynchLocalAnalysisConcurrency). The 2nd

pass assigns the remaining jobs to slave servers as previous jobs are completed. Single- and multilevel parallel use intra- and inter-communicators, respectively, for send/receive. Specific syntax is encapsulated within ParallelLibrary.

8.6.2.8 void serve_analyses_synch () [protected]

analysis job at a time

This code is called from derived classes to run synchronous analyses on slave processors. The slaves receive requests (blocking receive), do local derived_map_ac's, and return codes. This is done continuously until a termination signal is received from the master. It is patterned after serve_evaluations_synch().

8.6.2.9 bool duplication_detect (const Variables & *vars*, Response & *response*, const bool *asynch_flag*) [private]

evaluation request has already been performed or queued

Called from map() to check incoming evaluation request for duplication with content of data_pairs and beforeSynchCorePRPList. If duplication is detected, return true, else return false. Manage bookkeeping with historyDuplicateMap and beforeSynchDuplicateMap. Note that the list searches can get very expensive if a long list is searched on every new function evaluation (either from a large number of previous jobs, a large number of pending jobs, or both). For this reason, a user request for deactivation of the evaluation cache results in a complete bypass of duplication_detect(), even though a beforeSynchCorePRPList search would still be meaningful. Since the intent of this request is to streamline operations, both list searches are bypassed.

8.6.2.10 void self_schedule_evaluations () [private]

using message passing; executes on iteratorComm master

This code is called from synch() to provide the master portion of a master-slave algorithm for the dynamic self-scheduling of evaluations among slave servers. It performs no evaluations locally and matches either serve_evaluations_synch() or serve_evaluations_asynch() on the slave servers, depending on the value of asynchLocalEvalConcurrency. Self-scheduling approach assigns jobs in 2 passes. The 1st pass gives each server the same number of jobs (equal to asynchLocalEvalConcurrency). The 2nd pass assigns the remaining jobs to slave servers as previous jobs are completed. Single- and multilevel parallel use intra- and inter-communicators, respectively, for send/receive. Specific syntax is encapsulated within ParallelLibrary.

8.6.2.11 void static_schedule_evaluations () [private]

using message passing; executes on iteratorComm master

This code runs on the iteratorCommRank 0 processor (the iterator) and is called from synch() in order to assign a static schedule. It matches serve_evaluations_peer() for any other processors within the 1st evaluation partition and serve_evaluations_synch()/serve_evaluations_asynch() for all other evaluation partitions (depending on asynchLocalEvalConcurrency). It performs function evaluations locally for its portion of the static schedule using either asynchronous_local_evaluations() or synchronous_local_evaluations(). Single-level and multilevel parallel use intra- and inter-communicators, respectively, for send/receive. Specific syntax is encapsulated within ParallelLibrary. The iteratorCommRank 0 processor assigns the static schedule since it is the only processor with access to beforeSynchCorePRPList (it runs the iterator and calls synchronize). The alternate design of each peer

selecting its own jobs using the modulus operator would be applicable if execution of this function (and therefore the job list) were distributed.

8.6.2.12 void asynchronous_local_evaluations (PRPList & *prp_list*) [private]

the local processor

This function provides blocking synchronization for the local asynch case (background system call, non-blocking fork, or threads). It can be called from synch() for a complete local scheduling of all asynchronous jobs or from static_schedule_evaluations() to perform a local portion of the total job set. It uses the derived_map_asynch() to initiate asynchronous evaluations and derived_synch() to capture completed jobs, and mirrors the self_schedule_evaluations() message passing scheduler as much as possible (derived_synch() is modeled after MPI_Waitsome()).

8.6.2.13 void synchronous_local_evaluations (PRPList & *prp_list*) [private]

the local processor

This function provides blocking synchronization for the local synchronous case (foreground system call, blocking fork, or procedure call from derived_map()). It is called from static_schedule_evaluations() to perform a local portion of the total job set.

8.6.2.14 void asynchronous_local_evaluations_nowait (PRPList & *prp_list*) [private]

process any completed jobs

This function provides nonblocking synchronization for the local asynch case (background system call, non-blocking fork, or threads). It is called from synch_nowait() and passed the complete set of all asynchronous jobs (beforeSynchCorePRPList). It uses derived_map_asynch() to initiate asynchronous evaluations and derived_synch_nowait() to capture completed jobs in nonblocking mode. It mirrors a nonblocking message passing scheduler as much as possible (derived_synch_nowait() modeled after MPI_Testsome()). The result of this function is rawResponseMap, which uses fn_eval_id as a key. It is assumed that the incoming prp_list contains only active and new jobs - i.e., all completed jobs are cleared by synch_nowait().

8.6.2.15 void serve_evaluations_synch () [private]

one synchronous evaluation at a time

This code is invoked by serve_evaluations() to perform one synchronous job at a time on each slave/peer server. The servers receive requests (blocking receive), do local synchronous maps, and return results. This is done continuously until a termination signal is received from the master (sent via stop_evaluation_servers()).

8.6.2.16 void serve_evaluations_asynch () [private]

multiple asynchronous evaluations

This code is invoked by serve_evaluations() to perform multiple asynchronous jobs on each slave/peer server. The servers test for any incoming jobs, launch any new jobs, process any completed jobs, and return any results. Each

of these components is nonblocking, although the server loop continues until a termination signal is received from the master (sent via stop_evaluation_servers()). In the master-slave case, the master maintains the correct number of jobs on each slave. In the static scheduling case, each server is responsible for limiting concurrency (since the entire static schedule is sent to the peers at start up).

8.6.2.17 void serve_evaluations_peer () [private]

one synchronous evaluation at a time as part of the 1st peer

This code is invoked by serve_evaluations() to perform a synchronous evaluation in coordination with the iteratorCommRank 0 processor (the iterator) for static schedules. The bcast() matches either the bcast() in synchronous_local_evaluations(), which is invoked by static_schedule_evaluations()), or the bcast() in map().

The documentation for this class was generated from the following files:

- ApplicationInterface.H
- ApplicationInterface.C

8.7 Approximation Class Reference

Base class for the approximation class hierarchy.

Inheritance diagram for Approximation::

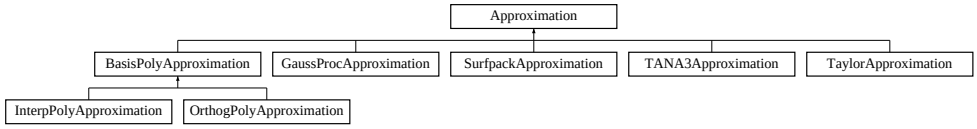

Public Member Functions

- Approximation ()

  default constructor

- Approximation (ProblemDescDB &problem_db, const size_t &num_vars)

  standard constructor for envelope

- Approximation (const String &approx_type, short approx_order, const size_t &num_vars)

  alternate constructor

- Approximation (const Approximation &approx)

  copy constructor

- virtual ~Approximation ()

  destructor

- Approximation operator= (const Approximation &approx)

  assignment operator

- virtual const Real & get_value (const RealVector &x)

  retrieve the approximate function value for a given parameter vector

- virtual const RealBaseVector & get_gradient (const RealVector &x)

  retrieve the approximate function gradient for a given parameter vector

- virtual const RealMatrix & get_hessian (const RealVector &x)

  retrieve the approximate function Hessian for a given parameter vector

- virtual const Real & get_variance (const RealVector &x)

  retrieve the variance of the predicted value for a given parameter vector

- virtual const Real & get_diagnostic (const String &metric_type)
  retrieve the diagnostic metric for the diagnostic type specified
- virtual const RealVector & approximation_coefficients () const
  return the coefficient array computed by find_coefficients()
- virtual void approximation_coefficients (const RealVector &approx_coeffs)
  computing with find_coefficients()
- virtual void print_coefficients (ostream &s) const
  print the coefficient array computed in find_coefficients()
- virtual int min_coefficients () const
  build the derived class approximation type in numVars dimensions
- virtual int recommended_coefficients () const
  build the derived class approximation type in numVars dimensions
- virtual int num_constraints () const
  return the number of constraints to be enforced via anchorPoint
- virtual void clear_current ()
  clear current build data in preparation for next build
- virtual const bool diagnostics_available ()
  check if diagnostics are available for this approximation type
- int min_samples (bool constraint_flag) const
  type in numVars dimensions. Uses ∗_coefficients() and num_constraints().
- int recommended_samples (bool constraint_flag) const
  in numVars dimensions (default same as min_samples)
- int num_variables () const
  return the number of variables used in the approximation
- const List< SurrogateDataPoint > & current_points () const
  return currentPoints
- const SurrogateDataPoint & anchor_point () const
  return anchorPoint
- void update (const Variables &vars, const Response &response, const int &fn_index)
  populates/replaces anchorPoint

- void update (const RealVector &c_vars, const Real &fn_val, const RealBaseVector &fn_grad, const RealMatrix &fn_hess)

  populates/replaces anchorPoint

- void update (const VariablesArray &vars_array, const ResponseArray &resp_array, const int &fn_index)

  populates/replaces currentPoints

- void append (const Variables &vars, const Response &response, const int &fn_index)

  appends one additional entry to currentPoints

- void append (const RealVector &c_vars, const Real &fn_val, const RealBaseVector &fn_grad, const RealMatrix &fn_hess)

  appends one additional entry to currentPoints

- void append (const VariablesArray &vars_array, const ResponseArray &resp_array, const int &fn_index)

  appends multiple additional entries to currentPoints

- void build ()

  builds the approximation by invoking find_coefficients()

- bool anchor () const

  queries the status of anchorPoint

- void clear_all ()

  clear all build data (current and history) to restore original state

- void set_bounds (const RealVector &lower, const RealVector &upper)

  set approximation lower and upper bounds (currently only used by graphics)

- void draw_surface ()

  problems only)

- Approximation * approx_rep () const

  that are not mapped to the top Approximation level

Protected Member Functions

- Approximation (BaseConstructor, const ProblemDescDB &problem_db, const size_t &num_vars)

  derived class constructors - Coplien, p. 139)

- virtual void find_coefficients ()

  calculate the data fit coefficients using currentPoints and anchorPoint

Protected Attributes

- bool useGradsFlag

  trust region), but not require gradient evaluations at every point.

- short outputLevel

  output verbosity level: {SILENT,QUIET,NORMAL,VERBOSE,DEBUG}_OUTPUT

- int numVars

  number of variables in the approximation

- String approxType

  approximation type identifier

- short approxOrder

  orthogonal polynomials, and Taylor series)

- Real approxValue

  value of the approximation returned by get_value()

- RealBaseVector approxGradient

  gradient of the approximation returned by get_gradient()

- RealMatrix approxHessian

  Hessian of the approximation returned by get_hessian().

- Real approxVariance

  value of the approximation returned by get_variance()

- Real approxDiagnostic

  value of the diagnostic returned by get_diagnostic()

- List< SurrogateDataPoint > currentPoints

  are fit approximately (e.g., using least squares regression).

- SurrogateDataPoint anchorPoint

  least squares regression).

Private Member Functions

- Approximation * get_approx (ProblemDescDB &problem_db, const size_t &num_vars)

  approxRep to the appropriate derived type.

- Approximation * get_approx (const String &approx_type, short approx_order, const size_t &num_vars)

  approxRep to the appropriate derived type.

- void add (const Variables &vars, const Response &response, const int &fn_index, bool anchor_flag)

  add_anchor().

- void add_point (const RealVector &x, const Real &fn_val, const RealBaseVector &fn_grad, const RealMatrix &fn_hess)

  add a new data point by appending to currentPoints

- void add_anchor (const RealVector &x, const Real &fn_val, const RealBaseVector &fn_grad, const RealMatrix &fn_hess)

  add a new data point by assigning to anchorPoint

Private Attributes

- RealVector approxLowerBounds

  approximation lower bounds (used only by 3D graphics)

- RealVector approxUpperBounds

  approximation upper bounds (used only by 3D graphics)

- Approximation * approxRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing approxRep

8.7.1 Detailed Description

Base class for the approximation class hierarchy.

The Approximation class is the base class for the response data fit approximation class hierarchy in DAKOTA. One instance of an Approximation must be created for each function to be approximated (a vector of Approximations is contained in ApproximationInterface). For memory efficiency and enhanced polymorphism, the approximation hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (Approximation) serves as the envelope and one of the derived classes (selected in Approximation::get_-approximation()) serves as the letter.

8.7.2 Constructor & Destructor Documentation

8.7.2.1 Approximation ()

default constructor

The default constructor is used in Array<Approximation> instantiations and by the alternate envelope constructor. approxRep is NULL in this case (problem_db is needed to build a meaningful Approximation object). This makes it necessary to check for NULL in the copy constructor, assignment operator, and destructor.

8.7.2.2 Approximation (ProblemDescDB & *problem_db*, const size_t & *num_vars*)

standard constructor for envelope

Envelope constructor only needs to extract enough data to properly execute get_approx, since Approximation(BaseConstructor, problem_db) builds the actual base class data for the derived approximations.

8.7.2.3 Approximation (const String & *approx_type*, short *approx_order*, const size_t & *num_vars*)

alternate constructor

This is the alternate envelope constructor for instantiations on the fly. Since it does not have access to problem_db, the letter class is not fully populated. This constructor executes get_approx(type), which invokes the default constructor of the derived letter class, which in turn invokes the default constructor of the base class.

8.7.2.4 Approximation (const Approximation & *approx*)

copy constructor

Copy constructor manages sharing of approxRep and incrementing of referenceCount.

8.7.2.5 ~Approximation () `[virtual]`

destructor

Destructor decrements referenceCount and only deletes approxRep when referenceCount reaches zero.

8.7.2.6 Approximation (BaseConstructor, const ProblemDescDB & *problem_db*, const size_t & *num_vars*) `[protected]`

derived class constructors - Coplien, p. 139)

This constructor is the one which must build the base class data for all derived classes. get_approx() instantiates a derived class letter and the derived constructor selects this base class constructor in its initialization list (to avoid recursion in the base class constructor calling get_approx() again). Since the letter IS the representation, its rep pointer is set to NULL (an uninitialized pointer causes problems in ~Approximation).

8.7.3 Member Function Documentation

8.7.3.1 Approximation operator= (const Approximation & *approx*)

assignment operator

Assignment operator decrements referenceCount for old approxRep, assigns new approxRep, and increments referenceCount for new approxRep.

8.7.3.2 void clear_current () [inline, virtual]

clear current build data in preparation for next build

Redefined by TANA3Approximation to clear current data but preserve history.

Reimplemented in TANA3Approximation.

8.7.3.3 void clear_all () [inline]

clear all build data (current and history) to restore original state

Clears out any history (e.g., TANA3Approximation use for a different response function in NonDReliability).

8.7.3.4 Approximation * get_approx (ProblemDescDB & *problem_db*, const size_t & *num_vars*) [private]

approxRep to the appropriate derived type.

Used only by the envelope constructor to initialize approxRep to the appropriate derived type.

8.7.3.5 Approximation * get_approx (const String & *approx_type*, short *approx_order*, const size_t & *num_vars*) [private]

approxRep to the appropriate derived type.

Used only by the envelope constructor to initialize approxRep to the appropriate derived type.

The documentation for this class was generated from the following files:

- DakotaApproximation.H
- DakotaApproximation.C

8.8 ApproximationInterface Class Reference

approximations to simulation-based results.

Inheritance diagram for ApproximationInterface::

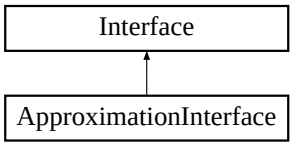

Public Member Functions

- ApproximationInterface (ProblemDescDB &problem_db, const Variables &actual_model_vars, const size_t &num_fns)

  primary constructor

- ApproximationInterface (const String &approx_type, const short &approx_order, const Variables &actual_model_vars, const size_t &num_fns)

  alternate constructor for instantiations on the fly

- ~ApproximationInterface ()

  destructor

Protected Member Functions

- void map (const Variables &vars, const ActiveSet &set, Response &response, const bool asynch_-flag=false)

  the variables to the responses using functionSurfaces

- int minimum_samples (bool constraint_flag) const

  functionSurfaces

- int recommended_samples (bool constraint_flag) const

  functionSurfaces

- void approximation_function_indices (const IntSet &approx_fn_indices)

  set the (currently active) approximation function index set

- void update_approximation (const Variables &vars, const Response &response)
- void update_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array)

- void append_approximation (const Variables &vars, const Response &response)
- void append_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array)
- void build_approximation (const RealVector &lower_bnds, const RealVector &upper_bnds)
- void clear_current ()

  clears current data from an approximation interface

- void clear_all ()

  clears all data from an approximation interface

- bool anchor () const

  queries the presence of an anchorPoint within an approximation interface

- const SurrogateDataPoint & anchor_point () const

  returns the anchorPoint used within an approximation interface

- Array< Approximation > & approximations ()

  retrieve the Approximations within an ApproximationInterface

- const RealVectorArray & approximation_coefficients ()

  within an ApproximationInterface

- void approximation_coefficients (const RealVectorArray &approx_coeffs)

  within an ApproximationInterface

- void print_coefficients (ostream &s, size_t index) const

  Approximation instance within an ApproximationInterface.

- const RealVector & approximation_variances (const RealVector &c_vars)

  within an ApproximationInterface

- const List< SurrogateDataPoint > & approximation_data (size_t index)

  within an ApproximationInterface

- const ResponseArray & synch ()

  recovers data from a series of asynchronous evaluations (blocking)

- const IntResponseMap & synch_nowait ()

  recovers data from a series of asynchronous evaluations (nonblocking)

Private Attributes

- IntSet approxFnIndices

  response function subset that is approximated

- Array< Approximation > functionSurfaces

list of approximations, one per response function

- RealVectorArray functionSurfaceCoeffs

  response function

- RealVector functionSurfaceVariances

  vector of approximation variances, one value per response function

- List< SurrogateDataPoint > functionSurfaceDataPoints

  for a particular response function

- bool graph3DFlag

  controls 3D graphics of approximation surfaces

- StringArray diag_list

  List of diagnostic metrics.

- Variables actualModelVars

  among differing variable views

- IntResponseMap beforeSynchResponseMap

  but asynchronous virtual functions are supported through bookkeeping).

8.8.1 Detailed Description

approximations to simulation-based results.

ApproximationInterface provides an interface class for building a set of global/local/multipoint approximations and performing approximate function evaluations using them. It contains a list of Approximation objects, one for each response function.

8.8.2 Member Function Documentation

8.8.2.1 void update_approximation (const Variables & *vars*, const Response & *response*) `[protected, virtual]`

This function populates/replaces each Approximation::anchorPoint with the incoming variables/response data point.

Reimplemented from Interface.

8.8.2.2 void update_approximation (const VariablesArray & *vars_array*, const ResponseArray & *resp_array*) [protected, virtual]

This function populates/replaces each Approximation::currentPoints with the incoming variables/response arrays.

Reimplemented from Interface.

8.8.2.3 void append_approximation (const Variables & *vars*, const Response & *response*) [protected, virtual]

This function appends to each Approximation::currentPoints with one incoming variables/response data point.

Reimplemented from Interface.

8.8.2.4 void append_approximation (const VariablesArray & *vars_array*, const ResponseArray & *resp_array*) [protected, virtual]

This function appends to each Approximation::currentPoints with multiple incoming variables/response data points.

Reimplemented from Interface.

8.8.2.5 void build_approximation (const RealVector & *lower_bnds*, const RealVector & *upper_bnds*) [protected, virtual]

This function finds the coefficients for each Approximation based on the data passed through update_approximation() calls. The bounds are used only for graphics visualization.

Reimplemented from Interface.

8.8.3 Member Data Documentation

8.8.3.1 Array<Approximation> functionSurfaces [private]

list of approximations, one per response function

This formulation allows the use of mixed approximations (i.e., different approximations used for different response functions), although the input specification is not currently general enough to support it.

The documentation for this class was generated from the following files:

- ApproximationInterface.H
- ApproximationInterface.C

8.9 APPSEvalMgr Class Reference

Evaluation manager class for APPSPACK.

Public Member Functions

- APPSEvalMgr (Model &model)
  Evaluation manager class for APPSPACK.
- ~APPSEvalMgr ()
  destructor
- bool isWaiting () const
  tells APPS whether or not there is a processor available to perform a function evaluation
- bool spawn (const APPSPACK::Vector &x_in, int tag_in)
  performs a function evaluation at APPS-provided x_in
- int recv (int &tag_out, APPSPACK::Vector &f_out, string &msg_out)
  returns a function value to APPS
- void print () const
  currently does nothing but is needed to complete the interface
- void set_asynch_flag (const bool dakotaAsynchFlag)
  publishes whether or not to do asynchronous evaluations
- void set_blocking_synch (const bool blockingSynchFlag)
  publishes whether or not APPS is operating synchronously
- void set_total_workers (const int numDakotaWorkers)
  publishes the number of processors available for function evaluations
- void set_constraint_map (std::vector< int > constraintMapIndices, std::vector< double > constraintMap-Multipliers, std::vector< double > constraintMapOffsets)
  publishes constraint transformation

Private Attributes

- Model & iteratedModel
  reference to the APPSOptimizer's model passed in the constructor

- bool modelAsynchFlag

  flag for asynchronous function evaluations

- bool blockingSynch

  flag for APPS synchronous behavior

- int numWorkersUsed

  number of processors actively performing function evaluations

- int numWorkersTotal

  total number of processors available for performing function evaluations

- std::vector< int > constrMapIndices

  map from Dakota constraint number to APPS constraint number

- std::vector< double > constrMapMultipliers

  multipliers for constraint transformations

- std::vector< double > constrMapOffsets

  offsets for constraint transformations

- RealVector xTrial

  trial iterate

- std::map< int, int > tagList

  map of DAKOTA eval id to APPS eval id (for asynchronous evaluations)

- std::map< int, std::vector< double > > functionList

  map of APPS eval id to responses (for synchronous evaluations)

- IntResponseMap dakotaResponseMap

  map of DAKOTA responses returned by synchronize_nowait()

8.9.1 Detailed Description

Evaluation manager class for APPSPACK.

The APPSEvalMgr class is derived from APPSPACK's Executor class. It implements the methods of that class in such away that allows DAKOTA to manage the computation of responses instead of APPS. Iterate and response values are passed between Dakota and APPSPACK via this interface.

8.9.2 Constructor & Destructor Documentation

8.9.2.1 APPSEvalMgr (Model & *model*)

Evaluation manager class for APPSPACK.

The APPSEvalMgr class is derived from APPSPACK's Executor class. It implements the methods of that class in such away that allows DAKOTA to manage the computation of responses instead of APPS. Iterate and response values are passed between Dakota and APPSPACK via this interface.

8.9.3 Member Function Documentation

8.9.3.1 bool isWaiting () const

tells APPS whether or not there is a processor available to perform a function evaluation

Check to see if all processors available for function evaluations are being used. If not, tell APPS that one is available.

8.9.3.2 bool spawn (const APPSPACK::Vector & *apps_xtrial*, int *apps_tag*)

performs a function evaluation at APPS-provided x_in

Convert APPSPACK vector of variables to DAKOTA vector of variables and perform function evaluation asynchronously or not as specified in the DAKOTA input deck. If evaluation is asynchronous, map the dakota id to the APPS tag. If evaluation is synchronous, map the responses to the APPS tag.

8.9.3.3 int recv (int & *apps_tag*, APPSPACK::Vector & *apps_f*, string & *apps_msg*)

returns a function value to APPS

Retrieve a set of reponse values, convert to APPS data structures, and return them to APPS. APPS tags are tied to corresponding responses using the appropriate (i.e., asynchronous or synchronous) map.

The documentation for this class was generated from the following files:

- APPSEvalMgr.H
- APPSEvalMgr.C

8.10 APPSOptimizer Class Reference

Wrapper class for APPSPACK.

Inheritance diagram for APPSOptimizer::

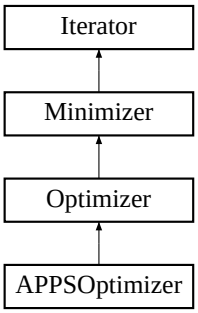

Public Member Functions

- APPSOptimizer (Model &model)

  Wrapper class for APPSPACK.

- APPSOptimizer (NoDBBaseConstructor, Model &model)

  alternate constructor for on-the-fly instantiations

- ~APPSOptimizer ()

  destructor

- void find_optimum ()

  Performs the iterations to determine the optimal solution.

Protected Member Functions

- void set_apps_parameters ()

  sets options for specific methods based on user specifications

- void initialize_variables_and_constraints ()

  initializes problem variables and constraints

Protected Attributes

- APPSPACK::Parameter::List params

  Pointer to APPS parameter list.

- APPSEvalMgr * evalMgr

  Pointer to the APPSApplication object.

- std::vector< int > constraintMapIndices

  map from Dakota constraint number to APPS constraint number

- std::vector< double > constraintMapMultipliers

  multipliers for constraint transformations

- std::vector< double > constraintMapOffsets

  offsets for constraint transformations

8.10.1 Detailed Description

Wrapper class for APPSPACK.

The APPSOptimizer class provides a wrapper for APPSPACK, a Sandia-developed C++ library for generalized pattern search. APPSPACK defaults to a coordinate pattern search but also allows for augmented search patterns. It can solve problems with bounds, linear constraints, and general nonlinear constraints. APPSOptimizer uses an APPSEvalMgr object to manage the function evaluations.

The user input mappings are as follows: `output` `max_function_evaluations`, `constraint_tol` `initial_delta`, `contraction_factor`, `threshold_delta`, `solution_target`, `synchronization`, `merit_function`, `constraint_penalty`, and `smoothing_factor` are mapped into APPS's `"Debug"`, "Maximum Evaluations", "Bounds Tolerance"/"Machine Epsilon"/"Constraint Tolerance", "Initial Step", "Contraction Factor", "Step Tolerance", "Function Tolerance", "Synchronous", "Method", "Initial Penalty Value", and "Initial Smoothing Value" data attributes. Refer to the APPS web site (`http://software.sandia.gov/appspack`) for additional information on APPS objects and controls.

8.10.2 Constructor & Destructor Documentation

8.10.2.1 APPSOptimizer (Model & *model*)

Wrapper class for APPSPACK.

The APPSOptimizer class provides a wrapper for APPSPACK, a Sandia-developed C++ library for generalized pattern search. APPSPACK defaults to a coordinate pattern search but also allows for augmented search patterns. It can solve problems with bounds, linear constraints, and general nonlinear constraints. APPSOptimizer uses an APPSEvalMgr object to manage the function evaluations.

The user input mappings are as follows: `output` `max_function_evaluations`, `constraint_tol` `initial_delta`, `contraction_factor`, `threshold_delta`, `solution_target`, `synchronization`, `merit_function`, `constraint_penalty`, and `smoothing_factor` are mapped into APPS's `"Debug"`, "Maximum Evaluations", "Bounds Tolerance"/"Machine Epsilon"/"Constraint Tolerance", "Initial Step", "Contraction Factor", "Step Tolerance", "Function Tolerance", "Synchronous", "Method", "Initial Penalty Value", and "Initial Smoothing Value" data attributes. Refer to the APPS web site (`http://software.sandia.gov/appspack`) for additional information on APPS objects and controls.

8.10.3 Member Function Documentation

8.10.3.1 void find_optimum () [virtual]

Performs the iterations to determine the optimal solution.

find_optimum redefines the Optimizer virtual function to perform the optimization using APPS. It first sets up the problem data, then executes minimize() on the APPS optimizer, and finally catalogues the results.

Implements Optimizer.

8.10.3.2 void set_apps_parameters () [protected]

sets options for specific methods based on user specifications

Set all of the APPS algorithmic parameters as specified in the DAKOTA input deck. This is called at construction time.

8.10.3.3 void initialize_variables_and_constraints () [protected]

initializes problem variables and constraints

Set the variables and constraints as specified in the DAKOTA input deck. This is done at run time.

The documentation for this class was generated from the following files:

- APPSOptimizer.H
- APPSOptimizer.C

8.11 Array Class Template Reference

Template class for the Dakota bookkeeping array.

Public Member Functions

- Array ()

  Default constructor.

- Array (size_t size)

  Constructor which takes an initial size.

- Array (size_t size, const T &initial_val)

  Constructor which takes an initial size and an initial value.

- Array (const Array< T > &a)

  Copy constructor.

- Array (const T *p, size_t size)

  Constructor which copies size entries from T.*

- ~Array ()

  Destructor.

- Array< T > & operator= (const Array< T > &a)

  Normal const assignment operator.

- Array< T > & operator= (Array< T > &a)

  Normal assignment operator.

- Array< T > & operator= (const T &ival)

  Sets all elements in self to the value ival.

- operator T * () const

  Converts the Array to a standard C-style array. Use with care!

- T & operator[ ] (int i)

  alternate bounds-checked indexing operator for int indices

- const T & operator[ ] (int i) const

  alternate bounds-checked const indexing operator for int indices

- T & operator[ ] (size_t i)

  Index operator, returns the ith value of the array.

- const T & operator[ ] (size_t i) const

  Index operator const, returns the ith value of the array.

- T & operator() (size_t i)

  Index operator, not bounds checked.

- const T & operator() (size_t i) const

  Index operator const, not bounds checked.

- void read (istream &s)

  Reads an Array from an istream.

- void write (ostream &s) const

  Writes an Array to an output stream.

- void write (ostream &s, const Array< String > &label_array) const

  Writes an Array and associated label array to an output stream.

- void write_aprepro (ostream &s, const Array< String > &label_array) const

  aprepro format

- void write_annotated (ostream &s, bool write_len) const

  Writes an Array to an output stream in annotated format.

- void read (BiStream &s)

  Reads an Array from a binary input stream.

- void write (BoStream &s) const

  Writes an Array to a binary output stream.

- void read (MPIUnpackBuffer &s)

  Reads an Array from a buffer after an MPI receive.

- void write (MPIPackBuffer &s) const

  Writes an Array to a buffer prior to an MPI send.

- size_t length () const

  Returns size of array.

- void reshape (size_t sz)

  Resizes array to size sz.

- size_t index (const T &a) const

Returns the index of the first array item which matches the object a.

- bool contains (const T &a) const

  Checks if the array contains an object which matches the object a.

- size_t count (const T &a) const

  Returns the number of items in the array matching the object a.

- const T ∗ data () const

  Returns pointer T∗ to continuous data.

8.11.1 Detailed Description

template<class T> class Dakota::Array< T >

Template class for the Dakota bookkeeping array.

An array class template that provides additional functionality that is specific to Dakota's needs. The Array class adds additional functionality needed by Dakota to the inherited base array class. The Array class can inherite from either the STL or RW vector classes.

8.11.2 Constructor & Destructor Documentation

8.11.2.1 Array (const T ∗ *p*, size_t *size*) [inline]

Constructor which copies size entries from T∗.

Assigns size values from p into array.

8.11.3 Member Function Documentation

8.11.3.1 Array< T > & operator= (const T & *ival*) [inline]

Sets all elements in self to the value ival.

Assigns all values of array to the value passed in as ival. For the Rogue Wave case, utilizes base class operator=(ival), while for the ANSI case, uses the STL assign() method.

8.11.3.2 operator T ∗ () const [inline]

Converts the Array to a standard C-style array. Use with care!

The operator() returns a c style pointer to the data within the array. Calls the data() method. USE WITH CARE.

8.11.3.3]

T & operator[ ] (size_t *i*) [inline]

Index operator, returns the ith value of the array.

Index operator; calls the STL method at() which is bounds checked. Mimics the RW vector class. Note: the at() method is not supported by the __GNUC__ STL implementation or by builds omitting exceptions (e.g., SIERRA).

8.11.3.4]

const T & operator[ ] (size_t *i*) const [inline]

Index operator const, returns the ith value of the array.

A const version of the index operator; calls the STL method at() which is bounds checked. Mimics the RW vector class. Note: the at() method is not supported by the __GNUC__ STL implementation or by builds omitting exceptions (e.g., SIERRA).

8.11.3.5 T & operator() (size_t *i*) [inline]

Index operator, not bounds checked.

Non bounds check index operator, calls the STL operator[ ] which is not bounds checked. Needed to mimic the RW vector class

8.11.3.6 const T & operator() (size_t *i*) const [inline]

Index operator const, not bounds checked.

A const version of the non-bounds check index operator, calls the STL operator[ ] which is not bounds checked. Needed to mimic the RW vector class

8.11.3.7 const T ∗ data () const [inline]

Returns pointer T∗ to continuous data.

Returns a C style pointer to the data within the array. USE WITH CARE. Needed to mimic RW vector class, is used in the operator(). Uses the STL front method.

The documentation for this class was generated from the following file:

- DakotaArray.H

8.12 BaseConstructor Struct Reference

Dummy struct for overloading letter-envelope constructors.

Public Member Functions

- BaseConstructor (int=0)

  C++ structs can have constructors.

8.12.1 Detailed Description

Dummy struct for overloading letter-envelope constructors.

BaseConstructor is used to overload the constructor for the base class portion of letter objects. It avoids infinite recursion (Coplien p.139) in the letter-envelope idiom by preventing the letter from instantiating another envelope. Putting this struct here avoids circular dependencies.

The documentation for this struct was generated from the following file:

- global_defs.h

8.13 BaseVector Class Template Reference

Base class for the Dakota::Matrix and Dakota::Vector classes.

Inheritance diagram for BaseVector::

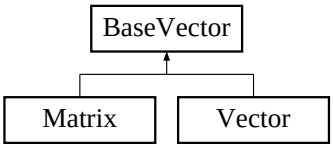

Public Member Functions

- BaseVector ()

  Default constructor.

- BaseVector (size_t size)

  Constructor, creates vector of size.

- BaseVector (size_t size, const T &initial_val)

  Constructor, creates vector of size with initial value of initial_val.

- ~BaseVector ()

  Destructor.

- BaseVector (const BaseVector< T > &a)

  Copy constructor.

- BaseVector< T > & operator= (const BaseVector< T > &a)

  Normal assignment operator.

- BaseVector< T > & operator= (const T &ival)

  Assigns all values of vector to ival.

- T & operator[ ] (int i)

  alternate bounds-checked indexing operator for int indices

- const T & operator[ ] (int i) const

  alternate bounds-checked const indexing operator for int indices

- T & operator[ ] (size_t i)

  Returns the object at index i, (can use as lvalue).

- const T & operator[ ] (size_t i) const

  Returns the object at index i, const (can't use as lvalue).

- T & operator() (size_t i)

  Index operator, not bounds checked.

- const T & operator() (size_t i) const

  Index operator const , not bounds checked.

- size_t length () const

  Returns size of vector.

- void reshape (size_t sz)

  Resizes vector to size sz.

- const T ∗ data () const

  Returns const pointer to standard C array. Use with care.

Protected Member Functions

- T ∗ array () const

  Returns pointer to standard C array. Use with care.

8.13.1 Detailed Description

template<class T> class Dakota::BaseVector< T >

Base class for the Dakota::Matrix and Dakota::Vector classes.

The Dakota::BaseVector class is the base class for the Dakota::Matrix class. It is used to define a common vector interface for both the STL and RW vector classes. If the STL version is based on the valarray class then some basic vector operations such as + , ∗ are available.

8.13.2 Constructor & Destructor Documentation

8.13.2.1 BaseVector (size_t *size*, const T & *initial_val*) [inline]

Constructor, creates vector of size with initial value of initial_val.

Constructor which takes an initial size and an initial value, allocates an area of initial size and initializes it with input value. Calls base class constructor

8.13.3 Member Function Documentation

8.13.3.1]

T & operator[ ] (size_t *i*) `[inline]`

Returns the object at index i, (can use as lvalue).

Index operator, calls the STL method at() which is bounds checked. Mimics the RW vector class. Note: the at() method is not supported by the __GNUC__ STL implementation or by builds omitting exceptions (e.g., SIERRA).

8.13.3.2]

const T & operator[ ] (size_t *i*) const `[inline]`

Returns the object at index i, const (can't use as lvalue).

Const versions of the index operator calls the STL method at() which is bounds checked. Mimics the RW vector class. Note: the at() method is not supported by the __GNUC__ STL implementation or by builds omitting exceptions (e.g., SIERRA).

8.13.3.3 T & operator() (size_t *i*) `[inline]`

Index operator, not bounds checked.

Non bounds check index operator, calls the STL operator[ ] which is not bounds checked. Needed to mimic the RW vector class

8.13.3.4 const T & operator() (size_t *i*) const `[inline]`

Index operator const , not bounds checked.

Const version of the non-bounds check index operator, calls the STL operator[ ] which is not bounds checked. Needed to mimic the RW vector class

8.13.3.5 size_t length () const `[inline]`

Returns size of vector.

Returns the length of the array by calling the STL size method. Needed to mimic the RW vector class

8.13.3.6 void reshape (size_t *sz*) `[inline]`

Resizes vector to size sz.

Resizes the array to size sz by calling the STL resize method. Needed to mimic the RW vector class

8.13.3.7 const T ∗ data () const [inline]

Returns const pointer to standard C array. Use with care.

Returns a const pointer to the data within the array. USE WITH CARE. Needed to mimic RW vector class.

8.13.3.8 T ∗ array () const [inline, protected]

Returns pointer to standard C array. Use with care.

Returns a non-const pointer to the data within the array. Non-const version of data() used by derived classes.

The documentation for this class was generated from the following file:

- DakotaBaseVector.H

8.14 BasisPolyApproximation Class Reference

Derived approximation class for global basis polynomials.

Inheritance diagram for BasisPolyApproximation::

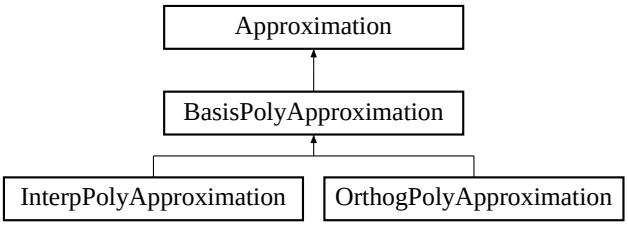

Public Member Functions

- BasisPolyApproximation ()

  default constructor

- BasisPolyApproximation (const ProblemDescDB &problem_db, const size_t &num_acv)

  standard constructor

- ~BasisPolyApproximation ()

  destructor

- virtual const Real & get_mean ()=0

  return the mean of the expansion, treating all variables as random

- virtual const Real & get_mean (const RealVector &x)=0

  treating a subset of the variables as random

- virtual const RealBaseVector & get_mean_gradient ()=0

  vector, treating all variables as random

- virtual const RealBaseVector & get_mean_gradient (const RealVector &x, const UIntArray &dvv)=0

  and given DVV, treating a subset of the variables as random

- virtual const Real & get_variance ()=0

  return the variance of the expansion, treating all variables as random

- virtual const Real & get_variance (const RealVector &x)=0

  treating a subset of the variables as random

- virtual const RealBaseVector & get_variance_gradient ()=0

  vector, treating all variables as random

- virtual const RealBaseVector & get_variance_gradient (const RealVector &x, const UIntArray &dvv)=0

  vector and given DVV, treating a subset of the variables as random

- void solution_approach (short soln_approach)

  set expCoeffsSolnApproach

- short solution_approach () const

  get expCoeffsSolnApproach

- void expansion_coefficient_flag (bool coeff_flag)

  set expansionCoeffFlag

- bool expansion_coefficient_flag () const

  get expansionCoeffFlag

- void expansion_gradient_flag (bool grad_flag)

  set expansionGradFlag

- bool expansion_gradient_flag () const

  get expansionGradFlag

- void integration_iterator (const Iterator &iterator)

  set integrationRep

- void random_variables_key (const BoolDeque &random_vars_key)

  set randomVarsKey

Protected Member Functions

- int num_constraints () const

  return the number of constraints to be enforced via anchorPoint

- const RealVector & approximation_coefficients () const

  return the coefficient array computed by find_coefficients()

- void approximation_coefficients (const RealVector &approx_coeffs)

  computing with find_coefficients()

Protected Attributes

- short expCoeffsSolnApproach

  QUADRATURE, SPARSE_GRID, REGRESSION, or SAMPLING.

- bool expansionCoeffFlag

  flag for calculation of expansionCoeffs from response values

- bool expansionGradFlag

  flag for calculation of expansionCoeffGrads from response gradients

- NonDIntegration * integrationRep

  weight products

- BoolDeque randomVarsKey

  the active variables (used in all_variables mode)

- SizetList randomIndices

  variables (used in all_variables mode; defined from randomVarsKey)

- SizetList nonRandomIndices

  active variables (used in all_variables mode; defined from randomVarsKey)

- Real expansionMean

  expected value of the expansion

- RealBaseVector expansionMeanGrad

  gradient of the expected value of the expansion

- Real expansionVariance

  variance of the expansion

- RealBaseVector expansionVarianceGrad

  gradient of the variance of the expansion

- RealVector expansionCoeffs

  the coefficients of the expansion

- RealMatrix expansionCoeffGrads

  the gradients of the expansion coefficients

8.14.1 Detailed Description

Derived approximation class for global basis polynomials.

The BasisPolyApproximation class provides a global approximation based on basis polynomials. This includes orthogonal polynomials used for polynomial chaos expansions and interpolation polynomials used for stochastic collocation.

8.14.2 Member Data Documentation

8.14.2.1 RealMatrix expansionCoeffGrads [protected]

the gradients of the expansion coefficients

may be interpreted as either the gradients of the expansion coefficients or the coefficients of expansions for the response gradients. This array is used when sensitivities of moments are needed with respect to variables that do not appear in the expansion (e.g., with respect to design variables for an expansion only over the random variables).

The documentation for this class was generated from the following files:

- BasisPolyApproximation.H
- BasisPolyApproximation.C

8.15 BasisPolynomial Class Reference

Base class for the basis polynomial class hierarchy.

Inheritance diagram for BasisPolynomial::

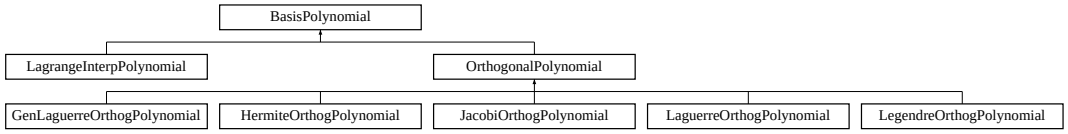

Public Member Functions

- BasisPolynomial ()

  default constructor

- BasisPolynomial (short poly_type)

  alternate constructor

- BasisPolynomial (const BasisPolynomial &polynomial)

  copy constructor

- virtual ~BasisPolynomial ()

  destructor

- BasisPolynomial operator= (const BasisPolynomial &polynomial)

  assignment operator

- virtual const Real & get_value (const Real &x, unsigned short n)

  retrieve the basis polynomial value for a given parameter value

- virtual const Real & get_gradient (const Real &x, unsigned short n)

  retrieve the basis polynomial gradient for a given parameter value

- virtual const Real & norm_squared (unsigned short n)

  inner product <Poly_n, Poly_n> = ||Poly_n||^2

- virtual const RealVector & gauss_points (unsigned short n)

  return the gaussPoints corresponding to orthogonal polynomial order n.

- virtual const RealVector & gauss_weights (unsigned short n)

  return the gaussWeights corresponding to orthogonal polynomial order n.

- virtual void reset_gauss ()
  destroy history of Gauss pts/wts (due to change in alpha/beta stats)
- virtual void alpha_stat (const Real &alpha)
  set {Jacobi,GenLaguerre}OrthogPolynomial::alphaPoly from alpha_stat
- virtual void beta_stat (const Real &beta)
  set JacobiOrthogPolynomial::betaPoly from beta_stat
- virtual void interpolation_points (const RealVector &interpolation_pts)
  set LagrangeInterpPolynomial::interpolationPts
- BasisPolynomial * polynomial_rep () const
  that are not mapped to the top BasisPolynomial level

Static Public Member Functions

- static Real factorial (unsigned short n)
  compute n!
- static Real factorial_ratio (unsigned short num, unsigned short den)
  compute num!/den!
- static Real n_choose_k (unsigned short n, unsigned short k)
  compute n!/(k!(n-k)!)
- static Real pochhammer (const Real &m, unsigned short n)
  compute the Pochhammer symbol (m)_n = m(m+1)...*(m+n-1)*

Protected Member Functions

- BasisPolynomial (BaseConstructor)
  derived class constructors - Coplien, p. 139)

Protected Attributes

- Real basisPolyValue
  value of the 1-D basis polynomial; returned by get_value()
- Real basisPolyGradient
  one parameter; returned by get_gradient()

Private Member Functions

- BasisPolynomial * get_polynomial (short poly_type)

  appropriate derived type.

Private Attributes

- BasisPolynomial * polyRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing polyRep

8.15.1 Detailed Description

Base class for the basis polynomial class hierarchy.

The BasisPolynomial class is the base class for the univariate basis polynomial class hierarchy in DAKOTA. One instance of an BasisPolynomial is created for each variable within a multidimensional polynomial basis function (a vector of BasisPolynomials is contained in BasisPolyApproximation, which may be mixed and matched in, e.g., the Wiener-Askey scheme for polynomial chaos). For memory efficiency and enhanced polymorphism, the basis polynomial hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (BasisPolynomial) serves as the envelope and one of the derived classes (selected in BasisPolynomial::get_polynomial()) serves as the letter.

8.15.2 Constructor & Destructor Documentation

8.15.2.1 BasisPolynomial ()

default constructor

The default constructor is used in Array<BasisPolynomial> instantiations and by the alternate envelope constructor. polyRep is NULL in this case (problem_db is needed to build a meaningful instance). This makes it necessary to check for NULL in the copy constructor, assignment operator, and destructor.

8.15.2.2 BasisPolynomial (short *poly_type*)

alternate constructor

Envelope constructor which does not require access to problem_db. This constructor executes get_polynomial(type), which invokes the default constructor of the derived letter class, which in turn invokes the BaseConstructor of the base class.

8.15.2.3 BasisPolynomial (const BasisPolynomial & *polynomial*)

copy constructor

Copy constructor manages sharing of polyRep and incrementing of referenceCount.

8.15.2.4 ~BasisPolynomial () [virtual]

destructor

Destructor decrements referenceCount and only deletes polyRep when referenceCount reaches zero.

8.15.2.5 BasisPolynomial (BaseConstructor) [protected]

derived class constructors - Coplien, p. 139)

This constructor is the one which must build the base class data for all derived classes. get_polynomial() instantiates a derived class letter and the derived constructor selects this base class constructor in its initialization list (to avoid recursion in the base class constructor calling get_polynomial() again). Since the letter IS the representation, its rep pointer is set to NULL (an uninitialized pointer causes problems in ~BasisPolynomial).

8.15.3 Member Function Documentation

8.15.3.1 BasisPolynomial operator= (const BasisPolynomial & *polynomial*)

assignment operator

Assignment operator decrements referenceCount for old polyRep, assigns new polyRep, and increments referenceCount for new polyRep.

8.15.3.2 const Real & get_value (const Real & *x*, unsigned short *n*) [virtual]

retrieve the basis polynomial value for a given parameter value

For orthogonal polynomials, n specifies the order of the polynomial, whereas for interpolation polynomials, it identifies the interpolant for the n-th point.

Reimplemented in GenLaguerreOrthogPolynomial, HermiteOrthogPolynomial, JacobiOrthogPolynomial, LagrangeInterpPolynomial, LaguerreOrthogPolynomial, and LegendreOrthogPolynomial.

8.15.3.3 const Real & get_gradient (const Real & *x*, unsigned short *n*) [virtual]

retrieve the basis polynomial gradient for a given parameter value

For orthogonal polynomials, n specifies the order of the polynomial, whereas for interpolation polynomials, it identifies the interpolant for the n-th point.

Reimplemented in GenLaguerreOrthogPolynomial, HermiteOrthogPolynomial, JacobiOrthogPolynomial, LagrangeInterpPolynomial, LaguerreOrthogPolynomial, and LegendreOrthogPolynomial.

8.15.3.4 const Real & norm_squared (unsigned short *n*) [virtual]

inner product <Poly_n, Poly_n> = ||Poly_n||^2

This is defined only for orthogonal polynomials.

Reimplemented in GenLaguerreOrthogPolynomial, HermiteOrthogPolynomial, JacobiOrthogPolynomial, LaguerreOrthogPolynomial, and LegendreOrthogPolynomial.

8.15.3.5 const RealVector & gauss_points (unsigned short *n*) [virtual]

return the gaussPoints corresponding to orthogonal polynomial order n.

This is defined only for orthogonal polynomials.

Reimplemented in GenLaguerreOrthogPolynomial, HermiteOrthogPolynomial, JacobiOrthogPolynomial, LaguerreOrthogPolynomial, and LegendreOrthogPolynomial.

8.15.3.6 const RealVector & gauss_weights (unsigned short *n*) [virtual]

return the gaussWeights corresponding to orthogonal polynomial order n.

This is defined only for orthogonal polynomials.

Reimplemented in GenLaguerreOrthogPolynomial, HermiteOrthogPolynomial, JacobiOrthogPolynomial, LaguerreOrthogPolynomial, and LegendreOrthogPolynomial.

8.15.3.7 void reset_gauss () [virtual]

destroy history of Gauss pts/wts (due to change in alpha/beta stats)

This is defined only for orthogonal polynomials.

Reimplemented in OrthogonalPolynomial.

8.15.3.8 void alpha_stat (const Real & *alpha*) [virtual]

set {Jacobi,GenLaguerre}OrthogPolynomial::alphaPoly from alpha_stat

This is defined only for parameterized orthogonal polynomials.

Reimplemented in GenLaguerreOrthogPolynomial, and JacobiOrthogPolynomial.

8.15.3.9 void beta_stat (const Real & *beta*) [virtual]

set JacobiOrthogPolynomial::betaPoly from beta_stat

This is defined only for parameterized orthogonal polynomials.

Reimplemented in JacobiOrthogPolynomial.

8.15.3.10 void interpolation_points (const RealVector & *interpolation_pts*) [virtual]

set LagrangeInterpPolynomial::interpolationPts

This is defined only for interpolation polynomials.

Reimplemented in LagrangeInterpPolynomial.

8.15.3.11 Real factorial (unsigned short *n*) [inline, static]

compute n!

This implementation is unprotected from overflow, but this should be fine for the polynomial orders that we would expect to encounter. Whenever possible, orthogonal polynomial implementations should use factorial_ratio() or n_choose_k() instead of factorial() to avoid size_t overflow.

8.15.3.12 Real factorial_ratio (unsigned short *num*, unsigned short *den*) [inline, static]

compute num!/den!

This implementation sequences products in order to minimize the chances of overflow, and its use should be preferred to factorial() whenever possible.

8.15.3.13 Real n_choose_k (unsigned short *n*, unsigned short *k*) [inline, static]

compute n!/(k!(n-k)!)

This implementation sequences products in order to minimize the chances of overflow, and its use should be preferred to factorial() whenever possible.

8.15.3.14 Real pochhammer (const Real & *m*, unsigned short *n*) [inline, static]

compute the Pochhammer symbol (m)_n = m∗(m+1)...∗(m+n-1)

This is the rising/upper factorial formulation of the Pochhammer symbol (m)_n.

8.15.3.15 BasisPolynomial ∗ get_polynomial (short *poly_type*) [private]

appropriate derived type.

Used only by the envelope constructor to initialize polyRep to the appropriate derived type.

The documentation for this class was generated from the following files:

- BasisPolynomial.H
- BasisPolynomial.C

8.16 BiStream Class Reference

data types

Public Member Functions

- BiStream ()

  Default constructor, need to open.

- BiStream (const char ∗s)

  Constructor takes name of input file.

- BiStream (const char ∗s, std::ios_base::openmode mode)

  Constructor takes name of input file, mode.

- BiStream (const char ∗s, int mode)

  Constructor takes name of input file, mode.

- ∼BiStream ()

  Destructor, calls xdr_destroy to delete xdr stream.

- BiStream & operator>> (String &ds)

  Binary Input stream operator>>.

- BiStream & operator>> (char ∗s)

  Input operator, reads char∗ from binary stream BiStream.

- BiStream & operator>> (char &c)

  Input operator, reads char from binary stream BiStream.

- BiStream & operator>> (int &i)

  Input operator, reads int∗ from binary stream BiStream.

- BiStream & operator>> (long &l)

  Input operator, reads long from binary stream BiStream.

- BiStream & operator>> (short &s)

  Input operator, reads short from binary stream BiStream.

- BiStream & operator>> (bool &b)

  Input operator, reads bool from binary stream BiStream.

- BiStream & operator>> (double &d)

  Input operator, reads double from binary stream BiStream.

- BiStream & operator>> (float &f)

  Input operator, reads float from binary stream BiStream.

- BiStream & operator>> (unsigned char &c)

  Input operator, reads unsigned char∗ from binary stream BiStream.

- BiStream & operator>> (unsigned int &i)

  Input operator, reads unsigned int from binary stream BiStream.

- BiStream & operator>> (unsigned long &l)

  Input operator, reads unsigned long from binary stream BiStream.

- BiStream & operator>> (unsigned short &s)

  Input operator, reads unsigned short from binary stream BiStream.

Private Attributes

- XDR xdrInBuf

  XDR input stream buffer.

- char inBuf [MAX_NETOBJ_SZ]

  Buffer to hold data as it is read in.

8.16.1 Detailed Description

data types

The Dakota::BiStream class is a binary input class which overloads the >> operator for all standard data types (int, char, float, etc). The class relies on the methods within the ifstream base class. The Dakota::BiStream class inherits from the ifstream class. If available, the class utilize rpc/xdr to construct machine independent binary files. These Dakota restart files can be moved from host to host. The motivation to develop these classes was to replace the Rogue wave classes which Dakota historically used for binary I/O.

8.16.2 Constructor & Destructor Documentation

8.16.2.1 BiStream ()

Default constructor, need to open.

Default constructor, allocates xdr stream , but does not call the open method. The open method must be called before stream can be read.

8.16.2.2 BiStream (const char ∗ *s*)

Constructor takes name of input file.

Constructor which takes a char∗ filename. Calls the base class open method with the filename and no other arguments. Also allocates the xdr stream.

8.16.2.3 BiStream (const char ∗ *s*, std::ios_base::openmode *mode*)

Constructor takes name of input file, mode.

Constructor which takes a char∗ filename and int flags. Calls the base class open method with the filename and flags as arguments. Also allocates xdr stream.

8.16.2.4 ∼BiStream ()

Destructor, calls xdr_destroy to delete xdr stream.

Destructor, destroys the xdr stream allocated in constructor

8.16.3 Member Function Documentation

8.16.3.1 BiStream & operator>> (String & *ds*)

Binary Input stream operator>>.

The String input operator must first read both the xdr buffer size and the size of the string written. Once these our read it can then read and convert the String correctly.

8.16.3.2 BiStream & operator>> (char ∗ *s*)

Input operator, reads char∗ from binary stream BiStream.

Reading char array is a special case. The method has no way of knowing if the length to the input array is large enough, it assumes it is one char longer than actual string, (Null terminator added). As with the String the size of the xdr buffer as well as the char array size written must be read from the stream prior to reading and converting the char array.

The documentation for this class was generated from the following files:

- DakotaBinStream.H
- DakotaBinStream.C

8.17 BoStream Class Reference

data types

Public Member Functions

- BoStream ()

  Default constructor, need to open.

- BoStream (const char ∗s)

  Constructor takes name of input file.

- BoStream (const char ∗s, std::ios_base::openmode mode)

  Constructor takes name of input file, mode.

- BoStream (const char ∗s, int mode)

  Constructor takes name of input file, mode.

- ∼BoStream ()

  Destructor, calls xdr_destroy to delete xdr stream.

- BoStream & operator<< (const String &ds)

  Binary Output stream operator<<.

- BoStream & operator<< (const char ∗s)

  Output operator, writes char∗ TO binary stream BoStream.

- BoStream & operator<< (const char &c)

  Output operator, writes char to binary stream BoStream.

- BoStream & operator<< (const int &i)

  Output operator, writes int to binary stream BoStream.

- BoStream & operator<< (const long &l)

  Output operator, writes long to binary stream BoStream.

- BoStream & operator<< (const short &s)

  Output operator, writes short to binary stream BoStream.

- BoStream & operator<< (const bool &b)

  Output operator, writes bool to binary stream BoStream.

- BoStream & operator<< (const double &d)

  Output operator, writes double to binary stream BoStream.

- BoStream & operator<< (const float &f)

  Output operator, writes float to binary stream BoStream.

- BoStream & operator<< (const unsigned char &c)

  Output operator, writes unsigned char to binary stream BoStream.

- BoStream & operator<< (const unsigned int &i)

  Output operator, writes unsigned int to binary stream BoStream.

- BoStream & operator<< (const unsigned long &l)

  Output operator, writes unsigned long to binary stream BoStream.

- BoStream & operator<< (const unsigned short &s)

  Output operator, writes unsigned short to binary stream BoStream.

Private Attributes

- XDR xdrOutBuf

  XDR output stream buffer.

- char outBuf [MAX_NETOBJ_SZ]

  Buffer to hold converted data before it is written.

8.17.1 Detailed Description

data types

The Dakota::BoStream class is a binary output classes which overloads the << operator for all standard data types (int, char, float, etc). The class relies on the built in write methods within the ostream base classes. Dakota::BoStream inherits from the ofstream class. The motivation to develop this class was to replace the Rogue wave class which Dakota historically used for binary I/O. If available, the class utilize rpc/xdr to construct machine independent binary files. These Dakota restart files can be moved between hosts.

8.17.2 Constructor & Destructor Documentation

8.17.2.1 BoStream ()

Default constructor, need to open.

Default constructor allocates the xdr stream but does not call the open() method. The open() method must be called before stream can be written to.

8.17.2.2 BoStream (const char ∗ *s*)

Constructor takes name of input file.

Constructor, takes char ∗ filename as argument. Calls base class open method with filename and no other arguments. Also allocates xdr stream

8.17.2.3 BoStream (const char ∗ *s*, std::ios_base::openmode *mode*)

Constructor takes name of input file, mode.

Constructor, takes char ∗ filename and int flags as arguments. Calls base class open method with filename and flags as arguments. Also allocates xdr stream. Note : If no rpc/xdr support xdr calls are #ifdef'd out.

8.17.3 Member Function Documentation

8.17.3.1 BoStream & operator<< (const String & *ds*)

Binary Output stream operator<<.

The String operator<< must first write the xdr buffer size and the original string size to the stream. The input operator needs this information to be able to correctly read and convert the String.

8.17.3.2 BoStream & operator<< (const char ∗ *s*)

Output operator, writes char∗ TO binary stream BoStream.

The output of char∗ is the same as the output of the String. The size of the xdr buffer and the size of the string must be written first, then the string itself.

The documentation for this class was generated from the following files:

- DakotaBinStream.H
- DakotaBinStream.C

8.18 COLINApplication Class Reference

Public Member Functions

- COLINApplication (Model &model)
  constructor
- ∼COLINApplication ()
  destructor
- void DoEval (ColinPoint &point, int &priority, ColinResponse ∗response, bool synch_flag)
  launch a function evaluation either synchronously or asynchronously
- unsigned int num_evaluation_servers ()
  The value '0' indicates that this is a sequential application.
- void synchronize ()
  blocking retrieval of all pending jobs
- int next_eval ()
  nonblocking query and retrieval of a job if completed
- void blocking_synch (const bool &blocking_synch)
  construct time.
- void dakota_asynch_flag (const bool &asynch_flag)
  (asynchFlag not initialized properly at construction).

Private Member Functions

- void map_response (ColinResponse &colin_response, const Response &dakota_response)
  utility function for mapping a DAKOTA response to a COLIN response

Private Attributes

- Model & iteratedModel
  reference to the COLINOptimizer's model passed in the constructor
- ActiveSet activeSet
  copy/conversion of the COLIN request vector

- bool dakotaModelAsynchFlag

  a flag for asynchronous DAKOTA evaluations

- bool blockingSynch

  needed for APPS, to enforce blocking synch despite call of next_eval().

- IntResponseMap dakotaResponseMap

  map of DAKOTA responses returned by synchronize_nowait()

- size_t numObjFns

  number of objective functions

- size_t numNonlinCons

  number of nonlinear constraints

- int num_real_params

  number of continuous design variables

- int num_integer_params

  number of discrete design variables

- int synchronization_state

  tracks the state of asynchronous evaluations

8.18.1 Detailed Description

COLINApplication is a DAKOTA class that is derived from COLIN's OptApplication hierarchy. It redefines a variety of virtual COLIN functions to use the corresponding DAKOTA functions. This is a more flexible algorithm library interfacing approach than can be obtained with the function pointer approaches used by NPSOLOptimizer and SNLLOptimizer.

8.18.2 Member Function Documentation

8.18.2.1 void DoEval (ColinPoint & *pt*, int & *priority*, ColinResponse * *prob_response*, bool *synch_flag*)

launch a function evaluation either synchronously or asynchronously

Converts the ColinPoint variables and request vector to DAKOTA variables and active set vector, performs a DAKOTA function evaluation with synchronization governed by synch_flag, and then copies the Response data to the ColinResponse response (synchronous) or bookkeeps the response object (asynchronous).

8.18.2.2 void synchronize ()

blocking retrieval of all pending jobs

Blocking synchronize of asynchronous DAKOTA jobs followed by conversion of the Response objects to ColinResponse response objects.

8.18.2.3 int next_eval ()

nonblocking query and retrieval of a job if completed

Nonblocking job retrieval. Finds a completion (if available), populates the COLIN response, and sets id to the completed job's id. Else set id = -1.

8.18.2.4 void map_response (ColinResponse & *colin_response*, const Response & *dakota_response*) [private]

utility function for mapping a DAKOTA response to a COLIN response

map_response Maps a Response object into a ColinResponse class that is compatable with COLIN.

The documentation for this class was generated from the following files:

- COLINApplication.H
- COLINApplication.C

8.19 COLINOptimizer Class Template Reference

Wrapper class for optimizers defined using COLIN.

Inheritance diagram for COLINOptimizer::

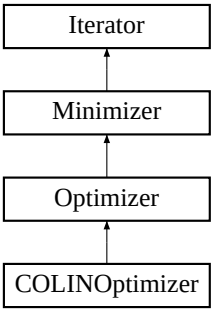

Public Member Functions

- COLINOptimizer (Model &model)

- COLINOptimizer (Model &model, int seed)

  alternate constructor for on-the-fly instantiations

- COLINOptimizer (NoDBBaseConstructor, Model &model)

  alternate constructor for Iterator instantiations by name

- ~COLINOptimizer ()

  destructor

- void find_optimum ()

  Performs the iterations to determine the optimal solution.

- bool returns_multiple_points () const

  COLINY methods can return multiple points.

- template<> bool returns_multiple_points () const

  return is false. Override to return true if appropriate.

- template<> bool returns_multiple_points () const

  return is false. Override to return true if appropriate.

- template<> void set_method_parameters ()
- template<> void set_method_parameters ()
- template<> void set_method_parameters ()
- template<> void set_runtime_parameters ()
- template<> void set_method_parameters ()
- template<> void set_method_parameters ()
- template<> void set_method_parameters ()
- template<> void **get_final_points** ()
- template<> void **get_final_points** ()
- template<> void **get_final_points** ()

Protected Member Functions

- virtual void set_rng (int seed)

  sets up the random number generator for stochastic methods

- virtual void set_initial_point (ColinPoint &pt)

  sets the iteration starting point prior to minimization

- virtual void get_min_point (ColinPoint &pt)

  retrieves the final solution after minimization

- virtual void set_method_parameters ()

  (called at construction time)

- void set_standard_method_parameters ()

  sets the standard method parameters shared by all methods

- virtual void set_runtime_parameters ()

  not available until run time

- virtual void get_final_points ()

  Get the set of best points from the solver.

- void resize_final_points (size_t newsize)

  resize bestVariablesArray

Protected Attributes

- OptimizerT ∗ optimizer

  Pointer to COLIN base optimizer object.

- COLINApplication ∗ application

  Pointer to the COLINApplication object.

- colin::OptProblem< ColinPoint > problem

  the COLIN problem object

- utilib::RNG * rng

  RNG ptr.

- bool blockingSynch

  `nonblocking`

- Real solverStartTime

  Start time for keeping track of time for solver to run.

- Real solverTime

  Time taken by solver to run.

8.19.1 Detailed Description

template<class OptimizerT> class Dakota::COLINOptimizer< OptimizerT >

Wrapper class for optimizers defined using COLIN.

The COLINOptimizer class provides a templated wrapper for COLIN, a Sandia-developed C++ optimization interface library. A variety of COLIN optimizers are defined in the COLINY optimization library, which contains the optimization components from the old SGOPT library. COLINY contains optimizers such as genetic algorithms, pattern search methods, and other nongradient-based techniques. COLINOptimizer uses a COLINApplication object to perform the function evaluations.

The user input mappings are as follows: `max_iterations`, `max_function_evaluations`, `convergence_tolerance`, `solution_accuracy` and `max_cpu_time` are mapped into COLIN's `max_iters`, `max_neval`, `ftol`, `accuracy`, and `max_time` data attributes. An `output` setting of `verbose` is passed to COLIN's set_output() function and a setting of `debug` activates output of method initialization and sets the COLIN `debug` attribute to 10000. Refer to [Hart, W.E., 2006] for additional information on COLIN objects and controls.

8.19.2 Member Function Documentation

8.19.2.1 void find_optimum () `[inline, virtual]`

Performs the iterations to determine the optimal solution.

find_optimum redefines the Optimizer virtual function to perform the optimization using COLIN. It first sets up the problem data, then executes minimize() on the COLIN optimizer, and finally catalogues the results.

Implements Optimizer.

8.19.2.2 void set_standard_method_parameters () [inline, protected]

sets the standard method parameters shared by all methods

set_standard_method_parameters propagates standard DAKOTA user input to the optimizer.

8.19.2.3 void set_method_parameters () [inline]

specialization of set_method_parameters() for DIRECT

8.19.2.4 void set_method_parameters () [inline]

specialization of set_method_parameters() for Cobyla

8.19.2.5 void set_method_parameters () [inline]

specialization of set_method_parameters() for APPS

8.19.2.6 void set_runtime_parameters () [inline]

specialization of set_runtime_parameters() for PatternSearch

8.19.2.7 void set_method_parameters () [inline]

specialization of set_method_parameters() for PatternSearch

8.19.2.8 void set_method_parameters () [inline]

specialization of set_method_parameters() for SolisWets

8.19.2.9 void set_method_parameters () [inline]

specialization of set_method_parameters() for EAminlp

The documentation for this class was generated from the following file:

- COLINOptimizer.H

8.20 ColinPoint Class Reference

Public Attributes

- vector< double > rvec

  continuous parameter values

- vector< int > ivec

  discrete parameter values

8.20.1 Detailed Description

A class containing a vector of doubles and integers.

The documentation for this class was generated from the following file:

- COLINApplication.H

8.21 CollaborativeHybridStrategy Class Reference

optimization and nonlinear least squares methods.

Inheritance diagram for CollaborativeHybridStrategy::

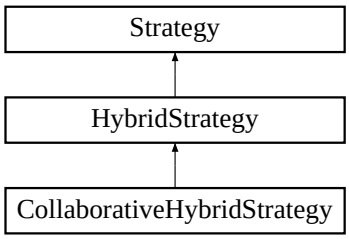

Public Member Functions

- CollaborativeHybridStrategy (ProblemDescDB &problem_db)

  constructor

- ~CollaborativeHybridStrategy ()

  destructor

Protected Member Functions

- void run_strategy ()

  Performs the collaborative hybrid minimization strategy.

- const Variables & variables_results () const

  return the final solution from the collaborative minimization (variables)

- const Response & response_results () const

  return the final solution from the collaborative minimization (response)

Private Attributes

- String hybridCollabType

  abo or hops

- Variables bestVariables

  best variables found in minimization

- Response bestResponse

  best response found in minimization

8.21.1 Detailed Description

optimization and nonlinear least squares methods.

This strategy has two approaches to hybrid minimization: (1) agent-based using the ABO framework; (2) nonagent-based using the HOPSPACK framework.

The documentation for this class was generated from the following files:

- CollaborativeHybridStrategy.H
- CollaborativeHybridStrategy.C

8.22 CommandLineHandler Class Reference

Utility class for managing command line inputs to DAKOTA.

Inheritance diagram for CommandLineHandler::

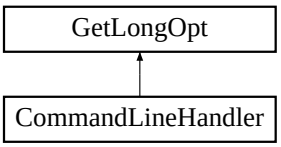

Public Member Functions

- CommandLineHandler ()

  default constructor, requires check_usage() call for parsing

- CommandLineHandler (int argc, char **argv)

  constructor with parsing

- ~CommandLineHandler ()

  destructor

- void check_usage (int argc, char **argv)

  Prints a descriptive message and exits the program if incorrect.

- int read_restart_evals () const

  instead of a const char.*

Private Member Functions

- void initialize_options ()

  enrolls the supported command line inputs.

- void output_version (ostream &s) const

  outputs the DAKOTA version

8.22.1 Detailed Description

Utility class for managing command line inputs to DAKOTA.

CommandLineHandler provides additional functionality that is specific to DAKOTA's needs for the definition and parsing of command line options. Inheritance is used to allow the class to have all the functionality of the base class, GetLongOpt.

The documentation for this class was generated from the following files:

- CommandLineHandler.H
- CommandLineHandler.C

8.23 CommandShell Class Reference

processes with system calls.

Public Member Functions

- CommandShell ()
  constructor
- ~CommandShell ()
  destructor
- CommandShell & operator<< (const char *string)
  adds string to unixCommand
- CommandShell & operator<< (CommandShell &(*f)(CommandShell &))
  allows passing of the flush function to the shell using <<
- CommandShell & flush ()
  "flushes" the shell; i.e. executes the unixCommand
- void asynch_flag (const bool flag)
  set the asynchFlag
- bool asynch_flag () const
  get the asynchFlag
- void suppress_output_flag (const bool flag)
  set the suppressOutputFlag
- bool suppress_output_flag () const
  get the suppressOutputFlag

Private Attributes

- String unixCommand
  insertions and then executed by flush
- bool asynchFlag
  flags nonblocking operation (background system calls)

- bool suppressOutputFlag

  flags suppression of shell output (no command echo)

8.23.1 Detailed Description

processes with system calls.

The CommandShell class wraps the C system() utility and defines convenience operators for building a command string and then passing it to the shell.

8.23.2 Member Function Documentation

8.23.2.1 CommandShell & flush ()

"flushes" the shell; i.e. executes the unixCommand

Executes the unixCommand by passing it to system(). Appends an "&" if asynchFlag is set (background system call) and echos the unixCommand to Cout if suppressOutputFlag is not set.

The documentation for this class was generated from the following files:

- CommandShell.H
- CommandShell.C

8.24 ConcurrentStrategy Class Reference

Strategy for multi-start iteration or pareto set optimization.

Inheritance diagram for ConcurrentStrategy::

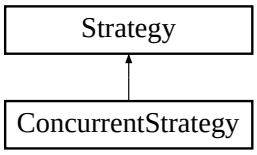

Public Member Functions

- ConcurrentStrategy (ProblemDescDB &problem_db)
  constructor
- ~ConcurrentStrategy ()
  destructor

Protected Member Functions

- void run_strategy ()
  settings within the iterator or model.
- void initialize_iterator (int job_index)
  scheduling function (serve_iterators() or static_schedule_iterators())
- void pack_parameters_buffer (MPIPackBuffer &send_buffer, int job_index)
  pack a send_buffer for assigning an iterator job to a server
- void unpack_parameters_buffer (MPIUnpackBuffer &recv_buffer)
  unpack a recv_buffer for accepting an iterator job from the scheduler
- void pack_results_buffer (MPIPackBuffer &send_buffer, int job_index)
  pack a send_buffer for returning iterator results from a server
- void unpack_results_buffer (MPIUnpackBuffer &recv_buffer, int job_index)
  unpack a recv_buffer for accepting iterator results from a server
- void update_local_results (int job_index)
  update local prpResults with current iteration results

Private Member Functions

- void initialize_iterator (const RealVector &param_set)

  initialize_iterator(int) to update userDefinedModel and selectedIterator

- void print_results () const

  prints the concurrent iteration results summary (called by run_strategy())

Private Attributes

- Model userDefinedModel

  the model used by the iterator

- Iterator selectedIterator

  the iterator used by the concurrent strategy

- bool multiStartFlag

  distinguishes multi-start from Pareto-set

- RealVector initialPt

  point in the Pareto set strategy

- RealVectorArray parameterSets

  be performed.

8.24.1 Detailed Description

Strategy for multi-start iteration or pareto set optimization.

This strategy maintains two concurrent iterator capabilities. First, a general capability for running an iterator multiple times from different starting points is provided (often used for multi-start optimization, but not restricted to optimization). Second, a simple capability for mapping the "pareto frontier" (the set of optimal solutions in multiobjective formulations) is provided. This pareto set is mapped through running an optimizer multiple times for different sets of multiobjective weightings.

8.24.2 Member Function Documentation

8.24.2.1 void pack_parameters_buffer (MPIPackBuffer & *send_buffer*, int *job_index*) `[inline, protected, virtual]`

pack a send_buffer for assigning an iterator job to a server

This virtual function redefinition is executed on the dedicated master processor for self scheduling. It is not used for peer partitions.

Reimplemented from Strategy.

8.24.2.2 void unpack_parameters_buffer (MPIUnpackBuffer & *recv_buffer*) [inline, protected, virtual]

unpack a recv_buffer for accepting an iterator job from the scheduler

This virtual function redefinition is executed on an iterator server for dedicated master self scheduling. It is not used for peer partitions.

Reimplemented from Strategy.

8.24.2.3 void pack_results_buffer (MPIPackBuffer & *send_buffer*, int *job_index*) [inline, protected, virtual]

pack a send_buffer for returning iterator results from a server

This virtual function redefinition is executed either on an iterator server for dedicated master self scheduling or on peers 2 through n for static scheduling.

Reimplemented from Strategy.

8.24.2.4 void unpack_results_buffer (MPIUnpackBuffer & *recv_buffer*, int *job_index*) [inline, protected, virtual]

unpack a recv_buffer for accepting iterator results from a server

This virtual function redefinition is executed on an strategy master (either the dedicated master processor for self scheduling or peer 1 for static scheduling).

Reimplemented from Strategy.

The documentation for this class was generated from the following files:

- ConcurrentStrategy.H
- ConcurrentStrategy.C

8.25 CONMINOptimizer Class Reference

Wrapper class for the CONMIN optimization library.

Inheritance diagram for CONMINOptimizer::

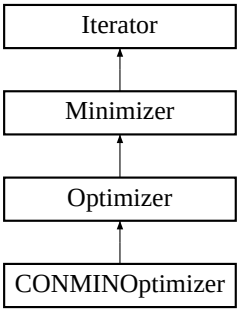

Public Member Functions

- CONMINOptimizer (Model &model)

  standard constructor

- CONMINOptimizer (NoDBBaseConstructor, Model &model)

  alternate constructor

- ~CONMINOptimizer ()

  destructor

- void find_optimum ()

  Redefines the run virtual function for the optimizer branch.

Protected Member Functions

- void derived_pre_run ()

  performs run-time set up

Private Member Functions

- void initialize ()

  Shared constructor code.

- void allocate_workspace ()

  Allocates workspace for the optimizer.

- void deallocate_workspace ()

  Releases workspace memory.

- void allocate_constraints ()

  Allocates constraint mappings.

Private Attributes

- int conminInfo

  INFO from CONMIN manual.

- int printControl

  IPRINT from CONMIN manual (controls output verbosity).

- int optimizationType

  MINMAX from DOT manual (minimize or maximize).

- Real objFnValue

  value of the objective function passed to CONMIN

- RealVector constraintValues

  array of nonlinear constraint values passed to CONMIN

- int numConminNlnConstr

  total number of nonlinear constraints seen by CONMIN

- int numConminLinConstr

  total number of linear constraints seen by CONMIN

- int numConminConstr

  total number of linear and nonlinear constraints seen by CONMIN

- SizetList constraintMappingIndices

  Response constraints used in computing the CONMIN constraints.

- RealList constraintMappingMultipliers

  the CONMIN constraints.

- RealList constraintMappingOffsets

  CONMIN constraints.

- int N1

  Size variable for CONMIN arrays. See CONMIN manual.

- int N2

  Size variable for CONMIN arrays. See CONMIN manual.

- int N3

  Size variable for CONMIN arrays. See CONMIN manual.

- int N4

  Size variable for CONMIN arrays. See CONMIN manual.

- int N5

  Size variable for CONMIN arrays. See CONMIN manual.

- int NFDG

  Finite difference flag.

- int IPRINT

  Flag to control amount of output data.

- int ITMAX

  Flag to specify the maximum number of iterations.

- double FDCH

  Relative finite difference step size.

- double FDCHM

  Absolute finite difference step size.

- double CT

  Constraint thickness parameter.

- double CTMIN

  Minimum absolute value of CT used during optimization.

- double CTL

  Constraint thickness parameter for linear and side constraints.

- double CTLMIN

  Minimum value of CTL used during optimization.

- double DELFUN

  Relative convergence criterion threshold.

- double DABFUN

Absolute convergence criterion threshold.

- double * conminDesVars

  Array of design variables used by CONMIN (length N1 = numdv+2).

- double * conminLowerBnds

  Array of lower bounds used by CONMIN (length N1 = numdv+2).

- double * conminUpperBnds

  Array of upper bounds used by CONMIN (length N1 = numdv+2).

- double * S

  Internal CONMIN array.

- double * G1

  Internal CONMIN array.

- double * G2

  Internal CONMIN array.

- double * B

  Internal CONMIN array.

- double * C

  Internal CONMIN array.

- int * MS1

  Internal CONMIN array.

- double * SCAL

  Internal CONMIN array.

- double * DF

  Internal CONMIN array.

- double * A

  Internal CONMIN array.

- int * ISC

  Internal CONMIN array.

- int * IC

  Internal CONMIN array.

8.25.1 Detailed Description

Wrapper class for the CONMIN optimization library.

The CONMINOptimizer class provides a wrapper for CONMIN, a Public-domain Fortran 77 optimization library written by Gary Vanderplaats under contract to NASA Ames Research Center. The CONMIN User's Manual is contained in NASA Technical Memorandum X-62282, 1978. CONMIN uses a reverse communication mode, which avoids the static member function issues that arise with function pointer designs (see NPSOLOptimizer and SNLLOptimizer).

The user input mappings are as follows: `max_iterations` is mapped into CONMIN's `ITMAX` parameter, `max_function_evaluations` is implemented directly in the find_optimum() loop since there is no CONMIN parameter equivalent, `convergence_tolerance` is mapped into CONMIN's `DELFUN` and `DABFUN` parameters, `output` verbosity is mapped into CONMIN's `IPRINT` parameter (verbose: `IPRINT` = 4; quiet: `IPRINT` = 2), gradient mode is mapped into CONMIN's `NFDG` parameter, and finite difference step size is mapped into CONMIN's `FDCH` and `FDCHM` parameters. Refer to [Vanderplaats, 1978] for additional information on CONMIN parameters.

8.25.2 Member Data Documentation

8.25.2.1 int conminInfo [private]

INFO from CONMIN manual.

Information requested by CONMIN: 1 = evaluate objective and constraints, 2 = evaluate gradients of objective and constraints.

8.25.2.2 int printControl [private]

IPRINT from CONMIN manual (controls output verbosity).

Values range from 0 (nothing) to 4 (most output). 0 = nothing, 1 = initial and final function information, 2 = all of #1 plus function value and design vars at each iteration, 3 = all of #2 plus constraint values and direction vectors, 4 = all of #3 plus gradients of the objective function and constraints, 5 = all of #4 plus proposed design vector, plus objective and constraint functions from the 1-D search

8.25.2.3 int optimizationType [private]

MINMAX from DOT manual (minimize or maximize).

Values of 0 or -1 (minimize) or 1 (maximize).

8.25.2.4 RealVector constraintValues [private]

array of nonlinear constraint values passed to CONMIN

This array must be of nonzero length and must contain only one-sided inequality constraints which are <= 0 (which requires a transformation from 2-sided inequalities and equalities).

8.25.2.5 SizetList constraintMappingIndices [private]

Response constraints used in computing the CONMIN constraints.

The length of the list corresponds to the number of CONMIN constraints, and each entry in the list points to the corresponding DAKOTA constraint.

8.25.2.6 RealList constraintMappingMultipliers [private]

the CONMIN constraints.

The length of the list corresponds to the number of CONMIN constraints, and each entry in the list contains a multiplier for the DAKOTA constraint identified with constraintMappingIndices. These multipliers are currently +1 or -1.

8.25.2.7 RealList constraintMappingOffsets [private]

CONMIN constraints.

The length of the list corresponds to the number of CONMIN constraints, and each entry in the list contains an offset for the DAKOTA constraint identified with constraintMappingIndices. These offsets involve inequality bounds or equality targets, since CONMIN assumes constraint allowables = 0.

8.25.2.8 int N1 [private]

Size variable for CONMIN arrays. See CONMIN manual.

N1 = number of variables + 2

8.25.2.9 int N2 [private]

Size variable for CONMIN arrays. See CONMIN manual.

N2 = number of constraints + 2∗(number of variables)

8.25.2.10 int N3 [private]

Size variable for CONMIN arrays. See CONMIN manual.

N3 = Maximum possible number of active constraints.

8.25.2.11 int N4 [private]

Size variable for CONMIN arrays. See CONMIN manual.

N4 = Maximum(N3,number of variables)

8.25.2.12 int N5 [private]

Size variable for CONMIN arrays. See CONMIN manual.

N5 = 2∗(N4)

8.25.2.13 double CT [private]

Constraint thickness parameter.

The value of CT decreases in magnitude during optimization.

8.25.2.14 double∗ S [private]

Internal CONMIN array.

Move direction in N-dimensional space.

8.25.2.15 double∗ G1 [private]

Internal CONMIN array.

Temporary storage of constraint values.

8.25.2.16 double∗ G2 [private]

Internal CONMIN array.

Temporary storage of constraint values.

8.25.2.17 double∗ B [private]

Internal CONMIN array.

Temporary storage for computations involving array S.

8.25.2.18 double∗ C [private]

Internal CONMIN array.

Temporary storage for use with arrays B and S.

8.25.2.19 int∗ MS1 [private]

Internal CONMIN array.

Temporary storage for use with arrays B and S.

8.25.2.20 double* SCAL [private]

Internal CONMIN array.

Vector of scaling parameters for design parameter values.

8.25.2.21 double* DF [private]

Internal CONMIN array.

Temporary storage for analytic gradient data.

8.25.2.22 double* A [private]

Internal CONMIN array.

Temporary 2-D array for storage of constraint gradients.

8.25.2.23 int* ISC [private]

Internal CONMIN array.

Array of flags to identify linear constraints. (not used in this implementation of CONMIN)

8.25.2.24 int* IC [private]

Internal CONMIN array.

Array of flags to identify active and violated constraints

The documentation for this class was generated from the following files:

- CONMINOptimizer.H
- CONMINOptimizer.C

8.26 Constraints Class Reference

Base class for the variable constraints class hierarchy.

Inheritance diagram for Constraints::

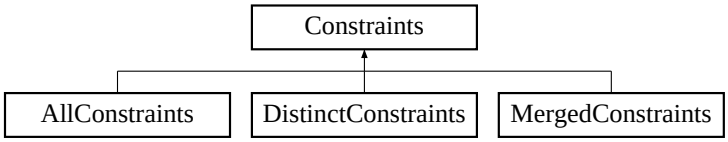

Public Member Functions

- Constraints ()
  default constructor
- Constraints (const ProblemDescDB &problem_db, const pair< short, short > &view)
  standard constructor
- Constraints (const pair< short, short > &view)
  alternate constructor for instantiations on the fly
- Constraints (const Constraints &con)
  copy constructor
- virtual ~Constraints ()
  destructor
- Constraints operator= (const Constraints &con)
  assignment operator
- virtual const RealVector & continuous_lower_bounds () const
  return the active continuous variable lower bounds
- virtual void continuous_lower_bounds (const RealVector &c_l_bnds)
  set the active continuous variable lower bounds
- virtual const RealVector & continuous_upper_bounds () const
  return the active continuous variable upper bounds
- virtual void continuous_upper_bounds (const RealVector &c_u_bnds)
  set the active continuous variable upper bounds

- virtual const IntVector & discrete_lower_bounds () const
  return the active discrete variable lower bounds
- virtual void discrete_lower_bounds (const IntVector &d_l_bnds)
  set the active discrete variable lower bounds
- virtual const IntVector & discrete_upper_bounds () const
  return the active discrete variable upper bounds
- virtual void discrete_upper_bounds (const IntVector &d_u_bnds)
  set the active discrete variable upper bounds
- virtual const RealVector & inactive_continuous_lower_bounds () const
  return the inactive continuous lower bounds
- virtual void inactive_continuous_lower_bounds (const RealVector &i_c_l_bnds)
  set the inactive continuous lower bounds
- virtual const RealVector & inactive_continuous_upper_bounds () const
  return the inactive continuous upper bounds
- virtual void inactive_continuous_upper_bounds (const RealVector &i_c_u_bnds)
  set the inactive continuous upper bounds
- virtual const IntVector & inactive_discrete_lower_bounds () const
  return the inactive discrete lower bounds
- virtual void inactive_discrete_lower_bounds (const IntVector &i_d_l_bnds)
  set the inactive discrete lower bounds
- virtual const IntVector & inactive_discrete_upper_bounds () const
  return the inactive discrete upper bounds
- virtual void inactive_discrete_upper_bounds (const IntVector &i_d_u_bnds)
  set the inactive discrete upper bounds
- virtual RealVector all_continuous_lower_bounds () const
  returns a single array with all continuous lower bounds
- virtual void all_continuous_lower_bounds (const RealVector &a_c_l_bnds)
  sets all continuous lower bounds using a single array
- virtual RealVector all_continuous_upper_bounds () const
  returns a single array with all continuous upper bounds

- virtual void all_continuous_upper_bounds (const RealVector &a_c_u_bnds)
  sets all continuous upper bounds using a single array
- virtual IntVector all_discrete_lower_bounds () const
  returns a single array with all discrete lower bounds
- virtual void all_discrete_lower_bounds (const IntVector &a_d_l_bnds)
  sets all discrete lower bounds using a single array
- virtual IntVector all_discrete_upper_bounds () const
  returns a single array with all discrete upper bounds
- virtual void all_discrete_upper_bounds (const IntVector &a_d_u_bnds)
  sets all discrete upper bounds using a single array
- virtual void write (ostream &s) const
  write a variable constraints object to an ostream
- virtual void read (istream &s)
  read a variable constraints object from an istream
- size_t num_linear_ineq_constraints () const
  return the number of linear inequality constraints
- size_t num_linear_eq_constraints () const
  return the number of linear equality constraints
- const RealMatrix & linear_ineq_constraint_coeffs () const
  return the linear inequality constraint coefficients
- void linear_ineq_constraint_coeffs (const RealMatrix &lin_ineq_coeffs)
  set the linear inequality constraint coefficients
- const RealVector & linear_ineq_constraint_lower_bounds () const
  return the linear inequality constraint lower bounds
- void linear_ineq_constraint_lower_bounds (const RealVector &lin_ineq_l_bnds)
  set the linear inequality constraint lower bounds
- const RealVector & linear_ineq_constraint_upper_bounds () const
  return the linear inequality constraint upper bounds
- void linear_ineq_constraint_upper_bounds (const RealVector &lin_ineq_u_bnds)
  set the linear inequality constraint upper bounds
- const RealMatrix & linear_eq_constraint_coeffs () const

return the linear equality constraint coefficients

- void linear_eq_constraint_coeffs (const RealMatrix &lin_eq_coeffs)
  set the linear equality constraint coefficients
- const RealVector & linear_eq_constraint_targets () const
  return the linear equality constraint targets
- void linear_eq_constraint_targets (const RealVector &lin_eq_targets)
  set the linear equality constraint targets
- size_t num_nonlinear_ineq_constraints () const
  return the number of nonlinear inequality constraints
- size_t num_nonlinear_eq_constraints () const
  return the number of nonlinear equality constraints
- const RealVector & nonlinear_ineq_constraint_lower_bounds () const
  return the nonlinear inequality constraint lower bounds
- void nonlinear_ineq_constraint_lower_bounds (const RealVector &nln_ineq_l_bnds)
  set the nonlinear inequality constraint lower bounds
- const RealVector & nonlinear_ineq_constraint_upper_bounds () const
  return the nonlinear inequality constraint upper bounds
- void nonlinear_ineq_constraint_upper_bounds (const RealVector &nln_ineq_u_bnds)
  set the nonlinear inequality constraint upper bounds
- const RealVector & nonlinear_eq_constraint_targets () const
  return the nonlinear equality constraint targets
- void nonlinear_eq_constraint_targets (const RealVector &nln_eq_targets)
  set the nonlinear equality constraint targets
- Constraints copy () const
  for use when a deep copy is needed (the representation is _not_ shared)
- void reshape (const size_t &num_nln_ineq_cons, const size_t &num_nln_eq_cons, const size_t &num_-lin_ineq_cons, const size_t &num_lin_eq_cons)
  Constraints hierarchy.
- void reshape (const Sizet2DArray &vars_comps)
  reshape the bounds arrays within the Constraints hierarchy
- bool is_null () const
  function to check constraintsRep (does this envelope contain a letter)

Protected Member Functions

- Constraints (BaseConstructor, const ProblemDescDB &problem_db, const pair< short, short > &view)
  derived class constructors - Coplien, p. 139)
- virtual void copy_rep (const Constraints *con_rep)
  Used by copy() to copy the contents of a letter class.
- virtual void reshape_rep (const Sizet2DArray &vars_comps)
  Used by reshape(Sizet2DArray&) to rehape the contents of a letter class.
- void manage_linear_constraints (const ProblemDescDB &problem_db)
  coefficient input to matrices, and assign defaults

Protected Attributes

- pair< short, short > variablesView
  view enumerations
- size_t numNonlinearIneqCons
  number of nonlinear inequality constraints
- size_t numNonlinearEqCons
  number of nonlinear equality constraints
- RealVector nonlinearIneqConLowerBnds
  nonlinear inequality constraint lower bounds
- RealVector nonlinearIneqConUpperBnds
  nonlinear inequality constraint upper bounds
- RealVector nonlinearEqConTargets
  nonlinear equality constraint targets
- size_t numLinearIneqCons
  number of linear inequality constraints
- size_t numLinearEqCons
  number of linear equality constraints
- RealMatrix linearIneqConCoeffs
  linear inequality constraint coefficients
- RealMatrix linearEqConCoeffs
  linear equality constraint coefficients

- RealVector linearIneqConLowerBnds

  linear inequality constraint lower bounds

- RealVector linearIneqConUpperBnds

  linear inequality constraint upper bounds

- RealVector linearEqConTargets

  linear equality constraint targets

- RealVector emptyRealVector

  no variable constraints corresponding to the request

- IntVector emptyIntVector

  no variable constraints corresponding to the request

Private Member Functions

- Constraints * get_constraints (const ProblemDescDB &problem_db, const pair< short, short > &view)

  appropriate derived type.

- Constraints * get_constraints (const pair< short, short > &view) const

  derived type.

Private Attributes

- Constraints * constraintsRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing constraintsRep

8.26.1 Detailed Description

Base class for the variable constraints class hierarchy.

The Constraints class is the base class for the class hierarchy managing bound, linear, and nonlinear constraints. Using the variable lower and upper bounds arrays from the input specification, different derived classes define different views of this data. The linear and nonlinear constraint data is consistent in all views and is managed at the base class level. For memory efficiency and enhanced polymorphism, the variable constraints hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (Constraints) serves as the envelope and one of the derived classes (selected in Constraints::get_constraints()) serves as the letter.

8.26.2 Constructor & Destructor Documentation

8.26.2.1 Constraints ()

default constructor

The default constructor: constraintsRep is NULL in this case (a populated problem_db is needed to build a meaningful Constraints object). This makes it necessary to check for NULL in the copy constructor, assignment operator, and destructor.

8.26.2.2 Constraints (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*)

standard constructor

The envelope constructor only needs to extract enough data to properly execute get_constraints, since the constructor overloaded with BaseConstructor builds the actual base class data inherited by the derived classes.

8.26.2.3 Constraints (const pair< short, short > & *view*)

alternate constructor for instantiations on the fly

Envelope constructor for instantiations on the fly.

8.26.2.4 Constraints (const Constraints & *con*)

copy constructor

Copy constructor manages sharing of constraintsRep and incrementing of referenceCount.

8.26.2.5 ~Constraints () [virtual]

destructor

Destructor decrements referenceCount and only deletes constraintsRep when referenceCount reaches zero.

8.26.2.6 Constraints (BaseConstructor, const ProblemDescDB & *problem_db*, const pair< short, short > & *view*) [protected]

derived class constructors - Coplien, p. 139)

This constructor is the one which must build the base class data for all derived classes. get_constraints() instantiates a derived class letter and the derived constructor selects this base class constructor in its initialization list (to avoid recursion in the base class constructor calling get_constraints() again). Since the letter IS the representation, its rep pointer is set to NULL (an uninitialized pointer causes problems in ~Constraints).

8.26.3 Member Function Documentation

8.26.3.1 Constraints operator= (const Constraints & *con*)

assignment operator

Assignment operator decrements referenceCount for old constraintsRep, assigns new constraintsRep, and increments referenceCount for new constraintsRep.

8.26.3.2 Constraints copy () const

for use when a deep copy is needed (the representation is _not_ shared)

Deep copies are used for history mechanisms such as bestVariables and data_pairs since these must catalogue copies (and should not change as the representation within currentVariables changes).

8.26.3.3 void reshape (const size_t & *num_nln_ineq_cons*, const size_t & *num_nln_eq_cons*, const size_t & *num_lin_ineq_cons*, const size_t & *num_lin_eq_cons*)

Constraints hierarchy.

Resizes the linear and nonlinear constraint arrays at the base class. Does NOT currently resize the derived bounds arrays.

8.26.3.4 void reshape (const Sizet2DArray & *vars_comps*)

reshape the bounds arrays within the Constraints hierarchy

Resizes the derived bounds arrays.

8.26.3.5 void manage_linear_constraints (const ProblemDescDB & *problem_db*) `[protected]`

coefficient input to matrices, and assign defaults

Convenience function called from derived class constructors. The number of variables active for applying linear constraints is currently defined to be the number of active continuous variables plus the number of active discrete variables (the most general case), even though very few optimizers can currently support mixed variable linear constraints.

8.26.3.6 Constraints * get_constraints (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*) `[private]`

appropriate derived type.

Initializes constraintsRep to the appropriate derived type, as given by the variables view.

8.26.3.7 Constraints * get_constraints (const pair< short, short > & *view*) const [private]

derived type.

Initializes constraintsRep to the appropriate derived type, as given by the variables view. The default derived class constructors are invoked.

The documentation for this class was generated from the following files:

- DakotaConstraints.H
- DakotaConstraints.C

8.27 CtelRegexp Class Reference

Public Types

- enum RStatus {
  GOOD = 0, **EXP_TOO_BIG**, **OUT_OF_MEM**, **TOO_MANY_PAR**, **UNMATCH_PAR**, **STARPLUS_EMPTY**, **STARPLUS_NESTED**, **INDEX_RANGE**, **INDEX_MATCH**, **STARPLUS_NOTHING**, **TRAILING**, **INT_ERROR**, **BAD_PARAM**, **BAD_OPCODE** }
  occurs with this implementation.

Public Member Functions

- CtelRegexp (const std::string &pattern)
  Constructor - compile a regular expression.
- ~CtelRegexp ()
  Destructor.
- bool compile (const std::string &pattern)
  Compile a new regular expression.
- std::string match (const std::string &str)
  that is a sub-string matching with the regular expression
- bool match (const std::string &str, size_t *start, size_t *size)
  another form of matching; returns the indexes of the maching
- RStatus getStatus ()
  Get status.
- const std::string & getStatusMsg ()
  Get status message.
- void clearErrors ()
  Clear all errors.
- const std::string & getRe ()
  Return regular expression pattern.
- bool split (const std::string &str, std::vector< std::string > &all_matches)

Split.

Private Member Functions

- CtelRegexp (const CtelRegexp &)

  Private copy constructor.

- CtelRegexp & operator= (const CtelRegexp &)

  Private assignment operator.

Private Attributes

- std::string strPattern

  STL string to hold pattern.

- regexp * r

  Pointer to regexp.

- RStatus status

  Return status, enumerated type.

- std::string statusMsg

  STL string to hold status message.

8.27.1 Detailed Description

DESCRIPTION: Wrapper for the Regular Expression engine(regexp) released by Henry Spencer of the University of Toronto.

The documentation for this class was generated from the following files:

- CtelRegExp.H
- CtelRegExp.C

8.28 DataFitSurrModel Class Reference

data fit surrogates (global and local)

Inheritance diagram for DataFitSurrModel::

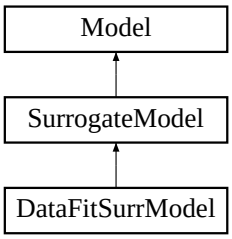

Public Member Functions

- DataFitSurrModel (ProblemDescDB &problem_db)

  constructor

- DataFitSurrModel (Iterator &dace_iterator, Model &actual_model, const pair< short, short > &view, const ActiveSet &set, const String &approx_type, const short &approx_order, const String &corr_type, const short &corr_order, const String &sample_reuse)

  alternate constructor for instantiations on the fly

- ~DataFitSurrModel ()

  destructor

Protected Member Functions

- void derived_compute_response (const ActiveSet &set)

  portion of compute_response() specific to DataFitSurrModel

- void derived_asynch_compute_response (const ActiveSet &set)

  portion of asynch_compute_response() specific to DataFitSurrModel

- const ResponseArray & derived_synchronize ()

  portion of synchronize() specific to DataFitSurrModel

- const IntResponseMap & derived_synchronize_nowait ()

  portion of synchronize_nowait() specific to DataFitSurrModel

- Iterator & subordinate_iterator ()

  return daceIterator

- Model & surrogate_model ()

  return this model instance

- Model & truth_model ()

  return actualModel

- void derived_subordinate_models (ModelList &ml, bool recurse_flag)

  return actualModel (and optionally its sub-models)

- void update_from_subordinate_model (bool recurse_flag=true)

  pass request to actualModel if recursing and then update from it

- Interface & interface ()

  return approxInterface

- void surrogate_bypass (bool bypass_flag)

  any lower-level surrogates.

- void surrogate_function_indices (const IntSet &surr_fn_indices)

  and ApproximationInterface::approxFnIndices

- void build_approximation ()

  daceIterator/actualModel to generate new data points

- bool build_approximation (const Variables &vars, const Response &response)

  augment the vars/response anchor point

- void update_approximation (const Variables &vars, const Response &response, bool rebuild_flag)

  approximation if requested

- void update_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array, bool rebuild_flag)

  approximation if requested

- void append_approximation (const Variables &vars, const Response &response, bool rebuild_flag)

  requested (requests forwarded to approxInterface)

- void append_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array, bool rebuild_flag)

  rebuilds it if requested (requests forwarded to approxInterface)

- Array< Approximation > & approximations ()

  retrieve the set of Approximations from approxInterface

- const RealVectorArray & approximation_coefficients ()

  (request forwarded to approxInterface)

- void approximation_coefficients (const RealVectorArray &approx_coeffs)

  (request forwarded to approxInterface)

- void print_coefficients (ostream &s, size_t index) const

  (request forwarded to approxInterface)

- const RealVector & approximation_variances (const RealVector &c_vars)

  (request forwarded to approxInterface)

- const List< SurrogateDataPoint > & approximation_data (size_t index)

  (request forwarded to approxInterface)

- void component_parallel_mode (short mode)

  update component parallel mode for supporting parallelism in actualModel

- void derived_init_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  set up actualModel for parallel operations

- void derived_init_serial ()

  set up actualModel for serial operations.

- void derived_set_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  set active parallel configuration within actualModel

- void derived_free_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  (request forwarded to actualModel)

- void serve ()

  Completes when a termination message is received from stop_servers().

- void stop_servers ()

  when DataFitSurrModel iteration is complete.

- const String & interface_id () const

  return the approxInterface identifier

- int evaluation_id () const

  return the current evaluation id for the DataFitSurrModel

- void set_evaluation_reference ()

  (request forwarded to approxInterface and actualModel)

- void fine_grained_evaluation_counters ()

  and actualModel

- void print_evaluation_summary (ostream &s, bool minimal_header=false, bool relative_count=true) const

  (request forwarded to approxInterface and actualModel)

Private Member Functions

- void update_global ()

  Updates fit arrays for global approximations.

- void update_local_multipoint ()

  Updates fit arrays for local or multipoint approximations.

- void build_global ()

  Builds a global approximation using daceIterator.

- void build_local_multipoint ()

  Builds a local or multipoint approximation using actualModel.

- void update_actual_model ()

  update actualModel with data from current variables/labels/bounds/targets

- void update_from_actual_model ()

  update current variables/labels/bounds/targets with data from actualModel

- bool inside (const RealVector &c_vars, const IntVector &d_vars)

  [d_l_bnds,d_u_bnds]

Private Attributes

- int surrModelEvals

  derived_asynch_compute_response()

- String sampleReuse

  (default if samples file), or `none` *(default if no samples file)*

- String sampleReuseFile

  file name for `samples_file` *specification*

- VariablesList reuseFileVars

  array of variables sets read from the `samples_file`

- ResponseList reuseFileResponses
  array of response sets read from the `samples_file`
- Interface approxInterface
  (required for both global and local)
- Model actualModel
  (optional for global, required for local)
- Iterator daceIterator
  (optional for global since restart data may also be used)

8.28.1 Detailed Description

data fit surrogates (global and local)

The DataFitSurrModel class manages global or local approximations (surrogates that involve data fits) that are used in place of an expensive model. The class contains an approxInterface (required for both global and local) which manages the approximate function evaluations, an actualModel (optional for global, required for local) which provides truth evaluations for building the surrogate, and a daceIterator (optional for global, not used for local) which selects parameter sets on which to evaluate actualModel in order to generate the necessary data for building global approximations.

8.28.2 Member Function Documentation

8.28.2.1 void derived_compute_response (const ActiveSet & *set*) `[protected, virtual]`

portion of compute_response() specific to DataFitSurrModel

Compute the response synchronously using actualModel, approxInterface, or both (mixed case). For the approxInterface portion, build the approximation if needed, evaluate the approximate response, and apply correction (if active) to the results.

Reimplemented from Model.

8.28.2.2 void derived_asynch_compute_response (const ActiveSet & *set*) `[protected, virtual]`

portion of asynch_compute_response() specific to DataFitSurrModel

Compute the response asynchronously using actualModel, approxInterface, or both (mixed case). For the approxInterface portion, build the approximation if needed and evaluate the approximate response in a quasi-asynchronous approach (ApproximationInterface::map() performs the map synchronously and bookkeeps the results for return in derived_synchronize() below).

Reimplemented from Model.

8.28.2.3 const ResponseArray & derived_synchronize () [protected, virtual]

portion of synchronize() specific to DataFitSurrModel

Blocking retrieval of asynchronous evaluations from actualModel, approxInterface, or both (mixed case). For the approxInterface portion, apply correction (if active) to each response in the array. derived_synchronize() is designed for the general case where derived_asynch_compute_response() may be inconsistent in its use of actual evaluations, approximate evaluations, or both.

Reimplemented from Model.

8.28.2.4 const IntResponseMap & derived_synchronize_nowait () [protected, virtual]

portion of synchronize_nowait() specific to DataFitSurrModel

Nonblocking retrieval of asynchronous evaluations from actualModel, approxInterface, or both (mixed case). For the approxInterface portion, apply correction (if active) to each response in the map. derived_synchronize_nowait() is designed for the general case where derived_asynch_compute_response() may be inconsistent in its use of actual evals, approx evals, or both.

Reimplemented from Model.

8.28.2.5 void build_approximation () [protected, virtual]

daceIterator/actualModel to generate new data points

This function constructs a new approximation, discarding any previous data. It constructs any required currentPoints and does not define an anchorPoint.

Reimplemented from Model.

8.28.2.6 bool build_approximation (const Variables & *vars*, const Response & *response*) [protected, virtual]

augment the vars/response anchor point

This function constructs a new approximation, discarding any previous data. It uses the passed data to populate the anchorPoint and constructs any required currentPoints.

Reimplemented from Model.

8.28.2.7 void update_approximation (const Variables & *vars*, const Response & *response*, bool *rebuild_flag*) [protected, virtual]

approximation if requested

This function populates/replaces Approximation::anchorPoint and rebuilds the approximation, if requested. It does not clear other data (i.e., Approximation::currentPoints) and does not update the actualModel with revised bounds, labels, etc. Thus, it updates data from a previous call to build_approximation(), and is not intended to be used in isolation.

Reimplemented from Model.

8.28.2.8 void update_approximation (const VariablesArray & *vars_array*, const ResponseArray & *resp_array*, bool *rebuild_flag*) [protected, virtual]

approximation if requested

This function populates/replaces Approximation::currentPoints and rebuilds the approximation, if requested. It does not clear other data (i.e., Approximation::anchorPoint) and does not update the actualModel with revised bounds, labels, etc. Thus, it updates data from a previous call to build_approximation(), and is not intended to be used in isolation.

Reimplemented from Model.

8.28.2.9 void append_approximation (const Variables & *vars*, const Response & *response*, bool *rebuild_flag*) [protected, virtual]

requested (requests forwarded to approxInterface)

This function appends one point to Approximation::currentPoints and rebuilds the approximation, if requested. It does not modify other data (i.e., Approximation::anchorPoint) and does not update the actualModel with revised bounds, labels, etc. Thus, it appends to data from a previous call to build_approximation(), and is not intended to be used in isolation.

Reimplemented from Model.

8.28.2.10 void append_approximation (const VariablesArray & *vars_array*, const ResponseArray & *resp_array*, bool *rebuild_flag*) [protected, virtual]

rebuilds it if requested (requests forwarded to approxInterface)

This function appends multiple points to Approximation::currentPoints and rebuilds the approximation, if requested. It does not modify other data (i.e., Approximation::anchorPoint) and does not update the actualModel with revised bounds, labels, etc. Thus, it appends to data from a previous call to build_approximation(), and is not intended to be used in isolation.

Reimplemented from Model.

8.28.2.11 void derived_init_communicators (const int & *max_iterator_concurrency*, bool *recurse_flag* = true) [inline, protected, virtual]

set up actualModel for parallel operations

asynchronous flags need to be initialized for the sub-models. In addition, max_iterator_concurrency is the outer level iterator concurrency, not the DACE concurrency that actualModel will see, and recomputing the message_-lengths on the sub-model is probably not a bad idea either. Therefore, recompute everything on actualModel using init_communicators.

Reimplemented from Model.

8.28.2.12 int evaluation_id () const [inline, protected, virtual]

return the current evaluation id for the DataFitSurrModel

return the DataFitSurrModel evaluation count. Due to possibly intermittent use of surrogate bypass, this is not the same as either the approxInterface or actualModel model evaluation counts. It also does not distinguish duplicate evals.

Reimplemented from Model.

8.28.2.13 void build_global () [private]

Builds a global approximation using daceIterator.

Determine sample points to use in building the approximation and then evaluate them on actualModel using daceIterator. Any changes to the bounds should be performed by setting them at a higher level (e.g., SurrBasedOptStrategy).

8.28.2.14 void build_local_multipoint () [private]

Builds a local or multipoint approximation using actualModel.

Evaluate the value, gradient, and possibly Hessian needed for a local or multipoint approximation using actualModel.

8.28.2.15 void update_actual_model () [private]

update actualModel with data from current variables/labels/bounds/targets

Update variables and constraints data within actualModel using values and labels from currentVariables and bound/linear/nonlinear constraints from userDefinedConstraints.

8.28.2.16 void update_from_actual_model () [private]

update current variables/labels/bounds/targets with data from actualModel

Update values and labels in currentVariables and bound/linear/nonlinear constraints in userDefinedConstraints from variables and constraints data within actualModel.

8.28.3 Member Data Documentation

8.28.3.1 Model actualModel [private]

(optional for global, required for local)

actualModel is unrestricted in type; arbitrary nestings are possible.

The documentation for this class was generated from the following files:

- DataFitSurrModel.H
- DataFitSurrModel.C

8.29 DataInterface Class Reference

Handle class for interface specification data.

Public Member Functions

- DataInterface ()
  constructor
- DataInterface (const DataInterface &)
  copy constructor
- ~DataInterface ()
  destructor
- DataInterface & operator= (const DataInterface &)
  assignment operator
- void write (ostream &s) const
  write a DataInterface object to an ostream
- void read (MPIUnpackBuffer &s)
  read a DataInterface object from a packed MPI buffer
- void write (MPIPackBuffer &s) const
  write a DataInterface object to a packed MPI buffer

Public Attributes

- DataInterfaceRep * dataIfaceRep
  pointer to the body (handle-body idiom)

8.29.1 Detailed Description

Handle class for interface specification data.

The DataInterface class is used to provide a memory management handle for the data in DataInterfaceRep. It is populated by IDRProblemDescDB::interface_kwhandler() and is queried by the ProblemDescDB::get_-<datatype>() functions. A list of DataInterface objects is maintained in ProblemDescDB::dataInterfaceList, one for each interface specification in an input file.

The documentation for this class was generated from the following files:

- DataInterface.H
- DataInterface.C

8.30 DataMethod Class Reference

Handle class for method specification data.

Public Member Functions

- DataMethod ()
  constructor
- DataMethod (const DataMethod &)
  copy constructor
- ~DataMethod ()
  destructor
- DataMethod & operator= (const DataMethod &)
  assignment operator
- void write (ostream &s) const
  write a DataMethod object to an ostream
- void read (MPIUnpackBuffer &s)
  read a DataMethod object from a packed MPI buffer
- void write (MPIPackBuffer &s) const
  write a DataMethod object to a packed MPI buffer

Public Attributes

- DataMethodRep * dataMethodRep
  pointer to the body (handle-body idiom)

8.30.1 Detailed Description

Handle class for method specification data.

The DataMethod class is used to provide a memory management handle for the data in DataMethodRep. It is populated by IDRProblemDescDB::method_kwhandler() and is queried by the ProblemDescDB::get_<datatype>() functions. A list of DataMethod objects is maintained in ProblemDescDB::dataMethodList, one for each method specification in an input file.

The documentation for this class was generated from the following files:

- DataMethod.H
- DataMethod.C

8.31 DataMethodRep Class Reference

Body class for method specification data.

Public Attributes

- String idMethod

  the `id_method` *specification in* **MethodIndControl***)*

- String modelPointer

  (from the `model_pointer` *specification in* **MethodIndControl***)*

- short methodOutput

  (from the `output` *specification in* **MethodIndControl***)*

- int maxIterations

  max_iterations specification in **MethodIndControl***)*

- int maxFunctionEvaluations

  the `max_function_evaluations` *specification in* **MethodIndControl***)*

- bool speculativeFlag

  (from the `speculative` *specification in* **MethodIndControl***)*

- Real convergenceTolerance

  convergence_tolerance specification in **MethodIndControl***)*

- Real constraintTolerance

  constraint_tolerance specification in **MethodIndControl***)*

- bool methodScaling

  MethodIndControl*)*

- RealVector linearIneqConstraintCoeffs

  MethodIndControl).

- RealVector linearIneqLowerBnds

  linear_inequality_lower_bounds specification in **MethodIndControl***)*

- RealVector linearIneqUpperBnds

  linear_inequality_upper_bounds specification in **MethodIndControl***)*

- StringArray linearIneqScaleTypes

  linear_inequality_scale_types specification in **MethodIndControl***)*

- RealVector linearIneqScales

  linear_inequality_scales specification in **MethodIndControl***)*

- RealVector linearEqConstraintCoeffs

  MethodIndControl).

- RealVector linearEqTargets

  linear_equality_targets specification in **MethodIndControl***)*

- StringArray linearEqScaleTypes

  linear_equality_scale_types specification in **MethodIndControl***)*

- RealVector linearEqScales

  linear_equality_scales specification in **MethodIndControl***)*

- String methodName

  or parameter study methods

- String subMethodName

  (from the `sub_method_name` *specification in SBL/SBG)*

- String subMethodPointer

  method (from the `sub_method_pointer` *specification in SBL/SBG)*

- int surrBasedLocalSoftConvLimit

  soft_convergence_limit specification in **MethodSBL***)*

- bool surrBasedLocalLayerBypass

  layerings in evaluating truth response values in SBL.

- Real surrBasedLocalTRInitSize

  distance (upper bound - lower bound) for each variable

- Real surrBasedLocalTRMinSize

  regions)

- Real surrBasedLocalTRContractTrigger

  this value ("eta_1" in the Conn-Gould-Toint trust region book)

- Real surrBasedLocalTRExpandTrigger

  value ("eta_2" in the Conn-Gould-Toint trust region book)

- Real surrBasedLocalTRContract

(from the `contraction_factor` *specification in* **MethodSBL***)*

- Real surrBasedLocalTRExpand

  (from the `expansion_factor` *specification in* **MethodSBL***)*

- short surrBasedLocalSubProbObj

  LAGRANGIAN_OBJECTIVE, or AUGMENTED_LAGRANGIAN_OBJECTIVE.

- short surrBasedLocalSubProbCon

  LINEARIZED_CONSTRAINTS, or ORIGINAL_CONSTRAINTS.

- short surrBasedLocalMeritFn

  BASIC_LAGRANGIAN, or AUGMENTED_LAGRANGIAN.

- short surrBasedLocalAcceptLogic

  SBL iterate acceptance logic: TR_RATIO or FILTER.

- short surrBasedLocalConstrRelax

  SBL constraint relaxation method: NO_RELAX or HOMOTOPY.

- bool surrBasedGlobalReplacePts

  next surrogate is based in the `surrogate_based_global` *strategy.*

- String minMaxType

  the `optimization_type` *specification in* **MethodDOTDC**

- String dlDetails

  string of options for a dynamically linked solver

- int verifyLevel

  the `verify_level` *specification in* **MethodNPSOLDC**

- Real functionPrecision

  the `function_precision` *specification in* **MethodNPSOLDC**

- Real lineSearchTolerance

  the `linesearch_tolerance` *specification in* **MethodNPSOLDC**

- Real absConvTol

  absolute function convergence tolerance

- Real xConvTol

  x-convergence tolerance

- Real singConvTol

  singular convergence tolerance

- Real singRadius

  radius for singular convergence test

- Real falseConvTol

  false-convergence tolerance

- Real initTRRadius

  initial trust radius

- int covarianceType

  kind of covariance required

- bool regressDiag

  whether to print the regression diagnostic vector

- String searchMethod

  interior-point methods in **MethodOPTPPDC**

- Real gradientTolerance

  the `gradient_tolerance` *specification in* **MethodOPTPPDC**

- Real maxStep

  the `max_step` *specification in* **MethodOPTPPDC**

- String meritFn

  interior-point methods in **MethodOPTPPDC**

- String centralPath

  methods in **MethodOPTPPDC**

- Real stepLenToBoundary

  interior-point methods in **MethodOPTPPDC**

- Real centeringParam

  interior-point methods in **MethodOPTPPDC**

- int searchSchemeSize

  MethodOPTPPDC

- Real initStepLength

  MethodAPPSDC

- Real contractStepLength

  MethodAPPSDC

- Real threshStepLength

  MethodAPPSDC

- Real solnTarget

  MethodAPPSDC

- String evalSynchronize

  MethodAPPSDC

- String meritFunction

  MethodAPPSDC

- Real constrPenalty

  MethodAPPSDC

- Real smoothFactor

  MethodAPPSDC

- String evalSynchronization

  methods in **MethodCOLINYPS** *and* **MethodAPPS**

- Real constraintPenalty

  MethodCOLINYSW *and* **MethodCOLINYEA**

- bool constantPenalty

  MethodCOLINYPS *and* **MethodCOLINYSW**

- Real globalBalanceParam

  MethodCOLINYDIR

- Real localBalanceParam

  MethodCOLINYDIR

- Real maxBoxSize

  the `max_boxsize_limit` *for the DIRECT method in* **MethodCOLINYDIR**

- Real minBoxSize

  and **MethodNCSUDC**

- String boxDivision

  the DIRECT method in **MethodCOLINYDIR**

- bool mutationAdaptive

  MethodCOLINYEA

- bool showMiscOptions

the `show_misc_options` *specification in* **MethodCOLINYDC**

- StringArray miscOptions

  the `misc_options` *specification in* **MethodCOLINYDC**

- Real solnAccuracy

  the `solution_accuracy` *specification in* **MethodCOLINYDC**

- Real crossoverRate

  the `crossover_rate` *specification for EA methods in* **MethodCOLINYEA**

- Real mutationRate

  the `mutation_rate` *specification for EA methods in* **MethodCOLINYEA**

- Real mutationScale

  the `mutation_scale` *specification for EA methods in* **MethodCOLINYEA**

- Real mutationMinScale

  MethodCOLINYEA

- Real initDelta

  MethodCOLINYSW

- Real threshDelta

  MethodCOLINYSW

- Real contractFactor

  MethodAPPS, **MethodCOLINYPS**, *and* **MethodCOLINYSW**

- int newSolnsGenerated

  in **MethodCOLINYEA**

- int numberRetained

  MethodCOLINYEA.

- bool expansionFlag

  MethodAPPS, **MethodCOLINYPS**, *and* **MethodCOLINYSW**

- int expandAfterSuccess

  MethodCOLINYPS *and* **MethodCOLINYSW**

- int contractAfterFail

  MethodCOLINYSW

- int mutationRange

  MethodCOLINYEA

- int totalPatternSize

  MethodCOLINYPS

- bool randomizeOrderFlag

  the `stochastic` *specification for the PS method in* **MethodCOLINYPS**

- String selectionPressure

  the `fitness_type` *specification for EA methods in* **MethodCOLINYEA**

- String replacementType

  MethodCOLINYEA

- String crossoverType

  the `crossover_type` *specification for EA methods in* **MethodCOLINYEA**

- String mutationType

  the `mutation_type` *specification for EA methods in* **MethodCOLINYEA**

- String exploratoryMoves

  MethodCOLINYPS

- String patternBasis

  MethodAPPS *and* **MethodCOLINYPS**

- size_t numCrossPoints

  The number of crossover points or multi-point schemes.

- size_t numParents

  The number of parents to use in a crossover operation.

- size_t numOffspring

  The number of children to produce in a crossover operation.

- String fitnessType

  the fitness assessment operator to use.

- String convergenceType

  The means by which this JEGA should converge.

- Real percentChange

  for a fitness tracker converger.

- size_t numGenerations

  tracker converger should track.

- Real fitnessLimit

  below_limit selector).

- Real shrinkagePercent

  must take place on each call to the selector (0, 1).

- String nichingType

  The niching type.

- RealVector nicheVector

  The discretization percentage along each objective.

- String postProcessorType

  The post processor type.

- RealVector distanceVector

  The discretization percentage along each objective.

- String initializationType

  The means by which the JEGA should initialize the population.

- String flatFile

  The filename to use for initialization.

- String logFile

  The filename to use for logging.

- int populationSize

  MethodCOLINYEA.

- bool printPopFlag

  at each generation

- Real volBoxSize

  the `volume_boxsize_limit` *for the DIRECT method in* **MethodNCSUDC**

- String daceMethod

  dace specification in **MethodDDACE***)*

- int numSymbols

  the `symbols` *specification for DACE methods*

- bool mainEffectsFlag

  in **MethodDDACE***)*

- bool latinizeFlag

MethodFSUDACE

- bool volQualityFlag

  and CVT methods in **MethodFSUDACE***)*

- bool varBasedDecompFlag

  and CVT methods in **MethodFSUDACE***)*

- IntVector sequenceStart

  the `sequenceStart` *specification in* **MethodFSUDACE**

- IntVector sequenceLeap

  the `sequenceLeap` *specification in* **MethodFSUDACE**

- IntVector primeBase

  the `primeBase` *specification in* **MethodFSUDACE**

- int numTrials

  the `numTrials` *specification in* **MethodFSUDACE**

- String trialType

  the `trial_type` *specification in* **MethodFSUDACE**

- int randomSeed

  the `seed` *specification for COLINY, NonD, & DACE methods*

- int numSamples

  the `samples` *specification for NonD & DACE methods*

- bool fixedSeedFlag

  stencil/pattern throughout a strategy with repeated sampling.

- bool fixedSequenceFlag

  stencil/pattern throughout a strategy with repeated sampling.

- int previousSamples

  the number of previous samples when augmenting a LHS sample

- int expansionTerms

  the `expansion_terms` *specification in* **MethodNonDPCE**

- short expansionOrder

  the `expansion_order` *specification in* **MethodNonDPCE**

- int expansionSamples

  the `expansion_samples` *specification in* **MethodNonDPCE**

- String expansionSampleType

  incremental_lhs specification in **MethodNonDPCE**

- UShortArray quadratureOrder

  MethodNonDSC

- UShortArray sparseGridLevel

  MethodNonDSC

- int collocationPoints

  the `collocation_points` *specification in* **MethodNonDPCE**

- Real collocationRatio

  the `collocation_ratio` *specification in* **MethodNonDPCE**

- String collocSampleReuse

  reuse_samples specification in **MethodNonDPCE**

- String expansionImportFile

  the `expansion_import_file` *specification in* **MethodNonDPCE**

- String sampleType

  MethodNonDPCE.

- String reliabilitySearchType

  MethodNonDGlobalRel *(*`x_gaussian_process` *or* `u_gaussian_process`*)*

- String reliabilitySearchAlgorithm

  by `sqp` *or* `nip` *in* **MethodNonDLocalRel**

- String reliabilityIntegration

  MethodNonDLocalRel

- String reliabilityIntegrationRefine

  integration refinement selection in **MethodNonDLocalRel**

- String distributionType

  and **MethodNonDGlobalRel**

- String responseLevelMappingType

  MethodNonDLocalRel, *and* **MethodNonDGlobalRel**

- RealVectorArray responseLevels

  MethodNonDPCE, **MethodNonDLocalRel**, *and* **MethodNonDGlobalRel**

- RealVectorArray probabilityLevels

  MethodNonDPCE, **MethodNonDLocalRel**, *and* **MethodNonDGlobalRel**

- RealVectorArray reliabilityLevels

  MethodNonDPCE, *and* **MethodNonDLocalRel**

- RealVectorArray genReliabilityLevels

  MethodNonDPCE, **MethodNonDLocalRel**, *and* **MethodNonDGlobalRel**

- bool allVarsFlag

  the `all_variables` *specification in* **MethodNonDMC**

- short paramStudyType

  centered(4), or multidim(5)

- RealVector finalPoint

  the `final_point` *specification in* **MethodPSVPS**

- RealVector stepVector

  the `step_vector` *specification in* **MethodPSVPS**

- Real stepLength

  the `step_length` *specification in* **MethodPSVPS**

- int numSteps

  the `num_steps` *specification in* **MethodPSVPS**

- RealVector listOfPoints

  the `list_of_points` *specification in* **MethodPSLPS**

- Real percentDelta

  the `percent_delta` *specification in* **MethodPSCPS**

- int deltasPerVariable

  the `deltas_per_variable` *specification in* **MethodPSCPS**

- IntArray varPartitions

  MethodPSMPS.

Private Member Functions

- DataMethodRep ()

  constructor

- ~DataMethodRep ()

destructor

- void write (ostream &s) const

  write a DataInterfaceRep object to an ostream

- void read (MPIUnpackBuffer &s)

  read a DataInterfaceRep object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a DataInterfaceRep object to a packed MPI buffer

Private Attributes

- int referenceCount

  number of handle objects sharing this dataMethodRep

Friends

- class DataMethod

  the handle class can access attributes of the body class directly

8.31.1 Detailed Description

Body class for method specification data.

The DataMethodRep class is used to contain the data from a method keyword specification. Default values are managed in the DataMethodRep constructor. Data is public to avoid maintaining set/get functions, but is still encapsulated within ProblemDescDB since ProblemDescDB::dataMethodList is private (a similar approach is used with SurrogateDataPoint objects contained in Dakota::Approximation).

The documentation for this class was generated from the following files:

- DataMethod.H
- DataMethod.C

8.32 DataModel Class Reference

Handle class for model specification data.

Public Member Functions

- DataModel ()
  constructor
- DataModel (const DataModel &)
  copy constructor
- ~DataModel ()
  destructor
- DataModel & operator= (const DataModel &)
  assignment operator
- void write (ostream &s) const
  write a DataModel object to an ostream
- void read (MPIUnpackBuffer &s)
  read a DataModel object from a packed MPI buffer
- void write (MPIPackBuffer &s) const
  write a DataModel object to a packed MPI buffer

Public Attributes

- DataModelRep * dataModelRep
  pointer to the body (handle-body idiom)

8.32.1 Detailed Description

Handle class for model specification data.

The DataModel class is used to provide a memory management handle for the data in DataModelRep. It is populated by IDRProblemDescDB::model_kwhandler() and is queried by the ProblemDescDB::get_<datatype>() functions. A list of DataModel objects is maintained in ProblemDescDB::dataModelList, one for each model specification in an input file.

The documentation for this class was generated from the following files:

- DataModel.H
- DataModel.C

8.33 DataModelRep Class Reference

Body class for model specification data.

Public Attributes

- String idModel

  the `id_model` *specification in* **ModelIndControl***)*

- String modelType

  specification in **ModelIndControl***)*

- String variablesPointer

  (from the `variables_pointer` *specification in* **ModelIndControl***)*

- String interfacePointer

  the `optional_interface_pointer` *specification in* **ModelNested***)*

- String responsesPointer

  (from the `responses_pointer` *specification in* **ModelIndControl***)*

- String subMethodPointer

  ModelNested*)*

- IntSet surrogateFnIndices

  array specifying the response function set that is approximated

- String surrogateType

  polynomial,kriging), or hierarchical

- String truthModelPointer

  specification in **ModelSurrH***)*

- String lowFidelityModelPointer

  specification in **ModelSurrH***)*

- String approxSampleReuse

  ModelSurrG*)*

- String approxSampleReuseFile

  specification in **ModelSurrG**

- String approxCorrectionType

  in **ModelSurrG** *and* **ModelSurrH***)*

- short approxCorrectionOrder

  and **ModelSurrH***)*

- bool approxGradUsageFlag

  (from the `use_gradients` *specification in* **ModelSurrG***)*

- short polynomialOrder

  in **ModelSurrG***)*

- RealVector krigingCorrelations

  (from the `correlations` *specification in* **ModelSurrG***)*

- RealVector krigingConminSeed

  (from the `correlations` *specification in* **ModelSurrG***)*

- short krigingMaxTrials

  maximum number of trials in optimization of kriging correlations

- RealVector krigingMaxCorrelations

  upper bound on kriging correlation vector

- RealVector krigingMinCorrelations

  lower bound on kriging correlation vector

- short mlsPolyOrder

  polynomial order for moving least squares approximation

- short mlsWeightFunction

  weight function for moving least squares approximation

- short rbfBases

  bases for radial basis function approximation

- short rbfMaxPts

  maximum number of points for radial basis function approximation

- short rbfMaxSubsets

  maximum number of subsets for radial basis function approximation

- short rbfMinPartition

  minimum partition for radial basis function approximation

- short marsMaxBases

maximum number of bases for MARS approximation

- String marsInterpolation

  interpolation type for MARS approximation

- short annRandomWeight

  random weight for artificial neural network approximation

- short annNodes

  number of nodes for artificial neural network approximation

- Real annRange

  range for artificial neural network approximation

- short trendOrder

  `gaussian_process` *specification in* **ModelSurrG***)*

- bool pointSelection

  flag indicating the use of point selection in the Gaussian process

- StringArray diagMetrics

  goodness of fit for a surrogate model.

- String optionalInterfRespPointer

  optional_interface_responses_pointer specification in **ModelNested***)*

- StringArray primaryVarMaps

  ModelNested*)*

- StringArray secondaryVarMaps

  `secondary_variable_mapping` *specification in* **ModelNested***)*

- RealVector primaryRespCoeffs

  specification in **ModelNested***)*

- RealVector secondaryRespCoeffs

  specification in **ModelNested***)*

Private Member Functions

- DataModelRep ()

  constructor

- ~DataModelRep ()

  destructor

- void write (ostream &s) const

  write a DataModelRep object to an ostream

- void read (MPIUnpackBuffer &s)

  read a DataModelRep object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a DataModelRep object to a packed MPI buffer

Private Attributes

- int referenceCount

  number of handle objects sharing this dataModelRep

Friends

- class DataModel

  the handle class can access attributes of the body class directly

8.33.1 Detailed Description

Body class for model specification data.

The DataModelRep class is used to contain the data from a model keyword specification. Default values are managed in the DataModelRep constructor. Data is public to avoid maintaining set/get functions, but is still encapsulated within ProblemDescDB since ProblemDescDB::dataModelList is private (a similar approach is used with SurrogateDataPoint objects contained in Dakota::Approximation).

The documentation for this class was generated from the following files:

- DataModel.H
- DataModel.C

8.34 DataResponses Class Reference

Handle class for responses specification data.

Public Member Functions

- DataResponses ()
  constructor
- DataResponses (const DataResponses &)
  copy constructor
- ~DataResponses ()
  destructor
- DataResponses & operator= (const DataResponses &)
  assignment operator
- void write (ostream &s) const
  write a DataResponses object to an ostream
- void read (MPIUnpackBuffer &s)
  read a DataResponses object from a packed MPI buffer
- void write (MPIPackBuffer &s) const
  write a DataResponses object to a packed MPI buffer

Public Attributes

- DataResponsesRep * dataRespRep
  pointer to the body (handle-body idiom)

8.34.1 Detailed Description

Handle class for responses specification data.

The DataResponses class is used to provide a memory management handle for the data in DataResponsesRep. It is populated by IDRProblemDescDB::responses_kwhandler() and is queried by the ProblemDescDB::get_-<datatype>() functions. A list of DataResponses objects is maintained in ProblemDescDB::dataResponsesList, one for each responses specification in an input file.

The documentation for this class was generated from the following files:

- DataResponses.H
- DataResponses.C

8.35 DataResponsesRep Class Reference

Body class for responses specification data.

Public Attributes

- size_t numObjectiveFunctions

  num_objective_functions specification in **RespFnOpt***)*

- size_t numNonlinearIneqConstraints

  num_nonlinear_inequality_constraints specification in **RespFnOpt***)*

- size_t numNonlinearEqConstraints

  num_nonlinear_equality_constraints specification in **RespFnOpt***)*

- size_t numLeastSqTerms

  num_least_squares_terms specification in **RespFnLS***)*

- size_t numResponseFunctions

  num_response_functions specification in **RespFnGen***)*

- StringArray primaryRespFnScaleTypes

  the `least_squares_term_scale_types` *specification in* **RespFnLS***)*

- RealVector primaryRespFnScales

  the `least_squares_term_scales` *specification in* **RespFnLS***)*

- RealVector primaryRespFnWeights

  specification in **RespFnLS***)*

- String leastSqDataFile

  RespFnLS*)*

- RealVector nonlinearIneqLowerBnds

  nonlinear_inequality_lower_bounds specification in **RespFnOpt***)*

- RealVector nonlinearIneqUpperBnds

  nonlinear_inequality_upper_bounds specification in **RespFnOpt***)*

- StringArray nonlinearIneqScaleTypes

  nonlinear_inequality_scale_types specification in **RespFnOpt***)*

- RealVector nonlinearIneqScales

  nonlinear_inequality_scales specification in **RespFnOpt***)*

- RealVector nonlinearEqTargets

  nonlinear_equality_targets specification in **RespFnOpt***)*

- StringArray nonlinearEqScaleTypes

  nonlinear_equality_scale_types specification in **RespFnOpt***)*

- RealVector nonlinearEqScales

  nonlinear_equality_scales specification in **RespFnOpt***)*

- String gradientType

  `mixed_gradients` *specifications in* **RespGrad***)*

- String hessianType

  RespHess*)*

- String quasiHessianType

  and `sr1` *specifications in* **RespHess***)*

- String methodSource

  method_source specification in **RespGradNum** *and* **RespGradMixed***)*

- String intervalType

  interval_type specification in **RespGradNum** *and* **RespGradMixed***)*

- RealVector fdGradStepSize

  specification in **RespGradNum** *and* **RespGradMixed***)*

- RealVector fdHessStepSize

  RespHessMixed*)*

- IntList idNumericalGrads

  specification in **RespGradMixed***)*

- IntList idAnalyticGrads

  specification in **RespGradMixed***)*

- IntList idNumericalHessians

  specification in **RespHessMixed***)*

- IntList idQuasiHessians

  specification in **RespHessMixed***)*

- IntList idAnalyticHessians

specification in **RespHessMixed***)*

- String idResponses

  (from the `id_responses` *specification in* **RespSetId***)*

- StringArray responseLabels

  specification in **RespLabels***)*

Private Member Functions

- DataResponsesRep ()

  constructor

- ~DataResponsesRep ()

  destructor

- void write (ostream &s) const

  write a DataResponsesRep object to an ostream

- void read (MPIUnpackBuffer &s)

  read a DataResponsesRep object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a DataResponsesRep object to a packed MPI buffer

Private Attributes

- int referenceCount

  number of handle objects sharing this dataResponsesRep

Friends

- class DataResponses

  the handle class can access attributes of the body class directly

8.35.1 Detailed Description

Body class for responses specification data.

The DataResponsesRep class is used to contain the data from a responses keyword specification. Default values are managed in the DataResponsesRep constructor. Data is public to avoid maintaining set/get functions,

but is still encapsulated within ProblemDescDB since ProblemDescDB::dataResponsesList is private (a similar approach is used with SurrogateDataPoint objects contained in Dakota::Approximation).

The documentation for this class was generated from the following files:

- DataResponses.H
- DataResponses.C

8.36 DataStrategy Class Reference

Handle class for strategy specification data.

Public Member Functions

- DataStrategy ()
  constructor
- DataStrategy (const DataStrategy &)
  copy constructor
- ~DataStrategy ()
  destructor
- DataStrategy & operator= (const DataStrategy &)
  assignment operator
- void write (ostream &s) const
  write a DataStrategy object to an ostream
- void read (MPIUnpackBuffer &s)
  read a DataStrategy object from a packed MPI buffer
- void write (MPIPackBuffer &s) const
  write a DataStrategy object to a packed MPI buffer

Public Attributes

- DataStrategyRep * dataStratRep
  pointer to the body (handle-body idiom)

8.36.1 Detailed Description

Handle class for strategy specification data.

The DataStrategy class is used to provide a memory management handle for the data in DataStrategyRep. It is populated by IDRProblemDescDB::strategy_kwhandler() and is queried by the ProblemDescDB::get_<datatype>() functions. A single DataStrategy object is maintained in ProblemDescDB::strategySpec.

The documentation for this class was generated from the following files:

- DataStrategy.H
- DataStrategy.C

8.37 DataStrategyRep Class Reference

Body class for strategy specification data.

Public Attributes

- String strategyType

  the strategy selection: hybrid, multi_start, pareto_set, or single_method

- bool graphicsFlag

  specification in **StratIndControl***)*

- bool tabularDataFlag

  the tabular_graphics_data specification in **StratIndControl***)*

- String tabularDataFile

  the tabular_graphics_file specification in **StratIndControl***)*

- int iteratorServers

  the iterator_servers specification in **StratIndControl***)*

- String iteratorScheduling

  `iterator_static_scheduling` *specifications in* **StratIndControl***)*

- String methodPointer

  specifications in **StratSingle** *and* **StratMultiStart***)*

- StringArray hybridMethodList

  in **StratHybrid***)*

- String hybridType

  `embedded`, *and* `sequential` *specifications in* **StratHybrid***)*

- String hybridGlobalMethodPointer

  global_method_pointer specification in **StratHybrid***)*

- String hybridLocalMethodPointer

  local_method_pointer specification in **StratHybrid***)*

- Real hybridLSProb

  local_search_probability specification in **StratHybrid***)*

- size_t hybridNumSolnsTrans

  subsequent method in the sequential hybrid optimization strategy

- int concurrentRandomJobs

  in **StratMultiStart** *and* **StratParetoSet***)*

- int concurrentSeed

  and **StratParetoSet***)*

- RealVector concurrentParameterSets

  StratMultiStart and **StratParetoSet***).*

Private Member Functions

- DataStrategyRep ()

  constructor

- ~DataStrategyRep ()

  destructor

- void write (ostream &s) const

  write a DataStrategyRep object to an ostream

- void read (MPIUnpackBuffer &s)

  read a DataStrategyRep object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a DataStrategyRep object to a packed MPI buffer

Private Attributes

- int referenceCount

  number of handle objects sharing this dataStrategyRep

Friends

- class DataStrategy

  the handle class can access attributes of the body class directly

8.37.1 Detailed Description

Body class for strategy specification data.

The DataStrategyRep class is used to contain the data from the strategy keyword specification. Default values are managed in the DataStrategyRep constructor. Data is public to avoid maintaining set/get functions, but is still encapsulated within ProblemDescDB since ProblemDescDB::strategySpec is private (a similar approach is used with SurrogateDataPoint objects contained in Dakota::Approximation).

The documentation for this class was generated from the following files:

- DataStrategy.H
- DataStrategy.C

8.38 DataVariables Class Reference

Handle class for variables specification data.

Public Member Functions

- DataVariables ()

  constructor

- DataVariables (const DataVariables &)

  copy constructor

- ~DataVariables ()

  destructor

- DataVariables operator= (const DataVariables &)

  assignment operator

- bool operator== (const DataVariables &)

  equality operator

- void write (ostream &s) const

  write a DataVariables object to an ostream

- void read (MPIUnpackBuffer &s)

  read a DataVariables object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a DataVariables object to a packed MPI buffer

- size_t design ()

  return total number of design variables

- size_t uncertain ()

  return total number of uncertain variables

- size_t state ()

  return total number of state variables

- size_t num_continuous_variables ()

  return total number of continuous variables

- size_t num_discrete_variables ()

  return total number of discrete variables

- size_t num_variables ()

  return total number of variables

Public Attributes

- DataVariablesRep * dataVarsRep

  pointer to the body (handle-body idiom)

8.38.1 Detailed Description

Handle class for variables specification data.

The DataVariables class is used to provide a memory management handle for the data in DataVariablesRep. It is populated by IDRProblemDescDB::variables_kwhandler() and is queried by the ProblemDescDB::get_-<datatype>() functions. A list of DataVariables objects is maintained in ProblemDescDB::dataVariablesList, one for each variables specification in an input file.

The documentation for this class was generated from the following files:

- DataVariables.H
- DataVariables.C

8.39 DataVariablesRep Class Reference

Body class for variables specification data.

Public Attributes

- String idVariables
  (from the `id_variables` *specification in* **VarSetId***)*
- size_t numContinuousDesVars
  specification in **VarDV***)*
- size_t numDiscreteDesVars
  specification in **VarDV***)*
- size_t numNormalUncVars
  specification in **VarUV***)*
- size_t numLognormalUncVars
  specification in **VarUV***)*
- size_t numUniformUncVars
  specification in **VarUV***)*
- size_t numLoguniformUncVars
  loguniform_uncertain specification in **VarUV***)*
- size_t numTriangularUncVars
  triangular_uncertain specification in **VarUV***)*
- size_t numExponentialUncVars
  exponential_uncertain specification in **VarUV***)*
- size_t numBetaUncVars
  specification in **VarUV***)*
- size_t numGammaUncVars
  specification in **VarUV***)*
- size_t numGumbelUncVars
  specification in **VarUV***)*

- size_t numFrechetUncVars
  specification in **VarUV***)*
- size_t numWeibullUncVars
  specification in **VarUV***)*
- size_t numHistogramUncVars
  specification in **VarUV***)*
- size_t numIntervalUncVars
  specification in **VarUV***)*
- size_t numContinuousStateVars
  specification in **VarSV***)*
- size_t numDiscreteStateVars
  specification in **VarSV***)*
- RealVector continuousDesignVars
  the `cdv_initial_point` *specification in* **VarDV***)*
- RealVector continuousDesignLowerBnds
  cdv_lower_bounds specification in **VarDV***)*
- RealVector continuousDesignUpperBnds
  cdv_upper_bounds specification in **VarDV***)*
- StringArray continuousDesignScaleTypes
  cdv_scale_types specification in **VarDV***)*
- RealVector continuousDesignScales
  cdv_scales specification in **VarDV***)*
- IntVector discreteDesignVars
  the `ddv_initial_point` *specification in* **VarDV***)*
- IntVector discreteDesignLowerBnds
  ddv_lower_bounds specification in **VarDV***)*
- IntVector discreteDesignUpperBnds
  ddv_upper_bounds specification in **VarDV***)*
- StringArray continuousDesignLabels
  specification in **VarDV***)*
- StringArray discreteDesignLabels

specification in **VarDV***)*

- RealDenseVector normalUncMeans
  specification in **VarUV***)*
- RealDenseVector normalUncStdDevs
  the `nuv_std_deviations` *specification in* **VarUV***)*
- RealDenseVector normalUncLowerBnds
  (from the `nuv_lower_bounds` *specification in* **VarUV***)*
- RealDenseVector normalUncUpperBnds
  (from the `nuv_upper_bounds` *specification in* **VarUV***)*
- RealDenseVector lognormalUncMeans
  lnuv_means specification in **VarUV***)*
- RealDenseVector lognormalUncStdDevs
  the `lnuv_std_deviations` *specification in* **VarUV***)*
- RealDenseVector lognormalUncErrFacts
  the `lnuv_error_factors` *specification in* **VarUV***)*
- RealDenseVector lognormalUncLowerBnds
  (from the `lnuv_lower_bounds` *specification in* **VarUV***)*
- RealDenseVector lognormalUncUpperBnds
  (from the `lnuv_upper_bounds` *specification in* **VarUV***)*
- RealDenseVector uniformUncLowerBnds
  (from the `uuv_lower_bounds` *specification in* **VarUV***)*
- RealDenseVector uniformUncUpperBnds
  (from the `uuv_upper_bounds` *specification in* **VarUV***)*
- RealDenseVector loguniformUncLowerBnds
  (from the `luuv_lower_bounds` *specification in* **VarUV***)*
- RealDenseVector loguniformUncUpperBnds
  (from the `luuv_upper_bounds` *specification in* **VarUV***)*
- RealDenseVector triangularUncModes
  specification in **VarUV***)*
- RealDenseVector triangularUncLowerBnds
  (from the `tuv_lower_bounds` *specification in* **VarUV***)*

- RealDenseVector triangularUncUpperBnds
  (from the `tuv_upper_bounds` *specification in* **VarUV***)*
- RealDenseVector exponentialUncBetas
  the `euv_betas` *specification in* **VarUV***)*
- RealDenseVector betaUncAlphas
  the `buv_means` *specification in* **VarUV***)*
- RealDenseVector betaUncBetas
  the `buv_std_deviations` *specification in* **VarUV***)*
- RealDenseVector betaUncLowerBnds
  (from the `buv_lower_bounds` *specification in* **VarUV***)*
- RealDenseVector betaUncUpperBnds
  (from the `buv_upper_bounds` *specification in* **VarUV***)*
- RealDenseVector gammaUncAlphas
  the `gauv_alphas` *specification in* **VarUV***)*
- RealDenseVector gammaUncBetas
  the `gauv_betas` *specification in* **VarUV***)*
- RealDenseVector gumbelUncAlphas
  guuv_alphas specification in **VarUV***)*
- RealDenseVector gumbelUncBetas
  the `guuv_betas` *specification in* **VarUV***)*
- RealDenseVector frechetUncAlphas
  the `fuv_alphas` *specification in* **VarUV***)*
- RealDenseVector frechetUncBetas
  the `fuv_betas` *specification in* **VarUV***)*
- RealDenseVector weibullUncAlphas
  the `wuv_alphas` *specification in* **VarUV***)*
- RealDenseVector weibullUncBetas
  the `wuv_betas` *specification in* **VarUV***)*
- RealDenseVectorArray histogramUncBinPairs
  specifications in **VarUV***)*

- RealDenseVectorArray histogramUncPointPairs
  specifications in **VarUV***)*
- RealDenseVectorArray intervalUncBasicProbs
  iuv_interval_probs specification in **VarUV***)*
- RealDenseVectorArray intervalUncBounds
  iuv_interval_bounds specification in **VarUV***)*
- RealSymDenseMatrix uncertainCorrelations
  matrix) for analytic reliability methods.
- RealVector uncertainVars
  initialized in IDRProblemDescDB::variables_kwhandler())
- RealVector uncertainLowerBnds
  for gamma, gumbel, frechet, weibull and histogram specifications)
- RealVector uncertainUpperBnds
  for gamma, gumbel, frechet, weibull and histogram specifications)
- StringArray uncertainLabels
  huv_descriptors specifications in **VarUV***)*
- RealVector continuousStateVars
  the `csv_initial_state` *specification in* **VarSV***)*
- RealVector continuousStateLowerBnds
  csv_lower_bounds specification in **VarSV***)*
- RealVector continuousStateUpperBnds
  csv_upper_bounds specification in **VarSV***)*
- IntVector discreteStateVars
  the `dsv_initial_state` *specification in* **VarSV***)*
- IntVector discreteStateLowerBnds
  dsv_lower_bounds specification in **VarSV***)*
- IntVector discreteStateUpperBnds
  dsv_upper_bounds specification in **VarSV***)*
- StringArray continuousStateLabels
  specification in **VarSV***)*
- StringArray discreteStateLabels
  specification in **VarSV***)*

Private Member Functions

- DataVariablesRep ()

  default constructor

- ~DataVariablesRep ()

  destructor

- void write (ostream &s) const

  write a DataVariablesRep object to an ostream

- void read (MPIUnpackBuffer &s)

  read a DataVariablesRep object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a DataVariablesRep object to a packed MPI buffer

Private Attributes

- int referenceCount

  number of handle objects sharing dataVarsRep

Friends

- class DataVariables

  the handle class can access attributes of the body class directly

8.39.1 Detailed Description

Body class for variables specification data.

The DataVariablesRep class is used to contain the data from a variables keyword specification. Default values are managed in the DataVariablesRep constructor. Data is public to avoid maintaining set/get functions, but is still encapsulated within ProblemDescDB since ProblemDescDB::dataVariablesList is private (a similar model is used with SurrogateDataPoint objects contained in Dakota::Approximation).

The documentation for this class was generated from the following files:

- DataVariables.H
- DataVariables.C

8.40 DDACEDesignCompExp Class Reference

Wrapper class for the DDACE design of experiments library.

Inheritance diagram for DDACEDesignCompExp::

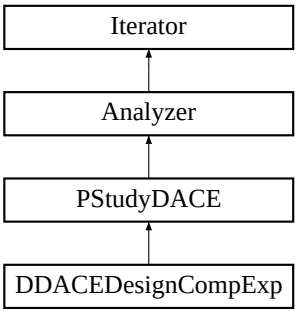

Public Member Functions

- DDACEDesignCompExp (Model &model)

  primary constructor for building a standard DACE iterator

- DDACEDesignCompExp (Model &model, int samples, int symbols, int seed, const String &sampling_method)

  alternate constructor used for building approximations

- ~DDACEDesignCompExp ()

  destructor

- void extract_trends ()

  Redefines the run_iterator virtual function for the PStudy/DACE branch.

- void sampling_reset (int min_samples, int rec_samples, bool all_data_flag, bool stats_flag)

  reset sampling iterator

- const String & sampling_scheme () const

  return sampling name

- void vary_pattern (bool pattern_flag)

  sets varyPattern in derived classes that support it

- void get_parameter_sets (const Model &model)

  Returns one block of samples (ndim ∗ num_samples).

Private Member Functions

- void compute_main_effects ()

  builds a DDaceMainEffects::OneWayANOVA if mainEffectsFlag is set

- void resolve_samples_symbols ()

  number of symbols from input.

Private Attributes

- String daceMethod

  oas, lhs, oa_lhs, random, box_behnken, central_composite, or grid

- int samplesSpec

  initial specification of number of samples

- int symbolsSpec

  initial specification of number of symbols

- int numSamples

  current number of samples to be evaluated

- int numSymbols

  (inversely related to number of replications)

- const int originalSeed

  (allows repeatable results)

- int randomSeed

  current seed for the random number generator

- bool allDataFlag

  Iterator::all_variables() and *Iterator::all_responses()*.

- size_t numDACERuns

  counter for number of run() executions for this object

- bool varyPattern

  multiple executions are repeatable but not correlated.

- bool volQualityFlag

  flag which specifies evaluating the volumetric quality measures

- bool varBasedDecompFlag

  flag which specifies variance based decomposition

- bool mainEffectsFlag
  flag which specifies main effects
- std::vector< std::vector< int > > symbolMapping
  mapping of symbols for main effects calculations

8.40.1 Detailed Description

Wrapper class for the DDACE design of experiments library.

The DDACEDesignCompExp class provides a wrapper for DDACE, a C++ design of experiments library from the Computational Sciences and Mathematics Research (CSMR) department at Sandia's Livermore CA site. This class uses design and analysis of computer experiments (DACE) methods to sample the design space spanned by the bounds of a Model. It returns all generated samples and their corresponding responses as well as the best sample found.

8.40.2 Constructor & Destructor Documentation

8.40.2.1 DDACEDesignCompExp (Model & *model*)

primary constructor for building a standard DACE iterator

This constructor is called for a standard iterator built with data from probDescDB.

8.40.2.2 DDACEDesignCompExp (Model & *model*, int *samples*, int *symbols*, int *seed*, const String & *sampling_method*)

alternate constructor used for building approximations

This alternate constructor is used for instantiations on-the-fly, using only the incoming data. No problem description database queries are used.

8.40.3 Member Function Documentation

8.40.3.1 void resolve_samples_symbols () `[private]`

number of symbols from input.

This function must define a combination of samples and symbols that is acceptable for a particular sampling algorithm. Users provide requests for these quantities, but this function must enforce any restrictions imposed by the sampling algorithms.

The documentation for this class was generated from the following files:

- DDACEDesignCompExp.H
- DDACEDesignCompExp.C

8.41 DirectApplicInterface Class Reference

and testers using direct procedure calls.

Inheritance diagram for DirectApplicInterface::

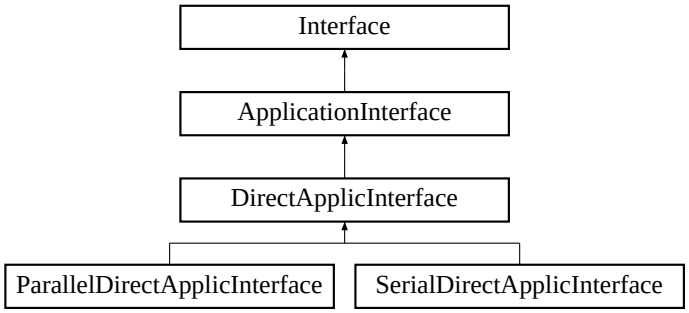

Public Member Functions

- DirectApplicInterface (const ProblemDescDB &problem_db)

  constructor

- ~DirectApplicInterface ()

  destructor

- void derived_map (const Variables &vars, const ActiveSet &set, Response &response, int fn_eval_id)

  that is specific to a derived class.

- void derived_map_asynch (const ParamResponsePair &pair)

  asynchronous evaluation that is specific to a derived class.

- void derived_synch (PRPList &prp_list)

  classes. This version waits for at least one completion.

- void derived_synch_nowait (PRPList &prp_list)

  any completions if none are immediately available.

- int derived_synchronous_local_analysis (const int &analysis_id)
- const StringArray & analysis_drivers () const

  retrieve the analysis drivers specification for application interfaces

Protected Member Functions

- virtual int derived_map_if (const String &if_name)

  execute the input filter portion of a direct evaluation invocation

- virtual int derived_map_ac (const String &ac_name)

  execute an analysis code portion of a direct evaluation invocation

- virtual int derived_map_of (const String &of_name)

  execute the output filter portion of a direct evaluation invocation

- void set_local_data (const Variables &vars, const ActiveSet &set, const Response &response)

  variable attributes and zeros response data

- void overlay_response (Response &response)

  response contributions from multiple analyses using MPI_Reduce

Protected Attributes

- String iFilterName

  name of the direct function input filter

- String oFilterName

  name of the direct function output filter

- bool gradFlag

  signals use of fnGrads in direct simulator functions

- bool hessFlag

  signals use of fnHessians in direct simulator functions

- size_t numFns

  number of functions in fnVals

- size_t numVars

  total number of continuous and discrete variables

- size_t numACV

  total number of continuous variables

- size_t numADV

  total number of discete variables

- size_t numDerivVars

  number of active derivative variables

- RealVector xC
  continuous variables used within direct simulator fns
- IntVector xD
  discrete variables used within direct simulator fns
- StringArray xCLabels
  continuous variable labels
- StringArray xDLabels
  discrete variable labels
- ShortArray directFnASV
  class scope active set vector
- UIntArray directFnDVV
  class scope derivative variables vector
- RealVector fnVals
  response fn values within direct simulator fns
- RealMatrix fnGrads
  response fn gradients w/i direct simulator fns
- RealMatrixArray fnHessians
  response fn Hessians w/i direct simulator fns
- StringArray analysisDrivers
  analysis_drivers interface specification)
- size_t analysisDriverIndex
  the index of the active analysis driver within analysisDrivers
- String2DArray analysisComponents
  (from the analysis_components interface specification)
- engine ∗ matlabEngine
  pointer to the MATLAB engine used for direct evaluations

Private Member Functions

- int cantilever ()
  the cantilever UQ/OUU test function

- int cyl_head ()

  the cylinder head constrained optimization test fn

- int rosenbrock ()

  the Rosenbrock optimization and least squares test fn

- int generalized_rosenbrock ()

  n-dimensional Rosenbrock (Schittkowski)

- int extended_rosenbrock ()

  n-dimensional Rosenbrock (Nocedal/Wright)

- int log_ratio ()

  the log_ratio UQ test function

- int short_column ()

  the short_column UQ/OUU test function

- int steel_column_cost ()

  the steel_column_cost UQ/OUU test function

- int steel_column_perf ()

  the short_column_perf UQ/OUU test function

- int text_book ()

  the text_book constrained optimization test function

- int text_book1 ()

  portion of text_book() evaluating the objective fn

- int text_book2 ()

  portion of text_book() evaluating constraint 1

- int text_book3 ()

  portion of text_book() evaluating constraint 2

- int text_book_ouu ()

  the text_book_ouu OUU test function

- int multimodal ()

  multimodal UQ test function

- int salinas ()

  direct interface to the SALINAS structural dynamics code

- int mc_api_run ()

direct interface to ModelCenter via API, HKIM 4/3/03

- int matlab_engine_run ()
  direct interface to Matlab via API, BMA 11/28/05
- int matlab_field_prep (mxArray *dakota_matlab, const char *field_name)
  add if necessary; free structure memory in preparation for new alloc
- int python_run ()
  direct interface to Python via API, BMA 07/02/07
- template<class ArrayT> bool python_convert_int (const ArrayT &src, PyObject **dst)
  convert arrays of integer types to Python
- bool python_convert (const RealVector &src, PyObject **dst)
  convert RealVector to Python list or numpy array
- bool python_convert (const RealVector &c_src, const IntVector &d_src, PyObject **dst)
  convert RealVector + IntVector to Python mixed list or numpy double array
- bool python_convert (const StringArray &src, PyObject **dst)
  convert labels
- bool python_convert (const StringArray &c_src, const StringArray &d_src, PyObject **dst)
  convert all labels to single list
- bool python_convert (PyObject *pyv, RealBaseVector &rv, const int &dim)
  convert python list of int or float to RealVector
- bool python_convert (PyObject *pym, RealMatrix &rm)
  convert python list of lists of int or float to RealMatrix
- bool python_convert (PyObject *pyma, RealMatrixArray &rma)
  convert python list of lists of lists of int or float to RealMatrixArray

Private Attributes

- bool userNumpyFlag
  whether the user requested numpy data structures

8.41.1 Detailed Description

and testers using direct procedure calls.

DirectApplicInterface uses a few linkable simulation codes and several internal member functions to perform parameter to response mappings.

8.41.2 Member Function Documentation

8.41.2.1 int derived_synchronous_local_analysis (const int & *analysis_id*) [inline, virtual]

This code provides the derived function used by ApplicationInterface::serve_analyses_synch().

Reimplemented from ApplicationInterface.

8.41.2.2 int derived_map_ac (const String & *ac_name*) [protected, virtual]

execute an analysis code portion of a direct evaluation invocation

When a direct analysis/filter is a member function, the (vars,set,response) data does not need to be passed through the API. If, however, non-member analysis/filter functions are added, then pass (vars,set,response) through to the non-member fns:

```
// API declaration
int sim(const Variables& vars, const ActiveSet& set, Response& response);
// use of API within derived_map_ac()
if (ac_name == "sim")
  fail_code = sim(directFnVars, directFnActSet, directFnResponse);
```

Reimplemented in ParallelDirectApplicInterface, and SerialDirectApplicInterface.

The documentation for this class was generated from the following files:

- DirectApplicInterface.H
- DirectApplicInterface.C

8.42 DistinctConstraints Class Reference

the default data view (no variable or domain type array merging).

Inheritance diagram for DistinctConstraints::

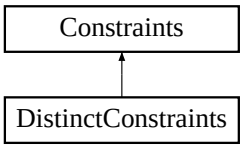

Public Member Functions

- DistinctConstraints ()
  default constructor
- DistinctConstraints (const ProblemDescDB &problem_db, const pair< short, short > &view)
  standard constructor
- ~DistinctConstraints ()
  destructor
- const RealVector & continuous_lower_bounds () const
  return the active continuous variable lower bounds
- void continuous_lower_bounds (const RealVector &c_l_bnds)
  set the active continuous variable lower bounds
- const RealVector & continuous_upper_bounds () const
  return the active continuous variable upper bounds
- void continuous_upper_bounds (const RealVector &c_u_bnds)
  set the active continuous variable upper bounds
- const IntVector & discrete_lower_bounds () const
  return the active discrete variable lower bounds
- void discrete_lower_bounds (const IntVector &d_l_bnds)
  set the active discrete variable lower bounds
- const IntVector & discrete_upper_bounds () const
  return the active discrete variable upper bounds

- void discrete_upper_bounds (const IntVector &d_u_bnds)
  set the active discrete variable upper bounds
- const RealVector & inactive_continuous_lower_bounds () const
  return the inactive continuous lower bounds
- void inactive_continuous_lower_bounds (const RealVector &i_c_l_bnds)
  set the inactive continuous lower bounds
- const RealVector & inactive_continuous_upper_bounds () const
  return the inactive continuous upper bounds
- void inactive_continuous_upper_bounds (const RealVector &i_c_u_bnds)
  set the inactive continuous upper bounds
- const IntVector & inactive_discrete_lower_bounds () const
  return the inactive discrete lower bounds
- void inactive_discrete_lower_bounds (const IntVector &i_d_l_bnds)
  set the inactive discrete lower bounds
- const IntVector & inactive_discrete_upper_bounds () const
  return the inactive discrete upper bounds
- void inactive_discrete_upper_bounds (const IntVector &i_d_u_bnds)
  set the inactive discrete upper bounds
- RealVector all_continuous_lower_bounds () const
  returns a single array with all continuous lower bounds
- void all_continuous_lower_bounds (const RealVector &a_c_l_bnds)
  sets all continuous lower bounds using a single array
- RealVector all_continuous_upper_bounds () const
  returns a single array with all continuous upper bounds
- void all_continuous_upper_bounds (const RealVector &a_c_u_bnds)
  sets all continuous upper bounds using a single array
- IntVector all_discrete_lower_bounds () const
  returns a single array with all discrete lower bounds
- void all_discrete_lower_bounds (const IntVector &a_d_l_bnds)
  sets all discrete lower bounds using a single array

- IntVector all_discrete_upper_bounds () const

  returns a single array with all discrete upper bounds

- void all_discrete_upper_bounds (const IntVector &a_d_u_bnds)

  sets all discrete upper bounds using a single array

- void write (ostream &s) const

  write a variable constraints object to an ostream

- void read (istream &s)

  read a variable constraints object from an istream

Protected Member Functions

- void copy_rep (const Constraints *con_rep)

  Used by copy() to copy the contents of a letter class.

- void reshape_rep (const Sizet2DArray &vars_comps)

  Used by reshape(Sizet2DArray&) to rehape the contents of a letter class.

Private Attributes

- RealVector continuousDesignLowerBnds

  the continuous design lower bounds array

- RealVector continuousDesignUpperBnds

  the continuous design upper bounds array

- IntVector discreteDesignLowerBnds

  the discrete design lower bounds array

- IntVector discreteDesignUpperBnds

  the discrete design upper bounds array

- RealVector uncertainLowerBnds

  the uncertain distribution lower bounds array

- RealVector uncertainUpperBnds

  the uncertain distribution upper bounds array

- RealVector continuousStateLowerBnds

  the continuous state lower bounds array

- RealVector continuousStateUpperBnds

  the continuous state upper bounds array

- IntVector discreteStateLowerBnds

  the discrete state lower bounds array

- IntVector discreteStateUpperBnds

  the discrete state upper bounds array

8.42.1 Detailed Description

the default data view (no variable or domain type array merging).

Derived variable constraints classes take different views of the design, uncertain, and state variable types and the continuous and discrete domain types. The DistinctConstraints derived class separates the design, uncertain, and state variable types as well as the continuous and discrete domain types. The result is separate lower and upper bounds arrays for continuous design, discrete design, uncertain, continuous state, and discrete state variables. This is the default approach, so all iterators and strategies not specifically utilizing the All or Merged views use this approach (see Variables::get_variables(problem_db) for variables type selection; variables type is passed to the Constraints constructor in Model).

8.42.2 Constructor & Destructor Documentation

8.42.2.1 DistinctConstraints (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*)

standard constructor

In this class, the distinct approach (design, uncertain, and state types are distinct) is used. Most iterators/strategies use this approach, which is the default in Constraints::get_constraints().

The documentation for this class was generated from the following files:

- DistinctConstraints.H
- DistinctConstraints.C

8.43 DistinctVariables Class Reference

the default data view (no variable or domain type array merging).

Inheritance diagram for DistinctVariables::

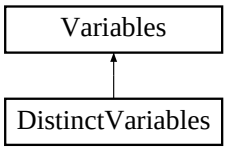

Public Member Functions

- DistinctVariables ()
  default constructor
- DistinctVariables (const ProblemDescDB &problem_db, const pair< short, short > &view)
  standard constructor
- ~DistinctVariables ()
  destructor
- size_t tv () const
  Returns total number of vars.
- const RealVector & continuous_variables () const
  return the active continuous variables
- void continuous_variable (const Real &c_var, const size_t &i)
  set an active continuous variable
- void continuous_variables (const RealVector &c_vars)
  set the active continuous variables
- const IntVector & discrete_variables () const
  return the active discrete variables
- void discrete_variable (const int &d_var, const size_t &i)
  set an active discrete variable
- void discrete_variables (const IntVector &d_vars)
  set the active discrete variables

- const StringArray & continuous_variable_labels () const
  return the active continuous variable labels
- void continuous_variable_labels (const StringArray &c_v_labels)
  set the active continuous variable labels
- const StringArray & discrete_variable_labels () const
  return the active discrete variable labels
- void discrete_variable_labels (const StringArray &d_v_labels)
  set the active discrete variable labels
- const StringArray & continuous_variable_types () const
  return the active continuous variable types
- const StringArray & discrete_variable_types () const
  return the active discrete variable types
- const UIntArray & continuous_variable_ids () const
  return the active continuous variable position identifiers
- const RealVector & inactive_continuous_variables () const
  return the inactive continuous variables
- void inactive_continuous_variables (const RealVector &i_c_vars)
  set the inactive continuous variables
- const IntVector & inactive_discrete_variables () const
  return the inactive discrete variables
- void inactive_discrete_variables (const IntVector &i_d_vars)
  set the inactive discrete variables
- const StringArray & inactive_continuous_variable_labels () const
  return the inactive continuous variable labels
- void inactive_continuous_variable_labels (const StringArray &i_c_v_labels)
  set the inactive continuous variable labels
- const StringArray & inactive_discrete_variable_labels () const
  return the inactive discrete variable labels
- void inactive_discrete_variable_labels (const StringArray &i_d_v_labels)
  set the inactive discrete variable labels

- const UIntArray & inactive_continuous_variable_ids () const

  return the inactive continuous variable position identifiers

- size_t acv () const

  returns total number of continuous vars

- size_t adv () const

  returns total number of discrete vars

- RealVector all_continuous_variables () const

  returns a single array with all continuous variables

- void all_continuous_variables (const RealVector &a_c_vars)

  sets all continuous variables using a single array

- IntVector all_discrete_variables () const

  returns a single array with all discrete variables

- void all_discrete_variables (const IntVector &a_d_vars)

  sets all discrete variables using a single array

- StringArray all_continuous_variable_labels () const

  returns a single array with all continuous variable labels

- void all_continuous_variable_labels (const StringArray &a_c_v_labels)

  sets all continuous variable labels using a single array

- StringArray all_discrete_variable_labels () const

  returns a single array with all discrete variable labels

- void all_discrete_variable_labels (const StringArray &a_d_v_labels)

  sets all discrete variable labels using a single array

- StringArray all_variable_labels () const

  returns a single array with all variable labels

- const StringArray & all_discrete_variable_types () const

  return the all discrete variable types

- void read (istream &s)

  read a variables object from an istream

- void write (ostream &s) const

  write a variables object to an ostream

- void write_aprepro (ostream &s) const

write a variables object to an ostream in aprepro format

- void read_annotated (istream &s)

  read a variables object in annotated format from an istream

- void write_annotated (ostream &s) const

  write a variables object in annotated format to an ostream

- void write_tabular (ostream &s) const

  write a variables object in tabular format to an ostream

- void read (BiStream &s)

  read a variables object from the binary restart stream

- void write (BoStream &s) const

  write a variables object to the binary restart stream

- void read (MPIUnpackBuffer &s)

  read a variables object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a variables object to a packed MPI buffer

Protected Member Functions

- void copy_rep (const Variables *vars_rep)

  Used by copy() to copy the contents of a letter class.

- void reshape_rep (const Sizet2DArray &vars_comps)

  Used by reshape() to reshape the contents of a letter class.

Private Member Functions

- void build_types_ids ()

  construct VarTypes and VarIds arrays using variablesComponents

Private Attributes

- RealVector continuousDesignVars

  the continuous design variables array

- IntVector discreteDesignVars

the discrete design variables array

- RealVector uncertainVars

  the uncertain variables array

- RealVector continuousStateVars

  the continuous state variables array

- IntVector discreteStateVars

  the discrete state variables array

- StringArray continuousDesignLabels

  the continuous design variables label array

- StringArray discreteDesignLabels

  the discrete design variables label array

- StringArray uncertainLabels

  the uncertain variables label array

- StringArray continuousStateLabels

  the continuous state variables label array

- StringArray discreteStateLabels

  the discrete state variables label array

- StringArray continuousVarTypes

  array of variable types for the active continuous variables

- StringArray discreteVarTypes

  array of variable types for the active discrete variables

- StringArray allDiscreteVarTypes

  array of variable types for all of the discrete variables

- UIntArray continuousVarIds

  array of position identifiers for the active continuous variables

- UIntArray inactiveContinuousVarIds

  array of position identifiers for the inactive continuous variables

Friends

- bool operator== (const DistinctVariables &vars1, const DistinctVariables &vars2)

  equality operator

- std::size_t hash_value (const DistinctVariables &vars)

  hash_value

- bool binary_equal_to (const DistinctVariables &vars1, const DistinctVariables &vars2)

  binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

8.43.1 Detailed Description

the default data view (no variable or domain type array merging).

Derived variables classes take different views of the design, uncertain, and state variable types and the continuous and discrete domain types. The DistinctVariables derived class separates the design, uncertain, and state variable types as well as the continuous and discrete domain types. The result is separate arrays for continuous design, discrete design, uncertain, continuous state, and discrete state variables. This is the default approach, so all iterators and strategies not specifically utilizing the All or Merged views use this approach (see Variables::get_-variables(problem_db)).

8.43.2 Constructor & Destructor Documentation

8.43.2.1 DistinctVariables (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*)

standard constructor

In this class, the distinct approach is used (design, uncertain, and state variable types and continuous and discrete domain types are distinct). Most iterators/strategies use this approach.

8.43.3 Friends And Related Function Documentation

8.43.3.1 bool operator== (const DistinctVariables & *vars1*, const DistinctVariables & *vars2*) `[friend]`

equality operator

Checks each array using operator== from data_types.C. Labels are ignored.

8.43.4 Member Data Documentation

8.43.4.1 UIntArray continuousVarIds [private]

array of position identifiers for the active continuous variables

These identifiers define positions of the active continuous variables within the total variable sequence.

8.43.4.2 UIntArray inactiveContinuousVarIds [private]

array of position identifiers for the inactive continuous variables

These identifiers define positions of the inactive continuous variables within the total variable sequence.

The documentation for this class was generated from the following files:

- DistinctVariables.H
- DistinctVariables.C

8.44 DOTOptimizer Class Reference

Wrapper class for the DOT optimization library.

Inheritance diagram for DOTOptimizer::

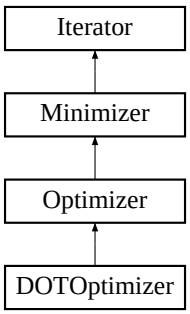

Public Member Functions

- DOTOptimizer (Model &model)

  standard constructor

- DOTOptimizer (NoDBBaseConstructor, Model &model)

  alternate constructor

- ~DOTOptimizer ()

  destructor

- void find_optimum ()

  Redefines the run virtual function for the optimizer branch.

Protected Member Functions

- void derived_pre_run ()

  performs run-time set up

Private Member Functions

- void initialize ()

  Shared constructor code.

- void allocate_workspace ()

  Allocates workspace for the optimizer.

- void allocate_constraints ()

  Allocates constraint mappings.

Private Attributes

- int dotInfo

  INFO from DOT manual.

- int dotFDSinfo

  internal DOT parameter NGOTOZ

- int dotMethod

  METHOD from DOT manual.

- int printControl

  IPRINT from DOT manual (controls output verbosity).

- int optimizationType

  MINMAX from DOT manual (minimize or maximize).

- RealArray realCntlParmArray

  RPRM from DOT manual.

- IntArray intCntlParmArray

  IPRM from DOT manual.

- RealVector designVars

  array of design variable values passed to DOT

- Real objFnValue

  value of the objective function passed to DOT

- RealVector constraintValues

  array of nonlinear constraint values passed to DOT

- int realWorkSpaceSize

  size of realWorkSpace

- int intWorkSpaceSize

  size of intWorkSpace

- RealArray realWorkSpace

  real work space for DOT

- IntArray intWorkSpace

  int work space for DOT

- int numDotNlnConstr

  total number of nonlinear constraints seen by DOT

- int numDotLinConstr

  total number of linear constraints seen by DOT

- int numDotConstr

  total number of linear and nonlinear constraints seen by DOT

- SizetList constraintMappingIndices

  Response constraints used in computing the DOT constraints.

- RealList constraintMappingMultipliers

  the DOT constraints.

- RealList constraintMappingOffsets

  DOT constraints.

8.44.1 Detailed Description

Wrapper class for the DOT optimization library.

The DOTOptimizer class provides a wrapper for DOT, a commercial Fortran 77 optimization library from Vanderplaats Research and Development. It uses a reverse communication mode, which avoids the static member function issues that arise with function pointer designs (see NPSOLOptimizer and SNLLOptimizer).

The user input mappings are as follows: `max_iterations` is mapped into DOT's `ITMAX` parameter within its `IPRM` array, `max_function_evaluations` is implemented directly in the find_optimum() loop since there is no DOT parameter equivalent, `convergence_tolerance` is mapped into DOT's `DELOBJ` parameter (the relative convergence tolerance) within its `RPRM` array, `output` verbosity is mapped into DOT's `IPRINT` parameter within its function call parameter list (verbose: `IPRINT` = 7; quiet: `IPRINT` = 3), and `optimization_type` is mapped into DOT's `MINMAX` parameter within its function call parameter list. Refer to [Vanderplaats Research and Development, 1995] for information on `IPRM`, `RPRM`, and the DOT function call parameter list.

8.44.2 Member Data Documentation

8.44.2.1 int dotInfo [private]

INFO from DOT manual.

Information requested by DOT: 0=optimization complete, 1=get values, 2=get gradients

8.44.2.2 int dotFDSinfo [private]

internal DOT parameter NGOTOZ

the DOT parameter list has been modified to pass NGOTOZ, which signals whether DOT is finite-differencing (nonzero value) or performing the line search (zero value).

8.44.2.3 int dotMethod [private]

METHOD from DOT manual.

For nonlinear constraints: 0/1 = dot_mmfd, 2 = dot_slp, 3 = dot_sqp. For unconstrained: 0/1 = dot_bfgs, 2 = dot_frcg.

8.44.2.4 int printControl [private]

IPRINT from DOT manual (controls output verbosity).

Values range from 0 (least output) to 7 (most output).

8.44.2.5 int optimizationType [private]

MINMAX from DOT manual (minimize or maximize).

Values of 0 or -1 (minimize) or 1 (maximize).

8.44.2.6 RealArray realCntlParmArray [private]

RPRM from DOT manual.

Array of real control parameters.

8.44.2.7 IntArray intCntlParmArray [private]

IPRM from DOT manual.

Array of integer control parameters.

8.44.2.8 RealVector constraintValues [private]

array of nonlinear constraint values passed to DOT

This array must be of nonzero length and must contain only one-sided inequality constraints which are <= 0 (which requires a transformation from 2-sided inequalities and equalities).

8.44.2.9 SizetList constraintMappingIndices [private]

Response constraints used in computing the DOT constraints.

The length of the list corresponds to the number of DOT constraints, and each entry in the list points to the corresponding DAKOTA constraint.

8.44.2.10 RealList constraintMappingMultipliers [private]

the DOT constraints.

The length of the list corresponds to the number of DOT constraints, and each entry in the list contains a multiplier for the DAKOTA constraint identified with constraintMappingIndices. These multipliers are currently +1 or -1.

8.44.2.11 RealList constraintMappingOffsets [private]

DOT constraints.

The length of the list corresponds to the number of DOT constraints, and each entry in the list contains an offset for the DAKOTA constraint identified with constraintMappingIndices. These offsets involve inequality bounds or equality targets, since DOT assumes constraint allowables = 0.

The documentation for this class was generated from the following files:

- DOTOptimizer.H
- DOTOptimizer.C

8.45 EffGlobalMinimizer Class Reference

Implementation of Efficient Global Optimization/Least Squares algorithms.

Inheritance diagram for EffGlobalMinimizer::

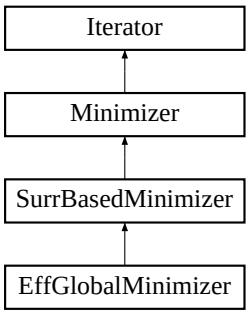

Public Member Functions

- EffGlobalMinimizer (Model &model)

  standard constructor

- ~EffGlobalMinimizer ()

  alternate constructor for instantiations "on the fly" destructor

- void minimize_surrogates ()

  approach. Redefines the Iterator::run() virtual function.

Private Member Functions

- void minimize_surrogates_on_model ()

  called by minimize_surrogates for setUpType == "model"

- void get_best_sample ()

  imporovement function

- Real expected_improvement (const RealVector &means, const RealVector &variances)

  expected improvement function for the GP

- RealVector expected_violation (const RealVector &means, const RealVector &variances)

  expected violation function for the constraint functions

- void update_penalty ()

  initialize and update the penaltyParameter

Static Private Member Functions

- static void EIF_objective_eval (const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)

  Expected Improvement (EIF) problem formulation for PMA.

Private Attributes

- String setUpType

  (user-supplied functions mode for "on the fly" instantiations).

- Model fHatModel

  GP model of response, one approximation per response function.

- Model eifModel

  max(EIF) sub-problem

- Real meritFnStar

  minimum penalized response from among true function evaluations

- RealVector truthFnStar

  true function values corresponding to the minimum penalized response

- RealVector varStar

  point that corresponds to the optimal value meritFnStar

Static Private Attributes

- static EffGlobalMinimizer * effGlobalInstance

  functions in order to avoid the need for static data

8.45.1 Detailed Description

Implementation of Efficient Global Optimization/Least Squares algorithms.

The EffGlobalMinimizer class provides an implementation of the Efficient Global Optimization algorithm developed by Jones, Schonlau, & Welch as well as adaptation of the concept to nonlinear least squares.

8.45.2 Constructor & Destructor Documentation

8.45.2.1 ~EffGlobalMinimizer ()

alternate constructor for instantiations "on the fly" destructor

This is an alternate constructor for instantiations on the fly using a Model but no ProblemDescDB.

The documentation for this class was generated from the following files:

- EffGlobalMinimizer.H
- EffGlobalMinimizer.C

8.46 EmbeddedHybridStrategy Class Reference

search methods.

Inheritance diagram for EmbeddedHybridStrategy::

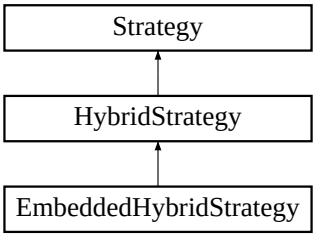

Public Member Functions

- EmbeddedHybridStrategy (ProblemDescDB &problem_db)

  constructor

- ~EmbeddedHybridStrategy ()

  destructor

Protected Member Functions

- void run_strategy ()

  iterators on different models of varying fidelity

- const Variables & variables_results () const

  return the final solution from selectedIterators (variables)

- const Response & response_results () const

  return the final solution from selectedIterators (response)

Private Attributes

- Real localSearchProb

  phases of the global minimization for coupled hybrids

8.46.1 Detailed Description

search methods.

This strategy uses multiple methods in close coordination, generally using a local search minimizer repeatedly within a global minimizer (the local search minimizer refines candidate minima which are fed back to the global minimizer).

The documentation for this class was generated from the following files:

- EmbeddedHybridStrategy.H
- EmbeddedHybridStrategy.C

8.47 ErrorTable Struct Reference

Data structure to hold errors.

Public Attributes

- CtelRegexp::RStatus rc

  Enumerated type to hold status codes.

- const char * msg

  Holds character string error message.

8.47.1 Detailed Description

Data structure to hold errors.

This module implements a C++ wrapper for Regular Expressions based on the public domain engine for regular expressions released by: Copyright (c) 1986 by University of Toronto. Written by Henry Spencer. Not derived from licensed software.

The documentation for this struct was generated from the following file:

- CtelRegExp.C

8.48 ForkAnalysisCode Class Reference

simulations using forks.

Inheritance diagram for ForkAnalysisCode::

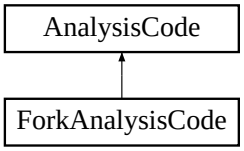

Public Member Functions

- ForkAnalysisCode (const ProblemDescDB &problem_db)

  constructor

- ~ForkAnalysisCode ()

  destructor

- pid_t fork_program (const bool block_flag)

  for completion using waitpid() if block_flag is true

- void check_status (const int status)

  error code was returned

- void ifilter_argument_list ()

  set argList for execution of the input filter

- void ofilter_argument_list ()

  set argList for execution of the output filter

- void driver_argument_list (const int analysis_id)

  set argList for execution of the specified analysis driver

Private Attributes

- StringArray argList

  These are converted to an array of const char∗'s in fork_program().

8.48.1 Detailed Description

simulations using forks.

ForkAnalysisCode creates a copy of the parent DAKOTA process using fork()/vfork() and then replaces the copy with a simulation process using execvp(). The parent process can then use waitpid() to wait on completion of the simulation process.

8.48.2 Member Function Documentation

8.48.2.1 void check_status (const int *status*)

error code was returned

Check to see if the process terminated abnormally (WIFEXITED(status)==0) or if either execvp or the application returned a status code of -1 (WIFEXITED(status)!=0 && (signed char)WEXITSTATUS(status)==-1). If one of these conditions is detected, output a failure message and abort. Note: the application code should not return a status code of -1 unless an immediate abort of dakota is wanted. If for instance, failure capturing is to be used, the application code should write the word "FAIL" to the appropriate results file and return a status code of 0 through exit().

The documentation for this class was generated from the following files:

- ForkAnalysisCode.H
- ForkAnalysisCode.C

8.49 ForkApplicInterface Class Reference

using forks.

Inheritance diagram for ForkApplicInterface::

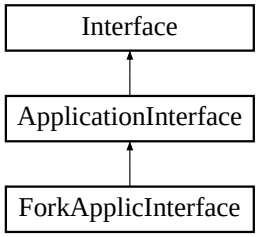

Public Member Functions

- ForkApplicInterface (const ProblemDescDB &problem_db)
  constructor
- ~ForkApplicInterface ()
  destructor
- void derived_map (const Variables &vars, const ActiveSet &set, Response &response, int fn_eval_id)
  that is specific to a derived class.
- void derived_map_asynch (const ParamResponsePair &pair)
  asynchronous evaluation that is specific to a derived class.
- void derived_synch (PRPList &prp_list)
  classes. This version waits for at least one completion.
- void derived_synch_nowait (PRPList &prp_list)
  any completions if none are immediately available.
- int derived_synchronous_local_analysis (const int &analysis_id)
- const StringArray & analysis_drivers () const
  retrieve the analysis drivers specification for application interfaces

Private Member Functions

- void derived_synch_kernel (PRPList &prp_list, const pid_t pid)

derived_synch_nowait()

- pid_t fork_application (const bool block_flag)

  filter, analysis programs, and output filter

- void asynchronous_local_analyses (const int &start, const int &end, const int &step)

  execute analyses asynchronously on the local processor

- void synchronous_local_analyses (const int &start, const int &end, const int &step)

  execute analyses synchronously on the local processor

- void serve_analyses_asynch ()

  serve the analysis scheduler and execute analysis jobs asynchronously

Private Attributes

- ForkAnalysisCode forkSimulator

  individual programs and checking fork exit status

- std::map< pid_t, int > processIdMap

  asynchronous evaluations

8.49.1 Detailed Description

using forks.

ForkApplicInterface uses a ForkAnalysisCode object for performing simulation invocations.

8.49.2 Member Function Documentation

8.49.2.1 int derived_synchronous_local_analysis (const int & *analysis_id*) `[inline, virtual]`

This code provides the derived function used by ApplicationInterface:: serve_analyses_synch() as well as a convenience function for ForkApplicInterface::synchronous_local_analyses() below.

Reimplemented from ApplicationInterface.

8.49.2.2 pid_t fork_application (const bool *block_flag*) `[private]`

filter, analysis programs, and output filter

Manage the input filter, 1 or more analysis programs, and the output filter in blocking or nonblocking mode as governed by block_flag. In the case of a single analysis and no filters, a single fork is performed, while in other cases, an initial fork is reforked multiple times. Called from derived_map() with block_flag == BLOCK and from derived_map_asynch() with block_flag == FALL_THROUGH. Uses ForkAnalysisCode::fork_program() to spawn individual program components within the function evaluation.

8.49.2.3 void asynchronous_local_analyses (const int & *start*, const int & *end*, const int & *step*) [private]

execute analyses asynchronously on the local processor

Schedule analyses asynchronously on the local processor using a self-scheduling approach (start to end in step increments). Concurrency is limited by asynchLocalAnalysisConcurrency. Modeled after ApplicationInterface::asynchronous_local_evaluations(). NOTE: This function should be elevated to ApplicationInterface if and when another derived interface class supports asynchronous local analyses.

8.49.2.4 void synchronous_local_analyses (const int & *start*, const int & *end*, const int & *step*) [inline, private]

execute analyses synchronously on the local processor

Execute analyses synchronously in succession on the local processor (start to end in step increments). Modeled after ApplicationInterface::synchronous_local_evaluations().

8.49.2.5 void serve_analyses_asynch () [private]

serve the analysis scheduler and execute analysis jobs asynchronously

This code runs multiple asynch analyses on each server. It is modeled after ApplicationInterface::serve_evaluations_asynch(). NOTE: This fn should be elevated to ApplicationInterface if and when another derived interface class supports hybrid analysis parallelism.

The documentation for this class was generated from the following files:

- ForkApplicInterface.H
- ForkApplicInterface.C

8.50 FSUDesignCompExp Class Reference

Wrapper class for the FSUDace QMC/CVT library.

Inheritance diagram for FSUDesignCompExp::

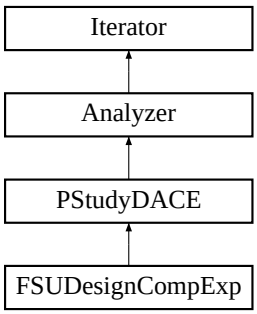

Public Member Functions

- FSUDesignCompExp (Model &model)

  primary constructor for building a standard DACE iterator

- FSUDesignCompExp (Model &model, int samples, int seed, const String &sampling_method)

  alternate constructor for building a DACE iterator on-the-fly

- ~FSUDesignCompExp ()

  destructor

- void extract_trends ()

  Redefines the run_iterator virtual function for the PStudy/DACE branch.

- void sampling_reset (int min_samples, int rec_samples, bool all_data_flag, bool stats_flag)

  reset sampling iterator

- const String & sampling_scheme () const

  return sampling name

- void vary_pattern (bool pattern_flag)

  sets varyPattern in derived classes that support it

- void get_parameter_sets (const Model &model)

  Returns one block of samples (ndim ∗ num_samples).

Private Member Functions

- void enforce_input_rules ()

  enforce sanity checks/modifications for the user input specification

Private Attributes

- int samplesSpec

  initial specification of number of samples

- int numSamples

  current number of samples to be evaluated

- bool allDataFlag

  Iterator::all_variables() and Iterator::all_responses().

- size_t numDACERuns

  counter for number of run() executions for this object

- bool latinizeFlag

  flag which specifies latinization of QMC or CVT sample sets

- bool volQualityFlag

  flag which specifies evaluating the volumetric quality measures

- bool varBasedDecompFlag

  sensitivity analysis metrics

- IntVector sequenceStart

  variable sampled. Default is 0 0 0 (e.g. for three random variables).

- IntVector sequenceLeap

  generated. Default is 1 1 1 (e.g. for three random vars.)

- IntVector primeBase

  generated. Default is 2 3 5 (e.g., for three random vars.)

- int originalSeed

  (allows repeatable results)

- int randomSeed

  current seed for the random number generator

- bool varyPattern

  multiple executions are repeatable but not identical.

- int numCVTTrials

  specifies the number of sample points taken at internal CVT iteration

- int trialType

  halton (1), uniform (0), or random (-1). Default is random.

8.50.1 Detailed Description

Wrapper class for the FSUDace QMC/CVT library.

The FSUDesignCompExp class provides a wrapper for FSUDace, a C++ design of experiments library from Florida State University. This class uses quasi Monte Carlo (QMC) and Centroidal Voronoi Tesselation (CVT) methods to uniformly sample the parameter space spanned by the active bounds of the current Model. It returns all generated samples and their corresponding responses as well as the best sample found.

8.50.2 Constructor & Destructor Documentation

8.50.2.1 FSUDesignCompExp (Model & *model*)

primary constructor for building a standard DACE iterator

This constructor is called for a standard iterator built with data from probDescDB.

8.50.2.2 FSUDesignCompExp (Model & *model*, int *samples*, int *seed*, const String & *sampling_method*)

alternate constructor for building a DACE iterator on-the-fly

This alternate constructor is used for instantiations on-the-fly, using only the incoming data. No problem description database queries are used.

8.50.3 Member Function Documentation

8.50.3.1 void enforce_input_rules () `[private]`

enforce sanity checks/modifications for the user input specification

Users may input a variety of quantities, but this function must enforce any restrictions imposed by the sampling algorithms.

The documentation for this class was generated from the following files:

- FSUDesignCompExp.H
- FSUDesignCompExp.C

8.51 FunctionCompare Class Template Reference

Public Member Functions

- FunctionCompare (bool(∗func)(const T &, void ∗), void ∗v)

  Constructor that defines the pointer to function and search value.

- bool operator() (T t) const

  The operator() must be defined. Calls the function test_fn.

Private Attributes

- bool(∗ test_fn)(const T &, void ∗)

  Pointer to test function.

- void ∗ search_val

  Holds the value to search for.

8.51.1 Detailed Description

template<class T> class Dakota::FunctionCompare< T >

Internal functor to mimic the RW find and index functions using the STL find_if() method. The class holds a pointer to the test function and the search value.

The documentation for this class was generated from the following file:

- DakotaList.H

8.52 GaussProcApproximation Class Reference

Derived approximation class for Gaussian Process implementation.

Inheritance diagram for GaussProcApproximation::

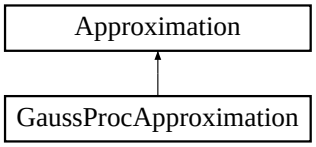

Public Member Functions

- GaussProcApproximation ()
  default constructor
- GaussProcApproximation (const ProblemDescDB &problem_db, const size_t &num_acv)
  standard constructor
- ~GaussProcApproximation ()
  destructor

Protected Member Functions

- int min_coefficients () const
  build the derived class approximation type in numVars dimensions
- int num_constraints () const
  return the number of constraints to be enforced via anchorPoint
- void find_coefficients ()
  find the covariance parameters governing the Gaussian process response
- const Real & get_value (const RealVector &x)
  retrieve the function value for a given parameter set x
- const Real & get_variance (const RealVector &x)
  retrieve the variance of the predicted value for a given parameter set x
- const RealBaseVector & get_gradient (const RealVector &x)
  for a given parameter set x

Private Member Functions

- void GPmodel_build ()

  Function to compute hyperparameters governing the GP.

- void GPmodel_apply (const RealVector &new_x, bool variance_flag, bool gradients_flag)

  Function returns a response value using the GP surface.

- void normalize_training_data ()

  Normalizes the initial inputs upon which the GP surface is based.

- void get_trend ()

  linear, if order = 2, trend is quadratic.

- void get_beta_coefficients ()

  Gets the beta coefficients for the calculation of the mean of the GP.

- int get_cholesky_factor ()

  error checking

- void get_process_variance ()

  the correlation lengthscales

- void get_cov_matrix ()

  calculates the covariance matrix for a given set of input points

- void get_cov_vector ()

  set of inputs upon which the GP is based

- void optimize_theta_global ()

  parameters using NCSUDirect

- void optimize_theta_multipoint ()

  parameters using a gradient-based solver and multiple staring points

- void predict (bool variance_flag, bool gradients_flag)

  Calculates the predicted new response value for x in normalized space.

- Real calc_nll ()

  matrix)

- void calc_grad_nll ()

  to the correlation lengthscales, theta

- void get_grad_cov_vector ()

  to each componeent of x.

- void run_point_selection ()

  estimate the necessary parameters

- void initialize_point_selection ()

  initial subset of the training points

- void pointsel_get_errors (RealVector &)

  training points and find the errors

- int addpoint (int, IntVector &)

  Adds a point to the effective training set. Returns 1 on success.

- int pointsel_add_sel (RealVector &)

  them

- Real maxval (RealVector &)

  Return the maximum value of the elements in a vector.

- void pointsel_write_points ()

  Writes out the training set before and after point selection.

- void lhood_2d_grid_eval ()

  likelihood on a grid

- void writex (char[ ])

  specified file

- void writeCovMat (char[ ])

  Writes out the covariance matrix to a specified file.

Static Private Member Functions

- static void negloglik (int mode, int n, const NEWMAT::ColumnVector &X, NEWMAT::Real &fx, NEWMAT::ColumnVector &grad_x, int &result_mode)

  by minimizing the negative log likelihood

- static void constraint_eval (int mode, int n, const NEWMAT::ColumnVector &X, NEWMAT::ColumnVector &g, NEWMAT::Matrix &gradC, int &result_mode)

  this function is empty: it is an unconstrained optimization.

- static double negloglikNCSU (const RealVector &x)

  function used by NCSUOptimizer to optimize negloglik objective

Private Attributes

- RealDenseMatrix trainPoints

  used to create the Gaussian process

- RealDenseMatrix trainValues

  An array of response values; one response value per sample site.

- RealDenseVector trainMeans

  The mean of the input columns of trainPoints.

- RealDenseVector trainStdvs

  The standard deviation of the input columns of trainPoints.

- RealDenseMatrix normTrainPoints

  Current working set of normalized points upon which the GP is based.

- RealDenseMatrix trendFunction

  matrix to hold the trend function

- RealDenseMatrix betaCoeffs

  matrix to hold the beta coefficients for the trend function

- RealSymDenseMatrix covMatrix

  between points Xi and Xj in the initial set of samples

- RealDenseMatrix covVector

  between a new point X and point Xj from the initial set of samples

- RealDenseMatrix approxPoint

  single point, but it could be generalized to be a vector of points.

- RealDenseMatrix gradNegLogLikTheta

  with respect to the theta correlation terms

- RealSpdDenseSolver covSlvr

  the covariance matrix

- RealDenseMatrix gradCovVector

  with respect to a particular componenet of X

- RealDenseMatrix normTrainPointsAll

  Set of all original samples available.

- RealDenseMatrix trainValuesAll

  All original samples available.

- RealDenseMatrix trendFunctionAll

  Trend function values corresponding to all original samples.

- size_t numObs

  The number of observations on which the GP surface is built.

- size_t numObsAll

  The original number of observations.

- short trendOrder

  linear, if order = 2, trend is quadratic.

- RealVector thetaParams

  same point. sige is the underlying process error.

- Real procVar

  The process variance, the multiplier of the correlation matrix.

- RealVector pointsAddedIndex

  all points which have been added

- int cholFlag

  A global indicator for success of the Cholesky factorization.

- bool usePointSelection

  a flag to indicate the use of point selection

Static Private Attributes

- static GaussProcApproximation ∗ GPinstance

  pointer to the active object instance used within the static evaluator

8.52.1 Detailed Description

Derived approximation class for Gaussian Process implementation.

The GaussProcApproximation class provides a global approximation (surrogate) based on a Gaussian process. The Gaussian process is built after normalizing the function values, with zero mean. Opt++ is used to determine the optimal values of the covariance parameters, those which minimize the negative log likelihood function.

8.52.2 Member Function Documentation

8.52.2.1 void GPmodel_apply (const RealVector & *new_x*, bool *variance_flag*, bool *gradients_flag*) [private]

Function returns a response value using the GP surface.

The response value is computed at the design point specified by the RealVector function argument.

The documentation for this class was generated from the following files:

- GaussProcApproximation.H
- GaussProcApproximation.C

8.53 GenLaguerreOrthogPolynomial Class Reference

Derived orthogonal polynomial class for generalized Laguerre polynomials.

Inheritance diagram for GenLaguerreOrthogPolynomial::

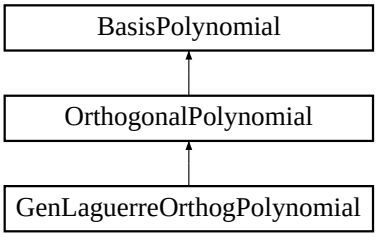

Public Member Functions

- GenLaguerreOrthogPolynomial ()

  default constructor

- GenLaguerreOrthogPolynomial (const Real &alpha_stat)

  standard constructor

- ~GenLaguerreOrthogPolynomial ()

  destructor

Protected Member Functions

- const Real & get_value (const Real &x, unsigned short order)

  parameter x

- const Real & get_gradient (const Real &x, unsigned short order)

  given parameter x

- const Real & norm_squared (unsigned short order)

  return the inner product <L^(alpha)_n,L^(alpha)_n> = ||L^(alpha)_n||^2

- const RealVector & gauss_points (unsigned short order)

  corresponding to polynomial order n

- const RealVector & gauss_weights (unsigned short order)

  corresponding to polynomial order n

- void alpha_stat (const Real &alpha)

  set alphaPoly using the conversion alphaPoly = alpha_stat-1.

Private Attributes

- Real alphaPoly

  by Abramowitz and Stegun (differs from statistical PDF notation)

8.53.1 Detailed Description

Derived orthogonal polynomial class for generalized Laguerre polynomials.

The GenLaguerreOrthogPolynomial class evaluates a univariate generalized/associated Laguerre polynomial L^(alpha)_n of a particular order. These polynomials are orthogonal with respect to the weight function x^alpha exp(-x) when integrated over the support range of [0,+infinity]. This corresponds to the probability density function f(x) = x^alpha exp(-x) / Gamma(alpha+1) for the standard gamma distribution, although common statistical PDF parameter conventions (see, e.g., the uncertain variables section in the DAKOTA Reference Manual) and the Abramowitz and Stegun orthogonal polynomial parameter conventions require an offset conversion in this case (alpha_poly = alpha_stat - 1 with the poly definition used in both cases above). It enables (mixed) multidimensional orthogonal polynomial basis functions within OrthogPolyApproximation. A special case is the LaguerreOrthogPolynomial (implemented separately), for which alpha_poly = 0 and weight function = exp(-x) (the standard exponential distribution).

The documentation for this class was generated from the following files:

- GenLaguerreOrthogPolynomial.H
- GenLaguerreOrthogPolynomial.C

8.54 GetLongOpt Class Reference

(Advanced Computer Research Institute, Lyon, France).

Inheritance diagram for GetLongOpt::

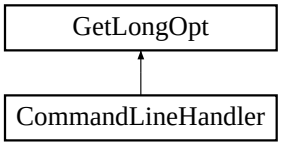

Public Types

- enum OptType { **Valueless**, **OptionalValue**, **MandatoryValue** }

  enum for different types of values associated with command line options.

Public Member Functions

- GetLongOpt (const char optmark= '-')

  Constructor.

- ~GetLongOpt ()

  Destructor.

- int parse (int argc, char *const *argv)

  parse the command line args (argc, argv).

- int parse (char *const str, char *const p)

  parse a string of options (typically given from the environment).

- int enroll (const char *const opt, const OptType t, const char *const desc, const char *const val)

  Add an option to the list of valid command options.

- const char * retrieve (const char *const opt) const

  Retrieve value of option.

- void usage (ostream &outfile=cout) const

  Print usage information to outfile.

- void usage (const char *str)

Change header of usage output to str.

- void store (const char ∗name, const char ∗value)

  Store a specified option value.

Private Member Functions

- char ∗ basename (char ∗const p) const

  extract the base name from a string as delimited by '/'

- int setcell (Cell ∗c, char ∗valtoken, char ∗nexttoken, const char ∗p)

  internal convenience function for setting Cell::value

Private Attributes

- Cell ∗ table

  option table

- const char ∗ ustring

  usage message

- char ∗ pname

  program basename

- char optmarker

  option marker

- int enroll_done

  finished enrolling

- Cell ∗ last

  last entry in option table

8.54.1 Detailed Description

(Advanced Computer Research Institute, Lyon, France).

GetLongOpt manages the definition and parsing of "long options." Command line options can be abbreviated as long as there is no ambiguity. If an option requires a value, the value should be separated from the option either by whitespace or an "=".

8.54.2 Constructor & Destructor Documentation

8.54.2.1 GetLongOpt (const char *optmark* = '-')

Constructor.

Constructor for GetLongOpt takes an optional argument: the option marker. If unspecified, this defaults to '-', the standard (?) Unix option marker.

8.54.3 Member Function Documentation

8.54.3.1 int parse (int *argc*, char ∗const ∗ *argv*)

parse the command line args (argc, argv).

A return value < 1 represents a parse error. Appropriate error messages are printed when errors are seen. parse returns the the optind (see getopt(3)) if parsing is successful.

8.54.3.2 int parse (char ∗const *str*, char ∗const *p*)

parse a string of options (typically given from the environment).

A return value < 1 represents a parse error. Appropriate error messages are printed when errors are seen. parse takes two strings: the first one is the string to be parsed and the second one is a string to be prefixed to the parse errors.

8.54.3.3 int enroll (const char ∗const *opt*, const OptType *t*, const char ∗const *desc*, const char ∗const *val*)

Add an option to the list of valid command options.

enroll adds option specifications to its internal database. The first argument is the option sting. The second is an enum saying if the option is a flag (Valueless), if it requires a mandatory value (MandatoryValue) or if it takes an optional value (OptionalValue). The third argument is a string giving a brief description of the option. This description will be used by GetLongOpt::usage. GetLongOpt, for usage-printing, uses {$val} to represent values needed by the options. {<$val>} is a mandatory value and {[$val]} is an optional value. The final argument to enroll is the default string to be returned if the option is not specified. For flags (options with Valueless), use "" (empty string, or in fact any arbitrary string) for specifying TRUE and 0 (null pointer) to specify FALSE.

8.54.3.4 const char ∗ retrieve (const char ∗const *opt*) const

Retrieve value of option.

The values of the options that are enrolled in the database can be retrieved using retrieve. This returns a string and this string should be converted to whatever type you want. See atoi, atof, atol, etc. If a "parse" is not done

before retrieving all you will get are the default values you gave while enrolling! Ambiguities while retrieving (may happen when options are abbreviated) are resolved by taking the matching option that was enrolled last. For example, -{v} will expand to {-verify}. If you try to retrieve something you didn't enroll, you will get a warning message.

8.54.3.5 void usage (const char * *str*) [inline]

Change header of usage output to str.

GetLongOpt::usage is overloaded. If passed a string "str", it sets the internal usage string to "str". Otherwise it simply prints the command usage.

The documentation for this class was generated from the following files:

- CommandLineHandler.H
- CommandLineHandler.C

8.55 Graphics Class Reference

for post-processing with Matlab, Tecplot, etc.

Public Member Functions

- Graphics ()

  constructor

- ~Graphics ()

  destructor

- void create_plots_2d (const Variables &vars, const Response &response)

  creates the 2d graphics window and initializes the plots

- void create_tabular_datastream (const Variables &vars, const Response &response, const String &tabular_-data_file)

  opens the tabular data file stream and prints the headings

- void add_datapoint (const Variables &vars, const Response &response)

  the tabular data file based on the results of a model evaluation

- void add_datapoint (int i, double x, double y)

  adds data to a single window in the 2d graphics

- void new_dataset (int i)

  for a single window in the 2d graphics

- void show_data_3d (const RealVector &X, const RealVector &Y, const RealMatrix &F)

  generate a new 3d plot for F(X,Y)

- void close ()

  close graphics windows and tabular datastream

- void set_x_labels2d (const char *x_label)

  set x label for each plot equal to x_label

- void set_y_labels2d (const char *y_label)

  set y label for each plot equal to y_label

- void set_x_label2d (int i, const char *x_label)

  set x label for ith plot equal to x_label

- void set_y_label2d (int i, const char *y_label)

  set y label for ith plot equal to y_label

- void graphics_counter (int cntr)

  set graphicsCntr equal to cntr

- int graphics_counter () const

  return graphicsCntr

- void tabular_counter_label (const String &label)

  set tabularCntrLabel equal to label

Private Attributes

- Graphics2D * graphics2D

  pointer to the 2D graphics object

- bool win2dOn

  flag to indicate if 2D graphics window is active

- bool win3dOn

  flag to indicate if 3D graphics window is active

- bool tabularDataFlag

  flag to indicate if tabular data stream is active

- int graphicsCntr

  used for x axis values in 2D graphics and for 1st column in tabular data

- String tabularCntrLabel

  label for counter used in first line comment w/i the tabular data file

- ofstream tabularDataFStream

  file stream for tabulation of graphics data within compute_response

8.55.1 Detailed Description

for post-processing with Matlab, Tecplot, etc.

There is only one Graphics object (dakotaGraphics) and it is global (for convenient access from strategies, models, and approximations).

8.55.2 Member Function Documentation

8.55.2.1 void create_plots_2d (const Variables & *vars*, const Response & *response*)

creates the 2d graphics window and initializes the plots

Sets up a single event loop for duration of the dakotaGraphics object, continuously adding data to a single window. There is no reset. To start over with a new data set, you need a new object (delete old and instantiate new).

8.55.2.2 void create_tabular_datastream (const Variables & *vars*, const Response & *response*, const String & *tabular_data_file*)

opens the tabular data file stream and prints the headings

Opens the tabular data file stream and prints headings, one for each continuous and discrete variable and one for each response function, using the variable and response function labels. This tabular data is used for post-processing of DAKOTA results in Matlab, Tecplot, etc.

8.55.2.3 void add_datapoint (const Variables & *vars*, const Response & *response*)

the tabular data file based on the results of a model evaluation

Adds data to each 2d plot and each tabular data column (one for each active variable and for each response function). graphicsCntr is used for the x axis in the graphics and the first column in the tabular data.

8.55.2.4 void add_datapoint (int *i*, double *x*, double *y*)

adds data to a single window in the 2d graphics

Adds data to a single 2d plot. Allows complete flexibility in defining other kinds of x-y plotting in the 2D graphics.

8.55.2.5 void new_dataset (int *i*)

for a single window in the 2d graphics

Used for displaying multiple data sets within the same plot.

8.55.2.6 void show_data_3d (const RealVector & *X*, const RealVector & *Y*, const RealMatrix & *F*)

generate a new 3d plot for F(X,Y)

3D plotting clears data set and builds from scratch each time show_data3d is called. This still involves an event loop waiting for a mouse click (right button) to continue. X = 1-D x grid values only and Y = 1-D Y grid values only [X and Y are _not_ (X,Y) pairs]. F = 2-d grid of values for a single function for all (X,Y) combinations.

The documentation for this class was generated from the following files:

- DakotaGraphics.H
- DakotaGraphics.C

8.56 GridApplicInterface Class Reference

using grid services such as Condor or Globus.

Inheritance diagram for GridApplicInterface::

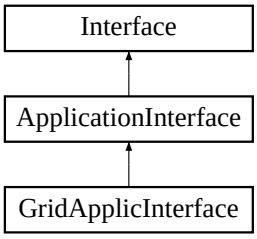

Public Member Functions

- GridApplicInterface (const ProblemDescDB &problem_db)

  constructor

- ~GridApplicInterface ()

  destructor

- void derived_map (const Variables &vars, const ActiveSet &set, Response &response, int fn_eval_id)

  that is specific to a derived class.

- void derived_map_asynch (const ParamResponsePair &pair)

  asynchronous evaluation that is specific to a derived class.

- void derived_synch (PRPList &prp_list)

  classes. This version waits for at least one completion.

- void derived_synch_nowait (PRPList &prp_list)

  any completions if none are immediately available.

- int derived_synchronous_local_analysis (const int &analysis_id)

Public Attributes

- SysCallAnalysisCode code

  Used to read/write parameter files and responses.

Protected Member Functions

- void derived_synch_kernel (PRPList &prp_list)

  Convenience function for common code between wait and nowait case.

- bool grid_file_test (const String &root_file)

  test file(s) for existence based on root_file name

Protected Attributes

- IntSet idSet

  system call evaluations

- IntShortMap failCountMap

  map linking function evaluation id's to number of response read failures

- start_grid_computing_t start_grid_computing

  handle to dynamically linked start_grid_computing function

- perform_analysis_t perform_analysis

  handle to dynamically linked perform_analysis grid function

- get_jobs_completed_t get_jobs_completed

  handle to dynamically linked get_jobs_completed grid function

- stop_grid_computing_t stop_grid_computing

  handle to dynamically linked stop_grid_computing function

8.56.1 Detailed Description

using grid services such as Condor or Globus.

This class is currently a modified copy of SysCallApplicInterface adapted for use with an external grid dervices library which was dynamically linked using dlopen() services.

8.56.2 Member Function Documentation

8.56.2.1 int derived_synchronous_local_analysis (const int & *analysis_id*) `[inline, virtual]`

This code provides the derived function used by ApplicationInterface::serve_analyses_synch().

TODO - allow local analyses?????

Reimplemented from ApplicationInterface.

The documentation for this class was generated from the following files:

- GridApplicInterface.H
- GridApplicInterface.C

8.57 HermiteOrthogPolynomial Class Reference

Derived orthogonal polynomial class for Hermite polynomials.

Inheritance diagram for HermiteOrthogPolynomial::

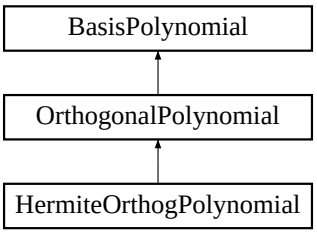

Public Member Functions

- HermiteOrthogPolynomial ()

  default constructor

- ~HermiteOrthogPolynomial ()

  destructor

Protected Member Functions

- const Real & get_value (const Real &x, unsigned short order)

  retrieve the Hermite polynomial value for a given parameter x

- const Real & get_gradient (const Real &x, unsigned short order)

  retrieve the Hermite polynomial gradient for a given parameter x

- const Real & norm_squared (unsigned short order)

  return the inner product <He_n,He_n> = ||He_n||^2

- const RealVector & gauss_points (unsigned short order)

  polynomial order

- const RealVector & gauss_weights (unsigned short order)

  polynomial order

Static Private Attributes

- static const Real Pi

  numerical value of Pi

8.57.1 Detailed Description

Derived orthogonal polynomial class for Hermite polynomials.

The HermiteOrthogPolynomial class evaluates a univariate Hermite polynomial of a particular order. It uses the "probabilist's" formulation for which the polynomials are orthogonal with respect to the weight function 1/sqrt(2∗Pi) exp(-x^2/2) when integrated over the support range of [-infinity,+infinity]. It enables (mixed) multi-dimensional orthogonal polynomial basis functions within OrthogPolyApproximation.

The documentation for this class was generated from the following files:

- HermiteOrthogPolynomial.H
- HermiteOrthogPolynomial.C

8.58 HierarchSurrModel Class Reference

hierarchical surrogates (models of varying fidelity).

Inheritance diagram for HierarchSurrModel::

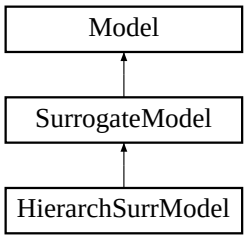

Public Member Functions

- HierarchSurrModel (ProblemDescDB &problem_db)
  constructor
- ~HierarchSurrModel ()
  destructor

Protected Member Functions

- void derived_compute_response (const ActiveSet &set)
  portion of compute_response() specific to HierarchSurrModel
- void derived_asynch_compute_response (const ActiveSet &set)
  portion of asynch_compute_response() specific to HierarchSurrModel
- const ResponseArray & derived_synchronize ()
  portion of synchronize() specific to HierarchSurrModel
- const IntResponseMap & derived_synchronize_nowait ()
  portion of synchronize_nowait() specific to HierarchSurrModel
- Model & surrogate_model ()
  return lowFidelityModel
- Model & truth_model ()
  return highFidelityModel

- void derived_subordinate_models (ModelList &ml, bool recurse_flag)

  return lowFidelityModel and highFidelityModel

- void surrogate_bypass (bool bypass_flag)

  for any lower-level surrogates.

- void surrogate_function_indices (const IntSet &surr_fn_indices)

  (re)set the surrogate index set in SurrogateModel::surrogateFnIndices

- void build_approximation ()

  correction of lowFidelityModel results

- void component_parallel_mode (short mode)

  lowFidelityModel and highFidelityModel

- void derived_init_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  set up lowFidelityModel and highFidelityModel for parallel operations

- void derived_init_serial ()

  set up lowFidelityModel and highFidelityModel for serial operations.

- void derived_set_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  highFidelityModel

- void derived_free_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  (request forwarded to lowFidelityModel and highFidelityModel)

- void serve ()

  stop_servers().

- void stop_servers ()

  HierarchSurrModel is complete.

- int evaluation_id () const

  Return the current evaluation id for the HierarchSurrModel.

- void set_evaluation_reference ()

  (request forwarded to lowFidelityModel and highFidelityModel)

- void fine_grained_evaluation_counters ()

  and highFidelityModel

- void print_evaluation_summary (ostream &s, bool minimal_header=false, bool relative_count=true) const

  (request forwarded to lowFidelityModel and highFidelityModel)

Private Member Functions

- void update_model (Model &model)

  with current variable values/bounds/labels

Private Attributes

- int hierModelEvals

  derived_asynch_compute_response()

- IntResponseMap cachedTruthRespMap

  portions were still pending.

- Model lowFidelityModel

  a data fit surrogate on a low fidelity model).

- Model highFidelityModel

  fidelity results. Model is of arbitrary type and supports recursions.

- Response highFidRefResponse

  and used for calculating corrections.

8.58.1 Detailed Description

hierarchical surrogates (models of varying fidelity).

The HierarchSurrModel class manages hierarchical models of varying fidelity. In particular, it uses a low fidelity model as a surrogate for a high fidelity model. The class contains a lowFidelityModel which performs the approximate low fidelity function evaluations and a highFidelityModel which provides truth evaluations for computing corrections to the low fidelity results.

8.58.2 Member Function Documentation

8.58.2.1 void derived_compute_response (const ActiveSet & *set*) `[protected, virtual]`

portion of compute_response() specific to HierarchSurrModel

Compute the response synchronously using lowFidelityModel, highFidelityModel, or both (mixed case). For the lowFidelityModel portion, compute the high fidelity response if needed with build_approximation(), and, if correction is active, correct the low fidelity results.

Reimplemented from Model.

8.58.2.2 void derived_asynch_compute_response (const ActiveSet & *set*) [protected, virtual]

portion of asynch_compute_response() specific to HierarchSurrModel

Compute the response asynchronously using lowFidelityModel, highFidelityModel, or both (mixed case). For the lowFidelityModel portion, compute the high fidelity response with build_approximation() (for correcting the low fidelity results in derived_synchronize() and derived_synchronize_nowait()) if not performed previously.

Reimplemented from Model.

8.58.2.3 const ResponseArray & derived_synchronize () [protected, virtual]

portion of synchronize() specific to HierarchSurrModel

Blocking retrieval of asynchronous evaluations from lowFidelityModel, highFidelityModel, or both (mixed case). For the lowFidelityModel portion, apply correction (if active) to each response in the array. derived_synchronize() is designed for the general case where derived_asynch_compute_response() may be inconsistent in its use of low fidelity evaluations, high fidelity evaluations, or both.

Reimplemented from Model.

8.58.2.4 const IntResponseMap & derived_synchronize_nowait () [protected, virtual]

portion of synchronize_nowait() specific to HierarchSurrModel

Nonblocking retrieval of asynchronous evaluations from lowFidelityModel, highFidelityModel, or both (mixed case). For the lowFidelityModel portion, apply correction (if active) to each response in the map. derived_synchronize_nowait() is designed for the general case where derived_asynch_compute_response() may be inconsistent in its use of actual evals, approx evals, or both.

Reimplemented from Model.

8.58.2.5 int evaluation_id () const [inline, protected, virtual]

Return the current evaluation id for the HierarchSurrModel.

return the hierarchical model evaluation count. Due to possibly intermittent use of surrogate bypass, this is not the same as either the loFi or hiFi model evaluation counts. It also does not distinguish duplicate evals.

Reimplemented from Model.

The documentation for this class was generated from the following files:

- HierarchSurrModel.H
- HierarchSurrModel.C

8.59 HybridStrategy Class Reference

Base class for hybrid minimization strategies.

Inheritance diagram for HybridStrategy::

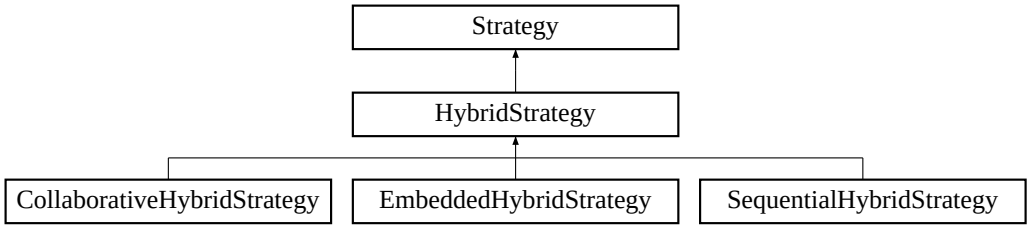

Protected Member Functions

- HybridStrategy (ProblemDescDB &problem_db)
  constructor
- ~HybridStrategy ()
  destructor
- void allocate_methods ()
  initialize selectedIterators and userDefinedModels
- void deallocate_methods ()
  free communicators for selectedIterators and userDefinedModels

Protected Attributes

- StringArray methodList
  the list of method identifiers
- int numIterators
  number of methods in methodList
- IteratorArray selectedIterators
  the set of iterators, one for each entry in methodList
- ModelArray userDefinedModels
  the set of models, one for each iterator

8.59.1 Detailed Description

Base class for hybrid minimization strategies.

This base class shares code for three approaches to hybrid minimization: (1) the sequential hybrid; (2) the embedded hybrid; and (3) the collaborative hybrid.

The documentation for this class was generated from the following files:

- HybridStrategy.H
- HybridStrategy.C

8.60 Interface Class Reference

Base class for the interface class hierarchy.

Inheritance diagram for Interface::

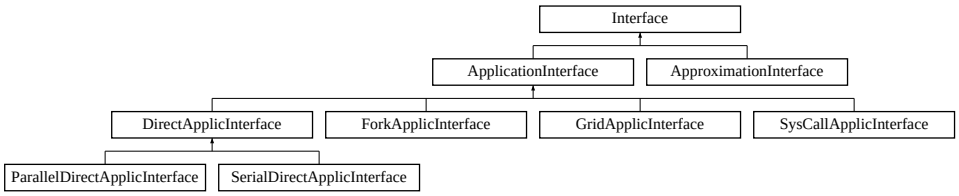

Public Member Functions

- Interface ()

  default constructor

- Interface (ProblemDescDB &problem_db)

  standard constructor for envelope

- Interface (const Interface &interface)

  copy constructor

- virtual ~Interface ()

  destructor

- Interface operator= (const Interface &interface)

  assignment operator

- virtual void map (const Variables &vars, const ActiveSet &set, Response &response, const bool asynch_-flag=false)

  variables to the responses.

- virtual const ResponseArray & synch ()

  recovers data from a series of asynchronous evaluations (blocking)

- virtual const IntResponseMap & synch_nowait ()

  recovers data from a series of asynchronous evaluations (nonblocking)

- virtual void serve_evaluations ()

  evaluation server function for multiprocessor executions

- virtual void stop_evaluation_servers ()

  send messages from iterator rank 0 to terminate evaluation servers

- virtual void init_communicators (const IntArray &message_lengths, const int &max_iterator_concurrency)

  iterator and concurrent multiprocessor analyses within an evaluation.

- virtual void set_communicators (const IntArray &message_lengths)

  (the partitions are already allocated in ParallelLibrary).

- virtual void free_communicators ()

  iterator and concurrent multiprocessor analyses within an evaluation.

- virtual void init_serial ()

  reset certain defaults for serial interface objects.

- virtual int asynch_local_evaluation_concurrency () const

  return the user-specified concurrency for asynch local evaluations

- virtual String interface_synchronization () const

  return the user-specified interface synchronization

- virtual int minimum_samples (bool constraint_flag) const

  ApproximationInterface (used by DataFitSurrModels).

- virtual int recommended_samples (bool constraint_flag) const

  ApproximationInterface (used by DataFitSurrModels).

- virtual void approximation_function_indices (const IntSet &approx_fn_indices)

  set the (currently active) approximation function index set

- virtual void update_approximation (const Variables &vars, const Response &response)

  updates the anchor point for an approximation

- virtual void update_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array)

  updates the current data points for an approximation

- virtual void append_approximation (const Variables &vars, const Response &response)

  appends a single point to an existing approximation

- virtual void append_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array)

  appends multiple points to an existing approximation

- virtual void build_approximation (const RealVector &lower_bnds, const RealVector &upper_bnds)

builds the approximation

- virtual void clear_current ()

  clears current data from an approximation interface

- virtual void clear_all ()

  clears all data from an approximation interface

- virtual bool anchor () const

  queries the presence of an anchorPoint within an approximation interface

- virtual const SurrogateDataPoint & anchor_point () const

  returns the anchorPoint used within an approximation interface

- virtual Array< Approximation > & approximations ()

  retrieve the Approximations within an ApproximationInterface

- virtual const RealVectorArray & approximation_coefficients ()

  within an ApproximationInterface

- virtual void approximation_coefficients (const RealVectorArray &approx_coeffs)

  within an ApproximationInterface

- virtual void print_coefficients (ostream &s, size_t index) const

  Approximation instance within an ApproximationInterface.

- virtual const RealVector & approximation_variances (const RealVector &c_variables)

  within an ApproximationInterface

- virtual const List< SurrogateDataPoint > & approximation_data (size_t index)

  within an ApproximationInterface

- virtual const StringArray & analysis_drivers () const

  retrieve the analysis drivers specification for application interfaces

- void assign_rep (Interface *interface_rep, bool ref_count_incr=true)

  replaces existing letter with a new one

- const String & interface_type () const

  returns the interface type

- const String & interface_id () const

  returns the interface identifier

- int evaluation_id () const

  returns the current function evaluation id for the interface

- void fine_grained_evaluation_counters (const size_t &num_fns)

  set fineGrainEvalCounters to true and initialize counters if needed

- void init_evaluation_counters (const size_t &num_fns)

  initialize fine grained evaluation counters

- void set_evaluation_reference ()

  set evaluation count reference points for the interface

- void print_evaluation_summary (ostream &s, bool minimal_header, bool relative_count) const

  print an evaluation summary for the interface

- bool multi_proc_eval_flag () const

  returns a flag signaling the use of multiprocessor evaluation partitions

- bool iterator_eval_dedicated_master_flag () const

  iterator-evaluation scheduling level

- bool is_null () const

  function to check interfaceRep (does this envelope contain a letter?)

Protected Member Functions

- Interface (BaseConstructor, const ProblemDescDB &problem_db)

  derived class constructors - Coplien, p. 139)

- Interface (NoDBBaseConstructor, const size_t &num_fns)

  (NoDBBaseConstructor used for on the fly instantiations without a DB)

- void asv_mapping (const ActiveSet &total_set, ActiveSet &algebraic_set, ActiveSet &core_set, const Variables &vars, const Response &response)

  from the total Interface evaluation requirements (total_set). Also

- void algebraic_mappings (const Variables &vars, const ActiveSet &algebraic_set, Response &algebraic_-response)

  and the data extracted from the algebraic_mappings file

- void response_mapping (const Response &algebraic_response, const Response &core_response, Response &total_response)

  from derived_map() to create the total response

Protected Attributes

- String interfaceType

  the interface type: system, fork, direct, grid, or approximation

- String idInterface

  (used in print_evaluation_summary())

- bool algebraicMappings

  Interface's parameter to response mapping that is explicit and algebraic.

- bool coreMappings

  ApplicationInterface or functionSurfaces for ApproximationInterface).

- bool fineGrainEvalCounters

  controls use of fn val/grad/hess counters

- int fnEvalId

  total interface evaluation counter

- int newFnEvalId

  new (non-duplicate) interface evaluation counter

- int fnEvalIdRefPt

  iteration reference point for fnEvalId

- int newFnEvalIdRefPt

  iteration reference point for newFnEvalId

- IntArray fnValCounter

  number of value evaluations by resp fn

- IntArray fnGradCounter

  number of gradient evaluations by resp fn

- IntArray fnHessCounter

  number of Hessian evaluations by resp fn

- IntArray newFnValCounter

  number of new value evaluations by resp fn

- IntArray newFnGradCounter

  number of new gradient evaluations by resp fn

- IntArray newFnHessCounter

  number of new Hessian evaluations by resp fn

- IntArray fnValRefPt
  iteration reference point for fnValCounter
- IntArray fnGradRefPt
  iteration reference point for fnGradCounter
- IntArray fnHessRefPt
  iteration reference point for fnHessCounter
- IntArray newFnValRefPt
  iteration reference point for newFnValCounter
- IntArray newFnGradRefPt
  iteration reference point for newFnGradCounter
- IntArray newFnHessRefPt
  iteration reference point for newFnHessCounter
- ResponseArray rawResponseArray
  asynchronous evaluations.
- IntResponseMap rawResponseMap
  asynchronous evaluations.
- StringArray fnLabels
  in print_evaluation_summary() and derived direct interface classes)
- bool multiProcEvalFlag
  flag for multiprocessor evaluation partitions (evalComm)
- bool ieDedMasterFlag
  flag for dedicated master partitioning at the iterator level
- short outputLevel
  output verbosity level: {SILENT,QUIET,NORMAL,VERBOSE,DEBUG}_OUTPUT

Private Member Functions

- Interface * get_interface (ProblemDescDB &problem_db)
  Used by the envelope to instantiate the correct letter class.
- int algebraic_function_type (String)
  evaluation call to make

Private Attributes

- StringArray algebraicVarTags

  set of variable tags from AMPL stub.col

- SizetArray algebraicACVIndices

  continuous variables

- SizetArray algebraicDerivIndices

  derivative variables

- StringArray algebraicFnTags

  set of function tags from AMPL stub.row

- IntArray algebraicFnTypes

  AMPL objval (conival) calls.

- RealArray algebraicConstraintWeights

  set of weights for computing Hessian matrices for algebraic constraints;

- SizetArray algebraicFnIndices

  DAKOTA response functions.

- int numAlgebraicResponses

  number of algebraic responses (objectives+constraints)

- Interface ∗ interfaceRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing interfaceRep

- ASL ∗ asl

  pointer to an AMPL solver library (ASL) object

8.60.1 Detailed Description

Base class for the interface class hierarchy.

The Interface class hierarchy provides the part of a Model that is responsible for mapping a set of Variables into a set of Responses. The mapping is performed using either a simulation-based application interface or a surrogate-based approximation interface. For memory efficiency and enhanced polymorphism, the interface hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (Interface) serves as the envelope and one of the derived classes (selected in Interface::get_interface()) serves as the letter.

8.60.2 Constructor & Destructor Documentation

8.60.2.1 Interface ()

default constructor

used in Model envelope class instantiations

8.60.2.2 Interface (ProblemDescDB & *problem_db*)

standard constructor for envelope

Used in Model instantiation to build the envelope. This constructor only needs to extract enough data to properly execute get_interface, since Interface::Interface(BaseConstructor, problem_db) builds the actual base class data inherited by the derived interfaces.

8.60.2.3 Interface (const Interface & *interface*)

copy constructor

Copy constructor manages sharing of interfaceRep and incrementing of referenceCount.

8.60.2.4 ~Interface () [virtual]

destructor

Destructor decrements referenceCount and only deletes interfaceRep if referenceCount is zero.

8.60.2.5 Interface (BaseConstructor, const ProblemDescDB & *problem_db*) [protected]

derived class constructors - Coplien, p. 139)

This constructor is the one which must build the base class data for all inherited interfaces. get_interface() instantiates a derived class letter and the derived constructor selects this base class constructor in its initialization list (to avoid the recursion of the base class constructor calling get_interface() again). Since this is the letter and the letter IS the representation, interfaceRep is set to NULL (an uninitialized pointer causes problems in ~Interface).

8.60.3 Member Function Documentation

8.60.3.1 Interface operator= (const Interface & *interface*)

assignment operator

Assignment operator decrements referenceCount for old interfaceRep, assigns new interfaceRep, and increments referenceCount for new interfaceRep.

8.60.3.2 void assign_rep (Interface * *interface_rep*, bool *ref_count_incr* = `true`)

replaces existing letter with a new one

Similar to the assignment operator, the assign_rep() function decrements referenceCount for the old interfaceRep and assigns the new interfaceRep. It is different in that it is used for publishing derived class letters to existing envelopes, as opposed to sharing representations among multiple envelopes (in particular, assign_rep is passed a letter object and operator= is passed an envelope object). Letter assignment supports two models as governed by ref_count_incr:

- ref_count_incr = true (default): the incoming letter belongs to another envelope. In this case, increment the reference count in the normal manner so that deallocation of the letter is handled properly.
- ref_count_incr = false: the incoming letter is instantiated on the fly and has no envelope. This case is modeled after get_interface(): a letter is dynamically allocated using new and passed into assign_rep, the letter's reference count is not incremented, and the letter is not remotely deleted (its memory management is passed over to the envelope).

8.60.3.3 Interface * get_interface (ProblemDescDB & *problem_db*) `[private]`

Used by the envelope to instantiate the correct letter class.

used only by the envelope constructor to initialize interfaceRep to the appropriate derived type.

8.60.4 Member Data Documentation

8.60.4.1 ResponseArray rawResponseArray `[protected]`

asynchronous evaluations.

The array is the raw set of responses corresponding to all asynchronous map calls. This raw array is postprocessed (i.e., finite difference gradients merged) in Model::synchronize() where it becomes responseArray.

8.60.4.2 IntResponseMap rawResponseMap `[protected]`

asynchronous evaluations.

The map is a partial set of completions which are identified through their fn_eval_id key. Postprocessing from raw to combined form (i.e., finite difference gradient merging) is not currently supported in Model::synchronize_nowait().

The documentation for this class was generated from the following files:

- DakotaInterface.H
- DakotaInterface.C

8.61 InterpPolyApproximation Class Reference

approximation).

Inheritance diagram for InterpPolyApproximation::

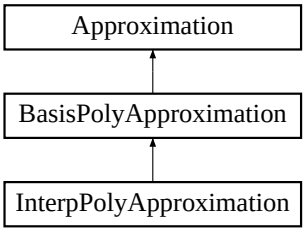

Public Member Functions

- InterpPolyApproximation ()
  default constructor
- InterpPolyApproximation (const ProblemDescDB &problem_db, const size_t &num_acv)
  standard constructor
- ~InterpPolyApproximation ()
  destructor

Protected Member Functions

- int min_coefficients () const
  build the derived class approximation type in numVars dimensions
- void find_coefficients ()
  interpolation polynomials
- const Real & get_value (const RealVector &x)
  retrieve the response expansion value for a given parameter vector
- const RealBaseVector & get_gradient (const RealVector &x)
  and default DVV
- const RealBaseVector & get_gradient (const RealVector &x, const UIntArray &dvv)
  and given DVV

- const Real & get_mean ()

  return the mean of the expansion, treating all variables as random

- const Real & get_mean (const RealVector &x)

  treating a subset of the variables as random

- const RealBaseVector & get_mean_gradient ()

  treating all variables as random

- const RealBaseVector & get_mean_gradient (const RealVector &x, const UIntArray &dvv)

  and given DVV, treating a subset of the variables as random

- const Real & get_variance ()

  return the variance of the expansion, treating all variables as random

- const Real & get_variance (const RealVector &x)

  treating a subset of the variables as random

- const RealBaseVector & get_variance_gradient ()

  vector, treating all variables as random

- const RealBaseVector & get_variance_gradient (const RealVector &x, const UIntArray &dvv)

  vector and given DVV, treating a subset of the variables as random

Private Member Functions

- const Real & tensor_product_value (const RealVector &x, size_t tp_index)

  tensor-product grid; contributes to get_value(x)

- const RealBaseVector & tensor_product_gradient (const RealVector &x, size_t tp_index)

  tensor-product grid; contributes to get_gradient(x)

- const RealBaseVector & tensor_product_gradient (const RealVector &x, size_t tp_index, const UIntArray &dvv)

  tensor-product grid for given DVV; contributes to get_gradient(x, dvv)

- const Real & tensor_product_mean (const RealVector &x, size_t tp_index)

  tensor-product grid; contributes to get_mean(x)

- const RealBaseVector & tensor_product_mean_gradient (const RealVector &x, size_t tp_index, const UIntArray &dvv)

  tensor-product grid; contributes to get_mean(x)

- const Real & tensor_product_variance (const RealVector &x, size_t tp_index)

tensor-product grid; contributes to get_variance(x)

- const RealBaseVector & tensor_product_variance_gradient (const RealVector &x, size_t tp_index, const UIntArray &dvv)

  tensor-product grid; contributes to get_variance(x)

Private Attributes

- Array< Array< BasisPolynomial > > polynomialBasis

  constructing the multivariate orthogonal/interpolation polynomials.

- int numCollocPts

  expansion (length of expansionCoeffs)

- UShort2DArray smolyakMultiIndex

  within the polynomialBasis for a particular variable

- RealArray smolyakCoeffs

  precomputed array of Smolyak combinatorial coefficients

- UShort3DArray collocKey

  the 1-D interpolant indices for sets of tensor-product collocation points.

- Sizet2DArray expansionCoeffIndices

  set of tensor products to the expansionCoeffs array.

- Real tpValue

  the value of a tensor-product interpolant; a contributor to approxValue

- RealBaseVector tpGradient

  approxGradient

- Real tpMean

  the mean of a tensor-product interpolant; a contributor to expansionMean

- RealBaseVector tpMeanGrad

  contributor to expansionMeanGrad

- Real tpVariance

  expansionVariance

- RealBaseVector tpVarianceGrad

  contributor to expansionVarianceGrad

8.61.1 Detailed Description

approximation).

The InterpPolyApproximation class provides a global approximation based on interpolation polynomials. It is used primarily for stochastic collocation approaches to uncertainty quantification.

8.61.2 Member Function Documentation

8.61.2.1 const Real & get_mean () [protected, virtual]

return the mean of the expansion, treating all variables as random

In this case, all expansion variables are random variables and the mean of the expansion is simply the sum over i of r_i w_i.

Implements BasisPolyApproximation.

8.61.2.2 const Real & get_mean (const RealVector & *x*) [protected, virtual]

treating a subset of the variables as random

In this case, a subset of the expansion variables are random variables and the mean of the expansion involves evaluating the expectation over this subset.

Implements BasisPolyApproximation.

8.61.2.3 const RealBaseVector & get_mean_gradient () [protected, virtual]

treating all variables as random

In this function, all expansion variables are random variables and any design/state variables are omitted from the expansion. In this case, the derivative of the expectation is the expectation of the derivative. The mixed derivative case (some design variables are inserted and some are augmented) requires no special treatment.

Implements BasisPolyApproximation.

8.61.2.4 const RealBaseVector & get_mean_gradient (const RealVector & *x*, const UIntArray & *dvv*) [protected, virtual]

and given DVV, treating a subset of the variables as random

In this function, a subset of the expansion variables are random variables and any augmented design/state variables (i.e., not inserted as random variable distribution parameters) are included in the expansion. In this case, the mean of the expansion is the expectation over the random subset and the derivative of the mean is the derivative of the remaining expansion over the non-random subset. This function must handle the mixed case, where some design/state variables are augmented (and are part of the expansion: derivatives are evaluated as described above) and some are inserted (derivatives are obtained from expansionCoeffGrads).

Implements BasisPolyApproximation.

8.61.2.5 const Real & get_variance () [protected, virtual]

return the variance of the expansion, treating all variables as random

In this case, all expansion variables are random variables and the variance of the expansion is the sum over all but the first term of the coefficients squared times the polynomial norms squared.

Implements BasisPolyApproximation.

8.61.2.6 const Real & get_variance (const RealVector & *x*) [protected, virtual]

treating a subset of the variables as random

In this case, a subset of the expansion variables are random variables and the variance of the expansion involves summations over this subset.

Implements BasisPolyApproximation.

8.61.2.7 const RealBaseVector & get_variance_gradient () [protected, virtual]

vector, treating all variables as random

In this function, all expansion variables are random variables and any design/state variables are omitted from the expansion. The mixed derivative case (some design variables are inserted and some are augmented) requires no special treatment.

Implements BasisPolyApproximation.

8.61.2.8 const RealBaseVector & get_variance_gradient (const RealVector & *x*, const UIntArray & *dvv*) [protected, virtual]

vector and given DVV, treating a subset of the variables as random

In this function, a subset of the expansion variables are random variables and any augmented design/state variables (i.e., not inserted as random variable distribution parameters) are included in the expansion. This function must handle the mixed case, where some design/state variables are augmented (and are part of the expansion) and some are inserted (derivatives are obtained from expansionCoeffGrads).

Implements BasisPolyApproximation.

8.61.3 Member Data Documentation

8.61.3.1 Array< Array< BasisPolynomial > > polynomialBasis [private]

constructing the multivariate orthogonal/interpolation polynomials.

Each variable (outer array size = numVars) may have multiple integration orders associated with it (inner array size = num_levels_per_var = 1 for quadrature, w + numVars for sparse grid).

8.61.3.2 UShort2DArray smolyakMultiIndex [private]

within the polynomialBasis for a particular variable

The index sets correspond to j (0-based) for use as indices, which are offset from the i indices (1-based) normally used in the Smolyak expressions. For quadrature, the indices are zero (irrespective of integration order) since there is one polynomialBasis per variable; for sparse grid, the index corresponds to level - 1 within each anisotropic tensor-product integration of a Smolyak recursion.

The documentation for this class was generated from the following files:

- InterpPolyApproximation.H
- InterpPolyApproximation.C

8.62 Iterator Class Reference

Base class for the iterator class hierarchy.

Inheritance diagram for Iterator::

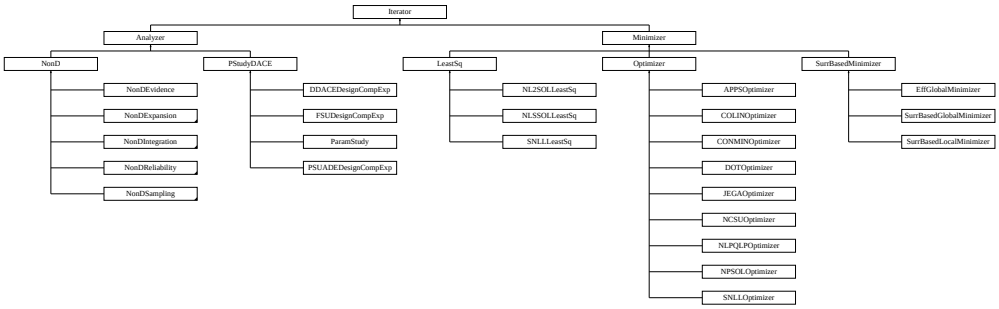

Public Member Functions

- Iterator ()

  default constructor

- Iterator (Model &model)

  standard envelope constructor

- Iterator (const String &method_name, Model &model)

  alternate envelope constructor for instantiations by name

- Iterator (const Iterator &iterator)

  copy constructor

- virtual ~Iterator ()

  destructor

- Iterator operator= (const Iterator &iterator)

  assignment operator

- virtual void run ()

  run the iterator; portion of run_iterator()

- virtual const Variables & variables_results () const

  return a single final iterator solution (variables)

- virtual const Response & response_results () const
  return a single final iterator solution (response)
- virtual bool accepts_multiple_points () const
  return is false. Override to return true if appropriate.
- virtual bool returns_multiple_points () const
  return is false. Override to return true if appropriate.
- virtual const VariablesArray & variables_array_results () const
  only be used if returns_multiple_points() returns true.
- virtual const ResponseArray & response_array_results () const
  only be used if returns_multiple_points() returns true.
- virtual void initial_points (const VariablesArray &pts)
  only be used if accepts_multiple_points() returns true.
- virtual void response_results_active_set (const ActiveSet &set)
  set the requested data for the final iterator response results
- virtual void initialize_graphics (bool graph_2d, bool tabular_data, const String &tabular_file)
  initialize the 2D graphics window and the tabular graphics data
- virtual void print_results (ostream &s)
  print the final iterator results
- virtual void sampling_reset (int min_samples, int rec_samples, bool all_data_flag, bool stats_flag)
  reset sampling iterator
- virtual const String & sampling_scheme () const
  return sampling name
- virtual String uses_method () const
  return name of any enabling iterator used by this iterator
- virtual void method_recourse ()
  perform a method switch, if possible, due to a detected conflict
- virtual const VariablesArray & all_variables () const
  return the complete set of evaluated variables
- virtual const ResponseArray & all_responses () const
  return the complete set of computed responses
- void pre_run (ostream &s)

utility function to verbosely perform common operations prior to run()

- void pre_run ()

  utility function to quietly perform common operations prior to run()

- void run_iterator (ostream &s)

  utility function to automate pre_run()/run()/post_run() verbosely

- void run_iterator ()

  utility function to automate pre_run()/run()/post_run() quietly

- void post_run (ostream &s)

  utility function to verbosely perform common operations following run()

- void post_run ()

  utility function to quietly perform common operations following run()

- void assign_rep (Iterator *iterator_rep, bool ref_count_incr=true)

  replaces existing letter with a new one

- ProblemDescDB & problem_description_db () const

  return the problem description database (probDescDB)

- const String & method_name () const

  return the method name

- const String & method_id () const

  return the method identifier (idMethod)

- short output_level () const

  return the method output level (outputLevel)

- int maximum_concurrency () const

  return the maximum concurrency supported by the iterator

- void maximum_concurrency (int max_conc)

  set the maximum concurrency supported by the iterator

- void active_set (const ActiveSet &set)

  employ evaluate_parameter_sets())

- const ActiveSet & active_set () const

  employ evaluate_parameter_sets())

- void sub_iterator_flag (bool si_flag)

  set subIteratorFlag

- void variable_mappings (const SizetArray &c_index1, const SizetArray &d_index1, const ShortArray &c_target2, const ShortArray &d_target2)

  set primaryACVMapIndices, primaryADVMapIndices, secondaryACVMapTargets

- bool is_null () const

  function to check iteratorRep (does this envelope contain a letter?)

- Iterator * iterator_rep () const

  that are not mapped to the top Iterator level

Protected Member Functions

- Iterator (BaseConstructor, Model &model)

  derived class constructors - Coplien, p. 139)

- Iterator (NoDBBaseConstructor, Model &model)

  alternate constructor for base iterator classes constructed on the fly

- Iterator (NoDBBaseConstructor)

  alternate constructor for base iterator classes constructed on the fly

- virtual void derived_pre_run ()

  portions of pre_run specific to derived iterators

- virtual void derived_post_run ()

  portions of post_run specific to derived iterators

- virtual const VariablesArray & initial_points () const

  be meaningful after a call to initial_points mutator.

- Real phi (const Real &beta)

  Standard normal density function.

- Real Phi (const Real &beta)

  Standard normal cumulative distribution function.

Protected Attributes

- Model iteratedModel

  or a thin RecastModel wrapped around it

- ProblemDescDB & probDescDB

class member reference to the problem description database

- String methodName

  name of the iterator (the user's method spec)

- Real convergenceTol

  iteration convergence tolerance

- int maxIterations

  maximum number of iterations for the iterator

- int maxFunctionEvals

  maximum number of fn evaluations for the iterator

- int maxConcurrency

  maximum coarse-grained concurrency

- size_t numFunctions

  number of response functions

- size_t numContinuousVars

  number of active continuous vars.

- size_t numDiscreteVars

  number of active discrete vars.

- ActiveSet activeSet

  tracks the response data requirements on each function evaluation

- bool subIteratorFlag

  (NestedModel::subIterator or DataFitSurrModel::daceIterator)

- SizetArray primaryACVarMapIndices

  from higher level iteration

- SizetArray primaryADVarMapIndices

  higher level iteration

- ShortArray secondaryACVarMapTargets

  from higher level iteration

- ShortArray secondaryADVarMapTargets

  from higher level iteration

- String gradientType

  type of gradient data: analytic, numerical, mixed, or none

- String methodSource
  source of numerical gradient routine: dakota or vendor
- String intervalType
  type of numerical gradient interval: central or forward
- String hessianType
  type of Hessian data: analytic, numerical, quasi, mixed, or none
- Real fdGradStepSize
  relative finite difference step size for numerical gradients
- Real fdHessByGradStepSize
  using first-order differences of gradients
- Real fdHessByFnStepSize
  using second-order differences of function values
- short outputLevel
  output verbosity level: {SILENT,QUIET,NORMAL,VERBOSE,DEBUG}_OUTPUT
- bool asynchFlag
  copy of the model's asynchronous evaluation flag

Private Member Functions

- Iterator * get_iterator (Model &model)
  Used by the envelope to instantiate the correct letter class.
- Iterator * get_iterator (const String &method_name, Model &model)
  Used by the envelope to instantiate the correct letter class.

Private Attributes

- String idMethod
  method identifier string from the input file
- Iterator * iteratorRep
  pointer to the letter (initialized only for the envelope)
- int referenceCount
  number of objects sharing iteratorRep

8.62.1 Detailed Description

Base class for the iterator class hierarchy.

The Iterator class is the base class for one of the primary class hierarchies in DAKOTA. The iterator hierarchy contains all of the iterative algorithms which use repeated execution of simulations as function evaluations. For memory efficiency and enhanced polymorphism, the iterator hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (Iterator) serves as the envelope and one of the derived classes (selected in Iterator::get_iterator()) serves as the letter.

8.62.2 Constructor & Destructor Documentation

8.62.2.1 Iterator ()

default constructor

The default constructor is used in Vector<Iterator> instantiations and for initialization of Iterator objects contained in Strategy derived classes (see derived class header files). iteratorRep is NULL in this case (a populated problem_db is needed to build a meaningful Iterator object). This makes it necessary to check for NULL pointers in the copy constructor, assignment operator, and destructor.

8.62.2.2 Iterator (Model & *model*)

standard envelope constructor

Used in iterator instantiations within strategy constructors. Envelope constructor only needs to extract enough data to properly execute get_iterator(), since letter holds the actual base class data.

8.62.2.3 Iterator (const String & *method_name*, Model & *model*)

alternate envelope constructor for instantiations by name

Used in sub-iterator instantiations within iterator constructors. Envelope constructor only needs to extract enough data to properly execute get_iterator(), since letter holds the actual base class data.

8.62.2.4 Iterator (const Iterator & *iterator*)

copy constructor

Copy constructor manages sharing of iteratorRep and incrementing of referenceCount.

8.62.2.5 ~Iterator () `[virtual]`

destructor

Destructor decrements referenceCount and only deletes iteratorRep when referenceCount reaches zero.

8.62.2.6 Iterator (BaseConstructor, Model & *model*) [protected]

derived class constructors - Coplien, p. 139)

This constructor builds the base class data for all inherited iterators. get_iterator() instantiates a derived class and the derived class selects this base class constructor in its initialization list (to avoid the recursion of the base class constructor calling get_iterator() again). Since the letter IS the representation, its representation pointer is set to NULL (an uninitialized pointer causes problems in ∼Iterator).

8.62.2.7 Iterator (NoDBBaseConstructor, Model & *model*) [protected]

alternate constructor for base iterator classes constructed on the fly

This alternate constructor builds base class data for inherited iterators. It is used for on-the-fly instantiations for which DB queries cannot be used. Therefore it only sets attributes taken from the incoming model.

8.62.2.8 Iterator (NoDBBaseConstructor) [protected]

alternate constructor for base iterator classes constructed on the fly

This alternate constructor builds base class data for inherited iterators. It is used for on-the-fly instantiations for which DB queries cannot be used. It has no incoming model, so only sets up a minimal set of defaults. However, its use is preferable to the default constructor, which should remain as minimal as possible.

8.62.3 Member Function Documentation

8.62.3.1 Iterator operator= (const Iterator & *iterator*)

assignment operator

Assignment operator decrements referenceCount for old iteratorRep, assigns new iteratorRep, and increments referenceCount for new iteratorRep.

8.62.3.2 void run () [virtual]

run the iterator; portion of run_iterator()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual run function for the iterator class hierarchy. All derived classes need to redefine it.

Reimplemented in LeastSq, NonD, Optimizer, PStudyDACE, and SurrBasedMinimizer.

8.62.3.3 void initialize_graphics (bool *graph_2d*, bool *tabular_data*, const String & *tabular_file*) [virtual]

initialize the 2D graphics window and the tabular graphics data

This is a convenience function for encapsulating graphics initialization operations. It does not require a strategyRep forward since it is only used by letter objects.

Reimplemented in NonDReliability, and SurrBasedMinimizer.

8.62.3.4 void print_results (ostream & *s*) [virtual]

print the final iterator results

This virtual function provides additional iterator-specific final results outputs beyond the function evaluation summary printed in post_run().

Reimplemented in LeastSq, Optimizer, PStudyDACE, NonDEvidence, NonDExpansion, NonDGlobalReliability, NonDIncremLHSSampling, NonDLHSSampling, NonDLocalReliability, NonDPolynomialChaos, and SurrBasedMinimizer.

8.62.3.5 void pre_run (ostream & *s*)

utility function to verbosely perform common operations prior to run()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is one form of the overloaded pre-run function. This form accepts an ostream and executes verbosely. It is used for standard stand-alone iterator executions. This function is not virtual: derived portions are defined in derived_pre_run().

8.62.3.6 void pre_run ()

utility function to quietly perform common operations prior to run()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is one form of the overloaded pre-run function. This form does not accept an ostream and executes quietly. It is commonly used in sub-iterator executions. This function is not virtual: derived portions are defined in derived_pre_run().

8.62.3.7 void run_iterator (ostream & *s*)

utility function to automate pre_run()/run()/post_run() verbosely

Iterator supports a construct/pre-run/run/post-run/destruct progression. This non-virtual function is one form of the overloaded run_iterator function which automates the pre-run/run/post-run portions of the progression. This form accepts an ostream and executes verbosely.

8.62.3.8 void run_iterator ()

utility function to automate pre_run()/run()/post_run() quietly

Iterator supports a construct/pre-run/run/post-run/destruct progression. This non-virtual function is one form of the overloaded run_iterator function which automates the pre-run/run/post-run portions of the progression. This form does not accept an ostream and executes quietly.

8.62.3.9 void post_run (ostream & *s*)

utility function to verbosely perform common operations following run()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is one form of the overloaded post-run function. This form accepts an ostream and executes verbosely. This function is not virtual: derived portions are defined in derived_post_run().

8.62.3.10 void post_run ()

utility function to quietly perform common operations following run()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is one form of the overloaded post-run function. This form does not accept an ostream and executes quietly. This function is not virtual: derived portions are defined in derived_post_run().

8.62.3.11 void assign_rep (Iterator * *iterator_rep*, bool *ref_count_incr* = `true`)

replaces existing letter with a new one

Similar to the assignment operator, the assign_rep() function decrements referenceCount for the old iteratorRep and assigns the new iteratorRep. It is different in that it is used for publishing derived class letters to existing envelopes, as opposed to sharing representations among multiple envelopes (in particular, assign_rep is passed a letter object and operator= is passed an envelope object). Letter assignment supports two models as governed by ref_count_incr:

- ref_count_incr = true (default): the incoming letter belongs to another envelope. In this case, increment the reference count in the normal manner so that deallocation of the letter is handled properly.
- ref_count_incr = false: the incoming letter is instantiated on the fly and has no envelope. This case is modeled after get_iterator(): a letter is dynamically allocated using new and passed into assign_rep, the letter's reference count is not incremented, and the letter is not remotely deleted (its memory management is passed over to the envelope).

8.62.3.12 void derived_pre_run () `[protected, virtual]`

portions of pre_run specific to derived iterators

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual derived class portion of pre_run(). Redefinition by derived classes is optional.

Reimplemented in CONMINOptimizer, LeastSq, Minimizer, NonD, Optimizer, DOTOptimizer, NLPQLPOptimizer, SNLLLeastSq, and SNLLOptimizer.

8.62.3.13 void derived_post_run () `[protected, virtual]`

portions of post_run specific to derived iterators

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual derived class portion of post_run(). Redefinition by derived classes is optional.

Reimplemented in LeastSq, Minimizer, NonD, Optimizer, SNLLLeastSq, and SNLLOptimizer.

8.62.3.14 Real Phi (const Real & *beta*) [inline, protected]

Standard normal cumulative distribution function.

returns a probability < 0.5 for negative beta and a probability > 0.5 for positive beta.

8.62.3.15 Iterator * get_iterator (Model & *model*) [private]

Used by the envelope to instantiate the correct letter class.

Used only by the envelope constructor to initialize iteratorRep to the appropriate derived type, as given by the methodName attribute.

8.62.3.16 Iterator * get_iterator (const String & *method_name*, Model & *model*) [private]

Used by the envelope to instantiate the correct letter class.

Used only by the envelope constructor to initialize iteratorRep to the appropriate derived type, as given by the passed method_name.

8.62.4 Member Data Documentation

8.62.4.1 Real fdGradStepSize [protected]

relative finite difference step size for numerical gradients

A scalar value (instead of the vector fd_gradient_step_size spec) is used within the iterator hierarchy since this attribute is only used to publish a step size to vendor numerical gradient algorithms.

8.62.4.2 Real fdHessByGradStepSize [protected]

using first-order differences of gradients

A scalar value (instead of the vector fd_hessian_step_size spec) is used within the iterator hierarchy since this attribute is only used to publish a step size to vendor numerical Hessian algorithms.

8.62.4.3 Real fdHessByFnStepSize [protected]

using second-order differences of function values

A scalar value (instead of the vector fd_hessian_step_size spec) is used within the iterator hierarchy since this attribute is only used to publish a step size to vendor numerical Hessian algorithms.

The documentation for this class was generated from the following files:

- DakotaIterator.H
- DakotaIterator.C

8.63 JacobiOrthogPolynomial Class Reference

Derived orthogonal polynomial class for Jacobi polynomials.

Inheritance diagram for JacobiOrthogPolynomial::

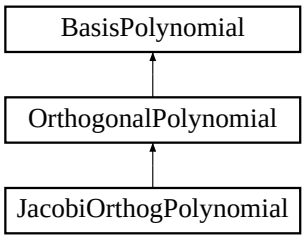

Public Member Functions

- JacobiOrthogPolynomial ()
  default constructor
- JacobiOrthogPolynomial (const Real &alpha_stat, const Real &beta_stat)
  standard constructor
- ~JacobiOrthogPolynomial ()
  destructor

Protected Member Functions

- const Real & get_value (const Real &x, unsigned short order)
  retrieve the Jacobi polynomial value for a given parameter x
- const Real & get_gradient (const Real &x, unsigned short order)
  retrieve the Jacobi polynomial gradient for a given parameter x
- const Real & norm_squared (unsigned short order)
  ||P^(alpha,beta)_n||^2
- const RealVector & gauss_points (unsigned short order)
  polynomial order n
- const RealVector & gauss_weights (unsigned short order)
  polynomial order n

- void alpha_stat (const Real &alpha)

  set betaPoly using the conversion betaPoly = alpha_stat - 1.

- void beta_stat (const Real &beta)

  set alphaPoly using the conversion alphaPoly = beta_stat - 1.

Private Attributes

- Real alphaPoly

  Abramowitz and Stegun (differs from statistical PDF notation).

- Real betaPoly

  Abramowitz and Stegun (differs from statistical PDF notation).

8.63.1 Detailed Description

Derived orthogonal polynomial class for Jacobi polynomials.

The JacobiOrthogPolynomial class evaluates a univariate Jacobi polynomial P^(alpha,beta)_n of a particular order. These polynomials are orthogonal with respect to the weight function (1-x)^alpha (1+x)^beta when integrated over the support range of [-1,+1]. This corresponds to the probability density function f(x) = (1-x)^alpha (1+x)^beta / (2^(alpha+beta+1) B(alpha+1,beta+1)) for the beta distribution for [L,U]=[-1,1], where common statistical PDF notation conventions (see, e.g., the uncertain variables section in the DAKOTA Reference Manual) and the Abramowiz and Stegun orthogonal polynomial conventions are inverted and require conversion in this case (alpha_poly = beta_stat - 1; beta_poly = alpha_stat - 1 with the poly definitions used in both cases above). It enables (mixed) multidimensional orthogonal polynomial basis functions within OrthogPolyApproximation. A special case is the LegendreOrthogPolynomial (implemented separately), for which alpha_poly = beta_poly = 0.

The documentation for this class was generated from the following files:

- JacobiOrthogPolynomial.H
- JacobiOrthogPolynomial.C

8.64 JEGAOptimizer Class Reference

A version of Dakota::Optimizer for instantiation of John Eddy's Genetic Algorithms (JEGA).

Inheritance diagram for JEGAOptimizer::

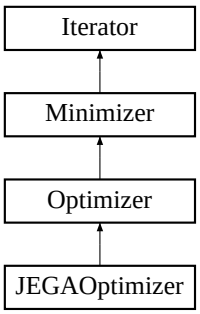

Public Member Functions

- virtual void find_optimum ()

  Performs the iterations to determine the optimal set of solutions.

- virtual bool accepts_multiple_points () const

  Overridden to return true since JEGA algorithms can accept multiple initial points.

- virtual bool returns_multiple_points () const

  Overridden to return true since JEGA algorithms can return multiple final points.

- virtual void initial_points (const VariablesArray &pts)

  Overridden to assign the _initPts member variable to the passed in collection of Dakota::Variables.

- virtual const VariablesArray & initial_points () const

  Overridden to return the collection of initial points for the JEGA algorithm created and run by this JEGAOptimizer.

- JEGAOptimizer (Model &model)

  Constructs a JEGAOptimizer class object.

- ~JEGAOptimizer ()

  Destructs a JEGAOptimizer.

Protected Member Functions

- void LoadDakotaResponses (const JEGA::Utilities::Design &from, Variables &vars, Response &resp) const

  Loads the JEGA-style Design class into equivolent Dakota-style Variables and Response objects.

- void ReCreateTheParameterDatabase ()

  Destroys the current parameter database and creates a new empty one.

- void LoadTheParameterDatabase ()

  Reads information out of the known Dakota::ProblemDescDB and puts it into the current parameter database.

- void LoadAlgorithmConfig (JEGA::FrontEnd::AlgorithmConfig &aConfig)

  Completely initializes the supplied algorithm configuration.

- void LoadProblemConfig (JEGA::FrontEnd::ProblemConfig &pConfig)

  Completely initializes the supplied problem configuration.

- void LoadTheDesignVariables (JEGA::FrontEnd::ProblemConfig &pConfig)

  Adds DesignVariableInfo objects into the problem configuration object.

- void LoadTheObjectiveFunctions (JEGA::FrontEnd::ProblemConfig &pConfig)

  Adds ObjectiveFunctionInfo objects into the problem configuration object.

- void LoadTheConstraints (JEGA::FrontEnd::ProblemConfig &pConfig)

  Adds ConstraintInfo objects into the problem configuration object.

- const JEGA::Utilities::Design * GetBestSolution (const JEGA::Utilities::DesignOFSortSet &from)

  Chooses the best Design from a set of solutions taking into account the algorithm type.

- const JEGA::Utilities::Design * GetBestMOSolution (const JEGA::Utilities::DesignOFSortSet &from)

  Chooses the best Design from a set of solutions assuming that they are generated by a multi objective algorithm.

- const JEGA::Utilities::Design * GetBestSOSolution (const JEGA::Utilities::DesignOFSortSet &from)

  Chooses the best Design from a set of solutions assuming that they are generated by a single objective algorithm.

- JEGA::DoubleMatrix ToDoubleMatrix (const VariablesArray &variables) const

  Converts the items in a VariablesArray into a DoubleMatrix whereby the items in the matrix are the design variables.

- void resize_variables_results_array (std::size_t newsize)

  Safely resizes the best variables array taking into account the requirements put forth by the envelope-letter design pattern.

- void resize_response_results_array (std::size_t newsize)

  Safely resizes the best response array taking into account the requirements put forth by the envelope-letter design pattern.

Private Attributes

- EvaluatorCreator * _theEvalCreator

  A pointer to an EvaluatorCreator used to create the evaluator used by JEGA in Dakota (a JEGAEvaluator).

- JEGA::Utilities::ParameterDatabase * _theParamDB

  A pointer to the ParameterDatabase from which all parameters are retrieved by the created algorithms.

- VariablesArray _initPts

  An array of initial points to use as an initial population.

Static Private Attributes

- static const std::string _sogaMethodText

  The text that indicates the SOGA method.

- static const std::string _mogaMethodText

  The text that indicates the MOGA method.

Classes

- class Driver

  A subclass of the JEGA front end driver that exposes the individual protected methods to execute the algorithm.

- class Evaluator

  An evaluator specialization that knows how to interact with Dakota.

- class EvaluatorCreator

  A specialization of the JEGA::FrontEnd::EvaluatorCreator that creates a new instance of a Evaluator.

8.64.1 Detailed Description

A version of Dakota::Optimizer for instantiation of John Eddy's Genetic Algorithms (JEGA).

This class encapsulates the necessary functionality for creating and properly initializing the JEGA algorithms (MOGA and SOGA).

8.64.2 Constructor & Destructor Documentation

8.64.2.1 JEGAOptimizer (Model & *model*)

Constructs a JEGAOptimizer class object.

This method does some of the initialization work for the algorithm. In particular, it initialized the JEGA core.

Parameters:

model The Dakota::Model that will be used by this optimizer for problem information, etc.

8.64.3 Member Function Documentation

8.64.3.1 void LoadDakotaResponses (const JEGA::Utilities::Design & *from*, Variables & *vars*, Response & *resp*) const [protected]

Loads the JEGA-style Design class into equivolent Dakota-style Variables and Response objects.

This version is meant for the case where a Variables and a Response object exist and just need to be loaded.

Parameters:

from The JEGA Design class object from which to extract the variable and response information for Dakota.

vars The Dakota::Variables object into which to load the design variable values of *from*.

resp The Dakota::Response object into which to load the objective function and constraint values of *from*.

8.64.3.2 void LoadTheParameterDatabase () [protected]

Reads information out of the known Dakota::ProblemDescDB and puts it into the current parameter database.

This should be called from the JEGAOptimizer constructor since it is the only time when the problem description database is certain to be configured to supply data for this optimizer.

8.64.3.3 void LoadAlgorithmConfig (JEGA::FrontEnd::AlgorithmConfig & *aConfig*) [protected]

Completely initializes the supplied algorithm configuration.

This loads the supplied configuration object with appropriate data retrieved from the parameter database.

Parameters:

aConfig The algorithm configuration object to load.

8.64.3.4 void LoadProblemConfig (JEGA::FrontEnd::ProblemConfig & *pConfig*) [protected]

Completely initializes the supplied problem configuration.

This loads the fresh configuration object using the LoadTheDesignVariables, LoadTheObjectiveFunctions, and LoadTheConstraints methods.

Parameters:

pConfig The problem configuration object to load.

8.64.3.5 void LoadTheDesignVariables (JEGA::FrontEnd::ProblemConfig & *pConfig*) [protected]

Adds DesignVariableInfo objects into the problem configuration object.

This retrieves design variable information from the ParameterDatabase and creates DesignVariableInfo's from it.

Parameters:

pConfig The problem configuration object to load.

8.64.3.6 void LoadTheObjectiveFunctions (JEGA::FrontEnd::ProblemConfig & *pConfig*) [protected]

Adds ObjectiveFunctionInfo objects into the problem configuration object.

This retrieves objective function information from the ParameterDatabase and creates ObjectiveFunctionInfo's from it.

Parameters:

pConfig The problem configuration object to load.

8.64.3.7 void LoadTheConstraints (JEGA::FrontEnd::ProblemConfig & *pConfig*) [protected]

Adds ConstraintInfo objects into the problem configuration object.

This retrieves constraint function information from the ParameterDatabase and creates ConstraintInfo's from it.

Parameters:

pConfig The problem configuration object to load.

8.64.3.8 const Design * GetBestSolution (const JEGA::Utilities::DesignOFSortSet & *from*) [protected]

Chooses the best Design from a set of solutions taking into account the algorithm type.

eventually this functionality must be moved into a separate post-processing application for MO datasets.

8.64.3.9 const Design * GetBestMOSolution (const JEGA::Utilities::DesignOFSortSet & *from*) [protected]

Chooses the best Design from a set of solutions assuming that they are generated by a multi objective algorithm.

eventually this functionality must be moved into a separate post-processing application for MO datasets.

8.64.3.10 const Design * GetBestSOSolution (const JEGA::Utilities::DesignOFSortSet & *from*) [protected]

Chooses the best Design from a set of solutions assuming that they are generated by a single objective algorithm.

eventually this functionality must be moved into a separate post-processing application for MO datasets.

8.64.3.11 JEGA::DoubleMatrix ToDoubleMatrix (const VariablesArray & *variables*) const [protected]

Converts the items in a VariablesArray into a DoubleMatrix whereby the items in the matrix are the design variables.

The matrix will not contain responses but when being used by Dakota, this doesn't matter. JEGA will attempt to re-evaluate these points but Dakota will recognize that they do not require re-evaluation and thus it will be a cheap operation.

Parameters:

variables The array of DakotaVariables objects to use as the contents of the returned matrix.

Returns:

The matrix created using the supplied VariablesArray.

8.64.3.12 void resize_variables_results_array (std::size_t *newsize*) [protected]

Safely resizes the best variables array taking into account the requirements put forth by the envelope-letter design pattern.

Do not directly call resize on the bestVariablesArray object unless you intend to share the internal content (letter) with other objects after assignment.

Parameters:

newsize The new size for the variables array.

8.64.3.13 void resize_response_results_array (std::size_t *newsize*) [protected]

Safely resizes the best response array taking into account the requirements put forth by the envelope-letter design pattern.

Do not directly call resize on the bestResponseArray object unless you intend to share the internal content (letter) with other objects after assignment.

Parameters:

newsize The new size for the responses array.

8.64.3.14 void find_optimum () [virtual]

Performs the iterations to determine the optimal set of solutions.

Override of pure virtual method in Optimizer base class.

The extraction of parameter values actually occurs in this method when the JEGA::FrontEnd::Driver::Execute-Algorithm is called. Also the loading of the problem and algorithm configurations occurs in this method. That way, if it is called more than once and the algorithm or problem has changed, it will be accounted for.

Implements Optimizer.

8.64.3.15 bool accepts_multiple_points () const [virtual]

Overridden to return true since JEGA algorithms can accept multiple initial points.

Returns:

true, always.

Reimplemented from Iterator.

8.64.3.16 bool returns_multiple_points () const [virtual]

Overridden to return true since JEGA algorithms can return multiple final points.

Returns:

true, always.

Reimplemented from Iterator.

8.64.3.17 void initial_points (const VariablesArray & *pts*) [virtual]

Overridden to assign the _initPts member variable to the passed in collection of Dakota::Variables.

Parameters:

pts The array of initial points for the JEGA algorithm created and run by this JEGAOptimizer.

Reimplemented from Iterator.

8.64.3.18 const VariablesArray & initial_points () const [virtual]

Overridden to return the collection of initial points for the JEGA algorithm created and run by this JEGAOptimizer.

Returns:

The collection of initial points for the JEGA algorithm created and run by this JEGAOptimizer.

Reimplemented from Iterator.

8.64.4 Member Data Documentation

8.64.4.1 VariablesArray _initPts [private]

An array of initial points to use as an initial population.

This member is here to help support the use of JEGA algorithms in Dakota strategies. If this array is populated, then whatever initializer is specified will be ignored and the DoubleMatrix initializer will be used instead on a matrix created from the data in this array.

The documentation for this class was generated from the following files:

- JEGAOptimizer.H
- JEGAOptimizer.C

8.65 JEGAOptimizer::Driver Class Reference

A subclass of the JEGA front end driver that exposes the individual protected methods to execute the algorithm.

Public Member Functions

- GeneticAlgorithm * ExtractAllData (const AlgorithmConfig &algConfig)

  Reads all required data from the problem description database stored in the supplied algorithm config.

- DesignOFSortSet PerformIterations (GeneticAlgorithm *theGA)

  Performs the required iterations on the supplied GA.

- void DestroyAlgorithm (GeneticAlgorithm *theGA)

  Deletes the supplied GA.

- Driver (const ProblemConfig &probConfig)

  Default constructs a Driver.

8.65.1 Detailed Description

A subclass of the JEGA front end driver that exposes the individual protected methods to execute the algorithm.

This is necessary because DAKOTA requires that all problem information be extracted from the problem description DB at the time of Optimizer construction and the front end does it all in the execute algorithm method which must be called in find_optimum.

8.65.2 Constructor & Destructor Documentation

8.65.2.1 Driver (const ProblemConfig & *probConfig*) [inline]

Default constructs a Driver.

Parameters:

probConfig The definition of the problem to be solved by this Driver whenever ExecuteAlgorithm is called.

The problem can be solved in multiple ways by multiple algorithms even using multiple different evaluators by issuing multiple calls to ExecuteAlgorithm with different AlgorithmConfigs.

8.65.3 Member Function Documentation

8.65.3.1 GeneticAlgorithm* ExtractAllData (const AlgorithmConfig & *algConfig*) [inline]

Reads all required data from the problem description database stored in the supplied algorithm config.

The returned GA is fully configured and ready to be run. It must also be destroyed at some later time. You MUST call DestroyAlgorithm for this purpose. Failure to do so could result in a memory leak and an eventual segmentation fault! Be sure to call DestroyAlgorithm prior to destroying the algorithm config that was used to create it!

This is just here to expose the base class method to users.

Parameters:

algConfig The fully loaded configuration object containing the database of parameters for the algorithm to be run on the known problem.

Returns:

The fully configured and loaded GA ready to be run using the PerformIterations method.

8.65.3.2 DesignOFSortSet PerformIterations (GeneticAlgorithm * *theGA*) [inline]

Performs the required iterations on the supplied GA.

This includes the calls to AlgorithmInitialize and AlgorithmFinalize and logs some information if appropriate.

This is just here to expose the base class method to users.

Parameters:

theGA The GA on which to perform iterations. This parameter must be non-null.

Returns:

The final solutions reported by the supplied GA after all iterations and call to AlgorithmFinalize.

8.65.3.3 void DestroyAlgorithm (GeneticAlgorithm * *theGA*) [inline]

Deletes the supplied GA.

Use this method to destroy a GA after all iterations have been run. This method knows if the log associated with the GA was created here and needs to be destroyed as well or not.

This is just here to expose the base class method to users.

Be sure to use this prior to destoying the algorithm config object which contains the target. The GA destructor needs the target to be in tact.

Parameters:

theGA The algorithm that is no longer needed and thus must be destroyed.

The documentation for this class was generated from the following file:

- JEGAOptimizer.C

8.66 JEGAOptimizer::Evaluator Class Reference

An evaluator specialization that knows how to interact with Dakota.

Public Member Functions

- virtual bool Evaluate (DesignGroup &group)

  Does evaluation of each design in group.

- virtual bool Evaluate (EvaluationJob &eJob)

  This method cannot be used!!

- virtual std::string GetName () const

  Returns the proper name of this operator.

- virtual std::string GetDescription () const

  Returns a full description of what this operator does and how.

- virtual GeneticAlgorithmOperator * Clone (GeneticAlgorithm &algorithm) const

  Creates and returns a pointer to an exact duplicate of this operator.

- Evaluator (GeneticAlgorithm &algorithm, Model &model)

  Constructs a Evaluator for use by algorithm.

- Evaluator (const Evaluator &copy)

  Copy constructs a Evaluator.

- Evaluator (const Evaluator &copy, GeneticAlgorithm &algorithm, Model &model)

  Copy constructs a Evaluator for use by algorithm.

Static Public Member Functions

- static const std::string & Name ()

  Returns the proper name of this operator.

- static const std::string & Description ()

  Returns a full description of what this operator does and how.

Protected Member Functions

- RealVector GetContinuumVariableValues (const Design &from) const

  Returns the continuous Design variable values held in Design from.

- IntVector GetDiscreteVariableValues (const Design &from) const

  Returns the discrete Design variable values held in Design from.

- void GetContinuumVariableValues (const Design &from, RealVector &into) const

  Places the continuous Design variable values from Design from *into RealVector* into.

- void GetDiscreteVariableValues (const Design &from, IntVector &into) const

  Places the discrete Design variable values from Design from *into IntVector* into.

- void SeparateVariables (const Design &from, IntVector &intoDisc, RealVector &intoCont) const

  This method fills intoDisc *and* intoCont *appropriately using the values of* from.

- void RecordResponses (const RealVector &from, Design &into) const

  Records the computed objective and constraint function values into into.

- std::size_t GetNumberNonLinearConstraints () const

  Returns the number of non-linear constraints for the problem.

- std::size_t GetNumberLinearConstraints () const

  Returns the number of linear constraints for the problem.

Private Member Functions

- Evaluator (GeneticAlgorithm &algorithm)

  This constructor has no implementation and cannot be used.

Private Attributes

- Model & _model

  The Model known by this evaluator.

8.66.1 Detailed Description

An evaluator specialization that knows how to interact with Dakota.

This evaluator knows how to use the model to do evaluations both in synchronous and asynchronous modes.

8.66.2 Constructor & Destructor Documentation

8.66.2.1 Evaluator (GeneticAlgorithm & *algorithm*, Model & *model*) [inline]

Constructs a Evaluator for use by *algorithm*.

The optimizer is needed for purposes of variable scaling.

Parameters:

algorithm The GA for which the new evaluator is to be used.

model The model through which evaluations will be done.

8.66.2.2 Evaluator (const Evaluator & *copy*) [inline]

Copy constructs a Evaluator.

Parameters:

copy The evaluator from which properties are to be duplicated into this.

8.66.2.3 Evaluator (const Evaluator & *copy*, GeneticAlgorithm & *algorithm*, Model & *model*) [inline]

Copy constructs a Evaluator for use by *algorithm*.

The optimizer is needed for purposes of variable scaling.

Parameters:

copy The existing Evaluator from which to retrieve properties.

algorithm The GA for which the new evaluator is to be used.

model The model through which evaluations will be done.

8.66.2.4 Evaluator (GeneticAlgorithm & *algorithm*) [private]

This constructor has no implementation and cannot be used.

This constructor can never be used. It is provided so that this operator can still be registered in an operator registry even though it can never be instantiated from there.

Parameters:

algorithm The GA for which the new evaluator is to be used.

8.66.3 Member Function Documentation

8.66.3.1 static const std::string& Name () [inline, static]

Returns the proper name of this operator.

Returns:

The string "DAKOTA JEGA Evaluator".

8.66.3.2 static const std::string& Description () [inline, static]

Returns a full description of what this operator does and how.

The returned text is:

```
This evaluator uses Sandia's DAKOTA optimization
software to evaluate the passed in Designs.  This
makes it possible to take advantage of the fact that
DAKOTA is designed to run on massively parallel machines.
```

.

Returns:

A description of the operation of this operator.

8.66.3.3 RealVector GetContinuumVariableValues (const Design & *from*) const [inline, protected]

Returns the continuous Design variable values held in Design *from*.

It returns them as a RealVector for use in the Dakota interface. The values in the returned vector will be the actual values intended for use in the evaluation functions.

Parameters:

from The Design class object from which to extract the continuous design variable values.

Returns:

A vector of the continuous design variable values associated with *from*.

8.66.3.4 IntVector GetDiscreteVariableValues (const Design & *from*) const [inline, protected]

Returns the discrete Design variable values held in Design *from*.

It returns them as a IntVector for use in the Dakota interface. The values in the returned vector will be the values for the design variables as far as JEGA knows. However, in actuality, the values are the representations due to the way that Dakota manages discrete variables.

Parameters:

from The Design class object from which to extract the discrete design variable values.

Returns:

A vector of the discrete design variable values associated with *from*.

8.66.3.5 void GetContinuumVariableValues (const Design & *from*, RealVector & *into*) const [protected]

Places the continuous Design variable values from Design *from* into RealVector *into*.

The values in the returned vector will be the actual values intended for use in the evaluation functions.

Parameters:

from The Design class object from which to extract the continuous design variable values.

into The vector into which to place the extracted values.

8.66.3.6 void GetDiscreteVariableValues (const Design & *from*, IntVector & *into*) const [protected]

Places the discrete Design variable values from Design *from* into IntVector *into*.

The values placed in the vector will be the values for the design variables as far as JEGA knows. However, in actuality, the values are the representations due to the way that Dakota manages discrete variables.

Parameters:

from The Design class object from which to extract the discrete design variable values.

into The vector into which to place the extracted values.

8.66.3.7 void SeparateVariables (const Design & *from*, IntVector & *intoDisc*, RealVector & *intoCont*) const [protected]

This method fills *intoDisc* and *intoCont* appropriately using the values of *from*.

The discrete design variable values are placed in *intoDisc* and the continuum are placed into *intoCont*.

It is more efficient to use this method than to use GetDiscreateVariableValues and GetContinuumVariableValues separately if you want both.

Parameters:

from The Design class object from which to extract the discrete design variable values.

intoDisc The vector into which to place the extracted discrete values.

intoCont The vector into which to place the extracted continuous values.

8.66.3.8 void RecordResponses (const RealVector & *from*, Design & *into*) const [protected]

Records the computed objective and constraint function values into *into*.

This method takes the response values stored in *from* and properly transfers them into the *into* design.

The response vector *from* is expected to contain values for each objective function followed by values for each non-linear constraint in the order in which the info objects were loaded into the target by the optimizer class.

Parameters:

from The vector of responses to install into *into*.

into The Design to which the responses belong and into which they must be written.

8.66.3.9 std::size_t GetNumberNonLinearConstraints () const [inline, protected]

Returns the number of non-linear constraints for the problem.

This is computed by adding the number of non-linear equality constraints to the number of non-linear inequality constraints. These values are obtained from the model.

Returns:

The total number of non-linear constraints.

8.66.3.10 std::size_t GetNumberLinearConstraints () const [inline, protected]

Returns the number of linear constraints for the problem.

This is computed by adding the number of linear equality constraints to the number of linear inequality constraints. These values are obtained from the model.

Returns:

The total number of linear constraints.

8.66.3.11 bool Evaluate (DesignGroup & *group*) [virtual]

Does evaluation of each design in *group*.

This method uses the Model known by this class to get Designs evaluated. It properly formats the Design class information in a way that Dakota will understand and then interprets the Dakota results and puts them back into the Design class object. It respects the asynchronous flag in the Model so evaluations may occur synchronously or asynchronously.

Prior to evaluating a Design, this class checks to see if it is marked as already evaluated. If it is, then the evaluation of that Design is not carried out. This is not strictly necessary because Dakota keeps track of evaluated designs and does not re-evaluate. An exception is the case of a population read in from a file complete with responses where Dakota is unaware of the evaluations.

Parameters:

group The group of Design class objects to be evaluated.

Returns:

true if all evaluations completed and false otherwise.

8.66.3.12 virtual bool Evaluate (EvaluationJob & *eJob*) [inline, virtual]

This method cannot be used!!

This method does nothing and cannot be called. This is because in the case of asynchronous evaluation, this method would be unable to conform. It would require that each evaluation be done in a synchronous fashion.

Parameters:

eJob A job holding the Design that would be evaluated if this method worked.

Returns:

Would return true if the Design were evaluated and false otherwise. Never actually returns here. Issues a fatal error. Otherwise, it would always return false.

8.66.3.13 virtual std::string GetName () const [inline, virtual]

Returns the proper name of this operator.

Returns:

See Name().

8.66.3.14 virtual std::string GetDescription () const [inline, virtual]

Returns a full description of what this operator does and how.

Returns:

See Description().

8.66.3.15 virtual GeneticAlgorithmOperator* Clone (GeneticAlgorithm & *algorithm*) const [inline, virtual]

Creates and returns a pointer to an exact duplicate of this operator.

Parameters:

algorithm The GA for which the clone is being created.

Returns:

A clone of this operator.

8.66.4 Member Data Documentation

8.66.4.1 Model& _model [private]

The Model known by this evaluator.

It is through this model that evaluations will take place.

The documentation for this class was generated from the following file:

- JEGAOptimizer.C

8.67 JEGAOptimizer::EvaluatorCreator Class Reference

A specialization of the JEGA::FrontEnd::EvaluatorCreator that creates a new instance of a Evaluator.

Public Member Functions

- virtual GeneticAlgorithmEvaluator * CreateEvaluator (GeneticAlgorithm &alg)

  Overriden to return a newly created Evaluator.

- EvaluatorCreator (Model &theModel)

  Constructs an EvaluatorCreator using the supplied model.

Private Attributes

- Model & _theModel

  The user defined model to be passed to the constructor of the Evaluator.

8.67.1 Detailed Description

A specialization of the JEGA::FrontEnd::EvaluatorCreator that creates a new instance of a Evaluator.

8.67.2 Constructor & Destructor Documentation

8.67.2.1 EvaluatorCreator (Model & *theModel*) `[inline]`

Constructs an EvaluatorCreator using the supplied model.

Parameters:

theModel The Dakota::Model this creator will pass to the created evaluator.

8.67.3 Member Function Documentation

8.67.3.1 virtual GeneticAlgorithmEvaluator* CreateEvaluator (GeneticAlgorithm & *alg*) [inline, virtual]

Overriden to return a newly created Evaluator.

The GA will assume ownership of the evaluator so we needn't worry about keeping track of it for destruction. The additional parameters needed by the Evaluator are stored as members of this class at construction time.

Parameters:

alg The GA for which the evaluator is to be created.

Returns:

A pointer to a newly created Evaluator.

The documentation for this class was generated from the following file:

- JEGAOptimizer.C

8.68 LagrangeInterpPolynomial Class Reference

Derived basis polynomial class for 1-D Lagrange interpolation polynomials.

Inheritance diagram for LagrangeInterpPolynomial::

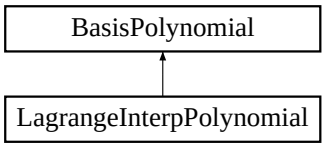

Public Member Functions

- LagrangeInterpPolynomial ()

  default constructor

- LagrangeInterpPolynomial (const RealVector &interpolation_pts)

  standard constructor

- ~LagrangeInterpPolynomial ()

  destructor

- const Real & get_value (const Real &x, unsigned short i)

  parameter x

- const Real & get_gradient (const Real &x, unsigned short i)

  given parameter x

- void interpolation_points (const RealVector &interpolation_pts)

  set interpolationPts

Private Member Functions

- void precompute_data ()

  precompute data that is reused repeatedly within Lagrange interpolation

Private Attributes

- RealVector interpolationPts

  evaluated at the j_th interpolation point produces Kronecker delta_ij

- size_t numInterpPts

  number of 1-D interpolation points

- RealVector lagDenominators

  precompute_data()

8.68.1 Detailed Description

Derived basis polynomial class for 1-D Lagrange interpolation polynomials.

The LagrangeInterpPolynomial class evaluates a univariate Lagrange interpolation polynomial. The order of the polynomial is dictated by the number of interpolation points (order = N_p - 1). It enables multidimensional interpolants within InterpPolyApproximation.

8.68.2 Member Function Documentation

8.68.2.1 const Real & get_value (const Real & *x*, unsigned short *i*) `[virtual]`

parameter x

Compute value of Lagrange polynomial for interpolation point i.

Reimplemented from BasisPolynomial.

8.68.2.2 const Real & get_gradient (const Real & *x*, unsigned short *i*) `[virtual]`

given parameter x

Compute derivative with respect to x of Lagrange polynomial for interpolation point i.

Reimplemented from BasisPolynomial.

8.68.2.3 void precompute_data () `[private]`

precompute data that is reused repeatedly within Lagrange interpolation

Pre-compute denominator products that are only a function of the interpolationPts.

The documentation for this class was generated from the following files:

- LagrangeInterpPolynomial.H

- LagrangeInterpPolynomial.C

8.69 LaguerreOrthogPolynomial Class Reference

Derived orthogonal polynomial class for Laguerre polynomials.

Inheritance diagram for LaguerreOrthogPolynomial::

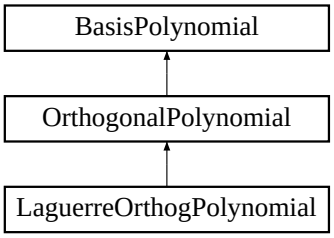

Public Member Functions

- LaguerreOrthogPolynomial ()

  default constructor

- ~LaguerreOrthogPolynomial ()

  destructor

Protected Member Functions

- const Real & get_value (const Real &x, unsigned short order)

  retrieve the Laguerre polynomial value for a given parameter x

- const Real & get_gradient (const Real &x, unsigned short order)

  retrieve the Laguerre polynomial gradient for a given parameter x

- const Real & norm_squared (unsigned short order)

  return the inner product <L_n,L_n> = ||L_n||^2

- const RealVector & gauss_points (unsigned short order)

  polynomial order n

- const RealVector & gauss_weights (unsigned short order)

  polynomial order n

8.69.1 Detailed Description

Derived orthogonal polynomial class for Laguerre polynomials.

The LaguerreOrthogPolynomial class evaluates a univariate Laguerre polynomial of a particular order. These polynomials are orthogonal with respect to the weight function exp(-x) when integrated over the support range of [0,+infinity]. This corresponds to the probability density function for the standard exponential distribution. It enables (mixed) multidimensional orthogonal polynomial basis functions within OrthogPolyApproximation. Laguerre polynomials are a special case (alpha = 0) of the generalized Laguerre polynomials (implemented separately) which correspond to the standard gamma distribution.

The documentation for this class was generated from the following files:

- LaguerreOrthogPolynomial.H
- LaguerreOrthogPolynomial.C

8.70 LeastSq Class Reference

Base class for the nonlinear least squares branch of the iterator hierarchy.

Inheritance diagram for LeastSq::

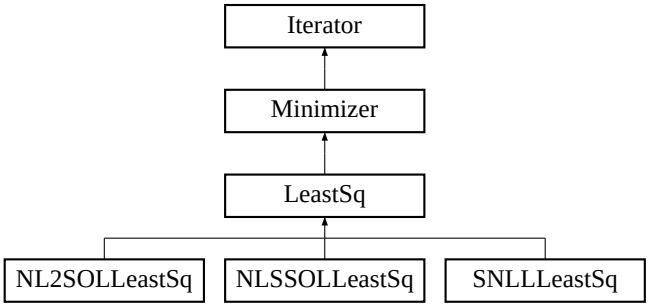

Protected Member Functions

- LeastSq ()

  default constructor

- LeastSq (Model &model)

  standard constructor

- LeastSq (NoDBBaseConstructor, Model &model)

  alternate constructor

- ~LeastSq ()

  destructor

- void derived_pre_run ()
- void run ()

  run the iterator; portion of run_iterator()

- void derived_post_run ()
- void print_results (ostream &s)
- virtual void minimize_residuals ()=0

  for the least squares branch.

- void read_observed_data ()

  read user data file to load observed data points

- void get_confidence_intervals ()

  Calculate confidence intervals on estimated parameters.

Static Protected Member Functions

- static void primary_resp_recast (const Variables &native_vars, const Variables &scaled_vars, const Response &native_response, Response &scaled_response)

  (user) to iterator space

Protected Attributes

- int numLeastSqTerms

  number of least squares terms

- LeastSq ∗ prevLSqInstance

  pointer containing previous value of leastSqInstance

- bool weightFlag

  flag indicating whether weighted least squares is active

- String obsDataFilename

  filename from which to read observed data

- bool obsDataFlag

  flag indicating whether user-supplied data is active

- RealVector obsData

  storage for user-supplied data for computing residuals

- RealVector confBoundsLower

  lower bounds for confidence intervals on calibration parameters

- RealVector confBoundsUpper

  upper bounds for confidence intervals on calibration parameters

Static Protected Attributes

- static LeastSq ∗ leastSqInstance

  pointer to LeastSq instance used in static member functions

8.70.1 Detailed Description

Base class for the nonlinear least squares branch of the iterator hierarchy.

The LeastSq class provides common data and functionality for least squares solvers (including NL2OL, NLSSOLLeastSq, and SNLLLeastSq.

8.70.2 Constructor & Destructor Documentation

8.70.2.1 LeastSq (Model & *model*) [protected]

standard constructor

This constructor extracts the inherited data for the least squares branch and performs sanity checking on gradient and constraint settings.

8.70.3 Member Function Documentation

8.70.3.1 void derived_pre_run () [protected, virtual]

This function should be invoked (or reimplemented) by any derived implementations of derived_pre_run() (which would otherwise hide it).

Reimplemented from Minimizer.

Reimplemented in SNLLLeastSq.

8.70.3.2 void run () [inline, protected, virtual]

run the iterator; portion of run_iterator()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual run function for the iterator class hierarchy. All derived classes need to redefine it.

Reimplemented from Iterator.

8.70.3.3 void derived_post_run () [protected, virtual]

Implements portions of post_run specific to LeastSq for scaling back to native variables and functions. This function should be invoked (or reimplemented) by any derived implementations of derived_post_run() (which would otherwise hide it).

Reimplemented from Minimizer.

Reimplemented in SNLLLeastSq.

8.70.3.4 void print_results (ostream & *s*) [protected, virtual]

Redefines default iterator results printing to include nonlinear least squares results (residual terms and constraints).

Reimplemented from Iterator.

8.70.3.5 void primary_resp_recast (const Variables & *native_vars*, const Variables & *scaled_vars*, const Response & *native_response*, Response & *iterator_response*) [static, protected]

(user) to iterator space

Least squares function map from user/native space to iterator/scaled space using a RecastModel. If no scaling also copies constraints.

8.70.3.6 void read_observed_data () [protected]

read user data file to load observed data points

read user's observation data for computation of least squares residuals (currently reading on all processors – need to read once and broadcast)

8.70.3.7 void get_confidence_intervals () [protected]

Calculate confidence intervals on estimated parameters.

Calculate individual confidence intervals for each parameter. These bounds are based on a linear approximation of the nonlinear model.

The documentation for this class was generated from the following files:

- DakotaLeastSq.H
- DakotaLeastSq.C

8.71 LegendreOrthogPolynomial Class Reference

Derived orthogonal polynomial class for Legendre polynomials.

Inheritance diagram for LegendreOrthogPolynomial::

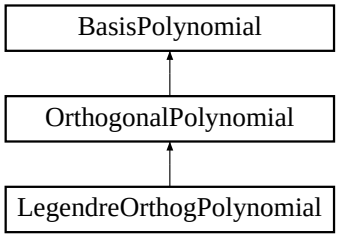

Public Member Functions

- LegendreOrthogPolynomial ()

  default constructor

- ~LegendreOrthogPolynomial ()

  destructor

Protected Member Functions

- const Real & get_value (const Real &x, unsigned short order)

  retrieve the Legendre polynomial value for a given parameter x

- const Real & get_gradient (const Real &x, unsigned short order)

  retrieve the Legendre polynomial gradient for a given parameter x

- const Real & norm_squared (unsigned short order)

  return the inner product <P_n,P_n> = ||P_n||^2

- const RealVector & gauss_points (unsigned short order)

  polynomial order n

- const RealVector & gauss_weights (unsigned short order)

  polynomial order n

8.71.1 Detailed Description

Derived orthogonal polynomial class for Legendre polynomials.

The LegendreOrthogPolynomial class evaluates a univariate Legendre polynomial of a particular order. These polynomials are orthogonal with respect to the weight function 1 when integrated over the support range of [-1,+1]. This corresponds to the probability density function f(x) = 1/(U-L) = 1/2 for the uniform distribution for [L,U]=[-1,1]. It enables (mixed) multidimensional orthogonal polynomial basis functions within OrthogPolyApproximation. Legendre polynomials are a special case (alpha = beta = 0) of the more general Jacobi polynomials (implemented separately) which correspond to the beta distribution.

The documentation for this class was generated from the following files:

- LegendreOrthogPolynomial.H
- LegendreOrthogPolynomial.C

8.72 List Class Template Reference

Template class for the Dakota bookkeeping list.

Public Member Functions

- List ()

  Default constructor.

- List (const List< T > &a)

  Copy constructor.

- ~List ()

  Destructor.

- template<class InputIter> List (InputIter first, InputIter last)

  Range constructor (member template).

- List< T > & operator= (const List< T > &a)

  assignment operator

- void write (ostream &s) const

  Writes a List to an output stream.

- void read (MPIUnpackBuffer &s)

  Reads a List from an MPIUnpackBuffer after an MPI receive.

- void write (MPIPackBuffer &s) const

  Writes a List to a MPIPackBuffer prior to an MPI send.

- size_t entries () const

  Returns the number of items that are currently in the list.

- T get ()

  Removes and returns the first item in the list.

- T removeAt (size_t index)

  Removes and returns the item at the specified index.

- bool remove (const T &a)

  Removes the specified item from the list.

- void insert (const T &a)

  Adds the item a to the end of the list.

- bool contains (const T &a) const

  Returns TRUE if list contains object a, returns FALSE otherwise.

- bool find (bool(∗test_fn)(const T &, const void ∗), const void ∗test_fn_data, T &found_item) const

  finds and sets k to this object

- List< T >::iterator find (bool(∗test_fn)(const T &, const void ∗), const void ∗test_fn_data)

  Returns an iterator pointing to an object that the test function finds.

- size_t index (bool(∗test_fn)(const T &, const void ∗), const void ∗test_fn_data) const

  Returns the index of object that the test function finds.

- size_t index (const T &a) const

  Returns the index of the object.

- size_t count (bool(∗test_fn)(const T &, const void ∗), const void ∗test_fn_data) const

  Returns the number of items in the list that satisfy the test function.

- size_t count (const T &a) const

  Returns the number of items in the list equal to object a.

- T & operator[ ] (size_t i)

  Returns the object at index i (can use as lvalue).

- const T & operator[ ] (size_t i) const

  Returns the object at index i, const (can't use as lvalue).

8.72.1 Detailed Description

template<class T> class Dakota::List< T >

Template class for the Dakota bookkeeping list.

The List is the common list class for Dakota. It inherits from either the RW list class or the STL list class. Extends the base list class to add Dakota specific methods Builds upon the previously existing DakotaValList class

8.72.2 Member Function Documentation

8.72.2.1 T get ()

Removes and returns the first item in the list.

Remove and return item from front of list. Returns the object pointed to by the list::begin() iterator. It also deletes the first node by calling the list::pop_front() method. Note: get() is not the same as list::front() since the latter would return the 1st item but would not delete it.

8.72.2.2 T removeAt (size_t *index*)

Removes and returns the item at the specified index.

Removes the item at the index specified. Uses the STL advance() function to step to the appropriate position in the list and then calls the list::erase() method.

8.72.2.3 bool remove (const T & *a*)

Removes the specified item from the list.

Removes the first instance matching object a from the list (and therefore differs from the STL list::remove() which removes all instances). Uses the STL find() algorithm to find the object and the list::erase() method to perform the remove.

8.72.2.4 void insert (const T & *a*) [inline]

Adds the item a to the end of the list.

Insert item at end of list, calls list::push_back() method.

8.72.2.5 bool contains (const T & *a*) const [inline]

Returns TRUE if list contains object a, returns FALSE otherwise.

Uses the STL find() algorithm to locate the first instance of object a. Returns true if an instance is found.

8.72.2.6 bool find (bool(∗)(const T &, const void ∗) *test_fn*, const void ∗ *test_fn_data*, T & *found_item*) const

finds and sets k to this object

Find the first item in the list which satisfies the test function. Sets k if the object is found.

8.72.2.7 List< T >::iterator find (bool(∗)(const T &, const void ∗) *test_fn*, const void ∗ *test_fn_data*)

Returns an iterator pointing to an object that the test function finds.

Find the first item in the list which satisfies the test function and return an iterator pointing to it.

8.72.2.8 size_t index (bool(∗)(const T &, const void ∗) *test_fn*, const void ∗ *test_fn_data*) const

Returns the index of object that the test function finds.

Returns the index of the first item in the list which satisfies the test function. Uses a single list traversal to both locate the object and return its index (generic algorithms would require two loop traversals).

8.72.2.9 size_t index (const T & *a*) const

Returns the index of the object.

Returns the index of the first item in the list which matches the object a. Uses a single list traversal to both locate the object and return its index (generic algorithms would require two loop traversals).

8.72.2.10 size_t count (const T & *a*) const `[inline]`

Returns the number of items in the list equal to object a.

Uses the STL count() algorithm to return the number of occurences of the specified object.

8.72.2.11]

T & operator[ ] (size_t *i*)

Returns the object at index i (can use as lvalue).

Returns item at position i of the list by stepping through the list using forward or reverse STL iterators (depending on which end of the list is closer to the desired item). Once the object is found, it returns the value pointed to by the iterator.

This functionality is inefficient in 0->len loop-based list traversals and is being replaced by iterator-based list traversals in the main DAKOTA code. For isolated look-ups of a particular index, however, this approach is acceptable.

8.72.2.12]

const T & operator[ ] (size_t *i*) const

Returns the object at index i, const (can't use as lvalue).

Returns const item at position i of the list by stepping through the list using forward or reverse STL iterators (depending on which end of the list is closer to the desired item). Once the object is found it returns the value pointed to by the iterator.

This functionality is inefficient in 0->len loop-based list traversals and is being replaced by iterator-based list traversals in the main DAKOTA code. For isolated look-ups of a particular index, however, this approach is acceptable.

The documentation for this class was generated from the following file:

- DakotaList.H

8.73 Matrix Class Template Reference

Template class for the Dakota numerical matrix.

Inheritance diagram for Matrix::

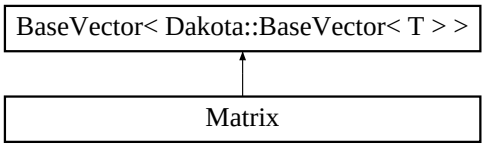

Public Member Functions

- Matrix (size_t num_rows=0, size_t num_cols=0)

  Constructor, takes number of rows, and number of columns as arguments.

- ~Matrix ()

  Destructor.

- Matrix< T > & operator= (const T &ival)

  Sets all elements in the matrix to ival.

- size_t num_rows () const

  Returns the number of rows for the matrix.

- size_t num_columns () const

  Returns the number of columns for the matrix.

- void reshape_2d (size_t num_rows, size_t num_cols)

  Resizes the matrix to num_rows by num_cols.

- void read (istream &s, size_t nr, size_t nc)

  Reads a portion of the Matrix from an input stream.

- void read (istream &s)

  Reads the complete Matrix from an input stream.

- void read_row_vector (istream &s, size_t i, size_t nc)

  Reads a portion of the ith Matrix row vector from an input stream.

- void read_row_vector (istream &s, size_t i)

  Reads the ith Matrix row vector from an input stream.

- void write (ostream &s, size_t nr, size_t nc, bool brackets, bool row_rtn, bool final_rtn) const

  Writes a portion of the Matrix to an output stream.

- void write (ostream &s, bool brackets, bool row_rtn, bool final_rtn) const

  Writes the complete Matrix to an output stream.

- void write_row_vector (ostream &s, size_t i, size_t nc, bool brackets, bool break_line, bool final_rtn) const

  Writes a portion of the ith Matrix row vector to an output stream.

- void write_row_vector (ostream &s, size_t i, bool brackets, bool break_line, bool final_rtn) const

  Writes the ith Matrix row vector to an output stream.

- void read (BiStream &s, size_t nr, size_t nc)

  Reads a portion of the Matrix from a binary input stream.

- void read (BiStream &s)

  Reads the complete Matrix from a binary input stream.

- void read_row_vector (BiStream &s, size_t i, size_t nc)

  Reads a portion of the ith Matrix row vector from a binary input stream.

- void read_row_vector (BiStream &s, size_t i)

  Reads the ith Matrix row vector from a binary input stream.

- void write (BoStream &s, size_t nr, size_t nc) const

  Writes a portion of the Matrix to a binary output stream.

- void write (BoStream &s) const

  Writes the complete Matrix to a binary output stream.

- void write_row_vector (BoStream &s, size_t i, size_t nc) const

  Writes a portion of the ith Matrix row vector to a binary output stream.

- void write_row_vector (BoStream &s, size_t i) const

  Writes the ith Matrix row vector to a binary output stream.

- void read (MPIUnpackBuffer &s)

  Reads a Matrix from an MPIUnpackBuffer after an MPI receive.

- void read_annotated (MPIUnpackBuffer &s)

  Reads an annotated Matrix from an MPIUnpackBuffer after an MPI receive.

- void read_row_vector (MPIUnpackBuffer &s, size_t i)

  Reads the ith Matrix row vector from an MPIUnpackBuffer after an MPI recv.

- void write (MPIPackBuffer &s) const

  Writes a Matrix to a MPIPackBuffer prior to an MPI send.

- void write_annotated (MPIPackBuffer &s) const

  Writes an annotated Matrix to a MPIPackBuffer prior to an MPI send.

- void write_row_vector (MPIPackBuffer &s, size_t i) const

  Writes the ith Matrix row vector to a MPIPackBuffer prior to an MPI send.

8.73.1 Detailed Description

template<class T> class Dakota::Matrix< T >

Template class for the Dakota numerical matrix.

A matrix class template to provide 2D arrays of objects. The matrix is zero-based, rows: 0 to (numRows-1) and cols: 0 to (numColumns-1). The class supports overloading of the subscript operator allowing it to emulate a normal built-in 2D array type. Matrix relies on the BaseVector template class to manage any differences between underlying DAKOTA_BASE_VECTOR implementations (RW, STL, etc.).

8.73.2 Member Function Documentation

8.73.2.1 Matrix< T > & operator= (const T & *val*) [inline]

Sets all elements in the matrix to ival.

calls base class operator=(ival)

Reimplemented from BaseVector.

The documentation for this class was generated from the following file:

- DakotaMatrix.H

8.74 MergedConstraints Class Reference

the merged data view.

Inheritance diagram for MergedConstraints::

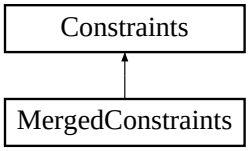

Public Member Functions

- MergedConstraints ()
  default constructor
- MergedConstraints (const ProblemDescDB &problem_db, const pair< short, short > &view)
  standard constructor
- ~MergedConstraints ()
  destructor
- const RealVector & continuous_lower_bounds () const
  return the active continuous variable lower bounds
- void continuous_lower_bounds (const RealVector &c_l_bnds)
  set the active continuous variable lower bounds
- const RealVector & continuous_upper_bounds () const
  return the active continuous variable upper bounds
- void continuous_upper_bounds (const RealVector &c_u_bnds)
  set the active continuous variable upper bounds
- const RealVector & inactive_continuous_lower_bounds () const
  return the inactive continuous lower bounds
- void inactive_continuous_lower_bounds (const RealVector &i_c_l_bnds)
  set the inactive continuous lower bounds
- const RealVector & inactive_continuous_upper_bounds () const
  return the inactive continuous upper bounds

- void inactive_continuous_upper_bounds (const RealVector &i_c_u_bnds)
  set the inactive continuous upper bounds
- RealVector all_continuous_lower_bounds () const
  returns a single array with all continuous lower bounds
- void all_continuous_lower_bounds (const RealVector &a_c_l_bnds)
  sets all continuous lower bounds using a single array
- RealVector all_continuous_upper_bounds () const
  returns a single array with all continuous upper bounds
- void all_continuous_upper_bounds (const RealVector &a_c_u_bnds)
  sets all continuous upper bounds using a single array
- void write (ostream &s) const
  write a variable constraints object to an ostream
- void read (istream &s)
  read a variable constraints object from an istream

Protected Member Functions

- void copy_rep (const Constraints *con_rep)
  Used by copy() to copy the contents of a letter class.
- void reshape_rep (const Sizet2DArray &vars_comps)
  Used by reshape(Sizet2DArray&) to rehape the contents of a letter class.

Private Attributes

- RealVector mergedDesignLowerBnds
  domains (integer values promoted to reals)
- RealVector mergedDesignUpperBnds
  domains (integer values promoted to reals)
- RealVector uncertainLowerBnds
  uncertain to merge)
- RealVector uncertainUpperBnds
  uncertain to merge)

- RealVector mergedStateLowerBnds

  domains (integer values promoted to reals)

- RealVector mergedStateUpperBnds

  domains (integer values promoted to reals)

8.74.1 Detailed Description

the merged data view.

Derived variable constraints classes take different views of the design, uncertain, and state variable types and the continuous and discrete domain types. The MergedConstraints derived class combines continuous and discrete domain types but separates design, uncertain, and state variable types. The result is merged design bounds arrays (mergedDesignLowerBnds, mergedDesignUpperBnds), uncertain distribution bounds arrays (uncertainLowerBnds, uncertainUpperBnds), and merged state bounds arrays (mergedStateLowerBnds, mergedStateUpperBnds). The branch and bound strategy uses this approach (see Variables::get_variables(problem_db) for variables type selection; variables type is passed to the Constraints constructor in Model).

8.74.2 Constructor & Destructor Documentation

8.74.2.1 MergedConstraints (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*)

standard constructor

In this class, a merged data approach is used in which continuous and discrete arrays are combined into a single continuous array (integrality is relaxed; the converse of truncating reals is not currently supported but could be in the future if needed). Iterators/strategies which use this class include: BranchBndOptimizer. Extract fundamental lower and upper bounds and merge continuous and discrete domains to create mergedDesignLowerBnds, mergedDesignUpperBnds, mergedStateLowerBnds, and mergedStateUpperBnds.

The documentation for this class was generated from the following files:

- MergedConstraints.H
- MergedConstraints.C

8.75 MergedVariables Class Reference

merged data view.

Inheritance diagram for MergedVariables::

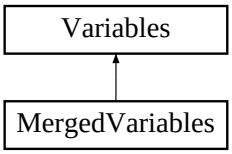

Public Member Functions

- MergedVariables ()
  default constructor
- MergedVariables (const ProblemDescDB &problem_db, const pair< short, short > &view)
  standard constructor
- ~MergedVariables ()
  destructor
- size_t tv () const
  Returns total number of vars.
- const UIntArray & merged_discrete_ids () const
  returns the list of discrete variables merged into a continuous array
- const RealVector & continuous_variables () const
  return the active continuous variables
- void continuous_variable (const Real &c_var, const size_t &i)
  set an active continuous variable
- void continuous_variables (const RealVector &c_vars)
  set the active continuous variables
- const StringArray & continuous_variable_labels () const
  return the active continuous variable labels
- void continuous_variable_labels (const StringArray &c_v_labels)
  set the active continuous variable labels

- const StringArray & continuous_variable_types () const
  return the active continuous variable types
- const UIntArray & continuous_variable_ids () const
  return the active continuous variable position identifiers
- const RealVector & inactive_continuous_variables () const
  return the inactive continuous variables
- void inactive_continuous_variables (const RealVector &i_c_vars)
  set the inactive continuous variables
- const StringArray & inactive_continuous_variable_labels () const
  return the inactive continuous variable labels
- void inactive_continuous_variable_labels (const StringArray &i_c_v_labels)
  set the inactive continuous variable labels
- const UIntArray & inactive_continuous_variable_ids () const
  return the inactive continuous variable position identifiers
- size_t acv () const
  returns total number of continuous vars
- RealVector all_continuous_variables () const
  returns a single array with all continuous variables
- void all_continuous_variables (const RealVector &a_c_vars)
  sets all continuous variables using a single array
- StringArray all_continuous_variable_labels () const
  returns a single array with all continuous variable labels
- void all_continuous_variable_labels (const StringArray &a_c_v_labels)
  sets all continuous variable labels using a single array
- StringArray all_variable_labels () const
  returns a single array with all variable labels
- void read (istream &s)
  read a variables object from an istream
- void write (ostream &s) const
  write a variables object to an ostream

- void write_aprepro (ostream &s) const

  write a variables object to an ostream in aprepro format

- void read_annotated (istream &s)

  read a variables object in annotated format from an istream

- void write_annotated (ostream &s) const

  write a variables object in annotated format to an ostream

- void write_tabular (ostream &s) const

  write a variables object in tabular format to an ostream

- void read (BiStream &s)

  read a variables object from the binary restart stream

- void write (BoStream &s) const

  write a variables object to the binary restart stream

- void read (MPIUnpackBuffer &s)

  read a variables object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a variables object to a packed MPI buffer

Protected Member Functions

- void copy_rep (const Variables *vars_rep)

  Used by copy() to copy the contents of a letter class.

- void reshape_rep (const Sizet2DArray &vars_comps)

  Used by reshape() to reshape the contents of a letter class.

Private Member Functions

- void build_types_ids ()

  construct VarTypes and VarIds arrays using variablesComponents

Private Attributes

- RealVector mergedDesignVars

  domains (discrete values promoted to continuous)

- RealVector uncertainVars

  the uncertain variables array (no discrete uncertain to merge)

- RealVector mergedStateVars

  domains (discrete values promoted to continuous)

- StringArray mergedDesignLabels

  a label array combining continuous and discrete design labels

- StringArray uncertainLabels

  the uncertain variables label array (no discrete uncertain to combine)

- StringArray mergedStateLabels

  a label array combining continuous and discrete state labels

- StringArray continuousVarTypes

  array of variable types for the active continuous variables

- UIntArray continuousVarIds

  array of position identifiers for the active continuous variables

- UIntArray inactiveContinuousVarIds

  array of position identifiers for the inactive continuous variables

- UIntArray mergedDiscreteIds

  requirement is relaxed by merging them into a continuous array

Friends

- bool operator== (const MergedVariables &vars1, const MergedVariables &vars2)

  equality operator

- std::size_t hash_value (const MergedVariables &vars)

  hash_value

- bool binary_equal_to (const MergedVariables &vars1, const MergedVariables &vars2)

  binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

8.75.1 Detailed Description

merged data view.

Derived variables classes take different views of the design, uncertain, and state variable types and the continuous and discrete domain types. The MergedVariables derived class combines continuous and discrete domain types

but separates design, uncertain, and state variable types. The result is a single continuous array of design variables (mergedDesignVars), a single continuous array of uncertain variables (uncertainVars), and a single continuous array of state variables (mergedStateVars). The branch and bound strategy uses this approach (see Variables::get_-variables(problem_db)).

8.75.2 Constructor & Destructor Documentation

8.75.2.1 MergedVariables (const ProblemDescDB & *problem_db*, const pair< short, short > & *view*)

standard constructor

In this class, a merged data approach is used in which continuous and discrete arrays are combined into a single continuous array (integrality is relaxed; the converse of truncating reals is not currently supported but could be in the future if needed). Iterators/strategies which use this class include: BranchBndOptimizer. Extract fundamental variable types and labels and merge continuous and discrete domains to create mergedDesignVars, mergedStateVars, mergedDesignLabels, and mergedStateLabels.

8.75.3 Member Data Documentation

8.75.3.1 UIntArray continuousVarIds [private]

array of position identifiers for the active continuous variables

These identifiers define positions of the active continuous variables within the total variable sequence.

8.75.3.2 UIntArray inactiveContinuousVarIds [private]

array of position identifiers for the inactive continuous variables

These identifiers define positions of the inactive continuous variables within the total variable sequence.

The documentation for this class was generated from the following files:

- MergedVariables.H
- MergedVariables.C

8.76 Minimizer Class Reference

iterator hierarchy.

Inheritance diagram for Minimizer::

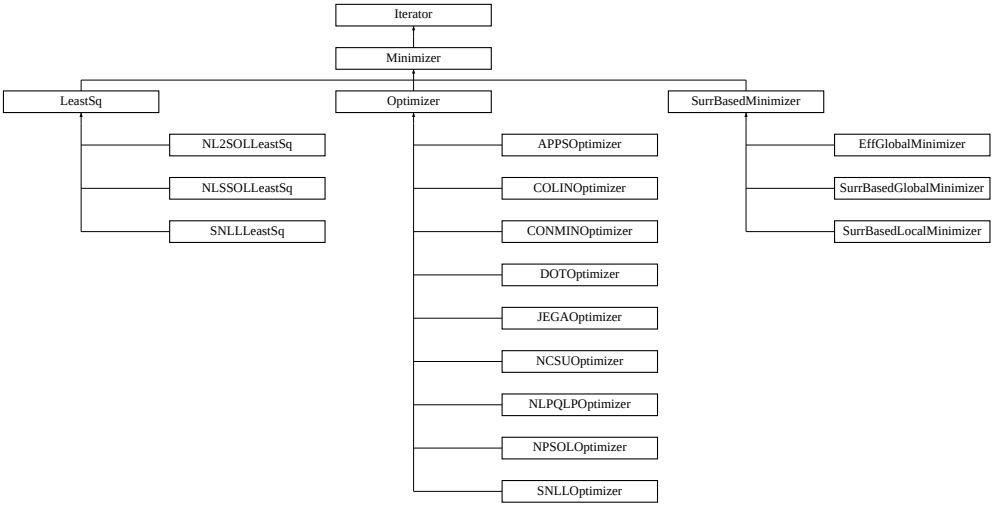

Public Member Functions

- const Variables & variables_results () const
  return a single final iterator solution (variables)
- const Response & response_results () const
  return a single final iterator solution (response)
- const VariablesArray & variables_array_results () const
  only be used if returns_multiple_points() returns true.
- const ResponseArray & response_array_results () const
  only be used if returns_multiple_points() returns true.
- void response_results_active_set (const ActiveSet &set)
  set the requested data for the final iterator response results

Protected Member Functions

- Minimizer ()

default constructor

- Minimizer (Model &model)

  standard constructor

- Minimizer (NoDBBaseConstructor, Model &model)

  alternate constructor for "on the fly" instantiations

- Minimizer (NoDBBaseConstructor, size_t num_lin_ineq, size_t num_lin_eq, size_t num_nln_ineq, size_t num_nln_eq)

  alternate constructor for "on the fly" instantiations

- ∼Minimizer ()

  destructor

- void derived_pre_run ()

  portions of pre_run specific to derived iterators

- void derived_post_run ()

  portions of post_run specific to derived iterators

- void initialize_scaling ()

  checking

- void compute_scaling (int object_type, int auto_type, int num_vars, RealVector &lbs, RealVector &ubs, RealVector &targets, const StringArray &scale_strings, const RealVector &scales, IntVector &scale_types, RealVector &scale_mults, RealVector &scale_offsets)

  vector of variables, functions, constraints, etc.

- bool compute_scale_factor (const Real lower_bound, const Real upper_bound, Real ∗multiplier, Real ∗offset)

  automatically compute a single scaling factor – bounds case

- bool compute_scale_factor (const Real target, Real ∗multiplier)

  automatically compute a single scaling factor – target case

- bool need_resp_trans_byvars (const ShortArray &asv, int start_index, int num_resp)

  transformations

- RealVector modify_n2s (const RealVector &native_vars, const IntVector &scale_types, const RealVector &multipliers, const RealVector &offsets) const

  general RealVector mapping from native to scaled variables vectors:

- RealVector modify_s2n (const RealVector &scaled_vars, const IntVector &scale_types, const RealVector &multipliers, const RealVector &offsets) const

  general RealVector mapping from scaled to native variables:

- void response_modify_n2s (const Variables &scaled_vars, const Response &native_response, Response &scaled_response, int native_offset, int recast_offset, int num_responses) const

  map reponses from native to scaled variable space

- void response_modify_s2n (const Variables &native_vars, const Response &scaled_response, Response &native_response, int scaled_offset, int native_offset, int num_responses) const

  map responses from scaled to native variable space

- RealMatrix lin_coeffs_modify_n2s (const RealMatrix &native_coeffs, const RealVector &cv_multipliers, const RealVector &lin_multipliers) const

  general linear coefficients mapping from native to scaled space

- void print_scaling (const String &info, const IntVector &scale_types, const RealVector &scale_mults, const RealVector &scale_offsets, const StringArray &labels)

  print scaling information for a particular response type in tabular form

Static Protected Member Functions

- static void variables_recast (const Variables &scaled_vars, Variables &native_vars)

  variables from scaled to native (user) space

- static void secondary_resp_recast (const Variables &native_vars, const Variables &scaled_vars, const Response &native_response, Response &scaled_response)

  transform constraints (fns, grads, Hessians) from native (user) to

Protected Attributes

- Real constraintTol

  optimizer/least squares constraint tolerance

- Real bigRealBoundSize

  cutoff value for inequality constraint and continuous variable bounds

- int bigIntBoundSize

  cutoff value for discrete variable bounds

- size_t numNonlinearIneqConstraints

  number of nonlinear inequality constraints

- size_t numNonlinearEqConstraints

  number of nonlinear equality constraints

- size_t numLinearIneqConstraints

number of linear inequality constraints

- size_t numLinearEqConstraints

  number of linear equality constraints

- int numNonlinearConstraints

  total number of nonlinear constraints

- int numLinearConstraints

  total number of linear constraints

- int numConstraints

  total number of linear and nonlinear constraints

- bool boundConstraintFlag

  constraints. Used for method selection and error checking.

- bool speculativeFlag

  flag for speculative gradient evaluations

- size_t numUserPrimaryFns

  number of objective functions or least squares terms in the user's model

- size_t numIterPrimaryFns

  number of objective functions or least squares terms in iterator's view

- bool scaleFlag

  flag for overall scaling status

- bool varsScaleFlag

  flag for variables scaling

- bool primaryRespScaleFlag

  flag for primary response scaling

- bool secondaryRespScaleFlag

  flag for secondary response scaling

- IntVector cvScaleTypes

  scale flags for continuous vars.

- RealVector cvScaleMultipliers

  scales for continuous variables

- RealVector cvScaleOffsets

  offsets for continuous variables

- IntVector responseScaleTypes

  scale flags for all responses

- RealVector responseScaleMultipliers

  scales for all responses

- RealVector responseScaleOffsets

  offsets for all responses (zero for functions, not for nonlin con)

- IntVector linearIneqScaleTypes

  scale flags for linear ineq

- RealVector linearIneqScaleMultipliers

  scales for linear ineq constrs.

- RealVector linearIneqScaleOffsets

  offsets for linear ineq constrs.

- IntVector linearEqScaleTypes

  scale flags for linear eq.

- RealVector linearEqScaleMultipliers

  scales for linear constraints

- RealVector linearEqScaleOffsets

  offsets for linear constraints

- Minimizer * prevMinInstance

  pointer containing previous value of minimizerInstance

- bool vendorNumericalGradFlag

  convenience flag for gradType == numerical && methodSource == vendor

- Variables bestVariables

  best variables found in minimization

- Response bestResponse

  best response found in minimization

- VariablesArray bestVariablesArray

  collection of all best solution variables.

- ResponseArray bestResponseArray

  collection of all best solution responses.

Static Protected Attributes

- static Minimizer * minimizerInstance

  pointer to Minimizer used in static member functions

Friends

- class SOLBase

  access to iterator hierarchy data (to avoid attribute replication)

- class SNLLBase

  access to iterator hierarchy data (to avoid attribute replication)

8.76.1 Detailed Description

iterator hierarchy.

The Minimizer class provides common data and functionality for Optimizer and LeastSq.

8.76.2 Constructor & Destructor Documentation

8.76.2.1 Minimizer (Model & *model*) [protected]

standard constructor

This constructor extracts inherited data for the optimizer and least squares branches and performs sanity checking on constraint settings.

8.76.3 Member Function Documentation

8.76.3.1 void derived_pre_run () [protected, virtual]

portions of pre_run specific to derived iterators

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual derived class portion of pre_run(). Redefinition by derived classes is optional.

Reimplemented from Iterator.

Reimplemented in CONMINOptimizer, LeastSq, Optimizer, DOTOptimizer, NLPQLPOptimizer, SNLLLeastSq, and SNLLOptimizer.

8.76.3.2 void derived_post_run () [protected, virtual]

portions of post_run specific to derived iterators

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual derived class portion of post_run(). Redefinition by derived classes is optional.

Reimplemented from Iterator.

Reimplemented in LeastSq, Optimizer, SNLLLeastSq, and SNLLOptimizer.

8.76.3.3 void initialize_scaling () [protected]

checking

helper function used in constructors of derived classes to set up scaling types, multipliers and offsets when input scaling flag is enabled

8.76.3.4 void variables_recast (const Variables & *scaled_vars*, Variables & *native_vars*) [static, protected]

variables from scaled to native (user) space

Variables map from iterator/scaled space to user/native space using a RecastModel.

8.76.3.5 void secondary_resp_recast (const Variables & *native_vars*, const Variables & *scaled_vars*, const Response & *native_response*, Response & *iterator_response*) [static, protected]

transform constraints (fns, grads, Hessians) from native (user) to

Constraint function map from user/native space to iterator/scaled/combined space using a RecastModel.

8.76.3.6 bool need_resp_trans_byvars (const ShortArray & *asv*, int *start_index*, int *num_resp*) [protected]

transformations

Determine if variable transformations present and derivatives requested, which implies a response transformation is necessay

8.76.3.7 RealVector modify_n2s (const RealVector & *native_vars*, const IntVector & *scale_types*, const RealVector & *multipliers*, const RealVector & *offsets*) const [protected]

general RealVector mapping from native to scaled variables vectors:

general RealVector mapping from native to scaled variables; loosely, in greatest generality: scaled_var = log((native_var - offset) / multiplier)

8.76.3.8 RealVector modify_s2n (const RealVector & *scaled_vars*, const IntVector & *scale_types*, const RealVector & *multipliers*, const RealVector & *offsets*) const [protected]

general RealVector mapping from scaled to native variables:

general RealVector mapping from scaled to native variables; loosely, in greatest generality: scaled_var = (LOG_-BASE^scaled_var) ∗ multiplier + offset

8.76.3.9 void response_modify_n2s (const Variables & *native_vars*, const Response & *native_response*, Response & *recast_response*, int *native_offset*, int *recast_offset*, int *num_responses*) const [protected]

map reponses from native to scaled variable space

scaling response mapping: modifies response from a model (user/native) for use in iterators (scaled) – not including multi_objective_modify

8.76.3.10 void response_modify_s2n (const Variables & *native_vars*, const Response & *scaled_response*, Response & *native_response*, int *scaled_offset*, int *native_offset*, int *num_responses*) const [protected]

map responses from scaled to native variable space

scaling response mapping: modifies response from scaled (iterator) to native (user) space – not including multi_-objective_retreive

8.76.3.11 RealMatrix lin_coeffs_modify_n2s (const RealMatrix & *src_coeffs*, const RealVector & *cv_multipliers*, const RealVector & *lin_multipliers*) const [protected]

general linear coefficients mapping from native to scaled space

compute scaled linear constraint matrix given design variable multipliers and linear scaling multipliers. Only scales components corresponding to continuous variables so for src_coeffs of size MxN, lin_multipliers.size() <= M, cv_multipliers.size() <= N

The documentation for this class was generated from the following files:

- DakotaMinimizer.H
- DakotaMinimizer.C

8.77 Model Class Reference

Base class for the model class hierarchy.

Inheritance diagram for Model::

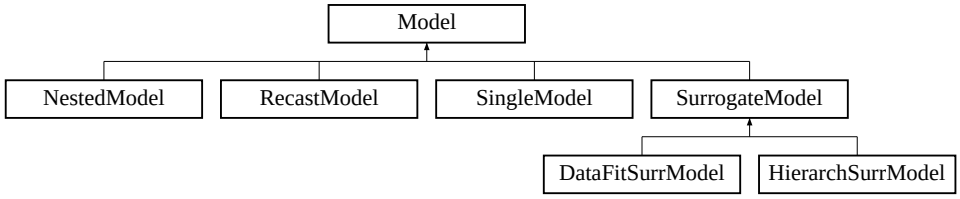

Public Member Functions

- Model ()

  default constructor

- Model (ProblemDescDB &problem_db)

  standard constructor for envelope

- Model (const Model &model)

  copy constructor

- virtual ~Model ()

  destructor

- Model operator= (const Model &model)

  assignment operator

- virtual Iterator & subordinate_iterator ()

  return the sub-iterator in nested and surrogate models

- virtual Model & surrogate_model ()

  return the approximation sub-model in surrogate models

- virtual Model & truth_model ()

  return the truth sub-model in surrogate models

- virtual void derived_subordinate_models (ModelList &ml, bool recurse_flag)

  portion of subordinate_models()() specific to derived model classes

- virtual void update_from_subordinate_model (bool recurse_flag=true)

  propagate vars/labels/bounds/targets from the bottom up

- virtual Interface & interface ()

  or NestedModel::optionalInterface

- virtual void surrogate_bypass (bool bypass_flag)

  models contained within this model

- virtual void surrogate_function_indices (const IntSet &surr_fn_indices)

  set the (currently active) surrogate function index set

- virtual void build_approximation ()

  build a new SurrogateModel approximation

- virtual bool build_approximation (const Variables &vars, const Response &response)

  response at vars

- virtual void update_approximation (const Variables &vars, const Response &response, bool rebuild_flag)

  update an existing surrogate model with a new anchor

- virtual void update_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array, bool rebuild_flag)

  update an existing surrogate model with new data points

- virtual void append_approximation (const Variables &vars, const Response &response, bool rebuild_flag)

  append a single point to an existing surrogate model's data

- virtual void append_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array, bool rebuild_flag)

  append multiple points to an existing surrogate model's data

- virtual Array< Approximation > & approximations ()

  retrieve the set of Approximations within a DataFitSurrModel

- virtual const RealVectorArray & approximation_coefficients ()

  within a DataFitSurrModel

- virtual void approximation_coefficients (const RealVectorArray &approx_coeffs)

  a DataFitSurrModel

- virtual void print_coefficients (ostream &s, size_t index) const

  within a DataFitSurrModel

- virtual const RealVector & approximation_variances (const RealVector &c_vars)

  Approximation within a DataFitSurrModel.

- virtual const List< SurrogateDataPoint > & approximation_data (size_t index)

  instance within a DataFitSurrModel

- virtual void compute_correction (const Response &truth_response, const Response &approx_response, const RealVector &c_vars)

  compute correction factors for use in SurrogateModels

- virtual void auto_correction (bool correction_flag)

  manages automatic application of correction factors in SurrogateModels

- virtual bool auto_correction ()

  model's responses

- virtual void apply_correction (Response &approx_response, const RealVector &c_vars, bool quiet_flag=false)

  apply correction factors to approx_response (for use in SurrogateModels)

- virtual void component_parallel_mode (short mode)

  or 2 (SUB_MODEL/ACTUAL_MODEL/HF_MODEL/TRUTH_MODEL)].

- virtual String local_eval_synchronization ()

  return derived model synchronization setting

- virtual int local_eval_concurrency ()

  return derived model asynchronous evaluation concurrency

- virtual void serve ()

  a termination message is received from stop_servers().

- virtual void stop_servers ()

  particular model when iteration on the model is complete.

- virtual bool derived_master_overload () const

  of trying to run a multiprocessor job on the master.

- virtual const String & interface_id () const

  return the interface identifier

- virtual int evaluation_id () const

  Return the current function evaluation id for the Model.

- virtual void set_evaluation_reference ()

  Set the reference points for the evaluation counters within the Model.

- virtual void fine_grained_evaluation_counters ()

Request fine-grained evaluation reporting within the Model.

- virtual void print_evaluation_summary (ostream &s, bool minimal_header=false, bool relative_count=true) const

  Print an evaluation summary for the Model.

- ModelList & subordinate_models (bool recurse_flag=true)

  return the sub-models in nested and surrogate models

- void compute_response ()

  Compute the Response at currentVariables (default ActiveSet).

- void compute_response (const ActiveSet &set)

  Compute the Response at currentVariables (specified ActiveSet).

- void asynch_compute_response ()

  Response at currentVariables (default ActiveSet).

- void asynch_compute_response (const ActiveSet &set)

  Response at currentVariables (specified ActiveSet).

- const ResponseArray & synchronize ()

  complete set of results from a group of asynchronous evaluations.

- const IntResponseMap & synchronize_nowait ()

  available results from a group of asynchronous evaluations.

- void init_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  configuration in modelPCIterMap

- void init_serial ()

  modify some default settings to behave properly in serial.

- void set_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  from modelPCIterMap)

- void free_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  deallocate communicator partitions for a model

- void stop_configurations ()

  terminate serve_configurations() on other iteratorComm processors

- int serve_configurations ()

  to balance init_communicators() calls on iteratorComm rank 0

- void estimate_message_lengths ()

estimate messageLengths for a model

- void assign_rep (Model *model_rep, bool ref_count_incr=true)

  replaces existing letter with a new one

- size_t tv () const

  return total number of vars

- size_t cv () const

  return number of active continuous variables

- size_t dv () const

  return number of active discrete variables

- size_t icv () const

  return number of inactive continuous variables

- size_t idv () const

  return number of inactive discrete variables

- size_t acv () const

  return total number of continuous variables

- size_t adv () const

  return total number of discrete variables

- void active_variables (const Variables &vars)

  set the active variables in currentVariables

- const RealVector & continuous_variables () const

  return the active continuous variables from currentVariables

- void continuous_variables (const RealVector &c_vars)

  set the active continuous variables in currentVariables

- const IntVector & discrete_variables () const

  return the active discrete variables from currentVariables

- void discrete_variables (const IntVector &d_vars)

  set the active discrete variables in currentVariables

- const StringArray & continuous_variable_types () const

  return the active continuous variable types from currentVariables

- const StringArray & discrete_variable_types () const

  return the active discrete variable types from currentVariables

- const UIntArray & continuous_variable_ids () const
  return the active continuous variable identifiers from currentVariables
- const RealVector & inactive_continuous_variables () const
  return the inactive continuous variables in currentVariables
- void inactive_continuous_variables (const RealVector &i_c_vars)
  set the inactive continuous variables in currentVariables
- const IntVector & inactive_discrete_variables () const
  return the inactive discrete variables in currentVariables
- void inactive_discrete_variables (const IntVector &i_d_vars)
  set the inactive discrete variables in currentVariables
- const UIntArray & inactive_continuous_variable_ids () const
  return the inactive continuous variable identifiers from currentVariables
- RealVector all_continuous_variables () const
  return all continuous variables in currentVariables
- void all_continuous_variables (const RealVector &a_c_vars)
  set all continuous variables in currentVariables
- IntVector all_discrete_variables () const
  return all discrete variables in currentVariables
- void all_discrete_variables (const IntVector &a_d_vars)
  set all discrete variables in currentVariables
- const StringArray & all_continuous_variable_types () const
  return all continuous variable types from currentVariables
- const StringArray & all_discrete_variable_types () const
  return all discrete variable types from currentVariables
- const UIntArray & all_continuous_variable_ids () const
  return all continuous variable identifiers from currentVariables
- const RealDenseVector & normal_means () const
  return the normal uncertain variable means
- void normal_means (const RealDenseVector &n_means)
  set the normal uncertain variable means

- const RealDenseVector & normal_std_deviations () const
  return the normal uncertain variable standard deviations
- void normal_std_deviations (const RealDenseVector &n_std_devs)
  set the normal uncertain variable standard deviations
- const RealDenseVector & normal_lower_bounds () const
  return the normal uncertain variable lower bounds
- void normal_lower_bounds (const RealDenseVector &n_lower_bnds)
  set the normal uncertain variable lower bounds
- const RealDenseVector & normal_upper_bounds () const
  return the normal uncertain variable upper bounds
- void normal_upper_bounds (const RealDenseVector &n_upper_bnds)
  set the normal uncertain variable upper bounds
- const RealDenseVector & lognormal_means () const
  return the lognormal uncertain variable means
- void lognormal_means (const RealDenseVector &ln_means)
  set the lognormal uncertain variable means
- const RealDenseVector & lognormal_std_deviations () const
  return the lognormal uncertain variable standard deviations
- void lognormal_std_deviations (const RealDenseVector &ln_std_devs)
  set the lognormal uncertain variable standard deviations
- const RealDenseVector & lognormal_error_factors () const
  return the lognormal uncertain variable error factors
- void lognormal_error_factors (const RealDenseVector &ln_err_facts)
  set the lognormal uncertain variable error factors
- const RealDenseVector & lognormal_lower_bounds () const
  return the lognormal uncertain variable lower bounds
- void lognormal_lower_bounds (const RealDenseVector &ln_lower_bnds)
  set the lognormal uncertain variable lower bounds
- const RealDenseVector & lognormal_upper_bounds () const
  return the lognormal uncertain variable upper bounds
- void lognormal_upper_bounds (const RealDenseVector &ln_upper_bnds)

set the lognormal uncertain variable upper bounds

- const RealDenseVector & uniform_lower_bounds () const
  return the uniform uncertain variable lower bounds
- void uniform_lower_bounds (const RealDenseVector &u_lower_bnds)
  set the uniform uncertain variable lower bounds
- const RealDenseVector & uniform_upper_bounds () const
  return the uniform uncertain variable upper bounds
- void uniform_upper_bounds (const RealDenseVector &u_upper_bnds)
  set the uniform uncertain variable upper bounds
- const RealDenseVector & loguniform_lower_bounds () const
  return the loguniform uncertain variable lower bounds
- void loguniform_lower_bounds (const RealDenseVector &lu_lower_bnds)
  set the loguniform uncertain variable lower bounds
- const RealDenseVector & loguniform_upper_bounds () const
  return the loguniform uncertain variable upper bounds
- void loguniform_upper_bounds (const RealDenseVector &lu_upper_bnds)
  set the loguniform uncertain variable upper bounds
- const RealDenseVector & triangular_modes () const
  return the triangular uncertain variable modes
- void triangular_modes (const RealDenseVector &t_modes)
  set the triangular uncertain variable modes
- const RealDenseVector & triangular_lower_bounds () const
  return the triangular uncertain variable lower bounds
- void triangular_lower_bounds (const RealDenseVector &t_lower_bnds)
  set the triangular uncertain variable lower bounds
- const RealDenseVector & triangular_upper_bounds () const
  return the triangular uncertain variable upper bounds
- void triangular_upper_bounds (const RealDenseVector &t_upper_bnds)
  set the triangular uncertain variable upper bounds
- const RealDenseVector & exponential_betas () const
  return the exponential uncertain variable beta parameters

- void exponential_betas (const RealDenseVector &e_betas)
  set the exponential uncertain variable beta parameters
- const RealDenseVector & beta_alphas () const
  return the beta uncertain variable alphas
- void beta_alphas (const RealDenseVector &b_alphas)
  set the beta uncertain variable alphas
- const RealDenseVector & beta_betas () const
  return the beta uncertain variable betas
- void beta_betas (const RealDenseVector &b_betas)
  set the beta uncertain variable betas
- const RealDenseVector & beta_lower_bounds () const
  return the beta uncertain variable lower bounds
- void beta_lower_bounds (const RealDenseVector &b_lower_bnds)
  set the beta uncertain variable lower bounds
- const RealDenseVector & beta_upper_bounds () const
  return the beta uncertain variable upper bounds
- void beta_upper_bounds (const RealDenseVector &b_upper_bnds)
  set the beta uncertain variable upper bounds
- const RealDenseVector & gamma_alphas () const
  return the gamma uncertain variable alpha parameters
- void gamma_alphas (const RealDenseVector &ga_alphas)
  set the gamma uncertain variable alpha parameters
- const RealDenseVector & gamma_betas () const
  return the gamma uncertain variable beta parameters
- void gamma_betas (const RealDenseVector &ga_betas)
  set the gamma uncertain variable beta parameters
- const RealDenseVector & gumbel_alphas () const
  return the gumbel uncertain variable alphas
- void gumbel_alphas (const RealDenseVector &gu_alphas)
  set the gumbel uncertain variable alphas

- const RealDenseVector & gumbel_betas () const
  return the gumbel uncertain variable betas
- void gumbel_betas (const RealDenseVector &gu_betas)
  set the gumbel uncertain variable betas
- const RealDenseVector & frechet_alphas () const
  return the frechet uncertain variable alpha parameters
- void frechet_alphas (const RealDenseVector &f_alphas)
  set the frechet uncertain variable alpha parameters
- const RealDenseVector & frechet_betas () const
  return the frechet uncertain variable beta parameters
- void frechet_betas (const RealDenseVector &f_betas)
  set the frechet uncertain variable beta parameters
- const RealDenseVector & weibull_alphas () const
  return the weibull uncertain variable alpha parameters
- void weibull_alphas (const RealDenseVector &w_alphas)
  set the weibull uncertain variable alpha parameters
- const RealDenseVector & weibull_betas () const
  return the weibull uncertain variable beta parameters
- void weibull_betas (const RealDenseVector &w_betas)
  set the weibull uncertain variable beta parameters
- const RealDenseVectorArray & histogram_bin_pairs () const
  return the histogram uncertain bin pairs
- void histogram_bin_pairs (const RealDenseVectorArray &h_bin_pairs)
  set the histogram uncertain bin pairs
- const RealDenseVectorArray & histogram_point_pairs () const
  return the histogram uncertain point pairs
- void histogram_point_pairs (const RealDenseVectorArray &h_pt_pairs)
  set the histogram uncertain point pairs
- const RealDenseVectorArray & interval_probabilities () const
  return the interval basic probability values
- void interval_probabilities (const RealDenseVectorArray &int_probs)

set the interval basic probability values

- const RealDenseVectorArray & interval_bounds () const
  return the interval bounds
- void interval_bounds (const RealDenseVectorArray &int_bounds)
  set the interval bounds
- const RealSymDenseMatrix & uncertain_correlations () const
  return the uncertain variable correlations
- void uncertain_correlations (const RealSymDenseMatrix &uncertain_corr)
  set the uncertain variable correlations
- const StringArray & continuous_variable_labels () const
  return the active continuous variable labels from currentVariables
- void continuous_variable_labels (const StringArray &c_v_labels)
  set the active continuous variable labels in currentVariables
- const StringArray & discrete_variable_labels () const
  return the active discrete variable labels from currentVariables
- void discrete_variable_labels (const StringArray &d_v_labels)
  set the active discrete variable labels in currentVariables
- const StringArray & inactive_continuous_variable_labels () const
  return the inactive continuous variable labels in currentVariables
- void inactive_continuous_variable_labels (const StringArray &i_c_v_labels)
  set the inactive continuous variable labels in currentVariables
- const StringArray & inactive_discrete_variable_labels () const
  return the inactive discrete variable labels in currentVariables
- void inactive_discrete_variable_labels (const StringArray &i_d_v_labels)
  set the inactive discrete variable labels in currentVariables
- StringArray all_continuous_variable_labels () const
  return all continuous variable labels in currentVariables
- void all_continuous_variable_labels (const StringArray &a_c_v_labels)
  set all continuous variable labels in currentVariables
- StringArray all_discrete_variable_labels () const
  return all discrete variable labels in currentVariables

- void all_discrete_variable_labels (const StringArray &a_d_v_labels)
  set all discrete variable labels in currentVariables
- const StringArray & response_labels () const
  return the response labels from currentResponse
- void response_labels (const StringArray &resp_labels)
  set the response labels in currentResponse
- const RealVector & continuous_lower_bounds () const
  return the active continuous lower bounds from userDefinedConstraints
- void continuous_lower_bounds (const RealVector &c_l_bnds)
  set the active continuous lower bounds in userDefinedConstraints
- const RealVector & continuous_upper_bounds () const
  return the active continuous upper bounds from userDefinedConstraints
- void continuous_upper_bounds (const RealVector &c_u_bnds)
  set the active continuous upper bounds in userDefinedConstraints
- const IntVector & discrete_lower_bounds () const
  return the active discrete lower bounds from userDefinedConstraints
- void discrete_lower_bounds (const IntVector &d_l_bnds)
  set the active discrete lower bounds in userDefinedConstraints
- const IntVector & discrete_upper_bounds () const
  return the active discrete upper bounds from userDefinedConstraints
- void discrete_upper_bounds (const IntVector &d_u_bnds)
  set the active discrete upper bounds in userDefinedConstraints
- const RealVector & inactive_continuous_lower_bounds () const
  return the inactive continuous lower bounds in userDefinedConstraints
- void inactive_continuous_lower_bounds (const RealVector &i_c_l_bnds)
  set the inactive continuous lower bounds in userDefinedConstraints
- const RealVector & inactive_continuous_upper_bounds () const
  return the inactive continuous upper bounds in userDefinedConstraints
- void inactive_continuous_upper_bounds (const RealVector &i_c_u_bnds)
  set the inactive continuous upper bounds in userDefinedConstraints

- const IntVector & inactive_discrete_lower_bounds () const
  return the inactive discrete lower bounds in userDefinedConstraints
- void inactive_discrete_lower_bounds (const IntVector &i_d_l_bnds)
  set the inactive discrete lower bounds in userDefinedConstraints
- const IntVector & inactive_discrete_upper_bounds () const
  return the inactive discrete upper bounds in userDefinedConstraints
- void inactive_discrete_upper_bounds (const IntVector &i_d_u_bnds)
  set the inactive discrete upper bounds in userDefinedConstraints
- RealVector all_continuous_lower_bounds () const
  return all continuous lower bounds in userDefinedConstraints
- void all_continuous_lower_bounds (const RealVector &a_c_l_bnds)
  set all continuous lower bounds in userDefinedConstraints
- RealVector all_continuous_upper_bounds () const
  return all continuous upper bounds in userDefinedConstraints
- void all_continuous_upper_bounds (const RealVector &a_c_u_bnds)
  set all continuous upper bounds in userDefinedConstraints
- IntVector all_discrete_lower_bounds () const
  return all discrete lower bounds in userDefinedConstraints
- void all_discrete_lower_bounds (const IntVector &a_d_l_bnds)
  set all discrete lower bounds in userDefinedConstraints
- IntVector all_discrete_upper_bounds () const
  return all discrete upper bounds in userDefinedConstraints
- void all_discrete_upper_bounds (const IntVector &a_d_u_bnds)
  set all discrete upper bounds in userDefinedConstraints
- size_t num_linear_ineq_constraints () const
  return the number of linear inequality constraints
- size_t num_linear_eq_constraints () const
  return the number of linear equality constraints
- const RealMatrix & linear_ineq_constraint_coeffs () const
  return the linear inequality constraint coefficients
- void linear_ineq_constraint_coeffs (const RealMatrix &lin_ineq_coeffs)

set the linear inequality constraint coefficients

- const RealVector & linear_ineq_constraint_lower_bounds () const
  return the linear inequality constraint lower bounds
- void linear_ineq_constraint_lower_bounds (const RealVector &lin_ineq_l_bnds)
  set the linear inequality constraint lower bounds
- const RealVector & linear_ineq_constraint_upper_bounds () const
  return the linear inequality constraint upper bounds
- void linear_ineq_constraint_upper_bounds (const RealVector &lin_ineq_u_bnds)
  set the linear inequality constraint upper bounds
- const RealMatrix & linear_eq_constraint_coeffs () const
  return the linear equality constraint coefficients
- void linear_eq_constraint_coeffs (const RealMatrix &lin_eq_coeffs)
  set the linear equality constraint coefficients
- const RealVector & linear_eq_constraint_targets () const
  return the linear equality constraint targets
- void linear_eq_constraint_targets (const RealVector &lin_eq_targets)
  set the linear equality constraint targets
- size_t num_nonlinear_ineq_constraints () const
  return the number of nonlinear inequality constraints
- size_t num_nonlinear_eq_constraints () const
  return the number of nonlinear equality constraints
- const RealVector & nonlinear_ineq_constraint_lower_bounds () const
  return the nonlinear inequality constraint lower bounds
- void nonlinear_ineq_constraint_lower_bounds (const RealVector &nln_ineq_l_bnds)
  set the nonlinear inequality constraint lower bounds
- const RealVector & nonlinear_ineq_constraint_upper_bounds () const
  return the nonlinear inequality constraint upper bounds
- void nonlinear_ineq_constraint_upper_bounds (const RealVector &nln_ineq_u_bnds)
  set the nonlinear inequality constraint upper bounds
- const RealVector & nonlinear_eq_constraint_targets () const
  return the nonlinear equality constraint targets

- void nonlinear_eq_constraint_targets (const RealVector &nln_eq_targets)

  set the nonlinear equality constraint targets

- const UIntArray & merged_discrete_ids () const

  merged into a continuous array in currentVariables

- const Variables & current_variables () const

  return the current variables (currentVariables)

- const Constraints & user_defined_constraints () const

  return the user-defined constraints (userDefinedConstraints)

- const Response & current_response () const

  return the current response (currentResponse)

- ProblemDescDB & problem_description_db () const

  return the problem description database (probDescDB)

- ParallelLibrary & parallel_library () const

  return the parallel library (parallelLib)

- const String & model_type () const

  return the model type (modelType)

- const String & model_id () const

  return the model identifier (idModel)

- size_t num_functions () const

  return number of functions in currentResponse

- const String & gradient_type () const

  return the gradient evaluation type (gradType)

- const String & method_source () const

  return the numerical gradient evaluation method source (methodSrc)

- const String & interval_type () const

  return the numerical gradient evaluation interval type (intervalType)

- const RealVector & fd_gradient_step_size () const

  return the finite difference gradient step size (fdGradSS)

- const IntList & gradient_id_analytic () const

  return the mixed gradient analytic IDs (gradIdAnalytic)

- const IntList & gradient_id_numerical () const

  return the mixed gradient numerical IDs (gradIdNumerical)

- const String & hessian_type () const

  return the Hessian evaluation type (hessType)

- const String & quasi_hessian_type () const

  return the Hessian evaluation type (quasiHessType)

- const RealVector & fd_hessian_by_grad_step_size () const

  return gradient-based finite difference Hessian step size (fdHessByGradSS)

- const RealVector & fd_hessian_by_fn_step_size () const

  return function-based finite difference Hessian step size (fdHessByFnSS)

- const IntList & hessian_id_analytic () const

  return the mixed Hessian analytic IDs (hessIdAnalytic)

- const IntList & hessian_id_numerical () const

  return the mixed Hessian analytic IDs (hessIdNumerical)

- const IntList & hessian_id_quasi () const

  return the mixed Hessian analytic IDs (hessIdQuasi)

- const RealVector & primary_response_fn_weights () const

  squares terms. Used by ConcurrentStrategy for Pareto set optimization.

- void primary_response_fn_weights (const RealVector &wts, bool recurse_flag=true)

  squares terms. Used by ConcurrentStrategy for Pareto set optimization.

- void supports_estimated_derivatives (bool sed_flag)

  set whether this model should perform or pass on derivative estimation

- void init_comms_bcast_flag (bool icb_flag)

  set initCommsBcastFlag

- int evaluation_capacity () const

  return the evaluation capacity for use in iterator logic

- int derivative_concurrency () const

  return the gradient concurrency for use in parallel configuration logic

- bool asynch_flag () const

  return the asynchronous evaluation flag (asynchEvalFlag)

- void asynch_flag (const bool flag)

set the asynchronous evaluation flag (asynchEvalFlag)

- short output_level () const

  return the outputLevel

- void output_level (const short level)

  set the outputLevel

- const IntArray & message_lengths () const

  return the array of MPI packed message buffer lengths (messageLengths)

- void parallel_configuration_iterator (const ParConfigLIter &pc_iter)

  set modelPCIter

- const ParConfigLIter & parallel_configuration_iterator () const

  return modelPCIter

- void auto_graphics (const bool flag)

  the model as opposed to graphics posting at the strategy level).

- bool is_null () const

  function to check modelRep (does this envelope contain a letter)

- Model ∗ model_rep () const

  that are not mapped to the top Model level

Protected Member Functions

- Model (BaseConstructor, ProblemDescDB &problem_db)

  derived class constructors - Coplien, p. 139)

- Model (NoDBBaseConstructor, ParallelLibrary &parallel_lib, const pair< short, short > &view, const ActiveSet &set)

  constructed on the fly

- Model (RecastBaseConstructor, ProblemDescDB &problem_db, ParallelLibrary &parallel_lib)

  constructed on the fly

- virtual void derived_compute_response (const ActiveSet &set)

  portion of compute_response() specific to derived model classes

- virtual void derived_asynch_compute_response (const ActiveSet &set)

  portion of asynch_compute_response() specific to derived model classes

- virtual const ResponseArray & derived_synchronize ()

portion of synchronize() specific to derived model classes

- virtual const IntResponseMap & derived_synchronize_nowait ()
  portion of synchronize_nowait() specific to derived model classes
- virtual void derived_init_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)
  portion of init_communicators() specific to derived model classes
- virtual void derived_init_serial ()
  portion of init_serial() specific to derived model classes
- virtual void derived_set_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)
  portion of set_communicators() specific to derived model classes
- virtual void derived_free_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)
  portion of free_communicators() specific to derived model classes

Protected Attributes

- Variables currentVariables
  function evaluations
- size_t numDerivVars
  corrections where only the active continuous variables are supported)
- Response currentResponse
  function evaluations
- size_t numFns
  the number of functions in currentResponse
- Constraints userDefinedConstraints
  an iterator at startup.
- String modelType
  type of model: single, nested, or surrogate
- String surrogateType
  type of surrogate model: local_∗, multipoint_∗, global_∗, or hierarchical
- String gradType
  grad type: none,numerical,analytic,mixed
- String methodSrc
  method source: dakota,vendor

- String intervalType

  interval type: forward,central

- RealVector fdGradSS

  relative step sizes for numerical gradients

- IntList gradIdAnalytic

  analytic id's for mixed gradients

- IntList gradIdNumerical

  numerical id's for mixed gradients

- String hessType

  Hess type: none,numerical,quasi,analytic,mixed.

- String quasiHessType

  quasi-Hessian type: bfgs, damped_bfgs, sr1

- RealVector fdHessByGradSS

  relative step sizes for numerical Hessians estimated with 1st-order grad differences

- RealVector fdHessByFnSS

  relative step sizes for numerical Hessians estimated with 2nd-order fn differences

- IntList hessIdAnalytic

  analytic id's for mixed Hessians

- IntList hessIdNumerical

  numerical id's for mixed Hessians

- IntList hessIdQuasi

  quasi id's for mixed Hessians

- bool supportsEstimDerivs

  whether model should perform or forward derivative estimation

- IntArray messageLengths

  and PRPair

- ProblemDescDB & probDescDB

  class member reference to the problem description database

- ParallelLibrary & parallelLib

  class member reference to the parallel library

- ParConfigLIter modelPCIter

  the ParallelConfiguration node used by this model instance

- short componentParallelMode

  (SUB_MODEL/HF_MODEL/TRUTH_MODEL)

- bool asynchEvalFlag

  flags asynch evaluations (local or distributed)

- short outputLevel

  output verbosity level: {SILENT,QUIET,NORMAL,VERBOSE,DEBUG}_OUTPUT

- RealDenseVector normalMeans

  normal uncertain variable means

- RealDenseVector normalStdDevs

  normal uncertain variable standard deviations

- RealDenseVector normalLowerBnds

  normal uncertain variable lower bounds

- RealDenseVector normalUpperBnds

  normal uncertain variable upper bounds

- RealDenseVector lognormalMeans

  lognormal uncertain variable means

- RealDenseVector lognormalStdDevs

  lognormal uncertain variable standard deviations

- RealDenseVector lognormalErrFacts

  lognormal uncertain variable error factors

- RealDenseVector lognormalLowerBnds

  lognormal uncertain variable lower bounds

- RealDenseVector lognormalUpperBnds

  lognormal uncertain variable upper bounds

- RealDenseVector uniformLowerBnds

  uniform uncertain variable lower bounds

- RealDenseVector uniformUpperBnds

  uniform uncertain variable upper bounds

- RealDenseVector loguniformLowerBnds

loguniform uncertain variable lower bounds

- RealDenseVector loguniformUpperBnds
  loguniform uncertain variable upper bounds
- RealDenseVector triangularModes
  triangular uncertain variable modes
- RealDenseVector triangularLowerBnds
  triangular uncertain variable lower bounds
- RealDenseVector triangularUpperBnds
  triangular uncertain variable upper bounds
- RealDenseVector exponentialBetas
  exponential uncertain variable betas
- RealDenseVector betaAlphas
  beta uncertain variable alphas
- RealDenseVector betaBetas
  beta uncertain variable betas
- RealDenseVector betaLowerBnds
  beta uncertain variable lower bounds
- RealDenseVector betaUpperBnds
  beta uncertain variable upper bounds
- RealDenseVector gammaAlphas
  gamma uncertain variable alphas
- RealDenseVector gammaBetas
  gamma uncertain variable betas
- RealDenseVector gumbelAlphas
  gumbel uncertain variable alphas
- RealDenseVector gumbelBetas
  gumbel uncertain variable betas
- RealDenseVector frechetAlphas
  frechet uncertain variable alphas
- RealDenseVector frechetBetas
  frechet uncertain variable betas

- RealDenseVector weibullAlphas

  weibull uncertain variable alphas

- RealDenseVector weibullBetas

  weibull uncertain variable betas

- RealDenseVectorArray histogramBinPairs

  histogram uncertain (x,y) bin pairs (continuous linear histogram)

- RealDenseVectorArray histogramPointPairs

  histogram uncertain (x,y) point pairs (discrete histogram)

- RealDenseVectorArray intervalBasicProbs

  basic probability values for interval uncertain variables

- RealDenseVectorArray intervalBounds

  interval lower/upper bounds for interval uncertain variables

- RealSymDenseMatrix uncertainCorrelations

  and correlation coefficients for reliability)

- RealVector primaryRespFnWts

  multiobjective optimization or weighted least squares)

Private Member Functions

- Model * get_model (ProblemDescDB &problem_db)

  Used by the envelope to instantiate the correct letter class.

- int estimate_derivatives (const ShortArray &map_asv, const ShortArray &fd_grad_asv, const ShortArray &fd_hess_asv, const ShortArray &quasi_hess_asv, const ActiveSet &original_set, const bool asynch_flag)

  method_source) in the numerical gradient specification.

- void synchronize_derivatives (const Variables &vars, const ResponseArray &fd_responses, Response &new_response, const ShortArray &fd_grad_asv, const ShortArray &fd_hess_asv, const ShortArray &quasi_hess_asv, const ActiveSet &original_set)

  objects (fd_grad_responses) into a single response (new_response)

- void update_response (const Variables &vars, Response &new_response, const ShortArray &fd_grad_asv, const ShortArray &fd_hess_asv, const ShortArray &quasi_hess_asv, const ActiveSet &original_set, Response &initial_map_response, const RealMatrix &new_fn_grads, const RealMatrixArray &new_fn_hessians)

  overlay results to update a response object

- void update_quasi_hessians (const Variables &vars, Response &new_response, const ActiveSet &original_set)

  perform quasi-Newton Hessian updates

- bool manage_asv (const ShortArray &asv_in, ShortArray &map_asv_out, ShortArray &fd_grad_asv_out, ShortArray &fd_hess_asv_out, ShortArray &quasi_hess_asv_out)

  Coordinates usage of estimate_derivatives() calls based on asv_in.

Private Attributes

- String idModel

  model identifier string from the input file

- bool estDerivsFlag

  asynch_compute_response()

- int evaluationCapacity

  capacity for concurrent evaluations supported by the Model

- std::map< int, ParConfigLIter > modelPCIterMap

  level as the lookup key

- bool initCommsBcastFlag

  init_communicators(); set from Strategy::init_iterator()

- bool modelAutoGraphicsFlag

  graphics posting at the strategy level)

- ModelList modelList

  used to collect sub-models for subordinate_models()

- VariablesList varsList

  synchronize().

- List< ShortArray > asvList

  asynch_compute_response() to synchronize()

- List< ActiveSet > setList

  asynch_compute_response() to synchronize()

- BoolList initialMapList

  synchronize_derivatives()

- BoolList dbCaptureList

synchronize_derivatives()

- ResponseList dbResponseList

  synchronize_derivatives()

- RealList deltaList

  transfers deltas from estimate_derivatives() to synchronize_derivatives()

- IntList numMapsList

  into numerical gradients.

- RealMatrix xPrev

  previous parameter vectors used in computing s for quasi-Newton updates

- RealMatrix fnGradsPrev

  previous gradient vectors used in computing y for quasi-Newton updates

- RealMatrixArray quasiHessians

  quasi-Newton Hessian approximations

- SizetArray numQuasiUpdates

  number of quasi-Newton Hessian updates applied

- ResponseArray responseArray

  similar array in Interface contains the raw responses.

- IntResponseMap graphicsRespMap

  prior to sequential input into the graphics

- Model * modelRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing modelRep

8.77.1 Detailed Description

Base class for the model class hierarchy.

The Model class is the base class for one of the primary class hierarchies in DAKOTA. The model hierarchy contains a set of variables, an interface, and a set of responses, and an iterator operates on the model to map the variables into responses using the interface. For memory efficiency and enhanced polymorphism, the model hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (Model) serves as the envelope and one of the derived classes (selected in Model::get_model()) serves as the letter.

8.77.2 Constructor & Destructor Documentation

8.77.2.1 Model ()

default constructor

The default constructor is used in vector<Model> instantiations and for initialization of Model objects contained in Iterator and derived Strategy classes. modelRep is NULL in this case (a populated problem_db is needed to build a meaningful Model object). This makes it necessary to check for NULL in the copy constructor, assignment operator, and destructor.

8.77.2.2 Model (ProblemDescDB & *problem_db*)

standard constructor for envelope

Used in model instantiations within strategy constructors. Envelope constructor only needs to extract enough data to properly execute get_model, since Model(BaseConstructor, problem_db) builds the actual base class data for the derived models.

8.77.2.3 Model (const Model & *model*)

copy constructor

Copy constructor manages sharing of modelRep and incrementing of referenceCount.

8.77.2.4 ~Model () [virtual]

destructor

Destructor decrements referenceCount and only deletes modelRep when referenceCount reaches zero.

8.77.2.5 Model (BaseConstructor, ProblemDescDB & *problem_db*) [protected]

derived class constructors - Coplien, p. 139)

This constructor builds the base class data for all inherited models. get_model() instantiates a derived class and the derived class selects this base class constructor in its initialization list (to avoid the recursion of the base class constructor calling get_model() again). Since the letter IS the representation, its representation pointer is set to NULL (an uninitialized pointer causes problems in ~Model).

8.77.2.6 Model (RecastBaseConstructor, ProblemDescDB & *problem_db*, ParallelLibrary & *parallel_lib*) [protected]

constructed on the fly

This constructor also builds the base class data for inherited models. However, it is used for recast models which are instantiated on the fly. Therefore it only initializes a small subset of attributes. Note that parallel_lib is managed separately from problem_db since parallel_lib is needed even in cases where problem_db is an empty envelope (i.e., use of dummy_db in Model(NoDBBaseConstructor) above.

8.77.3 Member Function Documentation

8.77.3.1 Model operator= (const Model & *model*)

assignment operator

Assignment operator decrements referenceCount for old modelRep, assigns new modelRep, and increments referenceCount for new modelRep.

8.77.3.2 Iterator & subordinate_iterator () `[virtual]`

return the sub-iterator in nested and surrogate models

return by reference requires use of dummy objects, but is important to allow use of assign_rep() since this operation must be performed on the original envelope object.

Reimplemented in DataFitSurrModel, NestedModel, and RecastModel.

8.77.3.3 Model & surrogate_model () `[virtual]`

return the approximation sub-model in surrogate models

return by reference requires use of dummy objects, but is important to allow use of assign_rep() since this operation must be performed on the original envelope object.

Reimplemented in DataFitSurrModel, HierarchSurrModel, and RecastModel.

8.77.3.4 Model & truth_model () `[virtual]`

return the truth sub-model in surrogate models

return by reference requires use of dummy objects, but is important to allow use of assign_rep() since this operation must be performed on the original envelope object.

Reimplemented in DataFitSurrModel, HierarchSurrModel, and RecastModel.

8.77.3.5 void update_from_subordinate_model (bool *recurse_flag* = `true`) `[virtual]`

propagate vars/labels/bounds/targets from the bottom up

used only for instantiate-on-the-fly model recursions (all RecastModel instantiations and alternate DataFitSurrModel instantiations). Single, Hierarchical, and Nested Models do not redefine the function since

they do not support instantiate-on-the-fly. This means that the recursion will stop as soon as it encounters a Model that was instantiated normally, which is appropriate since ProblemDescDB-constructed Models use top-down information flow and do not require bottom-up updating.

Reimplemented in DataFitSurrModel, and RecastModel.

8.77.3.6 Interface & interface () [virtual]

or NestedModel::optionalInterface

return by reference requires use of dummy objects, but is important to allow use of assign_rep() since this operation must be performed on the original envelope object.

Reimplemented in DataFitSurrModel, NestedModel, RecastModel, and SingleModel.

8.77.3.7 String local_eval_synchronization () [virtual]

return derived model synchronization setting

SingleModels and HierarchSurrModels redefine this virtual function. A default value of "synchronous" prevents asynch local operations for:

- NestedModels: a subIterator can support message passing parallelism, but not asynch local.
- DataFitSurrModels: while asynch evals on approximations will work due to some added bookkeeping, avoiding them is preferable.

Reimplemented in RecastModel, and SingleModel.

8.77.3.8 int local_eval_concurrency () [virtual]

return derived model asynchronous evaluation concurrency

SingleModels and HierarchSurrModels redefine this virtual function.

Reimplemented in RecastModel, and SingleModel.

8.77.3.9 const String & interface_id () const [virtual]

return the interface identifier

return by reference requires use of dummy objects, but is important to allow use of assign_rep() since this operation must be performed on the original envelope object.

Reimplemented in DataFitSurrModel, NestedModel, RecastModel, and SingleModel.

8.77.3.10 ModelList & subordinate_models (bool *recurse_flag* = true)

return the sub-models in nested and surrogate models

since modelList is built with list insertions (using envelope copies), these models may not be used for model.assign_rep() since this operation must be performed on the original envelope object. They may, however, be used for letter-based operations (including assign_rep() on letter contents such as an interface).

8.77.3.11 void init_communicators (const int & *max_iterator_concurrency*, bool *recurse_flag* = `true`)

configuration in modelPCIterMap

The init_communicators() and derived_init_communicators() functions are stuctured to avoid performing the messageLengths estimation more than once. init_communicators() (not virtual) performs the estimation and then forwards the results to derived_init_communicators (virtual) which uses the data in different contexts.

8.77.3.12 void init_serial ()

modify some default settings to behave properly in serial.

The init_serial() and derived_init_serial() functions are stuctured to separate base class (common) operations from derived class (specialized) operations.

8.77.3.13 void estimate_message_lengths ()

estimate messageLengths for a model

This functionality has been pulled out of init_communicators() and defined separately so that it may be used in those cases when messageLengths is needed but model.init_communicators() is not called, e.g., for the master processor in the self-scheduling of a concurrent iterator strategy.

8.77.3.14 void assign_rep (Model * *model_rep*, bool *ref_count_incr* = `true`)

replaces existing letter with a new one

Similar to the assignment operator, the assign_rep() function decrements referenceCount for the old modelRep and assigns the new modelRep. It is different in that it is used for publishing derived class letters to existing envelopes, as opposed to sharing representations among multiple envelopes (in particular, assign_rep is passed a letter object and operator= is passed an envelope object). Letter assignment supports two models as governed by ref_count_incr:

- ref_count_incr = true (default): the incoming letter belongs to another envelope. In this case, increment the reference count in the normal manner so that deallocation of the letter is handled properly.
- ref_count_incr = false: the incoming letter is instantiated on the fly and has no envelope. This case is modeled after get_model(): a letter is dynamically allocated using new and passed into assign_rep, the letter's reference count is not incremented, and the letter is not remotely deleted (its memory management is passed over to the envelope).

8.77.3.15 int derivative_concurrency () const

return the gradient concurrency for use in parallel configuration logic

This function assumes derivatives with respect to the active continuous variables. Therefore, concurrency with respect to the inactive continuous variables is not captured.

8.77.3.16 Model * get_model (ProblemDescDB & *problem_db*) [private]

Used by the envelope to instantiate the correct letter class.

Used only by the envelope constructor to initialize modelRep to the appropriate derived type, as given by the modelType attribute.

8.77.3.17 int estimate_derivatives (const ShortArray & *map_asv*, const ShortArray & *fd_grad_asv*, const ShortArray & *fd_hess_asv*, const ShortArray & *quasi_hess_asv*, const ActiveSet & *original_set*, const bool *asynch_flag*) [private]

method_source) in the numerical gradient specification.

Estimate derivatives by computing finite difference gradients, finite difference Hessians, and/or quasi-Newton Hessians. The total number of finite difference evaluations is returned for use by synchronize() to track response arrays, and it could be used to improve management of max_function_evaluations within the iterators.

8.77.3.18 void synchronize_derivatives (const Variables & *vars*, const ResponseArray & *fd_responses*, Response & *new_response*, const ShortArray & *fd_grad_asv*, const ShortArray & *fd_hess_asv*, const ShortArray & *quasi_hess_asv*, const ActiveSet & *original_set*) [private]

objects (fd_grad_responses) into a single response (new_response)

Merge an array of fd_responses into a single new_response. This function is used both by synchronous compute_response() for the case of asynchronous estimate_derivatives() and by synchronize() for the case where one or more asynch_compute_response() calls has employed asynchronous estimate_derivatives().

8.77.3.19 void update_response (const Variables & *vars*, Response & *new_response*, const ShortArray & *fd_grad_asv*, const ShortArray & *fd_hess_asv*, const ShortArray & *quasi_hess_asv*, const ActiveSet & *original_set*, Response & *initial_map_response*, const RealMatrix & *new_fn_grads*, const RealMatrixArray & *new_fn_hessians*) [private]

overlay results to update a response object

Overlay the initial_map_response with numerically estimated new_fn_grads and new_fn_hessians to populate new_response as governed by asv vectors. Quasi-Newton secant Hessian updates are also performed here, since this is where the gradient data needed for the updates is first consolidated. Convenience function used by estimate_derivatives() for the synchronous case and by synchronize_derivatives() for the asynchronous case.

8.77.3.20 void update_quasi_hessians (const Variables & *vars*, Response & *new_response*, const ActiveSet & *original_set*) [private]

perform quasi-Newton Hessian updates

quasi-Newton updates are performed for approximating response function Hessians using BFGS or SR1 formulations. These Hessians are supported only for the active continuous variables, and a check is performed on the DVV prior to invoking the function.

8.77.3.21 bool manage_asv (const ShortArray & *asv_in*, ShortArray & *map_asv_out*, ShortArray & *fd_grad_asv_out*, ShortArray & *fd_hess_asv_out*, ShortArray & *quasi_hess_asv_out*) [private]

Coordinates usage of estimate_derivatives() calls based on asv_in.

Splits asv_in total request into map_asv_out, fd_grad_asv_out, fd_hess_asv_out, and quasi_hess_asv_out as governed by the responses specification. If the returned use_est_deriv is true, then these asv outputs are used by estimate_derivatives() for the initial map, finite difference gradient evals, finite difference Hessian evals, and quasi-Hessian updates, respectively. If the returned use_est_deriv is false, then only map_asv_out is used.

The documentation for this class was generated from the following files:

- DakotaModel.H
- DakotaModel.C

8.78 MPIPackBuffer Class Reference

Class for packing MPI message buffers.

Public Member Functions

- MPIPackBuffer (int size_=1024)

  Constructor, which allows the default buffer size to be set.

- ~MPIPackBuffer ()

  Desctructor.

- const char * buf ()

  Returns a pointer to the internal buffer that has been packed.

- int size ()

  The number of bytes of packed data.

- int capacity ()

  the allocated size of Buffer.

- void reset ()

  Resets the buffer index in order to reuse the internal buffer.

- void pack (const int *data, const int num=1)

  Pack one or more **int's**.

- void pack (const u_int *data, const int num=1)

  Pack one or more **unsigned int's**.

- void pack (const long *data, const int num=1)

  Pack one or more **long's**.

- void pack (const u_long *data, const int num=1)

  Pack one or more **unsigned long's**.

- void pack (const short *data, const int num=1)

  Pack one or more **short's**.

- void pack (const u_short *data, const int num=1)

  Pack one or more **unsigned short's**.

- void pack (const char *data, const int num=1)
  Pack one or more **char's**.
- void pack (const u_char *data, const int num=1)
  Pack one or more **unsigned char's**.
- void pack (const double *data, const int num=1)
  Pack one or more **double's**.
- void pack (const float *data, const int num=1)
  Pack one or more **fbat's**.
- void pack (const bool *data, const int num=1)
  Pack one or more **bool's**.
- void pack (const int &data)
  Pack a **int**.
- void pack (const u_int &data)
  Pack a **unsigned int**.
- void pack (const long &data)
  Pack a **long**.
- void pack (const u_long &data)
  Pack a **unsigned long**.
- void pack (const short &data)
  Pack a **short**.
- void pack (const u_short &data)
  Pack a **unsigned short**.
- void pack (const char &data)
  Pack a **char**.
- void pack (const u_char &data)
  Pack a **unsigned char**.
- void pack (const double &data)
  Pack a **double**.
- void pack (const float &data)
  Pack a **fbat**.
- void pack (const bool &data)
  Pack a **bool**.

Protected Member Functions

- void resize (const int newsize)

  Resizes the internal buffer.

Protected Attributes

- char * Buffer

  The internal buffer for packing.

- int Index

  The index into the current buffer.

- int Size

  The total size that has been allocated for the buffer.

8.78.1 Detailed Description

Class for packing MPI message buffers.

A class that provides a facility for packing message buffers using the MPI_Pack facility. The `MPIPackBuffer` class dynamically resizes the internal buffer to contain enough memory to pack the entire object. When deleted, the `MPIPackBuffer` object deletes this internal buffer. This class is based on the Dakota_Version_3_0 version of utilib::PackBuffer from utilib/src/io/PackBuf.[cpp,h]

The documentation for this class was generated from the following files:

- MPIPackBuffer.H
- MPIPackBuffer.C

8.79 MPIUnpackBuffer Class Reference

Class for unpacking MPI message buffers.

Public Member Functions

- void setup (char *buf_, int size_, bool flag_=false)

  Method that does the setup for the constructors.

- MPIUnpackBuffer ()

  Default constructor.

- MPIUnpackBuffer (int size_)

  Constructor that specifies the size of the buffer.

- MPIUnpackBuffer (char *buf_, int size_, bool flag_=false)

  Constructor that sets the internal buffer to the given array.

- ~MPIUnpackBuffer ()

  Destructor.

- void resize (const int newsize)

  Resizes the internal buffer.

- const char * buf ()

  Returns a pointer to the internal buffer.

- int size ()

  Returns the length of the buffer.

- int curr ()

  Returns the number of bytes that have been unpacked from the buffer.

- void reset ()

  Resets the index of the internal buffer.

- void unpack (int *data, const int num=1)

  Unpack one or more **int's**.

- void unpack (u_int *data, const int num=1)

  Unpack one or more **unsigned int's**.

- void unpack (long *data, const int num=1)

  Unpack one or more **long's**.

- void unpack (u_long *data, const int num=1)

  Unpack one or more **unsigned long's**.

- void unpack (short *data, const int num=1)

  Unpack one or more **short's**.

- void unpack (u_short *data, const int num=1)

  Unpack one or more **unsigned short's**.

- void unpack (char *data, const int num=1)

  Unpack one or more **char's**.

- void unpack (u_char *data, const int num=1)

  Unpack one or more **unsigned char's**.

- void unpack (double *data, const int num=1)

  Unpack one or more **double's**.

- void unpack (float *data, const int num=1)

  Unpack one or more **fbat's**.

- void unpack (bool *data, const int num=1)

  Unpack one or more **bool's**.

- void unpack (int &data)

  Unpack a **int**.

- void unpack (u_int &data)

  Unpack a **unsigned int**.

- void unpack (long &data)

  Unpack a **long**.

- void unpack (u_long &data)

  Unpack a **unsigned long**.

- void unpack (short &data)

  Unpack a **short**.

- void unpack (u_short &data)

  Unpack a **unsigned short**.

- void unpack (char &data)

Unpack a **char**.

- void unpack (u_char &data)

  Unpack a **unsigned char**.

- void unpack (double &data)

  Unpack a **double**.

- void unpack (float &data)

  Unpack a **fbat**.

- void unpack (bool &data)

  Unpack a **bool**.

Protected Attributes

- char * Buffer

  The internal buffer for unpacking.

- int Index

  The index into the current buffer.

- int Size

  The total size that has been allocated for the buffer.

- bool ownFlag

  If TRUE, *then this class owns the internal buffer.*

8.79.1 Detailed Description

Class for unpacking MPI message buffers.

A class that provides a facility for unpacking message buffers using the MPI_Unpack facility. This class is based on the Dakota_Version_3_0 version of utilib::UnPackBuffer from utilib/src/io/PackBuf.[cpp,h]

The documentation for this class was generated from the following files:

- MPIPackBuffer.H
- MPIPackBuffer.C

8.80 NCSUOptimizer Class Reference

Wrapper class for the NCSU DIRECT optimization library.

Inheritance diagram for NCSUOptimizer::

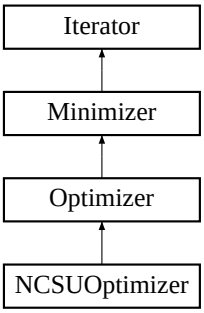

Public Member Functions

- NCSUOptimizer (Model &model)

  standard constructor

- NCSUOptimizer (Model &model, const int &max_iter, const int &max_eval)

  alternate constructor for instantiations "on the fly"

- NCSUOptimizer (NoDBBaseConstructor, Model &model)

  alternate constructor for Iterator instantiations by name

- NCSUOptimizer (const RealVector &var_l_bnds, const RealVector &var_u_bnds, const int &max_iter, const int &max_eval, double(∗user_obj_eval)(const RealVector &x))

  alternate constructor for instantiations "on the fly"

- ∼NCSUOptimizer ()

  destructor

- void find_optimum ()

  Redefines the run virtual function for the optimizer branch.

Private Member Functions

- void initialize ()

  shared code among constructors

Static Private Member Functions

- static int objective_eval (int ∗n, double c[ ], double l[ ], double u[ ], int point[ ], int ∗maxI, int ∗start, int ∗maxfunc, double fvec[ ], int iidata[ ], int ∗iisize, double ddata[ ], int ∗idsize, char cdata[ ], int ∗icsize)

  DIRECT src (DIRbatch.f).

Private Attributes

- short setUpType

  GaussProcApproximation currently uses the user_functions mode.

- Real minBoxSize

  holds the minimum boxsize

- Real volBoxSize

  hold the minimum volume boxsize

- Real solutionAccuracy

  holds the solution tolerance accuracy

- RealVector lowerBounds

  holds variable lower bounds passed in for "user_functions" mode.

- RealVector upperBounds

  holds variable upper bounds passed in for "user_functions" mode.

- double(∗ userObjectiveEval)(const RealVector &x)

  "user_functions" mode.

Static Private Attributes

- static NCSUOptimizer ∗ ncsudirectInstance

  functions in order to avoid the need for static data

8.80.1 Detailed Description

Wrapper class for the NCSU DIRECT optimization library.

The NCSUOptimizer class provides a wrapper for a Fortran 77 implementation of the DIRECT algorithm developed at North Carolina State University. It uses a function pointer approach for which passed functions must be either global functions or static member functions. Any attribute used within static member functions must be either local to that function or accessed through a static pointer.

The user input mappings are as follows:

8.80.2 Constructor & Destructor Documentation

8.80.2.1 NCSUOptimizer (Model & *model*)

standard constructor

This is the standard constructor with method specification support.

8.80.2.2 NCSUOptimizer (Model & *model*, const int & *max_iter*, const int & *max_eval*)

alternate constructor for instantiations "on the fly"

This is an alternate constructor for instantiations on the fly using a Model but no ProblemDescDB.

8.80.2.3 NCSUOptimizer (NoDBBaseConstructor, Model & *model*)

alternate constructor for Iterator instantiations by name

This is an alternate constructor for Iterator instantiations by name using a Model but no ProblemDescDB.

8.80.2.4 NCSUOptimizer (const RealVector & *var_l_bnds*, const RealVector & *var_u_bnds*, const int & *max_iter*, const int & *max_eval*, double(∗)(const RealVector &x) *user_obj_eval*)

alternate constructor for instantiations "on the fly"

This is an alternate constructor for performing an optimization using the passed in objective function pointer.

The documentation for this class was generated from the following files:

- NCSUOptimizer.H
- NCSUOptimizer.C

8.81 NestedModel Class Reference

execution within every evaluation of the model.

Inheritance diagram for NestedModel::

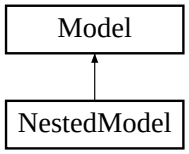

Public Member Functions

- NestedModel (ProblemDescDB &problem_db)

  constructor

- ~NestedModel ()

  destructor

Protected Member Functions

- void derived_compute_response (const ActiveSet &set)

  portion of compute_response() specific to NestedModel

- void derived_asynch_compute_response (const ActiveSet &set)

  portion of asynch_compute_response() specific to NestedModel

- Iterator & subordinate_iterator ()

  return subIterator

- void derived_subordinate_models (ModelList &ml, bool recurse_flag)

  return subModel

- Interface & interface ()

  return optionalInterface

- void surrogate_bypass (bool bypass_flag)

  to the subModel for any lower-level surrogates.

- void component_parallel_mode (short mode)

optionalInterface and subModel

- bool derived_master_overload () const

  evaluation (forwarded to optionalInterface)

- void derived_init_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  set up optionalInterface and subModel for parallel operations

- void derived_init_serial ()

  set up optionalInterface and subModel for serial operations.

- void derived_set_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  set active parallel configuration within subModel

- void derived_free_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  (forwarded to optionalInterface and subModel)

- void serve ()

  stop_servers().

- void stop_servers ()

  optionalInterface when iteration on the NestedModel is complete.

- const String & interface_id () const

  return the optionalInterface identifier

- int evaluation_id () const

  Return the current evaluation id for the NestedModel.

- void set_evaluation_reference ()

  (request forwarded to optionalInterface and subModel)

- void fine_grained_evaluation_counters ()

  and subModel

- void print_evaluation_summary (ostream &s, bool minimal_header=false, bool relative_count=true) const

  (request forwarded to optionalInterface and subModel)

Private Member Functions

- void set_mapping (const ActiveSet &mapped_set, ActiveSet &interface_set, bool &opt_interface_map, ActiveSet &sub_iterator_set, bool &sub_iterator_map)

  total model evaluation requirements (mapped_set)

- void response_mapping (const Response &interface_response, const Response &sub_iterator_response, Response &mapped_response)

  mappings to create the total response for the model

- void update_sub_model ()

  update subModel with current variable values/bounds/labels

Private Attributes

- int nestedModelEvals

  derived_asynch_compute_response()

- Iterator subIterator

  the sub-iterator that is executed on every evaluation of this model

- Model subModel

  the sub-model used in sub-iterator evaluations

- size_t numSubIterFns

  number of sub-iterator response functions prior to mapping

- size_t numSubIterMappedIneqCon

  sub-iteration results

- size_t numSubIterMappedEqCon

  sub-iteration results

- Interface optionalInterface

  the total model response

- String optInterfacePointer

  the optional interface pointer from the nested model specification

- Response optInterfaceResponse

  the response object resulting from optional interface evaluations

- size_t numOptInterfPrimary

  functions) resulting from optional interface evaluations

- size_t numOptInterfIneqCon

  interface evaluations

- size_t numOptInterfEqCon

  interface evaluations

- SizetArray primaryACVarMapIndices
  replace the subModel variable values.
- SizetArray primaryADVarMapIndices
  insertions replace the subModel variable values.
- ShortArray secondaryACVarMapTargets
  variables) within all continuous subModel variables.
- ShortArray secondaryADVarMapTargets
  design/state variables) within all discrete subModel variables.
- BoolDeque extraCVarsData
  labels, one for each active continuous variable in currentVariables
- BoolDeque extraDVarsData
  labels, one for each active discrete variable in currentVariables
- RealMatrix primaryRespCoeffs
  generic response terms.
- RealMatrix secondaryRespCoeffs
  contributions to the top-level inequality and equality constraints.

8.81.1 Detailed Description

execution within every evaluation of the model.

The NestedModel class nests a sub-iterator execution within every model evaluation. This capability is most commonly used for optimization under uncertainty, in which a nondeterministic iterator is executed on every optimization function evaluation. The NestedModel also contains an optional interface, for portions of the model evaluation which are independent from the sub-iterator, and a set of mappings for combining sub-iterator and optional interface data into a top level response for the model.

8.81.2 Member Function Documentation

8.81.2.1 void derived_compute_response (const ActiveSet & *set*) `[protected, virtual]`

portion of compute_response() specific to NestedModel

Update subModel's inactive variables with active variables from currentVariables, compute the optional interface and sub-iterator responses, and map these to the total model response.

Reimplemented from Model.

8.81.2.2 void derived_asynch_compute_response (const ActiveSet & *set*) [protected, virtual]

portion of asynch_compute_response() specific to NestedModel

Not currently supported by NestedModels (need to add concurrent iterator support). As a result, derived_synchronize() and derived_synchronize_nowait() are inactive as well).

Reimplemented from Model.

8.81.2.3 bool derived_master_overload () const [inline, protected, virtual]

evaluation (forwarded to optionalInterface)

Derived master overload for subModel is handled separately in subModel.compute_response() within subIterator.run().

Reimplemented from Model.

8.81.2.4 void derived_init_communicators (const int & *max_iterator_concurrency*, bool *recurse_flag* = true) [inline, protected, virtual]

set up optionalInterface and subModel for parallel operations

Asynchronous flags need to be initialized for the subModel. In addition, max_iterator_concurrency is the outer level iterator concurrency, not the subIterator concurrency that subModel will see, and recomputing the message_lengths on the subModel is probably not a bad idea either. Therefore, recompute everything on subModel using init_communicators().

Reimplemented from Model.

8.81.2.5 int evaluation_id () const [inline, protected, virtual]

Return the current evaluation id for the NestedModel.

return the top level nested evaluation count. To get the lower level eval count, the subModel must be explicitly queried. This is consistent with the eval counter definitions in surrogate models.

Reimplemented from Model.

8.81.2.6 void response_mapping (const Response & *opt_interface_response*, const Response & *sub_iterator_response*, Response & *mapped_response*) [private]

mappings to create the total response for the model

In the OUU case,

```
optionalInterface fns = {f}, {g} (deterministic primary functions, constraints)
subIterator fns       = {S}      (UQ response statistics)

Problem formulation for mapped functions:
                  minimize    {f} + [W]{S}
                  subject to  {g_l} <= {g}    <= {g_u}
```

```
{a_l} <= [A]{S} <= {a_u}
{g}    == {g_t}
[A]{S} == {a_t}
```

where [W] is the primary_mapping_matrix user input (primaryRespCoeffs class attribute), [A] is the secondary_-mapping_matrix user input (secondaryRespCoeffs class attribute), {{g_l},{a_l}} are the top level inequality constraint lower bounds, {{g_u},{a_u}} are the top level inequality constraint upper bounds, and {{g_t},{a_t}} are the top level equality constraint targets.

NOTE: optionalInterface/subIterator primary fns (obj/lsq/generic fns) overlap but optionalInterface/subIterator secondary fns (ineq/eq constraints) do not. The [W] matrix can be specified so as to allow

- some purely deterministic primary functions and some combined: [W] filled and [W].num_rows() < {f}.length() [combined first] *or* [W].num_rows() == {f}.length() and [W] contains rows of zeros [combined last]
- some combined and some purely stochastic primary functions: [W] filled and [W].num_rows() > {f}.length()
- separate deterministic and stochastic primary functions: [W].num_rows() > {f}.length() and [W] contains {f}.length() rows of zeros.

If the need arises, could change constraint definition to allow overlap as well: {g_l} <= {g} + [A]{S} <= {g_u} with [A] usage the same as for [W] above.

In the UOO case, things are simpler, just compute statistics of each optimization response function: [W] = [I], {f}/{g}/[A] are empty.

8.81.3 Member Data Documentation

8.81.3.1 Model subModel [private]

the sub-model used in sub-iterator evaluations

There are no restrictions on subModel, so arbitrary nestings are possible. This is commonly used to support surrogate-based optimization under uncertainty by having NestedModels contain SurrogateModels and vice versa.

The documentation for this class was generated from the following files:

- NestedModel.H
- NestedModel.C

8.82 NIDRProblemDescDB Class Reference

The derived input file database utilizing the new IDR parser.

Inheritance diagram for NIDRProblemDescDB::

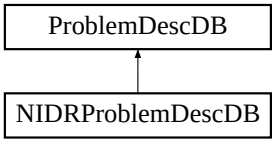

Public Member Functions

- NIDRProblemDescDB (ParallelLibrary &parallel_lib, const char *parser)

  constructor

- ~NIDRProblemDescDB ()

  destructor

- void derived_manage_inputs (const char *dakota_input_file)

  database using NIDR.

- **KWH** (iface_Rlit)
- **KWH** (iface_false)
- **KWH** (iface_ilit)
- **KWH** (iface_int)
- **KWH** (iface_lit)
- **KWH** (iface_start)
- **KWH** (iface_stop)
- **KWH** (iface_str)
- **KWH** (iface_str2D)
- **KWH** (iface_strL)
- **KWH** (iface_true)
- **KWH** (method_Ii)
- **KWH** (method_Real)
- **KWH** (method_Real01)
- **KWH** (method_RealL)
- **KWH** (method_RealLlit)
- **KWH** (method_Realp)
- **KWH** (method_Realz)
- **KWH** (method_Ri)
- **KWH** (method_coliny_ea)

- **KWH** (method_false)
- **KWH** (method_ilit2)
- **KWH** (method_ilit2p)
- **KWH** (method_int)
- **KWH** (method_intL)
- **KWH** (method_intLa)
- **KWH** (method_lit)
- **KWH** (method_lit2)
- **KWH** (method_litc)
- **KWH** (method_liti)
- **KWH** (method_litp)
- **KWH** (method_litpp)
- **KWH** (method_litpp_final)
- **KWH** (method_litr)
- **KWH** (method_litz)
- **KWH** (method_meritFn)
- **KWH** (method_moga_begin)
- **KWH** (method_moga_final)
- **KWH** (method_nnint)
- **KWH** (method_nnintz)
- **KWH** (method_num_resplevs)
- **KWH** (method_pint)
- **KWH** (method_pintz)
- **KWH** (method_resplevs)
- **KWH** (method_resplevs01)
- **KWH** (method_shint)
- **KWH** (method_slit)
- **KWH** (method_slit2)
- **KWH** (method_soga_begin)
- **KWH** (method_soga_final)
- **KWH** (method_start)
- **KWH** (method_stop)
- **KWH** (method_str)
- **KWH** (method_strL)
- **KWH** (method_true)
- **KWH** (method_tr_final)
- **KWH** (method_ushint)
- **KWH** (method_ushintL)
- **KWH** (model_Real)
- **KWH** (model_RealL)
- **KWH** (model_intset)
- **KWH** (model_lit)
- **KWH** (model_order)
- **KWH** (model_shint)
- **KWH** (model_slit2)
- **KWH** (model_start)

- **KWH** (model_stop)
- **KWH** (model_str)
- **KWH** (model_strL)
- **KWH** (model_true)
- **KWH** (resp_RealL)
- **KWH** (resp_intL)
- **KWH** (resp_lit)
- **KWH** (resp_nnintz)
- **KWH** (resp_start)
- **KWH** (resp_stop)
- **KWH** (resp_str)
- **KWH** (resp_strL)
- **KWH** (strategy_Real)
- **KWH** (strategy_RealL)
- **KWH** (strategy_int)
- **KWH** (strategy_lit)
- **KWH** (strategy_slit)
- **KWH** (strategy_str)
- **KWH** (strategy_strL)
- **KWH** (strategy_true)
- **KWH** (strategy_start)
- **KWH** (var_RealL)
- **KWH** (var_RealLb)
- **KWH** (var_RealLd)
- **KWH** (var_RealUb)
- **KWH** (var_hbp)
- **KWH** (var_intL)
- **KWH** (var_intz)
- **KWH** (var_nbp)
- **KWH** (var_nhbp)
- **KWH** (var_start)
- **KWH** (var_stop)
- **KWH** (var_str)
- **KWH** (var_strL)
- **KWH** (var_ulbl)

Static Public Member Functions

- static void **Var_boundchk** (DataVariablesRep ∗)
- static void **Var_boundchku** (DataVariablesRep ∗)
- static void **Var_iboundchk** (DataVariablesRep ∗)
- static void **botch** (const char ∗fmt,...)
- static void **post_process_response_data** (DataResponses ∗)
- static void **post_process_variables** (List< DataVariables > ∗)
- static void **squawk** (const char ∗fmt,...)
- static void **warn** (const char ∗fmt,...)

Public Attributes

- const char * **parser**

Static Public Attributes

- static int **nerr**

Static Private Member Functions

- static void **var_stop1** (void *)

Private Attributes

- List< void * > **VIL**

Static Private Attributes

- static NIDRProblemDescDB * pDDBInstance
  functions in order to avoid the need for static data

8.82.1 Detailed Description

The derived input file database utilizing the new IDR parser.

The NIDRProblemDescDB class is derived from ProblemDescDB for use by the NIDR parser in processing DAKOTA input file data. For information on modifying the NIDR input parsing procedures, refer to Dakota/docs/Dev_Spec_Change.dox. For more on the parsing technology, see "Specifying and Reading Program Input with NIDR" by David M. Gay (report SAND2008-2261P, which is available in PDF form as `http://www.sandia.gov/~dmgay/nidr08.pdf`). Source for the routines declared herein is NIDRProblemDescDB.C, in which most routines are so short that a description seems unnecessary.

8.82.2 Member Function Documentation

8.82.2.1 void derived_manage_inputs (const char * *dakota_input_file*) `[virtual]`

database using NIDR.

Parse the input file using the Input Deck Reader (IDR) parsing system. IDR populates the IDRProblemDescDB object with the input file data.

Reimplemented from ProblemDescDB.

The documentation for this class was generated from the following files:

- NIDRProblemDescDB.H
- NIDRProblemDescDB.C

8.83 NL2Res Struct Reference

Auxiliary information passed to calcr and calcj via ur.

Public Attributes

- Real * r

  residual r = r(x)

- Real * J

  Jacobian J = J(x).

- Real * x

  corresponding parameter vector

- int nf

  function invocation count for r(x)

8.83.1 Detailed Description

Auxiliary information passed to calcr and calcj via ur.

The documentation for this struct was generated from the following file:

- NL2SOLLeastSq.C

8.84 NL2SOLLeastSq Class Reference

Wrapper class for the NL2SOL nonlinear least squares library.

Inheritance diagram for NL2SOLLeastSq::

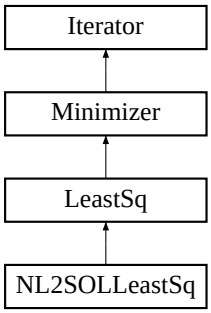

Public Member Functions

- NL2SOLLeastSq (Model &model)

  standard constructor

- NL2SOLLeastSq (NoDBBaseConstructor, Model &model)

  alternate constructor

- ~NL2SOLLeastSq ()

  destructor

- void minimize_residuals ()

  for the least squares branch.

Static Private Member Functions

- static void calcr (int *np, int *pp, Real *x, int *nfp, Real *r, int *ui, void *ur, Vf vf)

  evaluator function for residual vector

- static void calcj (int *np, int *pp, Real *x, int *nfp, Real *J, int *ui, void *ur, Vf vf)

  evaluator function for residual Jacobian

Private Attributes

- int auxprt

  auxilary printing bits (see Dakota Ref Manual): sum of 1 = x0prt (print initial guess) 2 = solprt (print final solution) 4 = statpr (print solution statistics) 8 = parprt (print nondefault parameters) 16 = dradpr (print bound constraint drops/adds) debug/verbose/normal use default = 31 (everything), quiet uses 3, silent uses 0.

- int outlev

  frequency of output summary lines in number of iterations (debug/verbose/normal/quiet use default = 1, silent uses 0)

- Real dltfdj

  finite-diff step size for computing Jacobian approximation (`fd_gradient_step_size`*)*

- Real delta0

  finite-diff step size for gradient differences for H (a component of some covariance approximations, if desired) (`fd_hessian_step_size`*)*

- Real dltfdc

  finite-diff step size for function differences for H (`fd_hessian_step_size`*)*

- int mxfcal

  function-evaluation limit (`max_function_evaluations`*)*

- int mxiter

  iteration limit (`max_iterations`*)*

- Real rfctol

  relative fn convergence tolerance (`convergence_tolerance`*)*

- Real afctol

  absolute fn convergence tolerance (`absolute_conv_tol`*)*

- Real xctol

  x-convergence tolerance (`x_conv_tol`*)*

- Real sctol

  singular convergence tolerance (`singular_conv_tol`*)*

- Real lmaxs

  radius for singular-convergence test (`singular_radius`*)*

- Real xftol

  false-convergence tolerance (`false_conv_tol`*)*

- int covreq

kind of covariance required (`covariance`*): 1 or -1 ==> sigma^2 H^-1 J^T J H^-1 2 or -2 ==> sigma^2 H^-1 3 or -3 ==> sigma^2 (J^T J)^-1 1 or 2 ==> use gradient diffs to estimate H -1 or -2 ==> use function diffs to estimate H default = 0 (no covariance)*

- int rdreq

  whether to compute the regression diagnostic vector (`regression_diagnostics`*)*

- Real fprec

  expected response function precision (`function_precision`*)*

- Real lmax0

  initial trust-region radius (`initial_trust_radius`*)*

Static Private Attributes

- static NL2SOLLeastSq ∗ nl2solInstance

  evaluator functions

8.84.1 Detailed Description

Wrapper class for the NL2SOL nonlinear least squares library.

The NL2SOLLeastSq class provides a wrapper for NL2SOL (TOMS Algorithm 573), in the updated form of Port Library routines dn[fg][b] from Bell Labs; see `http://www.netlib.org/port/readme.` The Fortran from Port has been turned into C by f2c. NL2SOL uses a function pointer approach for which passed functions must be either global functions or static member functions.

The documentation for this class was generated from the following files:

- NL2SOLLeastSq.H
- NL2SOLLeastSq.C

8.85 NLPQLPOptimizer Class Reference

Wrapper class for the NLPQLP optimization library, Version 2.0.

Inheritance diagram for NLPQLPOptimizer::

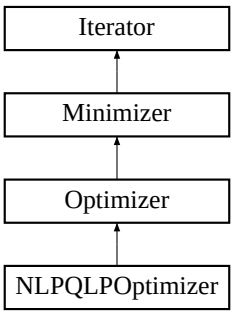

Public Member Functions

- NLPQLPOptimizer (Model &model)

  standard constructor

- NLPQLPOptimizer (NoDBBaseConstructor, Model &model)

  alternate constructor

- ~NLPQLPOptimizer ()

  destructor

- void find_optimum ()

  Redefines the run virtual function for the optimizer branch.

Protected Member Functions

- void derived_pre_run ()

  performs run-time set up

Private Member Functions

- void initialize ()

  Shared constructor code.

- void allocate_workspace ()

  Allocates workspace for the optimizer.

- void deallocate_workspace ()

  Releases workspace memory.

- void allocate_constraints ()

  Allocates constraint mappings.

Private Attributes

- int L

  the serial version by setting L=1.

- int numEqConstraints

  numEqConstraints : Number of equality constraints.

- int MMAX

  MMAX must be at least one and greater or equal to M.

- int N

  N : Number of optimization variables.

- int NMAX

  than N.

- int MNN2

  MNN2 : Must be equal to M+N+N+2.

- double * X

  function values should be computed simultaneously.

- double * F

  values to be computed from L iterates stored in X.

- double * G

  function values to be computed from L iterates stored in X.

- double * DF

  of F to compute DF.

- double * DG

  has to be equal to MMAX.

- double ∗ U

  inequality constraints should be nonnegative.

- double ∗ C

  to NMAX.

- double ∗ D

  array D.

- double ACC

  than the accuracy by which gradients are computed.

- double ACCQP

  by NLPQLP and subsequently multiplied by 1.0D+4.

- double STPMIN

  by STPMIN∗∗(1/L-1). If STPMIN<=0, then STPMIN=ACC is used.

- int MAXFUN

  than 50.

- int MAXIT

  gradients (e.g. 100).

- int MAX_NM

  MAX_NM=0, monotone line search is performed.

- double TOL_NM

  non-negative (e.g. 0.1).

- int IPRINT

  values are displayed during the line search.

- int MODE

  function in C and D in form of an LDL decomposition.

- int IOUT

  write-statements start with 'WRITE(IOUT,... '.

- int IFAIL

  constraint.

- double ∗ WA

  WA(LWA) : WA is a real working array of length LWA.

- int LWA

LWA : LWA value extracted from NLPQLP20.f.

- int * KWA

  KWA(LKWA) : The user has to provide working space for an integer array.

- int LKWA

  LKWA : LKWA should be at least N+10.

- int * ACTIVE

  ACTIVE(J)=.TRUE., J=1,...,M.

- int LACTIVE

  *least 2*M+10.*

- int LQL

  contains only an upper triangular factor.

- int numNlpqlConstr

  total number of constraints seen by NLPQL

- SizetList nonlinIneqConMappingIndices

  constraints used in computing the corresponding NLPQL constraints.

- RealList nonlinIneqConMappingMultipliers

  constraints to the corresponding NLPQL constraints.

- RealList nonlinIneqConMappingOffsets

  constraints to the corresponding NLPQL constraints.

- SizetList linIneqConMappingIndices

  constraints used in computing the corresponding NLPQL constraints.

- RealList linIneqConMappingMultipliers

  constraints to the corresponding NLPQL constraints.

- RealList linIneqConMappingOffsets

  constraints to the corresponding NLPQL constraints.

8.85.1 Detailed Description

Wrapper class for the NLPQLP optimization library, Version 2.0.

****

AN IMPLEMENTATION OF A SEQUENTIAL QUADRATIC PROGRAMMING METHOD FOR SOLVING NONLINEAR OPTIMIZATION PROBLEMS BY DISTRIBUTED COMPUTING AND NON-MONOTONE LINE SEARCH

This subroutine solves the general nonlinear programming problem

minimize F(X) subject to G(J,X) = 0 , J=1,...,ME G(J,X) >= 0 , J=ME+1,...,M XL <= X <= XU

and is an extension of the code NLPQLD. NLPQLP is specifically tuned to run under distributed systems. A new input parameter L is introduced for the number of parallel computers, that is the number of function calls to be executed simultaneously. In case of L=1, NLPQLP is identical to NLPQLD. Otherwise the line search is modified to allow L parallel function calls in advance. Moreover the user has the opportunity to used distributed function calls for evaluating gradients.

The algorithm is a modification of the method of Wilson, Han, and Powell. In each iteration step, a linearly constrained quadratic programming problem is formulated by approximating the Lagrangian function quadratically and by linearizing the constraints. Subsequently, a one-dimensional line search is performed with respect to an augmented Lagrangian merit function to obtain a new iterate. Also the modified line search algorithm guarantees convergence under the same assumptions as before.

For the new version, a non-monotone line search is implemented which allows to increase the merit function in case of instabilities, for example caused by round-off errors, errors in gradient approximations, etc.

The subroutine contains the option to predetermine initial guesses for the multipliers or the Hessian of the Lagrangian function and is called by reverse communication.

The documentation for this class was generated from the following files:

- NLPQLPOptimizer.H
- NLPQLPOptimizer.C

8.86 NLSSOLLeastSq Class Reference

Wrapper class for the NLSSOL nonlinear least squares library.

Inheritance diagram for NLSSOLLeastSq::

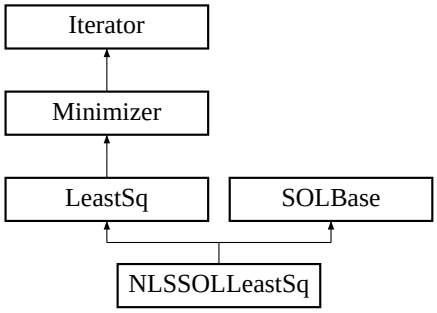

Public Member Functions

- NLSSOLLeastSq (Model &model)
  standard constructor
- NLSSOLLeastSq (NoDBBaseConstructor, Model &model)
  alternate constructor
- ~NLSSOLLeastSq ()
  destructor
- void minimize_residuals ()
  for the least squares branch.

Static Private Member Functions

- static void least_sq_eval (int &mode, int &m, int &n, int &nrowfj, double *x, double *f, double *gradf, int &nstate)
  least squares terms (passed by function pointer to NLSSOL).

Static Private Attributes

- static NLSSOLLeastSq * nlssolInstance
  functions in order to avoid the need for static data

8.86.1 Detailed Description

Wrapper class for the NLSSOL nonlinear least squares library.

The NLSSOLLeastSq class provides a wrapper for NLSSOL, a Fortran 77 sequential quadratic programming library from Stanford University marketed by Stanford Business Associates. It uses a function pointer approach for which passed functions must be either global functions or static member functions. Any nonstatic attribute used within static member functions must be either local to that function or accessed through a static pointer.

The user input mappings are as follows: `max_function_evaluations` is implemented directly in NLSSOLLeastSq's evaluator functions since there is no NLSSOL parameter equivalent, and `max_iterations`, `convergence_tolerance`, `output` verbosity, `verify_level`, `function_precision`, and `linesearch_tolerance` are mapped into NLSSOL's "Major Iteration Limit", "Optimality Tolerance", "Major Print Level" (`verbose:` Major Print Level = 20; `quiet:` Major Print Level = 10), "Verify Level", "Function Precision", and "Linesearch Tolerance" parameters, respectively, using NLSSOL's npoptn() subroutine (as wrapped by npoptn2() from the npoptn_wrapper.f file). Refer to [Gill, P.E., Murray, W., Saunders, M.A., and Wright, M.H., 1986] for information on NLSSOL's optional input parameters and the npoptn() subroutine.

8.86.2 Constructor & Destructor Documentation

8.86.2.1 NLSSOLLeastSq (Model & *model*)

standard constructor

This is the primary constructor. It accepts a Model reference.

8.86.2.2 NLSSOLLeastSq (NoDBBaseConstructor, Model & *model*)

alternate constructor

This is an alternate constructor which accepts a Model but does not have a supporting method specification from the ProblemDescDB.

The documentation for this class was generated from the following files:

- NLSSOLLeastSq.H
- NLSSOLLeastSq.C

8.87 NoDBBaseConstructor Struct Reference

Dummy struct for overloading constructors used in on-the-fly instantiations.

Public Member Functions

- NoDBBaseConstructor (int=0)

  C++ structs can have constructors.

8.87.1 Detailed Description

Dummy struct for overloading constructors used in on-the-fly instantiations.

NoDBBaseConstructor is used to overload the constructor used for on-the-fly instantiations in which ProblemDescDB queries cannot be used. Putting this struct here avoids circular dependencies.

The documentation for this struct was generated from the following file:

- global_defs.h

8.88 NonD Class Reference

Base class for all nondetermistic iterators (the DAKOTA/UQ branch).

Inheritance diagram for NonD::

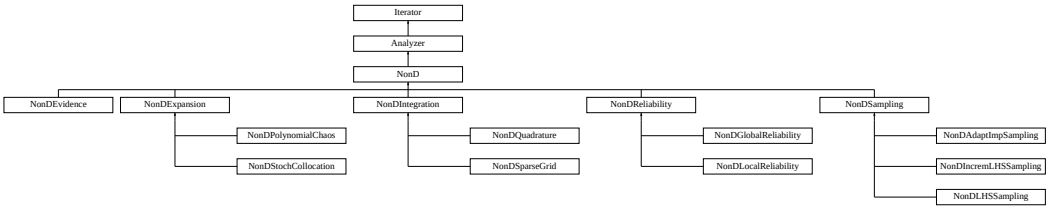

Public Member Functions

- void initialize_random_variables ()

  initialize natafTransform based on distribution data from iteratedModel

- void initialize_random_variables (const Pecos::ProbabilityTransformation &transform)

  initialize natafTransform based on incoming data

- void requested_levels (const RealVectorArray &req_resp_levels, const RealVectorArray &req_prob_-levels, const RealVectorArray &req_rel_levels, const RealVectorArray &req_gen_rel_levels, short resp_-lev_target, bool cdf_flag)

  combination with alternate ctors)

- void moments (const RealVector &means, const RealVector &std_devs)

  set meanStats and stdDevStats

- void distribution_parameter_derivatives (bool dist_param_derivs)

  set distParamDerivs

Protected Member Functions

- NonD (Model &model)

  constructor

- NonD (NoDBBaseConstructor, Model &model)

  alternate constructor for sample generation and evaluation "on the fly"

- NonD (NoDBBaseConstructor, const RealVector &lower_bnds, const RealVector &upper_bnds)

alternate constructor for sample generation "on the fly"

- ~NonD ()
  destructor
- void derived_pre_run ()
  portions of pre_run specific to derived iterators
- void run ()
  run the iterator; portion of run_iterator()
- void derived_post_run ()
  portions of post_run specific to derived iterators
- const Response & response_results () const
  return the final statistics from the nondeterministic iteration
- void response_results_active_set (const ActiveSet &set)
  set the active set within finalStatistics
- virtual void quantify_uncertainty ()=0
  distributions into response statistics
- virtual void initialize_final_statistics ()
  initializes finalStatistics for storing NonD final results
- void initialize_random_variable_types ()
  initializes ranVarTypesX and ranVarTypesU within natafTransform
- void initialize_random_variable_parameters ()
  ranVarUpperBndsX, and ranVarAddtlParamsX within natafTransform
- void trans_U_to_X (const RealVector &u_rv, RealVector &x_rv)
  for DAKOTA data types
- void trans_X_to_U (const RealVector &x_rv, RealVector &u_rv)
  for DAKOTA data types

Static Protected Member Functions

- static void vars_u_to_x_mapping (const Variables &u_vars, Variables &x_vars)
  from NonD Iterators to x-space variables for Model evaluations.
- static void set_u_to_x_mapping (const ActiveSet &u_set, ActiveSet &x_set)
  from NonD Iterators to x-space ActiveSets for Model evaluations.

- static void resp_x_to_u_mapping (const Variables &x_vars, const Variables &u_vars, const Response &x_-response, Response &u_response)

  Model evaluations to u-space responses for return to NonD Iterators.

Protected Attributes

- NonD * prevNondInstance

  pointer containing previous value of nondInstance

- bool extendedUSpace

  std uniforms, std exponentials, std betas, and std gammas.

- Pecos::ProbabilityTransformation natafTransform

  data for performing transformations from X -> Z -> U and back.

- size_t numDesignVars

  distinct from numUniformVars)

- size_t numStateVars

  distinct from numUniformVars)

- size_t numNormalVars

  number of normal uncertain variables (native space)

- size_t numLognormalVars

  number of lognormal uncertain variables (native space)

- size_t numUniformVars

  number of uniform uncertain variables (native space)

- size_t numLoguniformVars

  number of loguniform uncertain variables (native space)

- size_t numTriangularVars

  number of triangular uncertain variables (native space)

- size_t numExponentialVars

  number of exponential uncertain variables (native space)

- size_t numBetaVars

  number of beta uncertain variables (native space)

- size_t numGammaVars

  number of gamma uncertain variables (native space)

- size_t numGumbelVars

  number of gumbel uncertain variables (native space)

- size_t numFrechetVars

  number of frechet uncertain variables (native space)

- size_t numWeibullVars

  number of weibull uncertain variables (native space)

- size_t numHistogramVars

  number of histogram uncertain variables (native space)

- size_t numIntervalVars

  number of interval uncertain variables (native space)

- size_t numUncertainVars

  total number of uncertain variables (native space)

- size_t numResponseFunctions

  number of response functions

- RealVector meanStats

  means of response functions (calculated in compute_statistics())

- RealVector stdDevStats

  std deviations of response functions (calculated in compute_statistics())

- RealVectorArray requestedRespLevels

  requested response levels for all response functions

- RealVectorArray computedProbLevels

  from requestedRespLevels

- RealVectorArray computedRelLevels

  from requestedRespLevels

- RealVectorArray computedGenRelLevels

  resulting from requestedRespLevels

- short respLevelTarget

  or z->beta∗ (GEN_RELIABILITIES)

- RealVectorArray requestedProbLevels

  requested probability levels for all response functions

- RealVectorArray requestedRelLevels
  requested reliability levels for all response functions
- RealVectorArray requestedGenRelLevels
  requested generalized reliability levels for all response functions
- RealVectorArray computedRespLevels
  requestedProbLevels, requestedRelLevels, or requestedGenRelLevels
- size_t totalLevelRequests
  requestedProbLevels, and requestedRelLevels
- bool cdfFlag
  cumulative/CDF (true) or complementary/CCDF (false)
- Response finalStatistics
  response means, standard deviations, and probabilities of failure

Static Protected Attributes

- static NonD * nondInstance
  functions in order to avoid the need for static data
- static const Real Pi
  the numerical value for Pi used in several routines

Private Member Functions

- void distribute_levels (RealVectorArray &levels)
  response functions if a short-hand specification is employed.

Private Attributes

- bool distParamDerivs
  to standard random variables u using the chain rule df/dx dx/du.

8.88.1 Detailed Description

Base class for all nondetermistic iterators (the DAKOTA/UQ branch).

The base class for nondeterministic iterators consolidates uncertain variable data and probabilistic utilities for inherited classes.

8.88.2 Member Function Documentation

8.88.2.1 void initialize_random_variables ()

initialize natafTransform based on distribution data from iteratedModel

Build ProbabilityTransformation::ranVar arrays containing the uncertain variable distribution types and their corresponding means/standard deviations. This function is used when the Model variables are in x-space.

8.88.2.2 void initialize_random_variables (const Pecos::ProbabilityTransformation & *transform*)

initialize natafTransform based on incoming data

This function is commonly used to publish tranformation data when the Model variables are in a transformed space (e.g., u-space) and ProbabilityTransformation::ranVarTypes et al. may not be generated directly. This allows for the use of inverse transformations to return the transformed space variables to their original states.

8.88.2.3 void derived_pre_run () `[inline, protected, virtual]`

portions of pre_run specific to derived iterators

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual derived class portion of pre_run(). Redefinition by derived classes is optional.

Reimplemented from Iterator.

8.88.2.4 void run () `[inline, protected, virtual]`

run the iterator; portion of run_iterator()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual run function for the iterator class hierarchy. All derived classes need to redefine it.

Reimplemented from Iterator.

8.88.2.5 void derived_post_run () `[inline, protected, virtual]`

portions of post_run specific to derived iterators

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual derived class portion of post_run(). Redefinition by derived classes is optional.

Reimplemented from Iterator.

8.88.2.6 void initialize_final_statistics () `[protected, virtual]`

initializes finalStatistics for storing NonD final results

Default definition of virtual function (used by sampling, reliability, and polynomial chaos) defines the set of statistical results to include means, standard deviations, and level mappings.

Reimplemented in NonDEvidence.

8.88.2.7 void initialize_random_variable_types () [protected]

initializes ranVarTypesX and ranVarTypesU within natafTransform

Build ProbabilityTransformation::ranVar arrays containing the uncertain variable distribution types and their corresponding means/standard deviations. This function is used when the Model variables are in x-space.

8.88.2.8 void initialize_random_variable_parameters () [protected]

ranVarUpperBndsX, and ranVarAddtlParamsX within natafTransform

Build ProbabilityTransformation::ranVar arrays containing the uncertain variable distribution types and their corresponding means/standard deviations. This function is used when the Model variables are in x-space.

8.88.2.9 void vars_u_to_x_mapping (const Variables & *u_vars*, Variables & *x_vars*) [static, protected]

from NonD Iterators to x-space variables for Model evaluations.

Map the variables from iterator space (u) to simulation space (x).

8.88.2.10 void set_u_to_x_mapping (const ActiveSet & *u_set*, ActiveSet & *x_set*) [static, protected]

from NonD Iterators to x-space ActiveSets for Model evaluations.

Define the DVV for x-space derivative evaluations by augmenting the iterator requests to account for correlations.

The documentation for this class was generated from the following files:

- DakotaNonD.H
- DakotaNonD.C

8.89 NonDAdaptImpSampling Class Reference

Class for the Adaptive Importance Sampling methods within DAKOTA.

Inheritance diagram for NonDAdaptImpSampling::

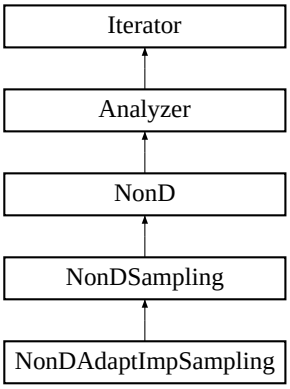

Public Member Functions

- NonDAdaptImpSampling (Model &model, int samples, int seed, short sampling_type, const bool cdf_flag, const bool x_space_data, const bool x_space_model, const bool bounded_model)

  constructor

- ~NonDAdaptImpSampling ()

  destructor

- void quantify_uncertainty ()

  failure.

- void initialize (const RealVectorArray &initial_points, int resp_fn, const Real &initial_prob, const Real &failure_threshold)

  initial probability to refine, and flags to control transformations

- void initialize (const RealVector &initial_point, int resp_fn, const Real &initial_prob, const Real &failure_threshold)

  initial probability to refine, and flags to control transformations

- const Real & get_probability ()

  returns the probability calculated by the importance sampling

Private Member Functions

- void converge_cov ()

  until coefficient of variation converges

- void converge_probability ()

  until probability converges

- void select_init_rep_points (const RealVectorArray &samples)

  select representative points from initial set of samples

- void select_rep_points (const RealVectorArray &samples)

  select representative points from a set of samples

- void calculate_rep_weights ()

  calculate relative weights of representative points

- void generate_samples (RealVectorArray &samples)

  generate a set of samples based on multimodal sampling density

- void calculate_statistics (const RealVectorArray &samples, const size_t &total_sample_number, Real &probability_sum, Real &probability, bool cov_flag, Real &variance_sum, Real &coeff_of_variation)

  the coefficent of variation (if requested)

Private Attributes

- short importanceSamplingType

  integration type (is, ais, mmais) provided by input specification

- bool invertProb

  flag for inversion of probability values using 1.-p

- size_t numRepPoints

  the number of representative points around which to sample

- size_t respFn

  the response function in the model to be sampled

- RealVectorArray initPoints

  the original set of samples passed into the MMAIS routine

- RealVectorArray repPoints

  the set of representative points around which to sample

- RealVector repWeights

the weight associated with each representative point

- RealVector designPoint

  design point at which uncertain space is being sampled

- bool transInitPoints

  initial points

- bool transPoints

  before evaluation

- bool useModelBounds

  flag to control if the sampler should respect the model bounds

- Real initProb

  the initial probability (from FORM or SORM)

- Real finalProb

  the final calculated probability (p)

- Real failThresh

  the failure threshold (z-bar) for the problem.

8.89.1 Detailed Description

Class for the Adaptive Importance Sampling methods within DAKOTA.

The NonDAdaptImpSampling implements the multi-modal adaptive importance sampling used for reliability calculations. (eventually we will want to broaden this). Need to add more detail to this description.

8.89.2 Member Function Documentation

8.89.2.1 void initialize (const RealVectorArray & *initial_points*, int *resp_fn*, const Real & *initial_prob*, const Real & *failure_threshold*)

initial probability to refine, and flags to control transformations

Initializes data using a set of starting points.

8.89.2.2 void initialize (const RealVector & *initial_point*, int *resp_fn*, const Real & *initial_prob*, const Real & *failure_threshold*)

initial probability to refine, and flags to control transformations

Initializes data using only one starting point.

The documentation for this class was generated from the following files:

- NonDAdaptImpSampling.H
- NonDAdaptImpSampling.C

8.90 NonDEvidence Class Reference

Class for the Dempster-Shafer Evidence Theory methods within DAKOTA/UQ.

Inheritance diagram for NonDEvidence::

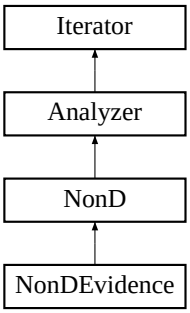

Public Member Functions

- NonDEvidence (Model &model)

  constructor

- ~NonDEvidence ()

  destructor

- void quantify_uncertainty ()

  for cumulative distribution functions of belief and plausibility

- void print_results (ostream &s)

  print the cumulative distribution functions for belief and plausibility

Protected Member Functions

- void initialize_final_statistics ()

  initialize finalStatistics for belief/plausibility results sets

- void compute_statistics ()

  or vice-versa

Private Member Functions

- void calculate_basic_prob_intervals ()

  basic probability assignments for input interval combinations

- void calculate_maxmin_per_interval (const size_t &func_num)

  maximum and minimum values within each input interval combination (cell).

- void calculate_cum_belief_plaus (const size_t &func_num)

  per interval cell

Private Attributes

- Iterator lhsSampler

  the LHS sampler instance

- const int originalSeed

  the user seed specification (default is 0)

- int numSamples

  the number of samples used in the surrogate

- int NV

  Size variable for DDS arrays.

- int NCMB

  Size variable for DDS arrays.

- int MAXINTVLS

  Size variable for DDS arrays.

- Real Y

  Temporary output variable.

- Real ∗ BPA

  Internal DDS array.

- Real ∗ VMIN

  Internal DDS array.

- Real ∗ VMAX

  Internal DDS array.

- Real ∗ BPAC

  Internal DDS array.

- Real * CMIN
  Internal DDS Array.
- Real * CMAX
  Internal DDS Array.
- Real * X
  Internal DDS Array.
- int * NI
  Internal DDS array.
- int * IP
  Internal DDS array.
- int * IPBEL
  Internal DDS array.
- int * IPPLA
  Internal DDS array.
- RealVectorArray cc_bel_fn
  Storage array to hold CCBF values.
- RealVectorArray cc_plaus_fn
  Storage array to hold CCPF values.
- RealVectorArray cc_bel_val
  Storage array to hold CCB response values.
- RealVectorArray cc_plaus_val
  Storage array to hold CCP response values.
- VariablesArray all_vars
  Storage array to hold variables.
- ResponseArray all_responses
  Storage array to hold responses.

8.90.1 Detailed Description

Class for the Dempster-Shafer Evidence Theory methods within DAKOTA/UQ.

The NonDEvidence class implements the propagation of epistemic uncertainty using Dempster-Shafer theory of evidence. In this approach, one assigns a set of basic probability assignments (BPA) to intervals defined for the

uncertain variables. Input interval combinations are calculated, along with their BPA. Currently, the response function is evaluated at a set of sample points, then a response surface is constructed which is sampled extensively to find the minimum and maximum within each input interval cell, corresponding to the belief and plausibility within that cell, respectively. This data is then aggregated to calculate cumulative distribution functions for belief and plausibility.

8.90.2 Member Data Documentation

8.90.2.1 int NV [private]

Size variable for DDS arrays.

NV = number of interval variables

8.90.2.2 int NCMB [private]

Size variable for DDS arrays.

NCMB = number of cell combinations

8.90.2.3 int MAXINTVLS [private]

Size variable for DDS arrays.

MAXINTVLS = maximum number of intervals per individual interval var

8.90.2.4 Real Y [private]

Temporary output variable.

Y = current output to be placed in cell

8.90.2.5 Real* BPA [private]

Internal DDS array.

Basic Probability Assignments

8.90.2.6 Real* VMIN [private]

Internal DDS array.

Minimum ends of intervals.

8.90.2.7 Real* VMAX [private]

Internal DDS array.

Maximum ends of intervals.

8.90.2.8 Real* BPAC [private]

Internal DDS array.

Basic Probability Combinations.

8.90.2.9 Real* CMIN [private]

Internal DDS Array.

Minimum per cell combination.

8.90.2.10 Real* CMAX [private]

Internal DDS Array.

Maximum per cell combination.

8.90.2.11 Real* X [private]

Internal DDS Array.

X per cell combination.

8.90.2.12 int* NI [private]

Internal DDS array.

Number of intervals per interval variable

8.90.2.13 int* IP [private]

Internal DDS array.

Sort order for combinations

8.90.2.14 int* IPBEL [private]

Internal DDS array.

Sort order for belief values

8.90.2.15 int* IPPLA [private]

Internal DDS array.

Sort order for belief values

The documentation for this class was generated from the following files:

- NonDEvidence.H
- NonDEvidence.C

8.91 NonDExpansion Class Reference

collocation (SC)

Inheritance diagram for NonDExpansion::

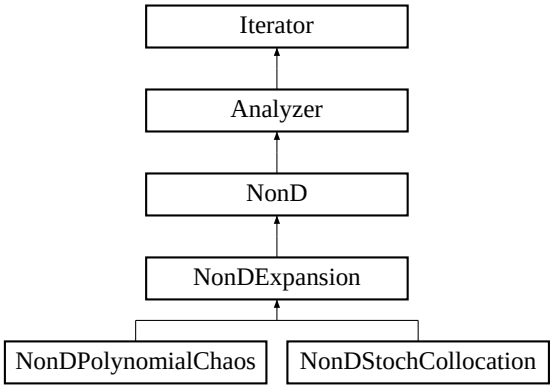

Public Member Functions

- NonDExpansion (Model &model)

  constructor

- ~NonDExpansion ()

  destructor

- void print_results (ostream &s)

  print the final statistics

Protected Member Functions

- void construct_g_u_model (Model &g_u_model)

  recast iteratedModel from x-space to u-space to create g_u_model

- void construct_quadrature (Iterator &u_space_sampler, Model &g_u_model, const UShortArray &quad_-order)

  assign a NonDQuadrature instance within u_space_sampler

- void construct_sparse_grid (Iterator &u_space_sampler, Model &g_u_model, const UShortArray &sparse_grid_level)

  assign a NonDSparsegrid instance within u_space_sampler

- void construct_lhs (Iterator &u_space_sampler, Model &g_u_model, int orig_seed)

  assign a NonDLHSSampling instance within u_space_sampler

- void construct_expansion_sampler ()

  construct the expansionSampler operating on uSpaceModel

- void initialize_expansion ()

  initialize random variable definitions and final stats arrays

- void compute_expansion ()

  form the expansion by calling uSpaceModel.build_approximation()

- void compute_statistics ()

  calculate analytic and numerical statistics from the expansion

- void update_final_statistics ()

  update finalStatistics

Protected Attributes

- Model uSpaceModel

  u-space recasting and orthogonal polynomial data fit recursions

- Iterator expansionSampler

  an LHS sampling instance, but AIS could also be used.

- short expansionCoeffsApproach

  calculation of the expanion coefficients

- size_t numUncertainQuant

  number of invocations of quantify_uncertainty()

- int numSamplesOnModel

  number of truth samples performed on g_u_model to form the expansion

- int numSamplesOnExpansion

  expansion in order to estimate probabilities

- RealVector initialPtU

  stores the initial variables data in u-space

- RealVector finalStatValues

  the vector of final statistics values

- RealMatrix finalStatGrads

  the matrix of final statistics gradients

- RealMatrix expGradsMeanX

  evaluated at the means (used as uncertainty importance metrics)

8.91.1 Detailed Description

collocation (SC)

The NonDExpansion class provides a base class for methods that use polynomial expansions to approximate the effect of parameter uncertainties on response functions of interest.

8.91.2 Member Function Documentation

8.91.2.1 void compute_statistics () [protected]

calculate analytic and numerical statistics from the expansion

Calculate analytic and numerical statistics from the expansion and log results within final_stats for use in OUU.

The documentation for this class was generated from the following files:

- NonDExpansion.H
- NonDExpansion.C

8.92 NonDGlobalReliability Class Reference

Class for global reliability methods within DAKOTA/UQ.

Inheritance diagram for NonDGlobalReliability::

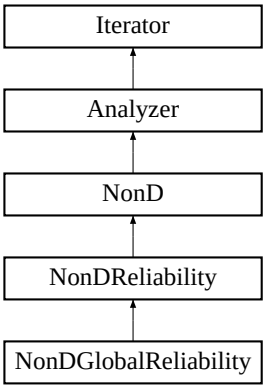

Public Member Functions

- NonDGlobalReliability (Model &model)
  constructor
- ~NonDGlobalReliability ()
  destructor
- void quantify_uncertainty ()
  approximations of the cumulative distribution function of response
- void print_results (ostream &s)
  MPP-search-based reliability methods.

Private Member Functions

- void optimize_gaussian_process ()
  construct the GP using EGO/SKO
- void importance_sampling ()
  perform multimodal adaptive importance sampling on the GP
- void get_best_sample ()

imporovement function in Performance Measure Approach (PMA)

- Real constraint_penalty (const Real &constraint, const RealVector &c_variables)

  calculate the penalty to be applied to the PMA constraint value

- Real expected_improvement (const RealVector &expected_values, const RealVector &c_variables)

  expected improvement function for the GP

- Real expected_feasibility (const RealVector &expected_values, const RealVector &c_variables)

  expected feasibility function for the GP

Static Private Member Functions

- static void EIF_objective_eval (const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)

  Expected Improvement (EIF) problem formulation for PMA.

- static void EFF_objective_eval (const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)

  Expected Feasibility (EFF) problem formulation for RIA.

Private Attributes

- Real fnStar

  minimum penalized response from among true function evaluations

- short meritFunctionType

  type of merit function used to penalize sample data

- Real lagrangeMult

  Lagrange multiplier for standard Lagrangian merit function.

- Real augLagrangeMult

  Lagrange multiplier for augmented Lagrangian merit function.

- Real penaltyParameter

  penalty parameter for augmented Lagrangian merit funciton

- Real lastConstraintViolation

  current iterate should be accepted (must reduce violation)

- bool lastIterateAccepted

  this controls update of parameters for augmented Lagrangian merit fn

Static Private Attributes

- static NonDGlobalReliability * nondGlobRelInstance

  functions in order to avoid the need for static data

8.92.1 Detailed Description

Class for global reliability methods within DAKOTA/UQ.

The NonDGlobalReliability class implements EGO/SKO for global MPP search, which maximizes an expected improvement function derived from Gaussian process models. Once the limit state has been characterized, a multimodal importance sampling approach is used to compute probabilities.

The documentation for this class was generated from the following files:

- NonDGlobalReliability.H
- NonDGlobalReliability.C

8.93 NonDIncremLHSSampling Class Reference

Performs icremental LHS sampling for uncertainty quantification.

Inheritance diagram for NonDIncremLHSSampling::

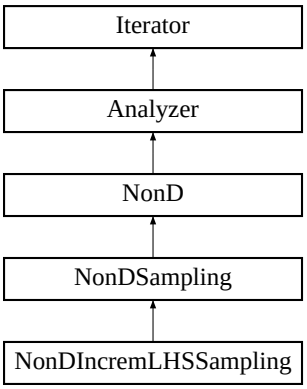

Public Member Functions

- NonDIncremLHSSampling (Model &model)

  constructor

- ~NonDIncremLHSSampling ()

  destructor

- void quantify_uncertainty ()

  parameter samples, and computing statistics on the ensemble of results.

- void print_results (ostream &s)

  print the final statistics

Static Protected Member Functions

- static bool rank_sort (const int &x, const int &y)

  sort algorithm to compute ranks for rank correlations

Private Attributes

- int previousSamples

  number of samples in previous LHS run

- bool varBasedDecompFlag

  flags computation of VBD

Static Private Attributes

- static RealArray rawData

  vector to hold raw data before rank sort

8.93.1 Detailed Description

Performs icremental LHS sampling for uncertainty quantification.

The Latin Hypercube Sampling (LHS) package from Sandia Albuquerque's Risk and Reliability organization provides comprehensive capabilities for Monte Carlo and Latin Hypercube sampling within a broad array of user-specified probabilistic parameter distributions. The icremental LHS sampling capability allows one to supplement an initial sample of size n to size 2n while maintaining the correct stratification of the 2n samples and also maintaining the specified correlation structure. The icremental version of LHS will return a sample of size n, which when combined with the original sample of size n, allows one to double the size of the sample.

8.93.2 Constructor & Destructor Documentation

8.93.2.1 NonDIncremLHSSampling (Model & *model*)

constructor

This constructor is called for a standard letter-envelope iterator instantiation. In this case, set_db_list_nodes has been called and probDescDB can be queried for settings from the method specification.

8.93.3 Member Function Documentation

8.93.3.1 void quantify_uncertainty () `[virtual]`

parameter samples, and computing statistics on the ensemble of results.

Generate incremental samples. Loop over the set of samples and compute responses. Compute statistics on the set of responses if statsFlag is set.

Implements NonD.

The documentation for this class was generated from the following files:

- NonDIncremLHSSampling.H
- NonDIncremLHSSampling.C

8.94 NonDIntegration Class Reference

numerical integration points for evaluation of expectation integrals

Inheritance diagram for NonDIntegration::

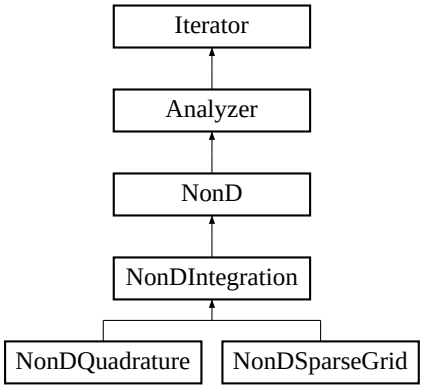

Public Member Functions

- const RealVector & weight_products () const

  return weightProducts

- const RealVector2DArray & gauss_points_array () const

  return gaussPts1D

- const RealVector2DArray & gauss_weights_array () const

  return gaussWts1D

Protected Member Functions

- NonDIntegration (Model &model)

  constructor

- NonDIntegration (NoDBBaseConstructor, Model &model)

  alternate constructor for instantiations "on the fly"

- ~NonDIntegration ()

  destructor

- virtual void check_input ()=0

verify self-consistency of data

- void quantify_uncertainty ()

  distributions into response statistics

Protected Attributes

- RealVector weightProducts

  n-dimensional stencil

- RealVector2DArray gaussPts1D

  numContinuousVars x num_levels_per_var sets of 1D Gauss points

- RealVector2DArray gaussWts1D

  numContinuousVars x num_levels_per_var sets of 1D Gauss weights

Private Attributes

- size_t numIntegrations

  counter for number of integration executions for this object

8.94.1 Detailed Description

numerical integration points for evaluation of expectation integrals

This class provides a base class for shared code among NonDQuadrature and NonDSparseGrid.

8.94.2 Constructor & Destructor Documentation

8.94.2.1 NonDIntegration (Model & *model*) [protected]

constructor

This constructor is called for a standard letter-envelope iterator instantiation. In this case, set_db_list_nodes has been called and probDescDB can be queried for settings from the method specification. It is not currently used, as there are not yet separate nond_quadrature/nond_sparse_grid method specifications.

8.94.2.2 NonDIntegration (NoDBBaseConstructor, Model & *model*) [protected]

alternate constructor for instantiations "on the fly"

This alternate constructor is used for on-the-fly generation and evaluation of numerical integration points.

The documentation for this class was generated from the following files:

- NonDIntegration.H
- NonDIntegration.C

8.95 NonDLHSSampling Class Reference

Performs LHS and Monte Carlo sampling for uncertainty quantification.

Inheritance diagram for NonDLHSSampling::

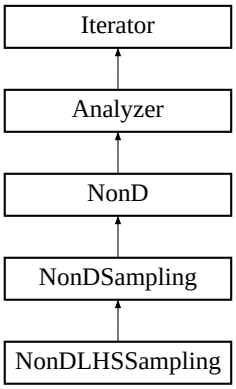

Public Member Functions

- NonDLHSSampling (Model &model)

  standard constructor

- NonDLHSSampling (Model &model, int samples, int seed, short sampling_vars_mode=ACTIVE)

  alternate constructor for sample generation and evaluation "on the fly"

- NonDLHSSampling (int samples, int seed, const RealVector &lower_bnds, const RealVector &upper_bnds)

  alternate constructor for sample generation "on the fly"

- ~NonDLHSSampling ()

  destructor

Protected Member Functions

- void quantify_uncertainty ()

  parameter samples, and computing statistics on the ensemble of results.

- void print_results (ostream &s)

  print the final statistics

Private Attributes

- bool varBasedDecompFlag

  flags computation of VBD

8.95.1 Detailed Description

Performs LHS and Monte Carlo sampling for uncertainty quantification.

The Latin Hypercube Sampling (LHS) package from Sandia Albuquerque's Risk and Reliability organization provides comprehensive capabilities for Monte Carlo and Latin Hypercube sampling within a broad array of user-specified probabilistic parameter distributions. It enforces user-specified rank correlations through use of a mixing routine. The NonDLHSSampling class provides a C++ wrapper for the LHS library and is used for performing forward propagations of parameter uncertainties into response statistics.

8.95.2 Constructor & Destructor Documentation

8.95.2.1 NonDLHSSampling (Model & *model*)

standard constructor

This constructor is called for a standard letter-envelope iterator instantiation. In this case, set_db_list_nodes has been called and probDescDB can be queried for settings from the method specification.

8.95.2.2 NonDLHSSampling (Model & *model*, int *samples*, int *seed*, short *sampling_vars_mode* = `ACTIVE`)

alternate constructor for sample generation and evaluation "on the fly"

This alternate constructor is used for generation and evaluation of Model-based sample sets. A set_db_list_nodes has not been performed so required data must be passed through the constructor. It's purpose is to avoid the need for a separate LHS specification within methods that use LHS sampling.

8.95.2.3 NonDLHSSampling (int *samples*, int *seed*, const RealVector & *lower_bnds*, const RealVector & *upper_bnds*)

alternate constructor for sample generation "on the fly"

This alternate constructor is used by ConcurrentStrategy for generation of uniform, uncorrelated sample sets. It is _not_ a letter-envelope instantiation and a set_db_list_nodes has not been performed. It is called with all needed data passed through the constructor and is designed to allow more flexibility in variables set definition (i.e., relax connection to a variables specification and allow sampling over parameter sets such as multiobjective weights). In this case, a Model is not used and the object must only be used for sample generation (no evaluation).

8.95.3 Member Function Documentation

8.95.3.1 void quantify_uncertainty () [protected, virtual]

parameter samples, and computing statistics on the ensemble of results.

Loop over the set of samples and compute responses. Compute statistics on the set of responses if statsFlag is set.

Implements NonD.

The documentation for this class was generated from the following files:

- NonDLHSSampling.H
- NonDLHSSampling.C

8.96 NonDLocalReliability Class Reference

Class for the reliability methods within DAKOTA/UQ.

Inheritance diagram for NonDLocalReliability::

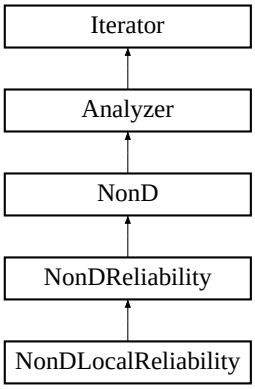

Public Member Functions

- NonDLocalReliability (Model &model)

  constructor

- ~NonDLocalReliability ()

  destructor

- void quantify_uncertainty ()

  approximations of the cumulative distribution function of response

- void print_results (ostream &s)

  MPP-search-based reliability methods.

- String uses_method () const

  return name of active MPP optimizer

- void method_recourse ()

  perform an MPP optimizer method switch due to a detected conflict

Private Member Functions

- void initial_taylor_series ()

Taylor-series approximation.

- void mean_value ()

  computation of approximate statistics and importance factors

- void mpp_search ()

  employ a search for the most probable point (AMV, AMV+, FORM, SORM)

- void initialize_class_data ()

  convenience function for initializing class scope arrays

- void initialize_level_data ()

  data for each response function prior to level 0

- void initialize_mpp_search_data ()

  data for each z/p/beta level for each response function

- void update_mpp_search_data (const Variables &vars_star, const Response &resp_star)

  z/p/beta level for each response function

- void update_level_data (RealVector &final_stats, RealMatrix &final_stat_grads)

  statistics following MPP convergence

- void update_pma_reliability_level ()

  generalized reliabilities by inverting second-order integrations

- void update_limit_state_surrogate ()

  to the data fit embedded within uSpaceModel

- void assign_mean_data ()

  from ranVarMeansX/U, fnValsMeanX, fnGradsMeanX, and fnHessiansMeanX

- void dg_ds_eval (const RealDenseVector &x_vars, const RealDenseVector &fn_grad_x, RealMatrix &final_stat_grads)

  convenience function for evaluating dg/ds

- Real probability (const Real &beta, bool cdf_flag)

  second-order integration

- Real reliability (const Real &p, bool cdf_flag)

  second-order integration

- bool reliability_residual (const Real &p, const Real &beta, const RealDenseVector &kappa, Real &res)

  corrections using Newton's method (called by reliability(p))

- Real reliability_residual_derivative (const Real &p, const Real &beta, const RealDenseVector &kappa)

probability corrections using Newton's method (called by reliability(p))

- void principal_curvatures ()

  Compute the kappaU vector of principal curvatures from fnHessU.

Private Attributes

- RealDenseVector fnGradX

  evaluation

- RealDenseVector fnGradU

  Jacobian dx/du.

- RealSymDenseMatrix fnHessX

  evaluation

- RealSymDenseMatrix fnHessU

  Jacobian dx/du.

- RealDenseVector kappaU

  transformation of fnHessU

- RealDenseVector fnValsMeanX

  response function values evaluated at mean x

- RealDenseMatrix fnGradsMeanX

  response function gradients evaluated at mean x

- RealSymDenseMatrixArray fnHessiansMeanX

  response function Hessians evaluated at mean x

- RealVector medianFnVals

  p=0.5 -> median function values). Used to determine the sign of beta.

- RealDenseVector ranVarMeansU

  vector of means for all uncertain random variables in u-space

- RealVector initialPtU

  initial guess for MPP search in u-space

- RealDenseVector mostProbPointX

  location of MPP in x-space

- RealDenseVector mostProbPointU

  location of MPP in u-space

- RealVectorArray prevMPPULev0

  initialPtU within RBDO.

- RealMatrix prevFnGradDLev0

  for level 0. Used for warm-starting initialPtU within RBDO.

- RealMatrix prevFnGradULev0

  for level 0. Used for warm-starting initialPtU within RBDO.

- RealVector prevICVars

  previous design vector. Used for warm-starting initialPtU within RBDO.

- ShortArray prevCumASVLev0

  for warm-starting initialPtU within RBDO.

- bool npsolFlag

  selection (SQP or NIP)

- bool warmStartFlag

  flag indicating the use of warm starts

- bool nipModeOverrideFlag

  flag indicating the use of move overrides within OPT++ NIP

- bool curvatureDataAvailable

  mostProbPointU) is available for computing principal curvatures

- short integrationOrder

  integration order (1 or 2) provided by `integration` *specification*

- short secondOrderIntType

  type of second-order integration: Breitung, Hohenbichler-Rackwitz, or Hong

- Real curvatureThresh

  cut-off value for 1/sqrt() term in second-order probability corrections.

- short taylorOrder

  derived from hessianType

- RealMatrix impFactor

  importance factors predicted by MV

- int npsolDerivLevel

  fn, 2 = analytic grads of constraints, 3 = analytic grads of both).

- unsigned short warningBits

  set of warnings accumulated during execution

8.96.1 Detailed Description

Class for the reliability methods within DAKOTA/UQ.

The NonDLocalReliability class implements the following reliability methods through the support of different limit state approximation and integration options: mean value (MVFOSM/MVSOSM), advanced mean value method (AMV, AMV^2) in x- or u-space, iterated advanced mean value method (AMV+, AMV^2+) in x- or u-space, two-point adaptive nonlinearity approximation (TANA) in x- or u-space, first order reliability method (FORM), and second order reliability method (SORM). All options except mean value employ an optimizer (currently NPSOL SQP or OPT++ NIP) to solve an equality-constrained optimization problem for the most probable point (MPP). The MPP search may be formulated as the reliability index approach (RIA) for mapping response levels to reliabilities/probabilities or as the performance measure approach (PMA) for performing the inverse mapping of reliability/probability levels to response levels.

8.96.2 Member Function Documentation

8.96.2.1 void initial_taylor_series () [private]

Taylor-series approximation.

An initial first- or second-order Taylor-series approximation is required for MV/AMV/AMV+/TANA or for the case where meanStats or stdDevStats (from MV) are required within finalStatistics for subIterator usage of NonDLocalReliability.

8.96.2.2 void initialize_class_data () [private]

convenience function for initializing class scope arrays

Initialize class-scope arrays and perform other start-up activities, such as evaluating median limit state responses.

8.96.2.3 void initialize_level_data () [private]

data for each response function prior to level 0

For a particular response function prior to the first z/p/beta level, initialize/warm-start optimizer initial guess (initialPtU), expansion point (mostProbPointX/U), and associated response data (computedRespLevel, fnGradX/U, and fnHessX/U).

8.96.2.4 void initialize_mpp_search_data () [private]

data for each z/p/beta level for each response function

For a particular response function at a particular z/p/beta level, warm-start or reset the optimizer initial guess (initialPtU), expansion point (mostProbPointX/U), and associated response data (computedRespLevel, fnGradX/U, and fnHessX/U).

8.96.2.5 void update_mpp_search_data (const Variables & *vars_star*, const Response & *resp_star*) [private]

z/p/beta level for each response function

Includes case-specific logic for updating MPP search data for the AMV/AMV+/TANA/NO_APPROX methods.

8.96.2.6 void update_level_data (RealVector & *final_stats*, RealMatrix & *final_stat_grads*) [private]

statistics following MPP convergence

Updates computedRespLevels/computedProbLevels/computedRelLevels, final_stats/final_stat_grads, warm start, and graphics data.

8.96.2.7 void update_pma_reliability_level () [private, virtual]

generalized reliabilities by inverting second-order integrations

For PMA SORM with prescribed p-level or prescribed generalized beta-level, requestedCDFRelLevel must be updated. This virtual function redefinition is called from NonDReliability::PMA_constraint_eval().

Reimplemented from NonDReliability.

8.96.2.8 void dg_ds_eval (const RealDenseVector & *x_vars*, const RealDenseVector & *fn_grad_x*, RealMatrix & *final_stat_grads*) [private]

convenience function for evaluating dg/ds

Computes dg/ds where s = design variables. Supports potentially overlapping cases of design variable augmentation and insertion.

8.96.2.9 Real probability (const Real & *beta*, bool *cdf_flag*) [private]

second-order integration

Converts beta into a probability using either first-order (FORM) or second-order (SORM) integration. The SORM calculation first calculates the principal curvatures at the MPP (using the approach in Ch. 8 of Haldar & Mahadevan), and then applies correction formulations from the literature (Breitung, Hohenbichler-Rackwitz, or Hong).

8.96.2.10 Real reliability (const Real & *p*, bool *cdf_flag*) [private]

second-order integration

Converts a probability into a reliability using the inverse of the first-order or second-order integrations implemented in NonDLocalReliability::probability().

The documentation for this class was generated from the following files:

- NonDLocalReliability.H
- NonDLocalReliability.C

8.97 NonDPolynomialChaos Class Reference

quantification

Inheritance diagram for NonDPolynomialChaos::

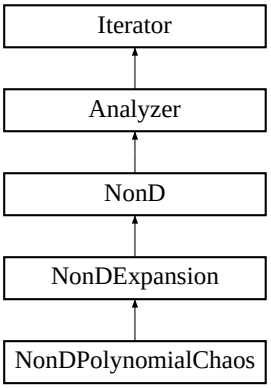

Public Member Functions

- NonDPolynomialChaos (Model &model)

  constructor

- ~NonDPolynomialChaos ()

  destructor

- void quantify_uncertainty ()

  perform a forward uncertainty propagation using SFEM/PCE methods

- void print_results (ostream &s)

  print the final statistics and PCE coefficient array

Private Attributes

- String expansionImportFile

  filename for import of chaos coefficients

- RealMatrix pceGradsMeanX

  evaluated at the means (used as uncertainty importance metrics)

8.97.1 Detailed Description

quantification

The NonDPolynomialChaos class uses a polynomial chaos expansion (PCE) approach to approximate the effect of parameter uncertainties on response functions of interest. It utilizes the OrthogPolyApproximation class to manage multiple types of orthogonal polynomials within a Wiener-Askey scheme to PCE. It supports PCE coefficient estimation via sampling, quadrature, point-collocation, and file import.

The documentation for this class was generated from the following files:

- NonDPolynomialChaos.H
- NonDPolynomialChaos.C

8.98 NonDQuadrature Class Reference

normals/uniforms/exponentials/betas/gammas.

Inheritance diagram for NonDQuadrature::

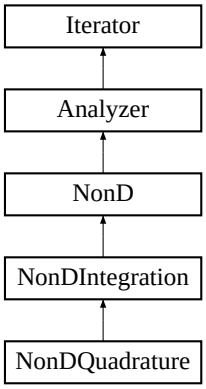

Public Member Functions

- NonDQuadrature (Model &model, const UShortArray &order)
- const UShortArray & quadrature_order () const

  return quadOrder

Protected Member Functions

- NonDQuadrature (Model &model)

  constructor

- ~NonDQuadrature ()

  destructor

- void get_parameter_sets (const Model &model)

  Returns one block of samples (ndim ∗ num_samples).

- void check_input ()

  verify self-consistency of data

- void sampling_reset (int min_samples, int rec_samples, bool all_data_flag, bool stats_flag)

Private Attributes

- UShortArray quadOrderSpec

  the user specification for the number of Gauss points per dimension

- UShortArray quadOrder

  external requirements communicated through sampling_reset()

8.98.1 Detailed Description

normals/uniforms/exponentials/betas/gammas.

This class is used by NonDPolynomialChaos, but could also be used for general numerical integration of moments. It employs Gauss-Hermite, Gauss-Legendre, Gauss-Laguerre, Gauss-Jacobi and generalized Gauss-Laguerre quadrature for use with normal, uniform, exponential, beta, and gamma density functions and integration bounds. The abscissas and weights for one-dimensional integration are extracted from the appropriate OrthogonalPolynomial class and are extended to n-dimensions using a tensor product approach.

8.98.2 Constructor & Destructor Documentation

8.98.2.1 NonDQuadrature (Model & *model*, const UShortArray & *order*)

This alternate constructor is used for on-the-fly generation and evaluation of numerical quadrature points.

8.98.2.2 NonDQuadrature (Model & *model*) `[protected]`

constructor

This constructor is called for a standard letter-envelope iterator instantiation. In this case, set_db_list_nodes has been called and probDescDB can be queried for settings from the method specification. It is not currently used, as there is not yet a separate nond_quadrature method specification.

8.98.3 Member Function Documentation

8.98.3.1 void sampling_reset (int *min_samples*, int *rec_samples*, bool *all_data_flag*, bool *stats_flag*) `[inline, protected, virtual]`

used by DataFitSurrModel::build_global() to publish the minimum number of points needed from the quadrature routine in order to build a particular global approximation.

Reimplemented from Iterator.

The documentation for this class was generated from the following files:

- NonDQuadrature.H
- NonDQuadrature.C

8.99 NonDReliability Class Reference

Base class for the reliability methods within DAKOTA/UQ.

Inheritance diagram for NonDReliability::

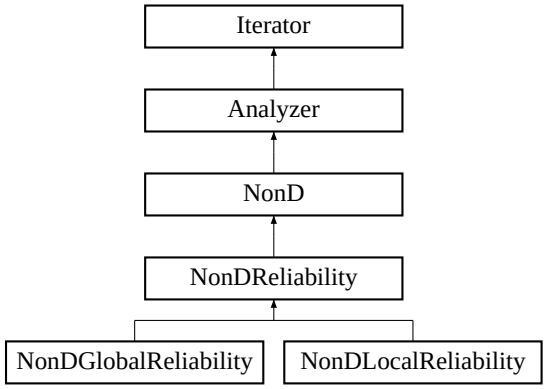

Protected Member Functions

- NonDReliability (Model &model)

  constructor

- ~NonDReliability ()

  destructor

- void initialize_graphics (bool graph_2d, bool tabular_data, const String &tabular_file)

  initialize graphics customized for reliability methods

- virtual void update_pma_reliability_level ()

  update requestedCDFRelLevel for use in PMA_constraint_eval()

Static Protected Member Functions

- static void RIA_objective_eval (const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)

  (MPP) with the objective function of (norm u)^2.

- static void RIA_constraint_eval (const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)

  (MPP) with the constraint of G(u) = response level.

- static void PMA_objective_eval (const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)

  (MPP) with the objective function of G(u).

- static void PMA_constraint_eval (const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)

  (MPP) with the constraint of (norm u)^2 = beta^2.

- static void PMA2_set_mapping (const ActiveSet &recast_set, ActiveSet &sub_model_set)

  beta-bar constraint target update is required for second-order PMA

Protected Attributes

- Model uSpaceModel

  recastings and data fits

- Model mppModel

  RecastModel which formulates the optimization subproblem: RIA, PMA, EGO.

- Iterator mppOptimizer

  Iterator which optimizes the mppModel.

- short mppSearchType

  x/u-space TANA, x/u-space EGO, or NO_APPROX

- Iterator importanceSampler

  importance sampling instance used to compute/refine probabilities

- short integrationRefinement

  `refinement` *specification*

- size_t numRelAnalyses

  number of invocations of quantify_uncertainty()

- size_t approxIters

  number of approximation cycles for the current respFnCount/levelCount

- bool approxConverged

  indicates convergence of approximation-based iterations

- int respFnCount

  counter for which response function is being analyzed

- size_t levelCount

counter for which response/probability level is being analyzed

- size_t statCount

  counter for which final statistic is being computed

- Real requestedRespLevel

  the response level target for the current response function

- Real requestedCDFProbLevel

  the CDF probability level target for the current response function

- Real requestedCDFRelLevel

  the CDF reliability level target for the current response function

- Real computedRespLevel

  output response level calculated

- Real computedRelLevel

  output reliability level calculated

Static Protected Attributes

- static NonDReliability * nondRelInstance

  functions in order to avoid the need for static data

8.99.1 Detailed Description

Base class for the reliability methods within DAKOTA/UQ.

The NonDReliability class provides a base class for NonDLocalReliability, which implements traditional MPP-based reliability methods, and NonDGlobalReliability, which implements global limit state search using Gaussian process models in combination with multimodal importance sampling.

8.99.2 Member Function Documentation

8.99.2.1 void RIA_objective_eval (const Variables & *sub_model_vars*, const Variables & *recast_vars*, const Response & *sub_model_response*, Response & *recast_response*) [static, protected]

(MPP) with the objective function of (norm u)^2.

This function recasts a G(u) response set (already transformed and approximated in other recursions) into an RIA objective function.

8.99.2.2 void RIA_constraint_eval (const Variables & *sub_model_vars*, const Variables & *recast_vars*, const Response & *sub_model_response*, Response & *recast_response*) [static, protected]

(MPP) with the constraint of G(u) = response level.

This function recasts a G(u) response set (already transformed and approximated in other recursions) into an RIA equality constraint.

8.99.2.3 void PMA_objective_eval (const Variables & *sub_model_vars*, const Variables & *recast_vars*, const Response & *sub_model_response*, Response & *recast_response*) [static, protected]

(MPP) with the objective function of G(u).

This function recasts a G(u) response set (already transformed and approximated in other recursions) into an PMA objective function.

8.99.2.4 void PMA_constraint_eval (const Variables & *sub_model_vars*, const Variables & *recast_vars*, const Response & *sub_model_response*, Response & *recast_response*) [static, protected]

(MPP) with the constraint of (norm u)^2 = beta^2.

This function recasts a G(u) response set (already transformed and approximated in other recursions) into a PMA equality constraint.

The documentation for this class was generated from the following files:

- NonDReliability.H
- NonDReliability.C

8.100 NonDSampling Class Reference

NonDIncremLHSSampling, and NonDAdaptImpSampling.

Inheritance diagram for NonDSampling::

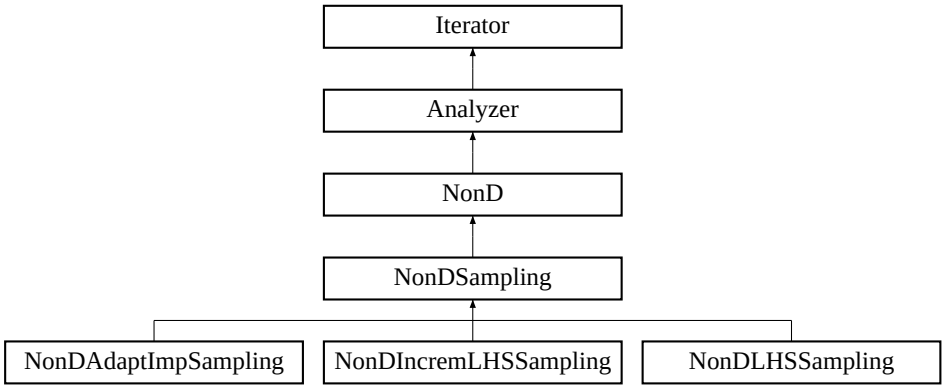

Public Member Functions

- void compute_distribution_mappings (const ResponseArray &samples)

  z to p/beta and of p/beta to z

- void compute_correlations (const VariablesArray &vars_samples, const ResponseArray &resp_samples)

  simple, partial, simple rank, and partial rank

- void update_final_statistics ()

  and computedProbLevels/computedRelLevels/computedRespLevels

- void print_distribution_mappings (ostream &s) const

  prints the p/beta/z mappings computed in compute_distribution_mappings()

- void print_correlations (ostream &s) const

  prints the correlations computed in compute_correlations()

Protected Member Functions

- NonDSampling (Model &model)

  constructor

- NonDSampling (NoDBBaseConstructor, Model &model, int samples, int seed)

alternate constructor for sample generation and evaluation "on the fly"

- NonDSampling (NoDBBaseConstructor, int samples, int seed, const RealVector &lower_bnds, const RealVector &upper_bnds)

  alternate constructor for sample generation "on the fly"

- ~NonDSampling ()

  destructor

- void sampling_reset (int min_samples, int rec_samples, bool all_data_flag, bool stats_flag)

  resets number of samples and sampling flags

- const String & sampling_scheme () const

  return sampleType: "lhs" or "random"

- void vary_pattern (bool pattern_flag)

  set varyPattern

- void get_parameter_sets (const Model &model)

  distributions/bounds defined in the incoming model.

- void get_parameter_sets (const RealVector &lower_bnds, const RealVector &upper_bnds)

  lower_bnds/upper_bnds.

- void initialize_lhs (bool write_message)

  increments numLHSRuns, sets randomSeed, and initialized lhsDriver

- void finalize_lhs (RealDenseMatrix &samples_array)

  converts samples_array into allVariables

- void compute_statistics (const VariablesArray &vars_samples, const ResponseArray &resp_samples)

  or intervals (epsitemic or mixed uncertainties)

- void compute_intervals (const ResponseArray &samples)

  called by compute_statistics() to calculate min/max intervals

- void compute_moments (const ResponseArray &samples)

  deviations, and confidence intervals

- void print_statistics (ostream &s) const

  prints the statistics computed in compute_statistics()

- void print_intervals (ostream &s) const

  prints the intervals computed in compute_intervals()

- void print_moments (ostream &s) const

prints the moments computed in compute_moments()

- void simple_corr (RealDenseMatrix &total_data, bool rank_on, const int &num_in)

  computes simple correlations

- void partial_corr (RealDenseMatrix &total_data, bool rank_on, const int &num_in)

  computes partial correlations

Static Protected Member Functions

- static bool rank_sort (const int &x, const int &y)

  sort algorithm to compute ranks for rank correlations

Protected Attributes

- const int originalSeed

  the user seed specification (default is 0)

- int randomSeed

  the current random number seed

- const int samplesSpec

  initial specification of number of samples

- int numSamples

  the current number of samples to evaluate

- String sampleType

  the sample type: random, lhs, or incremental_lhs

- Pecos::LHSDriver lhsDriver

  the C++ wrapper for the F90 LHS library

- bool statsFlag

  flags computation/output of statistics

- bool allDataFlag

  flags update of allVariables/allResponses

- short samplingVarsMode

  the sampling mode: ACTIVE, ACTIVE_UNIFORM, ALL, or ALL_UNIFORM

- short sampleRanksMode

SET_RANKS, or SET_GET_RANKS.

- bool varyPattern
  repeatable
- RealDenseMatrix sampleRanks
  data structure to hold the sample ranks
- RealVector mean95CIDeltas
  intervals (calculated in compute_moments())
- RealVector stdDev95CILowerBnds
  (calculated in compute_moments())
- RealVector stdDev95CIUpperBnds
  (calculated in compute_moments())

Private Attributes

- size_t numLHSRuns
  counter for number of executions of get_parameter_sets() for this object
- RealVector minValues
  (calculated in compute_intervals())
- RealVector maxValues
  (calculated in compute_intervals())
- RealDenseMatrix simpleCorr
  matrix to hold simple raw correlations
- RealDenseMatrix simpleRankCorr
  matrix to hold simple rank correlations
- RealDenseMatrix partialCorr
  matrix to hold partial raw correlations
- RealDenseMatrix partialRankCorr
  matrix to hold partial rank correlations

Static Private Attributes

- static RealArray rawData
  vector to hold raw data before rank sort

8.100.1 Detailed Description

NonDIncremLHSSampling, and NonDAdaptImpSampling.

This base class provides common code for sampling methods which employ the Latin Hypercube Sampling (LHS) package from Sandia Albuquerque's Risk and Reliability organization. NonDSampling now exclusively utilizes the 1998 Fortran 90 LHS version as documented in SAND98-0210, which was converted to a UNIX link library in 2001. The 1970's vintage LHS (that had been f2c'd and converted to incomplete classes) has been removed.

8.100.2 Constructor & Destructor Documentation

8.100.2.1 NonDSampling (Model & *model*) [protected]

constructor

This constructor is called for a standard letter-envelope iterator instantiation. In this case, set_db_list_nodes has been called and probDescDB can be queried for settings from the method specification.

8.100.2.2 NonDSampling (NoDBBaseConstructor, Model & *model*, int *samples*, int *seed*) [protected]

alternate constructor for sample generation and evaluation "on the fly"

This alternate constructor is used for generation and evaluation of on-the-fly sample sets.

8.100.2.3 NonDSampling (NoDBBaseConstructor, int *samples*, int *seed*, const RealVector & *lower_bnds*, const RealVector & *upper_bnds*) [protected]

alternate constructor for sample generation "on the fly"

This alternate constructor is used by ConcurrentStrategy for generation of uniform, uncorrelated sample sets.

8.100.3 Member Function Documentation

8.100.3.1 void sampling_reset (int *min_samples*, int *rec_samples*, bool *all_data_flag*, bool *stats_flag*) [inline, protected, virtual]

resets number of samples and sampling flags

used by DataFitSurrModel::build_global() to publish the minimum number of samples needed from the sampling routine (to build a particular global approximation) and to set allDataFlag and statsFlag. In this case, allDataFlag is set to true (vectors of variable and response sets must be returned to build the global approximation) and statsFlag is set to false (statistics computations are not needed).

Reimplemented from Iterator.

8.100.3.2 void get_parameter_sets (const Model & *model*) [protected, virtual]

distributions/bounds defined in the incoming model.

This version of get_parameter_sets() extracts data from the user-defined model in any of the four sampling modes.

Reimplemented from Analyzer.

8.100.3.3 void get_parameter_sets (const RealVector & *lower_bnds*, const RealVector & *upper_bnds*) [protected]

lower_bnds/upper_bnds.

This version of get_parameter_sets() does not extract data from the user-defined model, but instead relies on the incoming bounded region definition. It only support a UNIFORM sampling mode, where the distinction of ACTIVE_UNIFORM vs. ALL_UNIFORM is handled elsewhere.

The documentation for this class was generated from the following files:

- NonDSampling.H
- NonDSampling.C

8.101 NonDSparseGrid Class Reference

integrals over independent standard random variables.

Inheritance diagram for NonDSparseGrid::

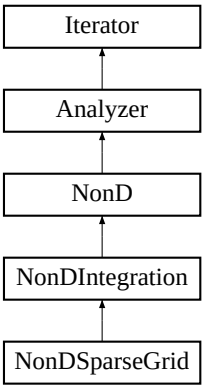

Public Member Functions

- NonDSparseGrid (Model &model, const UShortArray &levels)
- void initialize_rules (const Pecos::ShortArray &u_types, IntArray &rules)

  set rules based on u_types

- const UShortArray & sparse_grid_level () const

  return sparseGridLevel

- const IntArray & integration_rules () const

  return integrationRules

- const Pecos::ShortArray & integrated_variable_types () const

  return ProbabilityTransformation::ranVarTypesU

- void level_to_order_closed (const unsigned short &level, unsigned short &order) const

  converts sparse grid level to integration order for closed rules

- void level_to_order_closed (const UShortArray &levels, UShortArray &orders) const

  for closed rules

- void level_to_order_open (const unsigned short &level, unsigned short &order) const

  converts sparse grid level to integration order for open rules

- void level_to_order_open (const UShortArray &levels, UShortArray &orders) const

  for open rules

Protected Member Functions

- NonDSparseGrid (Model &model)

  constructor

- ~NonDSparseGrid ()

  destructor

- void get_parameter_sets (const Model &model)

  Returns one block of samples (ndim ∗ num_samples).

- void check_input ()
- void sampling_reset (int min_samples, int rec_samples, bool all_data_flag, bool stats_flag)

Private Attributes

- UShortArray sparseGridLevelSpec

  the user specification for the sparse grid levels

- UShortArray sparseGridLevel

  communicated through sampling_reset()

- IntArray integrationRules

  integer codes for webbur routine integration rule options

8.101.1 Detailed Description

integrals over independent standard random variables.

This class is used by NonDPolynomialChaos and NonDStochCollocation, but could also be used for general numerical integration of moments. It employs 1-D Clenshaw-Curtis and Gaussian quadrature rules within Smolyak sparse grids.

8.101.2 Constructor & Destructor Documentation

8.101.2.1 NonDSparseGrid (Model & *model*, const UShortArray & *levels*)

This alternate constructor is used for on-the-fly generation and evaluation of sparse grids.

8.101.2.2 NonDSparseGrid (Model & *model*) [protected]

constructor

This constructor is called for a standard letter-envelope iterator instantiation. In this case, set_db_list_nodes has been called and probDescDB can be queried for settings from the method specification. It is not currently used, as there is not yet a separate nond_sparse_grid method specification.

8.101.3 Member Function Documentation

8.101.3.1 void level_to_order_closed (const unsigned short & *level*, unsigned short & *order*) const [inline]

converts sparse grid level to integration order for closed rules

Adapted from webbur::level_to_order_closed() for DAKOTA data types.

8.101.3.2 void level_to_order_closed (const UShortArray & *levels*, UShortArray & *orders*) const [inline]

for closed rules

Adapted from webbur::level_to_order_closed() for DAKOTA data types.

8.101.3.3 void level_to_order_open (const unsigned short & *level*, unsigned short & *order*) const [inline]

converts sparse grid level to integration order for open rules

Adapted from webbur::level_to_order_open() for DAKOTA data types.

8.101.3.4 void level_to_order_open (const UShortArray & *levels*, UShortArray & *orders*) const [inline]

for open rules

Adapted from webbur::level_to_order_open() for DAKOTA data types.

8.101.3.5 void check_input () [protected, virtual]

Called from probDescDB-based constructors and from NonDIntegration::quantify_uncertainty()

Implements NonDIntegration.

8.101.3.6 void sampling_reset (int *min_samples*, int *rec_samples*, bool *all_data_flag*, bool *stats_flag*) [protected, virtual]

used by DataFitSurrModel::build_global() to publish the minimum number of points needed from the sparse grid routine in order to build a particular global approximation.

Reimplemented from Iterator.

The documentation for this class was generated from the following files:

- NonDSparseGrid.H
- NonDSparseGrid.C

8.102 NonDStochCollocation Class Reference

quantification

Inheritance diagram for NonDStochCollocation::

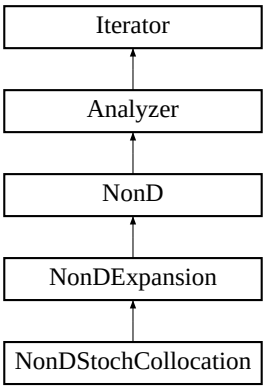

Public Member Functions

- NonDStochCollocation (Model &model)

  constructor

- ~NonDStochCollocation ()

  destructor

- void quantify_uncertainty ()

  perform a forward uncertainty propagation using SC methods

8.102.1 Detailed Description

quantification

The NonDStochCollocation class uses a stochastic collocation (SC) approach to approximate the effect of parameter uncertainties on response functions of interest. It utilizes the InterpPolyApproximation class to manage multidimensional Lagrange polynomial interpolants.

The documentation for this class was generated from the following files:

- NonDStochCollocation.H
- NonDStochCollocation.C

8.103 NPSOLOptimizer Class Reference

Wrapper class for the NPSOL optimization library.

Inheritance diagram for NPSOLOptimizer::

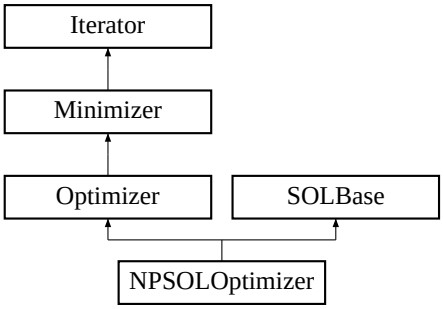

Public Member Functions

- NPSOLOptimizer (Model &model)

  standard constructor

- NPSOLOptimizer (NoDBBaseConstructor, Model &model)

  alternate constructor for Iterator instantiations by name

- NPSOLOptimizer (Model &model, const int &derivative_level, const Real &conv_tol)

  alternate constructor for instantiations "on the fly"

- NPSOLOptimizer (const RealVector &initial_point, const RealVector &var_lower_bnds, const RealVector &var_upper_bnds, const RealMatrix &lin_ineq_coeffs, const RealVector &lin_ineq_lower_bnds, const RealVector &lin_ineq_upper_bnds, const RealMatrix &lin_eq_coeffs, const RealVector &lin_eq_-targets, const RealVector &nonlin_ineq_lower_bnds, const RealVector &nonlin_ineq_upper_bnds, const RealVector &nonlin_eq_targets, void(∗user_obj_eval)(int &, int &, double ∗, double &, double ∗, int &), void(∗user_con_eval)(int &, int &, int &, int &, int ∗, double ∗, double ∗, double ∗, int &), const int &derivative_level, const Real &conv_tol)

  alternate constructor for instantiations "on the fly"

- ∼NPSOLOptimizer ()

  destructor

- void find_optimum ()

  Redefines the run virtual function for the optimizer branch.

Private Member Functions

- void find_optimum_on_model ()

  called by find_optimum for setUpType == "model"

- void find_optimum_on_user_functions ()

  called by find_optimum for setUpType == "user_functions"

Static Private Member Functions

- static void objective_eval (int &mode, int &n, double ∗x, double &f, double ∗gradf, int &nstate)

  objective function (passed by function pointer to NPSOL).

Private Attributes

- String setUpType

  NonDReliability currently uses the user_functions mode.

- RealVector initialPoint

  holds initial point passed in for "user_functions" mode.

- RealVector lowerBounds

  holds variable lower bounds passed in for "user_functions" mode.

- RealVector upperBounds

  holds variable upper bounds passed in for "user_functions" mode.

- void(∗ userObjectiveEval)(int &, int &, double ∗, double &, double ∗, int &)

  "user_functions" mode.

- void(∗ userConstraintEval)(int &, int &, int &, int &, int ∗, double ∗, double ∗, double ∗, int &)

  "user_functions" mode.

Static Private Attributes

- static NPSOLOptimizer ∗ npsolInstance

  functions in order to avoid the need for static data

8.103.1 Detailed Description

Wrapper class for the NPSOL optimization library.

The NPSOLOptimizer class provides a wrapper for NPSOL, a Fortran 77 sequential quadratic programming library from Stanford University marketed by Stanford Business Associates. It uses a function pointer approach for which passed functions must be either global functions or static member functions. Any attribute used within static member functions must be either local to that function or accessed through a static pointer.

The user input mappings are as follows: `max_function_evaluations` is implemented directly in NPSOLOptimizer's evaluator functions since there is no NPSOL parameter equivalent, and `max_iterations`, `convergence_tolerance`, `output` verbosity, `verify_level`, `function_precision`, and `linesearch_tolerance` are mapped into NPSOL's "Major Iteration Limit", "Optimality Tolerance", "Major Print Level" (`verbose:` Major Print Level = 20; `quiet:` Major Print Level = 10), "Verify Level", "Function Precision", and "Linesearch Tolerance" parameters, respectively, using NPSOL's npoptn() subroutine (as wrapped by npoptn2() from the npoptn_wrapper.f file). Refer to [Gill, P.E., Murray, W., Saunders, M.A., and Wright, M.H., 1986] for information on NPSOL's optional input parameters and the npoptn() subroutine.

8.103.2 Constructor & Destructor Documentation

8.103.2.1 NPSOLOptimizer (Model & *model*)

standard constructor

This is the primary constructor. It accepts a Model reference.

8.103.2.2 NPSOLOptimizer (NoDBBaseConstructor, Model & *model*)

alternate constructor for Iterator instantiations by name

This is an alternate constructor which accepts a Model but does not have a supporting method specification from the ProblemDescDB.

8.103.2.3 NPSOLOptimizer (Model & *model*, const int & *derivative_level*, const Real & *conv_tol*)

alternate constructor for instantiations "on the fly"

This is an alternate constructor for instantiations on the fly using a Model but no ProblemDescDB.

8.103.2.4 NPSOLOptimizer (const RealVector & *initial_point*, const RealVector & *var_lower_bnds*, const RealVector & *var_upper_bnds*, const RealMatrix & *lin_ineq_coeffs*, const RealVector & *lin_ineq_lower_bnds*, const RealVector & *lin_ineq_upper_bnds*, const RealMatrix & *lin_eq_coeffs*, const RealVector & *lin_eq_targets*, const RealVector & *nonlin_ineq_lower_bnds*, const RealVector & *nonlin_ineq_upper_bnds*, const RealVector & *nonlin_eq_targets*, void(∗)(int &, int &, double ∗, double &, double ∗, int &) *user_obj_eval*, void(∗)(int &, int &, int &, int &, int ∗, double ∗, double ∗, double ∗, int &) *user_con_eval*, const int & *derivative_level*, const Real & *conv_tol*)

alternate constructor for instantiations "on the fly"

This is an alternate constructor for performing an optimization using the passed in objective function and constraint function pointers.

The documentation for this class was generated from the following files:

- NPSOLOptimizer.H
- NPSOLOptimizer.C

8.104 Optimizer Class Reference

Base class for the optimizer branch of the iterator hierarchy.

Inheritance diagram for Optimizer::

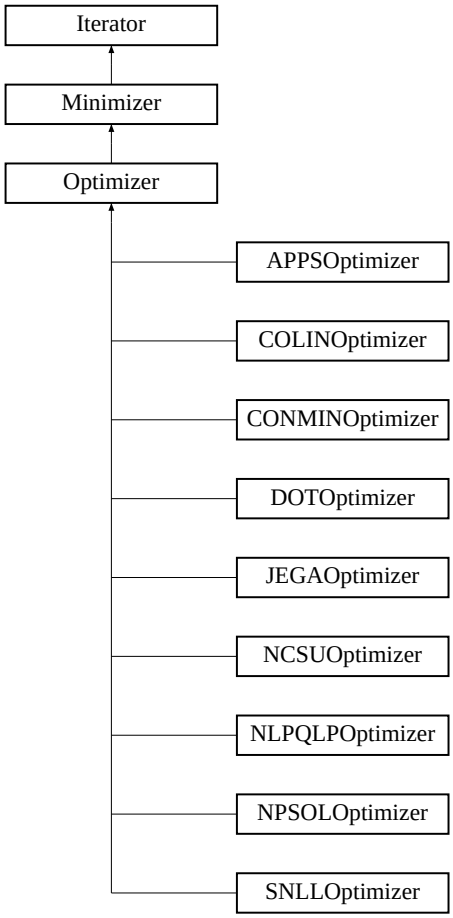

Protected Member Functions

- Optimizer ()

  default constructor

- Optimizer (Model &model)

  standard constructor

- Optimizer (NoDBBaseConstructor, Model &model)

alternate constructor for "on the fly" instantiations

- Optimizer (NoDBBaseConstructor, size_t num_cv, size_t num_dv, size_t num_lin_ineq, size_t num_lin_-eq, size_t num_nln_ineq, size_t num_nln_eq)

  alternate constructor for "on the fly" instantiations

- ~Optimizer ()

  destructor

- void derived_pre_run ()
- void run ()

  run the iterator; portion of run_iterator()

- void derived_post_run ()
- void print_results (ostream &s)
- virtual void find_optimum ()=0

  Redefines the run virtual function for the optimizer branch.

Protected Attributes

- size_t numObjectiveFns

  number of objective functions (iterator view)

- size_t numUserObjectiveFns

  number of objective functions (user's model view)

- bool multiObjFlag

  flag indicating whether multi-objective transformations are necessary

- Optimizer * prevOptInstance

  pointer containing previous value of optimizerInstance

Static Protected Attributes

- static Optimizer * optimizerInstance

  pointer to Optimizer instance used in static member functions

Private Member Functions

- void weighted_sum (const Response &full_response, Response &reduced_response, const RealVector &wts) const

  weighted objective for single-objective optimizers

- void multi_objective_retrieve (const Variables &vars, Response &response) const

  from the solution of a single-objective optimizer

Static Private Member Functions

- static void primary_resp_recast (const Variables &native_vars, const Variables &scaled_vars, const Response &native_response, Response &scaled_response)

  from native (user) to iterator space

8.104.1 Detailed Description

Base class for the optimizer branch of the iterator hierarchy.

The Optimizer class provides common data and functionality for DOTOptimizer, CONMINOptimizer, NPSOLOptimizer, SNLLOptimizer, NLPQLPOptimizer, COLINOptimizer, and JEGAOptimizer.

8.104.2 Constructor & Destructor Documentation

8.104.2.1 Optimizer (Model & *model*) [protected]

standard constructor

This constructor extracts the inherited data for the optimizer branch and performs sanity checking on gradient and constraint settings.

8.104.3 Member Function Documentation

8.104.3.1 void derived_pre_run () [protected, virtual]

Implements portions of pre_run specific to Optimizers. This function should be invoked (or reimplemented) by any derived implementations of derived_pre_run() (which would otherwise hide it).

Reimplemented from Minimizer.

Reimplemented in CONMINOptimizer, DOTOptimizer, NLPQLPOptimizer, and SNLLOptimizer.

8.104.3.2 void run () [inline, protected, virtual]

run the iterator; portion of run_iterator()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual run function for the iterator class hierarchy. All derived classes need to redefine it.

Reimplemented from Iterator.

8.104.3.3 void derived_post_run () [protected, virtual]

Implements portions of post_run specific to Optimizers. This function should be invoked (or reimplemented) by any derived implementations of derived_post_run() (which would otherwise hide it).

Reimplemented from Minimizer.

Reimplemented in SNLLOptimizer.

8.104.3.4 void print_results (ostream & *s*) [protected, virtual]

Redefines default iterator results printing to include optimization results (objective functions and constraints).

Reimplemented from Iterator.

8.104.3.5 void primary_resp_recast (const Variables & *native_vars*, const Variables & *scaled_vars*, const Response & *native_response*, Response & *iterator_response*) [static, private]

from native (user) to iterator space

Objective function map from user/native space to iterator/scaled/combined space using a RecastModel. If resizing the response, copies the constraint (secondary) data from native_response too

8.104.3.6 void weighted_sum (const Response & *full_response*, Response & *reduced_response*, const RealVector & *multiobj_wts*) const [private]

weighted objective for single-objective optimizers

This function is responsible for the mapping of multiple objective functions into a single objective for publishing to single-objective optimizers. Used in DOTOptimizer, NPSOLOptimizer, SNLLOptimizer, and SGOPTApplication on every function evaluation. The simple weighting approach (using primaryRespFnWts) is the only technique supported currently. The weightings are used to scale function values, gradients, and Hessians as needed.

8.104.3.7 void multi_objective_retrieve (const Variables & *vars*, Response & *response*) const [private]

from the solution of a single-objective optimizer

Retrieve a full multiobjective response based on the data returned by a single objective optimizer by performing a data_pairs search.

The documentation for this class was generated from the following files:

- DakotaOptimizer.H
- DakotaOptimizer.C

8.105 OrthogonalPolynomial Class Reference

Base class for the orthogonal polynomial class hierarchy.

Inheritance diagram for OrthogonalPolynomial::

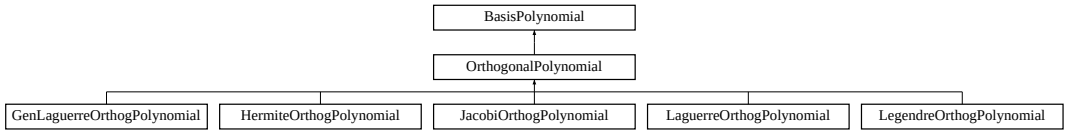

Public Member Functions

- ~OrthogonalPolynomial ()

  default constructor

- void reset_gauss ()

  destroy history of Gauss pts/wts due to change in alpha/beta stats

- void gauss_check (unsigned short order)

  perform unit testing on the Gauss points/weights

Protected Attributes

- Real orthogPolyNormSq

  <Poly_n, Poly_n> = ||Poly_n||^2 (returned by norm_squared())

- RealVector gaussPoints

  (x parameter values for which Poly_n(x) = 0)

- RealVector gaussWeights

  Gauss weights for one-dimensional Gaussian quadrature.

8.105.1 Detailed Description

Base class for the orthogonal polynomial class hierarchy.

The OrthogonalPolynomial class is the base class for the univariate orthogonal polynomial class hierarchy in DAKOTA. One instance of an OrthogonalPolynomial is created for each variable within a multidimensional orthogonal polynomial basis function (a vector of OrthogonalPolynomials is contained in

OrthogPolyApproximation, which may be mixed and matched in, e.g., the Wiener-Askey scheme for polynomial chaos).

The documentation for this class was generated from the following files:

- OrthogonalPolynomial.H
- OrthogonalPolynomial.C

8.106 OrthogPolyApproximation Class Reference

approximation).

Inheritance diagram for OrthogPolyApproximation::

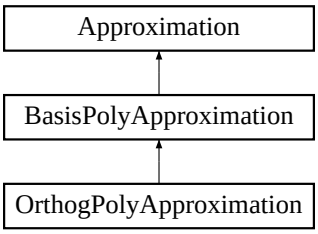

Public Member Functions

- OrthogPolyApproximation ()

  default constructor

- OrthogPolyApproximation (const ProblemDescDB &problem_db, const size_t &num_acv)

  standard constructor

- ~OrthogPolyApproximation ()

  destructor

- void expansion_terms (const int &exp_terms)

  set numExpansionTerms

- const int & expansion_terms () const

  get numExpansionTerms

- void basis_types (const ShortArray &basis)

  set basisTypes

- const ShortArray & basis_types () const

  get basisTypes

- void jacobi_alphas (const RealDenseVector &alphas)

  pass alpha_stat parameters to JACOBI polynomial bases

- void jacobi_betas (const RealDenseVector &betas)

  pass beta_stat parameters to JACOBI polynomial bases

- void generalized_laguerre_alphas (const RealDenseVector &alphas)
  pass alpha_stat parameters to GENERALIZED_LAGUERRE polynomial bases
- void resolve_inputs ()
  (numExpansionTerms and approxOrder) based on user input
- void allocate_arrays ()
  initialize polynomialBasis, multiIndex, et al.

Protected Member Functions

- int min_coefficients () const
  build the derived class approximation type in numVars dimensions
- void find_coefficients ()
  orthogonal polynomials
- void print_coefficients (ostream &s) const
  print the coefficients for the expansion
- const Real & get_value (const RealVector &x)
  retrieve the response PCE value for a given parameter vector
- const RealBaseVector & get_gradient (const RealVector &x)
  and default DVV
- const RealBaseVector & get_gradient (const RealVector &x, const UIntArray &dvv)
  and given DVV
- const Real & get_mean ()
  return the mean of the PCE, treating all variables as random
- const Real & get_mean (const RealVector &x)
  treating a subset of the variables as random
- const RealBaseVector & get_mean_gradient ()
  vector, treating all variables as random
- const RealBaseVector & get_mean_gradient (const RealVector &x, const UIntArray &dvv)
  and given DVV, treating a subset of the variables as random
- const Real & get_variance ()
  return the variance of the PCE, treating all variables as random

- const Real & get_variance (const RealVector &x)

  treating a subset of the variables as random

- const RealBaseVector & get_variance_gradient ()

  vector, treating all variables as random

- const RealBaseVector & get_variance_gradient (const RealVector &x, const UIntArray &dvv)

  vector and given DVV, treating a subset of the variables as random

- const Real & norm_squared (size_t expansion_index)

  treating all variables as random

- const Real & norm_squared_random (size_t expansion_index)

  treating a subset of the variables as random

Private Member Functions

- const RealVector & get_multivariate_polynomials (const RealVector &xi)

  evaluated at a particular parameter set

- void integration ()

  (expCoeffsSolnApproach is QUADRATURE or SPARSE_GRID)

- void regression ()

  (expCoeffsSolnApproach is REGRESSION)

- void expectation ()

  (expCoeffsSolnApproach is SAMPLING)

- void gradient_check ()

  cross-validates alternate gradient expressions

Private Attributes

- int numExpansionTerms

  number of terms in Polynomial Chaos expansion (length of chaosCoeffs)

- ShortArray basisTypes

  HERMITE, LEGENDRE, LAGUERRE, JACOBI, or GENERALIZED_LAGUERRE.

- Array< BasisPolynomial > polynomialBasis

  constructing the multivariate orthogonal/interpolation polynomials

- UShort2DArray multiIndex

  of the multivariate orthogonal polynomials

- RealVector wienerAskeyChaos

  a particular xi (returned by get_multivariate_polynomials())

- Real multiPolyNormSq

  norm-squared of one of the multivariate polynomial basis functions

- RealVectorArray chaosSamples

  sample points (num_pts array of numExpansionTerms vectors)

8.106.1 Detailed Description

approximation).

The OrthogPolyApproximation class provides a global approximation based on orthogonal polynomials. It is used primarily for polynomial chaos expansions (for stochastic finite element approaches to uncertainty quantification).

8.106.2 Member Function Documentation

8.106.2.1 const Real & get_mean () `[protected, virtual]`

return the mean of the PCE, treating all variables as random

In this case, all expansion variables are random variables and the mean of the expansion is simply the first chaos coefficient.

Implements BasisPolyApproximation.

8.106.2.2 const Real & get_mean (const RealVector & *x*) `[protected, virtual]`

treating a subset of the variables as random

In this case, a subset of the expansion variables are random variables and the mean of the expansion involves evaluating the expectation over this subset.

Implements BasisPolyApproximation.

8.106.2.3 const RealBaseVector & get_mean_gradient () `[protected, virtual]`

vector, treating all variables as random

In this function, all expansion variables are random variables and any design/state variables are omitted from the expansion. In this case, the derivative of the expectation is the expectation of the derivative. The mixed derivative case (some design variables are inserted and some are augmented) requires no special treatment.

Implements BasisPolyApproximation.

8.106.2.4 const RealBaseVector & get_mean_gradient (const RealVector & *x*, const UIntArray & *dvv*) [protected, virtual]

and given DVV, treating a subset of the variables as random

In this function, a subset of the expansion variables are random variables and any augmented design/state variables (i.e., not inserted as random variable distribution parameters) are included in the expansion. In this case, the mean of the expansion is the expectation over the random subset and the derivative of the mean is the derivative of the remaining expansion over the non-random subset. This function must handle the mixed case, where some design/state variables are augmented (and are part of the expansion: derivatives are evaluated as described above) and some are inserted (derivatives are obtained from expansionCoeffGrads).

Implements BasisPolyApproximation.

8.106.2.5 const Real & get_variance () [protected, virtual]

return the variance of the PCE, treating all variables as random

In this case, all expansion variables are random variables and the variance of the expansion is the sum over all but the first term of the coefficients squared times the polynomial norms squared.

Implements BasisPolyApproximation.

8.106.2.6 const Real & get_variance (const RealVector & *x*) [protected, virtual]

treating a subset of the variables as random

In this case, a subset of the expansion variables are random variables and the variance of the expansion involves summations over this subset.

Implements BasisPolyApproximation.

8.106.2.7 const RealBaseVector & get_variance_gradient () [protected, virtual]

vector, treating all variables as random

In this function, all expansion variables are random variables and any design/state variables are omitted from the expansion. The mixed derivative case (some design variables are inserted and some are augmented) requires no special treatment.

Implements BasisPolyApproximation.

8.106.2.8 const RealBaseVector & get_variance_gradient (const RealVector & *x*, const UIntArray & *dvv*) [protected, virtual]

vector and given DVV, treating a subset of the variables as random

In this function, a subset of the expansion variables are random variables and any augmented design/state variables (i.e., not inserted as random variable distribution parameters) are included in the expansion. This function must handle the mixed case, where some design/state variables are augmented (and are part of the expansion) and some are inserted (derivatives are obtained from expansionCoeffGrads).

Implements BasisPolyApproximation.

8.106.2.9 void integration () [private]

(expCoeffsSolnApproach is QUADRATURE or SPARSE_GRID)

The coefficients of the PCE for the response are calculated using a Galerkin projection of the response against each multivariate orthogonal polynomial basis fn using the inner product ratio <f,Psi>/<Psi^2>, where inner product <a,b> is the n-dimensional integral of a∗b∗weighting over the support range of the n-dimensional (composite) weighting function. 1-D quadrature rules are defined for specific 1-D weighting functions and support ranges and approximate the integral of f∗weighting as the Sum_i of w_i f_i. To extend this to n-dimensions, a tensor product quadrature rule or Smolyak sparse grid rule is applied using the product of 1-D weightings applied to the n-dimensional stencil of points. It is not necessary to approximate the integral for the denominator numerically, since this is available analytically.

8.106.2.10 void regression () [private]

(expCoeffsSolnApproach is REGRESSION)

In this case, regression is used in place of Galerkin projection. That is, instead of calculating the PCE coefficients using inner product ratios, linear least squares is used to estimate the PCE coefficients which best match a set of response samples. This approach is also known as stochastic response surfaces. The least squares estimation is performed using DGELSS (SVD) or DGGLSE (equality-constrained) from LAPACK, based on the presence of an anchorPoint.

8.106.2.11 void expectation () [private]

(expCoeffsSolnApproach is SAMPLING)

The coefficients of the PCE for the response are calculated using a Galerkin projection of the response against each multivariate orthogonal polynomial basis fn using the inner product ratio <f,Psi>/<Psi^2>, where inner product <a,b> is the n-dimensional integral of a∗b∗weighting over the support range of the n-dimensional (composite) weighting function. When interpreting the weighting function as a probability density function, <a,b> = expected value of a∗b, which can be evaluated by sampling from the probability density function and computing the mean statistic. It is not necessary to compute the mean statistic for the denominator, since this is available analytically.

8.106.2.12 void gradient_check () [private]

cross-validates alternate gradient expressions

This test works in combination with DEBUG settings in (Legendre,Laguerre,Jacobi,GenLaguerre)OrthogPolynomial::get_gradient().

The documentation for this class was generated from the following files:

- OrthogPolyApproximation.H
- OrthogPolyApproximation.C

8.107 ParallelConfiguration Class Reference

collectively identify a particular multilevel parallel configuration.

Public Member Functions

- ParallelConfiguration ()
  default constructor
- ParallelConfiguration (const ParallelConfiguration &pl)
  copy constructor
- ~ParallelConfiguration ()
  destructor
- ParallelConfiguration & operator= (const ParallelConfiguration &pl)
  assignment operator
- const ParallelLevel & w_parallel_level () const
  return the ParallelLevel corresponding to wPLIter
- const ParallelLevel & si_parallel_level () const
  return the ParallelLevel corresponding to siPLIter
- const ParallelLevel & ie_parallel_level () const
  return the ParallelLevel corresponding to iePLIter
- const ParallelLevel & ea_parallel_level () const
  return the ParallelLevel corresponding to eaPLIter

Private Member Functions

- void assign (const ParallelConfiguration &pl)
  assign the attributes of the incoming pl to this object

Private Attributes

- short numParallelLevels
  number of parallel levels

- ParLevLIter wPLIter

  improves modularity by avoiding explicit usage of MPI_COMM_WORLD)

- ParLevLIter siPLIter

  (there may be more than one per parallel configuration instance)

- ParLevLIter iePLIter

  (there can only be one)

- ParLevLIter eaPLIter

  (there can only be one)

Friends

- class ParallelLibrary

  streamline implementation

8.107.1 Detailed Description

collectively identify a particular multilevel parallel configuration.

Rather than containing the multilevel parallel configuration directly, ParallelConfiguration instead provides a set of list iterators which point into a combined list of ParallelLevels. This approach allows different configurations to reuse ParallelLevels without copying them. A list of ParallelConfigurations is contained in ParallelLibrary (ParallelLibrary::parallelConfigurations).

The documentation for this class was generated from the following file:

- ParallelLibrary.H

8.108 ParallelDirectApplicInterface Class Reference

plug-ins using assign_rep().

Inheritance diagram for ParallelDirectApplicInterface::

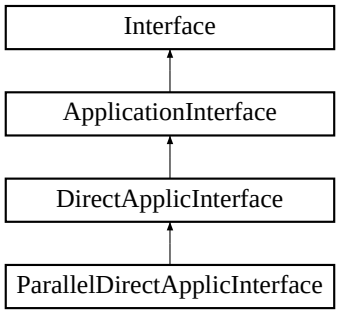

Public Member Functions

- ParallelDirectApplicInterface (const Dakota::ProblemDescDB &problem_db, const MPI_Comm &analysis_comm)

  constructor

- ~ParallelDirectApplicInterface ()

  destructor

Protected Member Functions

- int derived_map_ac (const Dakota::String &ac_name)

  execute an analysis code portion of a direct evaluation invocation

8.108.1 Detailed Description

plug-ins using assign_rep().

The plug-in ParallelDirectApplicInterface resides in namespace SIM and uses a copy of textbook() to perform parallel parameter to response mappings. It may be activated by specifying the –with-plugin configure option, which activates the DAKOTA_PLUGIN macro in dakota_config.h used by main.C (which activates the plug-in code block within that file) and activates the PLUGIN_S declaration defined in Makefile.include and used in Makefile.source (which add this class to the build). Test input files should then use an analysis_driver of "plugin_-textbook".

The documentation for this class was generated from the following files:

- PluginParallelDirectApplicInterface.H
- PluginParallelDirectApplicInterface.C

8.109 ParallelLevel Class Reference

communicator partitioning.

Public Member Functions

- ParallelLevel ()
  default constructor
- ParallelLevel (const ParallelLevel &pl)
  copy constructor
- ~ParallelLevel ()
  destructor
- ParallelLevel & operator= (const ParallelLevel &pl)
  assignment operator
- bool dedicated_master_flag () const
  return dedicatedMasterFlag
- bool communicator_split_flag () const
  return commSplitFlag
- bool server_master_flag () const
  return serverMasterFlag
- bool message_pass () const
  return messagePass
- const int & num_servers () const
  return numServers
- const int & processors_per_server () const
  return procsPerServer
- const MPI_Comm & server_intra_communicator () const
  return serverIntraComm
- const int & server_communicator_rank () const
  return serverCommRank

- const int & server_communicator_size () const

  return serverCommSize

- const MPI_Comm & hub_server_intra_communicator () const

  return hubServerIntraComm

- const int & hub_server_communicator_rank () const

  return hubServerCommRank

- const int & hub_server_communicator_size () const

  return hubServerCommSize

- const MPI_Comm & hub_server_inter_communicator () const

  return hubServerInterComm

- MPI_Comm ∗ hub_server_inter_communicators () const

  return hubServerInterComms

- const int & server_id () const

  return serverId

Private Member Functions

- void assign (const ParallelLevel &pl)

  assign the attributes of the incoming pl to this object

Private Attributes

- bool dedicatedMasterFlag

  signals dedicated master partitioning

- bool commSplitFlag

  signals a communicator split was used

- bool serverMasterFlag

  identifies master server processors

- bool messagePass

  flag for message passing at this level

- int numServers

  number of servers

- int procsPerServer
  processors per server
- MPI_Comm serverIntraComm
  intracomm. for each server partition
- int serverCommRank
  rank in serverIntraComm
- int serverCommSize
  size of serverIntraComm
- MPI_Comm hubServerIntraComm
  intracomm for all serverCommRank==0 w/i next higher level serverIntraComm
- int hubServerCommRank
  rank in hubServerIntraComm
- int hubServerCommSize
  size of hubServerIntraComm
- MPI_Comm hubServerInterComm
  intercomm. between a server & the hub (on server partitions only)
- MPI_Comm * hubServerInterComms
  intercomm. array on hub processor
- int serverId
  server identifier

Friends

- class ParallelLibrary
  streamline implementation

8.109.1 Detailed Description

communicator partitioning.

A list of these levels is contained in ParallelLibrary (ParallelLibrary::parallelLevels), which defines all of the parallelism levels across one or more multilevel parallelism configurations.

The documentation for this class was generated from the following file:

- ParallelLibrary.H

8.110 ParallelLibrary Class Reference

message passing within these levels.

Public Member Functions

- ParallelLibrary (int &argc, char **&argv)

  stand-alone mode constructor

- ParallelLibrary ()

  library mode constructor

- ParallelLibrary (int dummy)

  dummy constructor (used for dummy_lib)

- ~ParallelLibrary ()

  destructor

- const ParallelLevel & init_iterator_communicators (const int &iterator_servers, const int &procs_per_iterator, const int &max_iterator_concurrency, const String &default_config, const String &iterator_scheduling)

  split MPI_COMM_WORLD into iterator communicators

- const ParallelLevel & init_evaluation_communicators (const int &evaluation_servers, const int &procs_per_evaluation, const int &max_evaluation_concurrency, const int &asynch_local_evaluation_concurrency, const String &default_config, const String &evaluation_scheduling)

  split an iterator communicator into evaluation communicators

- const ParallelLevel & init_analysis_communicators (const int &analysis_servers, const int &procs_per_analysis, const int &max_analysis_concurrency, const int &asynch_local_analysis_concurrency, const String &default_config, const String &analysis_scheduling)

  split an evaluation communicator into analysis communicators

- void free_iterator_communicators ()

  deallocate iterator communicators

- void free_evaluation_communicators ()

  deallocate evaluation communicators

- void free_analysis_communicators ()

  deallocate analysis communicators

- void print_configuration ()

print the parallel level settings for a particular parallel configuration

- void specify_outputs_restart (CommandLineHandler &cmd_line_handler)

  inputs (normal mode)

- void specify_outputs_restart (const char *clh_std_output_filename, const char *clh_std_error_filename, const char *clh_read_restart_filename, const char *clh_write_restart_filename, int stop_restart_evals=0)

  inputs (library mode).

- void manage_outputs_restart (const ParallelLevel &pl)

  manage output streams and restart file(s) (both modes)

- void close_streams ()

  close streams, files, and any other services

- void send_si (int &send_int, int dest, int tag)

  blocking send at the strategy-iterator communication level

- void recv_si (int &recv_int, int source, int tag, MPI_Status &status)

  blocking receive at the strategy-iterator communication level

- void send_si (MPIPackBuffer &send_buff, int dest, int tag)

  blocking send at the strategy-iterator communication level

- void isend_si (MPIPackBuffer &send_buff, int dest, int tag, MPI_Request &send_req)

  nonblocking send at the strategy-iterator communication level

- void recv_si (MPIUnpackBuffer &recv_buff, int source, int tag, MPI_Status &status)

  blocking receive at the strategy-iterator communication level

- void irecv_si (MPIUnpackBuffer &recv_buff, int source, int tag, MPI_Request &recv_req)

  nonblocking receive at the strategy-iterator communication level

- void send_ie (MPIPackBuffer &send_buff, int dest, int tag)

  blocking send at the iterator-evaluation communication level

- void isend_ie (MPIPackBuffer &send_buff, int dest, int tag, MPI_Request &send_req)

  nonblocking send at the iterator-evaluation communication level

- void recv_ie (MPIUnpackBuffer &recv_buff, int source, int tag, MPI_Status &status)

  blocking receive at the iterator-evaluation communication level

- void irecv_ie (MPIUnpackBuffer &recv_buff, int source, int tag, MPI_Request &recv_req)

  nonblocking receive at the iterator-evaluation communication level

- void send_ea (int &send_int, int dest, int tag)

blocking send at the evaluation-analysis communication level

- void isend_ea (int &send_int, int dest, int tag, MPI_Request &send_req)

  nonblocking send at the evaluation-analysis communication level

- void recv_ea (int &recv_int, int source, int tag, MPI_Status &status)

  blocking receive at the evaluation-analysis communication level

- void irecv_ea (int &recv_int, int source, int tag, MPI_Request &recv_req)

  nonblocking receive at the evaluation-analysis communication level

- void bcast_w (int &data)

  broadcast an integer across MPI_COMM_WORLD

- void bcast_i (int &data)

  broadcast an integer across an iterator communicator

- void bcast_i (short &data)

  broadcast a short integer across an iterator communicator

- void bcast_e (int &data)

  broadcast an integer across an evaluation communicator

- void bcast_a (int &data)

  broadcast an integer across an analysis communicator

- void bcast_si (int &data)

  broadcast an integer across a strategy-iterator intra communicator

- void bcast_w (MPIPackBuffer &send_buff)

  broadcast a packed buffer across MPI_COMM_WORLD

- void bcast_i (MPIPackBuffer &send_buff)

  broadcast a packed buffer across an iterator communicator

- void bcast_e (MPIPackBuffer &send_buff)

  broadcast a packed buffer across an evaluation communicator

- void bcast_a (MPIPackBuffer &send_buff)

  broadcast a packed buffer across an analysis communicator

- void bcast_si (MPIPackBuffer &send_buff)

  broadcast a packed buffer across a strategy-iterator intra communicator

- void bcast_w (MPIUnpackBuffer &recv_buff)

  matching receive for packed buffer broadcast across MPI_COMM_WORLD

- void bcast_i (MPIUnpackBuffer &recv_buff)

  matching receive for packed buffer bcast across an iterator communicator

- void bcast_e (MPIUnpackBuffer &recv_buff)

  matching receive for packed buffer bcast across an evaluation communicator

- void bcast_a (MPIUnpackBuffer &recv_buff)

  matching receive for packed buffer bcast across an analysis communicator

- void bcast_si (MPIUnpackBuffer &recv_buff)

  matching recv for packed buffer bcast across a strat-iterator intra comm

- void barrier_w ()

  enforce MPI_Barrier on MPI_COMM_WORLD

- void barrier_i ()

  enforce MPI_Barrier on an iterator communicator

- void barrier_e ()

  enforce MPI_Barrier on an evaluation communicator

- void barrier_a ()

  enforce MPI_Barrier on an analysis communicator

- void reduce_sum_ea (double ∗local_vals, double ∗sum_vals, const int &num_vals)

  compute a sum over an eval-analysis intra-communicator using MPI_Reduce

- void reduce_sum_a (double ∗local_vals, double ∗sum_vals, const int &num_vals)

  compute a sum over an analysis communicator using MPI_Reduce

- void test (MPI_Request &request, int &test_flag, MPI_Status &status)

  test a nonblocking send/receive request for completion

- void wait (MPI_Request &request, MPI_Status &status)

  wait for a nonblocking send/receive request to complete

- void waitall (const int &num_recvs, MPI_Request ∗&recv_reqs)

  wait for all messages from a series of nonblocking receives

- void waitsome (const int &num_sends, MPI_Request ∗&recv_requests, int &num_recvs, int ∗&index_array, MPI_Status ∗&status_array)

  but complete all that are available

- void free (MPI_Request &request)

  free an MPI_Request

- const int & world_size () const
  return worldSize
- const int & world_rank () const
  return worldRank
- bool mpirun_flag () const
  return mpirunFlag
- bool is_null () const
  return dummyFlag
- Real parallel_time () const
  returns current MPI wall clock time
- void parallel_configuration_iterator (const ParConfigLIter &pc_iter)
  set the current ParallelConfiguration node
- const ParConfigLIter & parallel_configuration_iterator () const
  return the current ParallelConfiguration node
- const ParallelConfiguration & parallel_configuration () const
  return the current ParallelConfiguration instance
- size_t num_parallel_configurations () const
  returns the number of entries in parallelConfigurations
- bool parallel_configuration_is_complete ()
  identifies if the current ParallelConfiguration has been fully populated
- void increment_parallel_configuration ()
  add a new node to parallelConfigurations and increment currPCIter
- bool w_parallel_level_defined () const
  parallel level
- bool si_parallel_level_defined () const
  strategy-iterator parallel level
- bool ie_parallel_level_defined () const
  iterator-evaluation parallel level
- bool ea_parallel_level_defined () const
  evaluation-analysis parallel level

- Array< MPI_Comm > analysis_intra_communicators ()

  prior to execution time).

Static Public Member Functions

- static bool detect_parallel_launch (int &argc, char **&argv)

  based on command line arguments and environment variables

Private Member Functions

- void init_communicators (const ParallelLevel &parent_pl, const int &num_servers, const int &procs_per_server, const int &max_concurrency, const int &asynch_local_concurrency, const String &default_config, const String &scheduling_override)

  split a parent communicator into child server communicators

- void free_communicators (ParallelLevel &pl)

  deallocate intra/inter communicators for a particular ParallelLevel

- bool split_communicator_dedicated_master (const ParallelLevel &parent_pl, ParallelLevel &child_pl, const int &proc_remainder)

  and num_servers child communicators

- bool split_communicator_peer_partition (const ParallelLevel &parent_pl, ParallelLevel &child_pl, const int &proc_remainder)

  communicators (no dedicated master processor)

- bool resolve_inputs (int &num_servers, int &procs_per_server, const int &avail_procs, int &proc_remainder, const int &max_concurrency, const int &capacity_multiplier, const String &default_config, const String &scheduling_override, bool print_rank)

  resolve user inputs into a sensible partitioning scheme

- void send (MPIPackBuffer &send_buff, const int &dest, const int &tag, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  blocking buffer send at the current communication level

- void send (int &send_int, const int &dest, const int &tag, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  blocking integer send at the current communication level

- void isend (MPIPackBuffer &send_buff, const int &dest, const int &tag, MPI_Request &send_req, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  nonblocking buffer send at the current communication level

- void isend (int &send_int, const int &dest, const int &tag, MPI_Request &send_req, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  nonblocking integer send at the current communication level

- void recv (MPIUnpackBuffer &recv_buff, const int &source, const int &tag, MPI_Status &status, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  blocking buffer receive at the current communication level

- void recv (int &recv_int, const int &source, const int &tag, MPI_Status &status, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  blocking integer receive at the current communication level

- void irecv (MPIUnpackBuffer &recv_buff, const int &source, const int &tag, MPI_Request &recv_req, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  nonblocking buffer receive at the current communication level

- void irecv (int &recv_int, const int &source, const int &tag, MPI_Request &recv_req, ParallelLevel &parent_pl, ParallelLevel &child_pl)

  nonblocking integer receive at the current communication level

- void bcast (int &data, const MPI_Comm &comm)

  broadcast an integer across a communicator

- void bcast (short &data, const MPI_Comm &comm)

  broadcast a short integer across a communicator

- void bcast (MPIPackBuffer &send_buff, const MPI_Comm &comm)

  send a packed buffer across a communicator using a broadcast

- void bcast (MPIUnpackBuffer &recv_buff, const MPI_Comm &comm)

  matching receive for a packed buffer broadcast

- void barrier (const MPI_Comm &comm)

  enforce MPI_Barrier on comm

- void reduce_sum (double *local_vals, double *sum_vals, const int &num_vals, const MPI_Comm &comm)

  compute a sum over comm using MPI_Reduce

- void check_error (const String &err_source, const int &err_code)

  check the MPI return code and abort if error

Private Attributes

- ofstream output_ofstream

  tagged file redirection of stdout

- ofstream error_ofstream

  tagged file redirection of stderr

- int worldRank

  rank in MPI_COMM_WORLD

- int worldSize

  size of MPI_COMM_WORLD

- bool mpirunFlag

  flag for a parallel mpirun/yod launch

- bool ownMPIFlag

  flag for ownership of MPI_Init/MPI_Finalize

- bool dummyFlag

  prevents multiple MPI_Finalize calls due to dummy_lib

- bool stdOutputFlag

  flags redirection of DAKOTA std output to a file

- bool stdErrorFlag

  flags redirection of DAKOTA std error to a file

- Real startCPUTime

  start reference for UTILIB CPU timer

- Real startWCTime

  start reference for UTILIB wall clock timer

- Real startMPITime

  start reference for MPI wall clock timer

- long startClock

  start reference for local clock() timer measuring parent+child CPU

- const char * stdOutputFilename

  filename for redirection of stdout

- const char * stdErrorFilename

  filename for redirection of stderr

- const char ∗ readRestartFilename

  input filename for restart

- const char ∗ writeRestartFilename

  output filename for restart

- int stopRestartEvals

  number of evals at which to stop restart processing

- List< ParallelLevel > parallelLevels

  parallelism among one or more configurations

- List< ParallelConfiguration > parallelConfigurations

  indexing into parallelLevels

- ParLevLIter currPLIter

  list iterator identifying the current node in parallelLevels

- ParConfigLIter currPCIter

  list iterator identifying the current node in parallelConfigurations

8.110.1 Detailed Description

message passing within these levels.

The ParallelLibrary class encapsulates all of the details of performing message passing within multiple levels of parallelism. It provides functions for partitioning of levels according to user configuration input and functions for passing messages within and across MPI communicators for each of the parallelism levels. If support for other message-passing libraries beyond MPI becomes needed (PVM, ...), then ParallelLibrary would be promoted to a base class with virtual functions to encapsulate the library-specific syntax.

8.110.2 Constructor & Destructor Documentation

8.110.2.1 ParallelLibrary (int & *argc*, char ∗∗& *argv*)

stand-alone mode constructor

This constructor is the one used by main.C. It calls MPI_Init conditionally based on whether a parallel launch is detected.

8.110.2.2 ParallelLibrary ()

library mode constructor

This constructor provides a library mode and is used by the SIERRA Adak application. It does not call MPI_Init, but rather gathers data from MPI_COMM_WORLD if MPI_Init has been called elsewhere.

8.110.2.3 ParallelLibrary (int *dummy*)

dummy constructor (used for dummy_lib)

This constructor is used for creation of the global dummy_lib object, which is used to satisfy initialization requirements when the real ParallelLibrary object is not available.

8.110.3 Member Function Documentation

8.110.3.1 void specify_outputs_restart (CommandLineHandler & *cmd_line_handler*)

inputs (normal mode)

On the rank 0 processor, get the -output, -error, -read_restart, and -write_restart filenames and the -stop_restart limit from the command line. Defaults for the filenames from the command line handler are NULL for the filenames and 0 for read_restart_evals if no user specification. This information is Bcast from rank 0 to all iterator masters in manage_outputs_restart().

8.110.3.2 void specify_outputs_restart (const char * *clh_std_output_filename*, const char * *clh_std_error_filename*, const char * *clh_read_restart_filename*, const char * *clh_write_restart_filename*, int *stop_restart_evals* = 0)

inputs (library mode).

Rather than extracting from the command line, pass the std output, std error, read restart, and write restart filenames and the stop restart limit directly. This function only needs to be invoked to specify non-default values [defaults for the filenames are NULL (resulting in no output redirection, no restart read, and default restart write) and 0 for the stop restart limit (resulting in no restart read limit)].

8.110.3.3 void manage_outputs_restart (const ParallelLevel & *pl*)

manage output streams and restart file(s) (both modes)

If the user has specified the use of files for DAKOTA standard output and/or standard error, then bind these filenames to the Cout/Cerr macros. In addition, if concurrent iterators are to be used, create and tag multiple output streams in order to prevent jumbled output. Manage restart file(s) by processing any incoming evaluations from an old restart file and by setting up the binary output stream for new evaluations. Only master iterator processor(s) read & write restart information. This function must follow init_iterator_communicators so that restart can be managed properly for concurrent iterator strategies. In the case of concurrent iterators, each iterator has its own restart file tagged with iterator number.

8.110.3.4 void close_streams ()

close streams, files, and any other services

Close streams associated with manage_outputs and manage_restart and terminate any additional services that may be active.

8.110.3.5 void increment_parallel_configuration () [inline]

add a new node to parallelConfigurations and increment currPCIter

Called from the ParallelLibrary ctor and from Model::init_communicators(). An increment is performed for each Model initialization except the first (which inherits the world and strategy-iterator parallel levels from the first partial configuration).

8.110.3.6 void init_communicators (const ParallelLevel & *parent_pl*, const int & *num_servers*, const int & *procs_per_server*, const int & *max_concurrency*, const int & *asynch_local_concurrency*, const String & *default_config*, const String & *scheduling_override*) [private]

split a parent communicator into child server communicators

Split parent communicator into concurrent child server partitions as specified by the passed parameters. This constructs new child intra-communicators and parent-child inter-communicators. This function is called from the Strategy constructor for the concurrent iterator level and from ApplicationInterface::init_communicators() for the concurrent evaluation and concurrent analysis levels.

8.110.3.7 bool resolve_inputs (int & *num_servers*, int & *procs_per_server*, const int & *avail_procs*, int & *proc_remainder*, const int & *max_concurrency*, const int & *capacity_multiplier*, const String & *default_config*, const String & *scheduling_override*, bool *print_rank*) [private]

resolve user inputs into a sensible partitioning scheme

This function is responsible for the "auto-configure" intelligence of DAKOTA. It resolves a variety of inputs and overrides into a sensible partitioning configuration for a particular parallelism level. It also handles the general case in which a user's specification request does not divide out evenly with the number of available processors for the level. If num_servers & procs_per_server are both nondefault, then the former takes precedence.

The documentation for this class was generated from the following files:

- ParallelLibrary.H
- ParallelLibrary.C

8.111 ParamResponsePair Class Reference

evaluation id.

Public Member Functions

- ParamResponsePair ()

  default constructor

- ParamResponsePair (const Variables &vars, const String &interface_id, const Response &response, bool deep_copy=false)

  alternate constructor for temporaries

- ParamResponsePair (const Variables &vars, const String &interface_id, const Response &response, const int eval_id, bool deep_copy=true)

  standard constructor for history uses

- ParamResponsePair (const ParamResponsePair &pair)

  copy constructor

- ~ParamResponsePair ()

  destructor

- ParamResponsePair & operator= (const ParamResponsePair &pair)

  assignment operator

- void read (istream &s)

  read a ParamResponsePair object from an istream

- void write (ostream &s) const

  write a ParamResponsePair object to an ostream

- void read_annotated (istream &s)

  read a ParamResponsePair object in annotated format from an istream

- void write_annotated (ostream &s) const

  write a ParamResponsePair object in annotated format to an ostream

- void write_tabular (ostream &s) const

  write a ParamResponsePair object in tabular format to an ostream

- void read (BiStream &s)

read a ParamResponsePair object from the binary restart stream

- void write (BoStream &s) const
  write a ParamResponsePair object to the binary restart stream
- void read (MPIUnpackBuffer &s)
  read a ParamResponsePair object from a packed MPI buffer
- void write (MPIPackBuffer &s) const
  write a ParamResponsePair object to a packed MPI buffer
- int eval_id () const
  return the evaluation identifier
- const Variables & prp_parameters () const
  return the parameters object
- const Response & prp_response () const
  return the response object
- void prp_response (const Response &response)
  set the response object
- const ActiveSet & active_set () const
  return the active set object from the response object
- void active_set (const ActiveSet &set)
  set the active set object within the response object
- const String & interface_id () const
  return the interface identifier from the response object

Private Attributes

- Variables prPairParameters
  the set of parameters for the function evaluation
- Response prPairResponse
  the response set for the function evaluation
- String idInterface
  detection on results from different interfaces.
- int evalId
  ApplicationInterface::fnEvalId).

Friends

- bool operator== (const ParamResponsePair &pair1, const ParamResponsePair &pair2)

  equality operator

- bool operator!= (const ParamResponsePair &pair1, const ParamResponsePair &pair2)

  inequality operator

8.111.1 Detailed Description

evaluation id.

ParamResponsePair provides a container class for association of the input for a particular function evaluation (a variables object) with the output from this function evaluation (a response object), along with an evaluation identifier. This container defines the basic unit used in the data_pairs list, in restart file operations, and in a variety of scheduling algorithm bookkeeping operations. With the advent of STL, replacement of arrays of this class with map<> and pair<> template constructs may be possible (using map<int, pair<vars,response> >, for example), assuming that deep copies, I/O, alternate constructors, etc., can be adequately addressed.

8.111.2 Constructor & Destructor Documentation

8.111.2.1 ParamResponsePair (const Variables & *vars*, const String & *interface_id*, const Response & *response*, bool *deep_copy* = `false`) `[inline]`

alternate constructor for temporaries

Uses of this constructor often employ the standard Variables and Response copy constructors to share representations since this constructor is commonly used for search_pairs (which are local instantiations that go out of scope prior to any changes to values; i.e., they are not used for history).

8.111.2.2 ParamResponsePair (const Variables & *vars*, const String & *interface_id*, const Response & *response*, const int *eval_id*, bool *deep_copy* = `true`) `[inline]`

standard constructor for history uses

Uses of this constructor often do not share representations since deep copies are used when history mechanisms (e.g., beforeSynchCorePRPList, data_pairs) are involved.

8.111.3 Member Function Documentation

8.111.3.1 void read (MPIUnpackBuffer & *s*) [inline]

read a ParamResponsePair object from a packed MPI buffer

idInterface is omitted since master processor retains interface ids and communicates asv and response data only with slaves.

8.111.3.2 void write (MPIPackBuffer & *s*) const [inline]

write a ParamResponsePair object to a packed MPI buffer

idInterface is omitted since master processor retains interface ids and communicates asv and response data only with slaves.

8.111.4 Member Data Documentation

8.111.4.1 String idInterface [private]

detection on results from different interfaces.

idInterface belongs here rather than in Response since some Response objects involve consolidation of several fn evals (e.g., Model::synchronize_derivatives()) that are not, in total, generated by a single interface. The prPair, on the other hand, is used for storage of all low level fn evals that get evaluated in ApplicationInterface::map().

8.111.4.2 int evalId [private]

ApplicationInterface::fnEvalId).

evalId belongs here rather than in Response since some Response objects involve consolidation of several fn evals (e.g., Model::synchronize_derivatives()). The prPair, on the other hand, is used for storage of all low level fn evals that get evaluated in ApplicationInterface::map().

The documentation for this class was generated from the following files:

- ParamResponsePair.H
- ParamResponsePair.C

8.112 ParamStudy Class Reference

Class for vector, list, centered, and multidimensional parameter studies.

Inheritance diagram for ParamStudy::

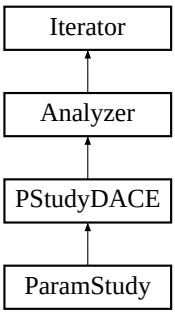

Public Member Functions

- ParamStudy (Model &model)

  constructor

- ~ParamStudy ()

  destructor

- void extract_trends ()

  Redefines the run_iterator virtual function for the PStudy/DACE branch.

Private Member Functions

- void compute_vector_steps ()

  and either numSteps or stepLength (pStudyType is 1 or 2)

- void sample (const RealVectorArray &list_of_points)

  performs the parameter study by sampling from a list of points

- void vector_loop (const RealVector &start, const RealVector &step_vect, const int &num_steps)

  increments of step_vect. Total number of evaluations is num_steps + 1.

- void centered_loop (const RealVector &start, const Real &percent_delta, const int &deltas_per_variable)

  centered about start

- void multidim_loop (const IntArray &var_partitions)

  performs vector_loops recursively in multiple dimensions

Private Attributes

- RealVectorArray listOfPoints

  array of evaluation points for the list_parameter_study

- RealVector initialPoint

  the starting point for vector and centered parameter studies

- RealVector finalPoint

  the ending point for vector_parameter_study (a specification option)

- RealVector stepVector

  the n-dimensional increment in vector_parameter_study

- int numSteps

  the number of times stepVector is applied in vector_parameter_study

- short pStudyType

  (different vector specifications), 4 (centered), or 5 (multidim)

- int deltasPerVariable

  variable in a centered_parameter_study

- Real stepLength

  (a specification option)

- Real percentDelta

  centered_parameter_study

- IntArray variablePartitions

  number of partitions for each variable in a multidim_parameter_study

8.112.1 Detailed Description

Class for vector, list, centered, and multidimensional parameter studies.

The ParamStudy class contains several algorithms for performing parameter studies of different types. It is not a wrapper for an external library, rather its algorithms are self-contained. The vector parameter study steps along an n-dimensional vector from an arbitrary initial point to an arbitrary final point in a specified number of steps. The centered parameter study performs a number of plus and minus offsets in each coordinate direction around a center point. A multidimensional parameter study fills an n-dimensional hypercube based on a specified number

of intervals for each dimension. It is a nested study in that it utilizes the vector parameter study internally as it recurses through the variables. And the list parameter study provides for a user specification of a list of points to evaluate, which allows general parameter investigations not fitting the structure of vector, centered, or multidim parameter studies.

The documentation for this class was generated from the following files:

- ParamStudy.H
- ParamStudy.C

8.113 partial_prp_equality Struct Reference

predicate for comparing ONLY the idInterface and Vars attributes of PRPair

Public Member Functions

- bool operator() (const ParamResponsePair &database_pr, const ParamResponsePair &search_pr) const
  access operator

8.113.1 Detailed Description

predicate for comparing ONLY the idInterface and Vars attributes of PRPair

The documentation for this struct was generated from the following file:

- PRPCache.H

8.114 partial_prp_hash Struct Reference

wrapper to delegate to the ParamResponsePair hash_value function

Public Member Functions

- std::size_t operator() (const ParamResponsePair &prp) const
  access operator

8.114.1 Detailed Description

wrapper to delegate to the ParamResponsePair hash_value function

The documentation for this struct was generated from the following file:

- PRPCache.H

8.115 ProblemDescDB Class Reference

The database containing information parsed from the DAKOTA input file.

Inheritance diagram for ProblemDescDB::

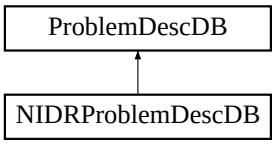

Public Member Functions

- ProblemDescDB ()
  default constructor
- ProblemDescDB (ParallelLibrary &parallel_lib, CommandLineHandler &cmd_line_handler)
  standard constructor
- ProblemDescDB (ParallelLibrary &parallel_lib)
  library mode constructor
- ProblemDescDB (const ProblemDescDB &db)
  copy constructor
- ∼ProblemDescDB ()
  destructor
- ProblemDescDB operator= (const ProblemDescDB &db)
  assignment operator
- void manage_inputs (CommandLineHandler &cmd_line_handler)
  normal API employed in main.C.
- void manage_inputs (const char ∗dakota_input_file, void(∗)(void ∗)=NULL, void ∗=NULL)
  library_mode.C.
- void parse_inputs (const char ∗dakota_input_file, void(∗)(void ∗)=NULL, void ∗=NULL)
  have been provided.
- void check_input ()
  keywords in the dakota input file. Used by parse_inputs().

- void broadcast ()
  data across the processor allocation. Used by manage_inputs().
- void post_process ()
  variables/responses specification arrays. Used by manage_inputs().
- void lock ()
  may not be set properly. Unlocked by a set nodes operation.
- void unlock ()
  Explicitly unlocks the database. Use with care.
- void set_db_list_nodes (const String &method_tag)
  this method specification to set all other list iterators.
- void set_db_list_nodes (const size_t &method_index)
  specification to set all other list iterators.
- void resolve_top_method ()
  to the top method and then sets the list nodes accordingly.
- void set_db_method_node (const String &method_tag)
  particular method specification (only).
- void set_db_method_node (const size_t &method_index)
  particular method specification (only).
- size_t get_db_method_node ()
  return the index of the active node in dataMethodList
- void set_db_model_nodes (const String &model_tag)
  identifier string
- void set_db_model_nodes (const size_t &model_index)
  within dataModelList
- size_t get_db_model_node ()
  return the index of the active node in dataModelList
- void set_db_variables_node (const String &variables_tag)
  set dataVariablesIter based on the variables identifier string
- void set_db_interface_node (const String &interface_tag)
  set dataInterfaceIter based on the interface identifier string

- void set_db_responses_node (const String &responses_tag)

  set dataResponsesIter based on the responses identifier string

- ParallelLibrary & parallel_library () const

  return the parallelLib reference

- IteratorList & iterator_list ()

  return a list of all Iterator objects that have been instantiated

- ModelList & model_list ()

  return a list of all Model objects that have been instantiated

- VariablesList & variables_list ()

  return a list of all Variables objects that have been instantiated

- InterfaceList & interface_list ()

  return a list of all Interface objects that have been instantiated

- ResponseList & response_list ()

  return a list of all Response objects that have been instantiated

- const RealDenseVector & get_rdv (const String &entry_name) const

  get a RealDenseVector out of the database based on an identifier string

- const RealVector & get_drv (const String &entry_name) const

  get a RealVector out of the database based on an identifier string

- const IntVector & get_div (const String &entry_name) const

  get an IntVector out of the database based on an identifier string

- const IntArray & get_dia (const String &entry_name) const

  get an IntArray out of the database based on an identifier string

- const UShortArray & get_dusa (const String &entry_name) const

  get an UShortArray out of the database based on an identifier string

- const RealSymDenseMatrix & get_rsdm (const String &entry_name) const

  get a RealSymDenseMatrix out of the database based on an identifier string

- const RealDenseVectorArray & get_rdva (const String &entry_name) const

  identifier string

- const RealVectorArray & get_drva (const String &entry_name) const

  get a RealVectorArray out of the database based on an identifier string

- const IntList & get_dil (const String &entry_name) const

get an IntList out of the database based on an identifier string

- const IntSet & get_dis (const String &entry_name) const
  get an IntSet out of the database based on an identifier string
- const StringArray & get_dsa (const String &entry_name) const
  get a StringArray out of the database based on an identifier string
- const String2DArray & get_ds2a (const String &entry_name) const
  get a String2DArray out of the database based on an identifier string
- const String & get_string (const String &entry_name) const
  get a String out of the database based on an identifier string
- const Real & get_real (const String &entry_name) const
  get a Real out of the database based on an identifier string
- const int & get_int (const String &entry_name) const
  get an int out of the database based on an identifier string
- const short & get_short (const String &entry_name) const
  get a short out of the database based on an identifier string
- const size_t & get_sizet (const String &entry_name) const
  get a size_t out of the database based on an identifier string
- const bool & get_bool (const String &entry_name) const
  get a bool out of the database based on an identifier string
- void insert_node (const DataStrategy &data_strategy)
  set the DataStrategy object
- void insert_node (const DataMethod &data_method)
  add a DataMethod object to the dataMethodList
- void insert_node (const DataModel &data_model)
  add a DataModel object to the dataModelList
- void insert_node (DataVariables &data_variables)
  add a DataVariables object to the dataVariablesList
- void insert_node (const DataInterface &data_interface)
  add a DataInterface object to the dataInterfaceList
- void insert_node (const DataResponses &data_responses)
  add a DataResponses object to the dataResponsesList

- void set (const String &entry_name, const RealDenseVector &rdv)
  set a RealDenseVector within the database based on an identifier string
- void set (const String &entry_name, const RealVector &drv)
  set a RealVector within the database based on an identifier string
- void set (const String &entry_name, const IntVector &div)
  set an IntVector within the database based on an identifier string
- void set (const String &entry_name, const RealSymDenseMatrix &rsdm)
  set a RealMatrix within the database based on an identifier string
- void set (const String &entry_name, const RealDenseVectorArray &rdva)
  identifier string
- void set (const String &entry_name, const RealVectorArray &drva)
  set a RealVectorArray within the database based on an identifier string
- void set (const String &entry_name, const StringArray &dsa)
  set a StringArray within the database based on an identifier string
- bool is_null () const
  function to check dbRep (does this envelope contain a letter)

Protected Member Functions

- ProblemDescDB (BaseConstructor, ParallelLibrary &parallel_lib)
  derived class constructors - Coplien, p. 139)
- virtual void derived_manage_inputs (const char *dakota_input_file)
  This version reads from the dakota input filename passed in.

Protected Attributes

- DataStrategy strategySpec
  to strategy_kwhandler() or insert_node()
- List< DataMethod > dataMethodList
  or insert_node()
- List< DataModel > dataModelList
  or insert_node()

- List< DataVariables > dataVariablesList

  variables_kwhandler() or insert_node()

- List< DataInterface > dataInterfaceList

  interface_kwhandler() or insert_node()

- List< DataResponses > dataResponsesList

  responses_kwhandler() or insert_node()

- size_t strategyCntr

  counter for strategy specifications used in check_input

Private Member Functions

- const Iterator & get_iterator (Model &model)

  retrieve an existing Iterator, if it exists, or instantiate a new one

- const Model & get_model ()

  retrieve an existing Model, if it exists, or instantiate a new one

- const Variables & get_variables ()

  retrieve an existing Variables, if it exists, or instantiate a new one

- const Interface & get_interface ()

  retrieve an existing Interface, if it exists, or instantiate a new one

- const Response & get_response (const Variables &vars)

  retrieve an existing Response, if it exists, or instantiate a new one

- ProblemDescDB * get_db (ParallelLibrary &parallel_lib, CommandLineHandler &cmd_line_handler)

  correct letter class

- ProblemDescDB * get_db (ParallelLibrary &parallel_lib)

  correct letter class

- void send_db_buffer ()

  and dataResponsesList. Used by manage_inputs().

- void receive_db_buffer ()

  and dataResponsesList. Used by manage_inputs().

Private Attributes

- ParallelLibrary & parallelLib

  reference to the parallel_lib object passed from main

- List< DataMethod >::iterator dataMethodIter

  iterator identifying the active list node in dataMethodList

- List< DataModel >::iterator dataModelIter

  iterator identifying the active list node in dataModelList

- List< DataVariables >::iterator dataVariablesIter

  iterator identifying the active list node in dataVariablesList

- List< DataInterface >::iterator dataInterfaceIter

  iterator identifying the active list node in dataInterfaceList

- List< DataResponses >::iterator dataResponsesIter

  iterator identifying the active list node in dataResponsesList

- IteratorList iteratorList

  list of iterator objects, one for each method specification

- ModelList modelList

  list of model objects, one for each model specification

- VariablesList variablesList

  list of variables objects, one for each variables specification

- InterfaceList interfaceList

  list of interface objects, one for each interface specification

- ResponseList responseList

  list of response objects, one for each responses specification

- bool methodDBLocked

  prior to setting the list node for the active method specification

- bool modelDBLocked

  prior to setting the list node for the active model specification

- bool variablesDBLocked

  prior to setting the list node for the active variables specification

- bool interfaceDBLocked

  prior to setting the list node for the active interface specification

- bool responsesDBLocked

  prior to setting the list node for the active responses specification

- ProblemDescDB * dbRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing dbRep

Friends

- class Model

  Model requires access to get_variables() and get_response().

- class SingleModel

  SingleModel requires access to get_interface().

- class HierarchSurrModel

  HierarchSurrModel requires access to get_model().

- class DataFitSurrModel

  DataFitSurrModel requires access to get_iterator() and get_model().

- class NestedModel

  get_iterator(), and get_model()

- class Strategy

  Strategy requires access to get_iterator().

- class SingleMethodStrategy

  SingleMethodStrategy requires access to get_model().

- class HybridStrategy

  HybridStrategy requires access to get_model().

- class ConcurrentStrategy

  ConcurrentStrategy requires access to get_model().

- class SurrBasedLocalMinimizer

  SurrBasedLocalMinimizer requires access to get_iterator().

- class SurrBasedGlobalMinimizer

  SurrBasedGlobalMinimizer requires access to get_iterator().

8.115.1 Detailed Description

The database containing information parsed from the DAKOTA input file.

The ProblemDescDB class is a database for DAKOTA input file data that is populated by a parser defined in a derived class. When the parser reads a complete keyword, it populates a data class object (DataStrategy, DataMethod, DataVariables, DataInterface, or DataResponses) and, for all cases except strategy, appends the object to a linked list (dataMethodList, dataVariablesList, dataInterfaceList, or dataResponsesList). No strategy linked list is used since only one strategy specification is allowed.

8.115.2 Constructor & Destructor Documentation

8.115.2.1 ProblemDescDB ()

default constructor

The default constructor: dbRep is NULL in this case. This makes it necessary to check for NULL in the copy constructor, assignment operator, and destructor.

8.115.2.2 ProblemDescDB (ParallelLibrary & *parallel_lib*, CommandLineHandler & *cmd_line_handler*)

standard constructor

This is the primary envelope constructor which uses problem_db to build a fully populated db object. It only needs to extract enough data to properly execute get_db(problem_db), since the constructor overloaded with BaseConstructor builds the actual base class data inherited by the derived classes.

8.115.2.3 ProblemDescDB (ParallelLibrary & *parallel_lib*)

library mode constructor

This is the library mode envelope constructor which does not have access to command line options.

8.115.2.4 ProblemDescDB (const ProblemDescDB & *db*)

copy constructor

Copy constructor manages sharing of dbRep and incrementing of referenceCount.

8.115.2.5 ~ProblemDescDB ()

destructor

Destructor decrements referenceCount and only deletes dbRep when referenceCount reaches zero.

8.115.2.6 ProblemDescDB (BaseConstructor, ParallelLibrary & *parallel_lib*) [protected]

derived class constructors - Coplien, p. 139)

This constructor is the one which must build the base class data for all derived classes. get_db() instantiates a derived class letter and the derived constructor selects this base class constructor in its initialization list (to avoid the recursion of the base class constructor calling get_db() again). Since the letter IS the representation, its representation pointer is set to NULL (an uninitialized pointer causes problems in ∼ProblemDescDB).

8.115.3 Member Function Documentation

8.115.3.1 ProblemDescDB operator= (const ProblemDescDB & *db*)

assignment operator

Assignment operator decrements referenceCount for old dbRep, assigns new dbRep, and increments reference-Count for new dbRep.

8.115.3.2 void manage_inputs (CommandLineHandler & *cmd_line_handler*)

normal API employed in main.C.

Manage command line inputs using the CommandLineHandler class and parse the input file.

8.115.3.3 void manage_inputs (const char ∗ *dakota_input_file*, void(∗)(void ∗) *callback* = NULL, void ∗ *callback_data* = NULL)

library_mode.C.

Parse the input file, broadcast it to all processors, and post-process the data on all processors.

8.115.3.4 void parse_inputs (const char ∗ *dakota_input_file*, void(∗)(void ∗) *callback* = NULL, void ∗ *callback_data* = NULL)

have been provided.

Parse the input file, execute the callback function (if present), and perform basic checks on keyword counts.

8.115.3.5 ProblemDescDB ∗ get_db (ParallelLibrary & *parallel_lib*, CommandLineHandler & *cmd_line_handler*) [private]

correct letter class

Initializes dbRep to the appropriate derived type. The standard derived class constructors are invoked.

8.115.3.6 ProblemDescDB * get_db (ParallelLibrary & *parallel_lib*) [private]

correct letter class

Initializes dbRep to an NIDR instance for library mode. The standard derived class constructors are invoked.

The documentation for this class was generated from the following files:

- ProblemDescDB.H
- ProblemDescDB.C

8.116 PStudyDACE Class Reference

design of experiments methods.

Inheritance diagram for PStudyDACE::

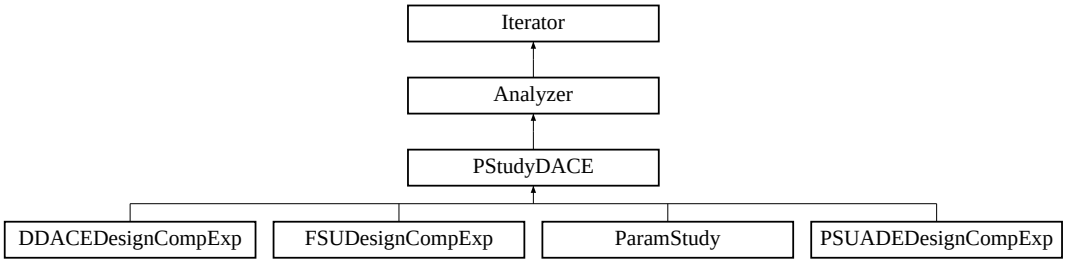

Protected Member Functions

- PStudyDACE (Model &model)

  constructor

- PStudyDACE (NoDBBaseConstructor, Model &model)

  alternate constructor for instantiations "on the fly"

- ~PStudyDACE ()

  destructor

- void run ()

  run the iterator; portion of run_iterator()

- const Variables & variables_results () const

  return a single final iterator solution (variables)

- const Response & response_results () const

  return a single final iterator solution (response)

- void response_results_active_set (const ActiveSet &set)

  set the requested data for the final iterator response results

- void print_results (ostream &s)

  print the final iterator results

- virtual void extract_trends ()=0

Redefines the run_iterator virtual function for the PStudy/DACE branch.

- void update_best (const RealVector &vars, const Response &response, const int eval_num)

  compares current evaluation to best evaluation and updates best

Protected Attributes

- Variables bestVariables

  best variables found during the study

- Response bestResponse

  best response found during the study

- Real bestObjFn

  best objective function found during the study

- Real bestConViol

  precedence over objective function reduction.

- size_t numObjFns

  number of objective functions

- size_t numLSqTerms

  number of least squares terms

8.116.1 Detailed Description

design of experiments methods.

The PStudyDACE base class manages common data and functions, such as those involving the best solutions located during the parameter set evaluations or the printing of final results.

8.116.2 Member Function Documentation

8.116.2.1 void run () `[inline, protected, virtual]`

run the iterator; portion of run_iterator()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual run function for the iterator class hierarchy. All derived classes need to redefine it.

Reimplemented from Iterator.

8.116.2.2 void print_results (ostream & *s*) `[protected, virtual]`

print the final iterator results

This virtual function provides additional iterator-specific final results outputs beyond the function evaluation summary printed in post_run().

Reimplemented from Iterator.

The documentation for this class was generated from the following files:

- DakotaPStudyDACE.H
- DakotaPStudyDACE.C

8.117 PSUADEDesignCompExp Class Reference

Wrapper class for the PSUADE library.

Inheritance diagram for PSUADEDesignCompExp::

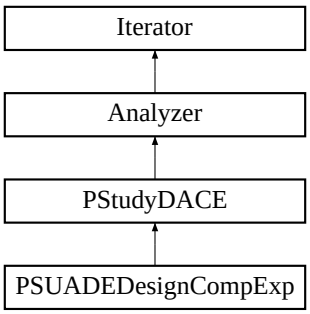

Public Member Functions

- PSUADEDesignCompExp (Model &model)

  primary constructor for building a standard DACE iterator

- ~PSUADEDesignCompExp ()

  destructor

- void extract_trends ()

  Redefines the run_iterator virtual function for the PStudy/DACE branch.

- void sampling_reset (int min_samples, int rec_samples, bool all_data_flag, bool stats_flag)

  reset sampling iterator

- const String & sampling_scheme () const

  return sampling name

- void vary_pattern (bool pattern_flag)

  sets varyPattern in derived classes that support it

- void get_parameter_sets (const Model &model)

  Returns one block of samples (ndim ∗ num_samples).

Private Member Functions

- void enforce_input_rules ()

  enforce sanity checks/modifications for the user input specification

Private Attributes

- int samplesSpec

  initial specification of number of samples

- int numSamples

  current number of samples to be evaluated

- const IntArray & varPartitionsSpec

  number of partitions in each variable direction

- int numPartitions

  number of partitions to pass to PSUADE (levels = partitions + 1)

- bool allDataFlag

  Iterator::all_variables() and Iterator::all_responses().

- size_t numDACERuns

  counter for number of run() executions for this object

- bool varyPattern

  but are still repeatable

- int originalSeed

  (allows repeatable results)

- int randomSeed

  current seed for the random number generator

8.117.1 Detailed Description

Wrapper class for the PSUADE library.

The PSUADEDesignCompExp class provides a wrapper for PSUADE, a C++ design of experiments library from Lawrence Livermore National Laboratory. Currently this class only includes the PSUADE Morris One-at-a-time (MOAT) method to uniformly sample the parameter space spanned by the active bounds of the current Model. It returns all generated samples and their corresponding responses as well as the best sample found.

8.117.2 Constructor & Destructor Documentation

8.117.2.1 PSUADEDesignCompExp (Model & *model*)

primary constructor for building a standard DACE iterator

This constructor is called for a standard iterator built with data from probDescDB.

8.117.3 Member Function Documentation

8.117.3.1 void enforce_input_rules () `[private]`

enforce sanity checks/modifications for the user input specification

Users may input a variety of quantities, but this function must enforce any restrictions imposed by the sampling algorithms.

The documentation for this class was generated from the following files:

- PSUADEDesignCompExp.H
- PSUADEDesignCompExp.C

8.118 RecastBaseConstructor Struct Reference

instantiations.

Public Member Functions

- RecastBaseConstructor (int=0)

  C++ structs can have constructors.

8.118.1 Detailed Description

instantiations.

RecastBaseConstructor is used to overload the constructor used for on-the-fly Model instantiations. Putting this struct here avoids circular dependencies.

The documentation for this struct was generated from the following file:

- global_defs.h

8.119 RecastModel Class Reference

in order to recast the form of its inputs and/or outputs.

Inheritance diagram for RecastModel::

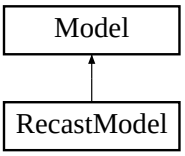

Public Member Functions

- RecastModel (Model &sub_model, const Sizet2DArray &vars_map_indices, bool nonlinear_vars_mapping, void(∗variables_map)(const Variables &recast_vars, Variables &sub_model_vars), void(∗set_map)(const ActiveSet &recast_set, ActiveSet &sub_model_set), const Sizet2DArray &primary_resp_map_indices, const Sizet2DArray &secondary_resp_map_indices, size_t recast_secondary_offset, const BoolDequeArray &nonlinear_resp_mapping, void(∗primary_resp_map)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response), void(∗secondary_resp_map)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response))

  standard constructor

- RecastModel (Model &sub_model, size_t num_recast_primary_fns, size_t num_recast_secondary_fns, size_t recast_secondary_offset)

  alternate constructor

- ∼RecastModel ()

  destructor

- void initialize (const Sizet2DArray &vars_map_indices, bool nonlinear_vars_mapping, void(∗variables_map)(const Variables &recast_vars, Variables &sub_model_vars), void(∗set_map)(const ActiveSet &recast_set, ActiveSet &sub_model_set), const Sizet2DArray &primary_resp_map_indices, const Sizet2DArray &secondary_resp_map_indices, const BoolDequeArray &nonlinear_resp_mapping, void(∗primary_resp_map)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response), void(∗secondary_resp_map)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response))

  completes initialization of the RecastModel after alternate construction

- void submodel_supports_estimated_derivatives (bool ssed_flag)

  override the submodel's derivative estimation behavior

Protected Member Functions

- void derived_compute_response (const ActiveSet &set)

  (forward to subModel.compute_response())

- void derived_asynch_compute_response (const ActiveSet &set)

  (forward to subModel.asynch_compute_response())

- const ResponseArray & derived_synchronize ()

  (forward to subModel.synchronize())

- const IntResponseMap & derived_synchronize_nowait ()

  (forward to subModel.synchronize_nowait())

- Iterator & subordinate_iterator ()

  return sub-iterator, if present, within subModel

- Model & surrogate_model ()

  return surrogate model, if present, within subModel

- Model & truth_model ()

  return truth model, if present, within subModel

- void derived_subordinate_models (ModelList &ml, bool recurse_flag)

  add subModel to list and recurse into subModel

- void update_from_subordinate_model (bool recurse_flag=true)

  pass request to subModel if recursing and then update from it

- Interface & interface ()

  return subModel interface

- void surrogate_function_indices (const IntSet &surr_fn_indices)

  forward to subModel

- void surrogate_bypass (bool bypass_flag)

  models contained within this model

- void build_approximation ()

  builds the subModel approximation

- bool build_approximation (const Variables &vars, const Response &response)

  builds the subModel approximation

- void update_approximation (const Variables &vars, const Response &response, bool rebuild_flag)

  updates the subModel approximation

- void update_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array, bool rebuild_flag)

  updates the subModel approximation

- void append_approximation (const Variables &vars, const Response &response, bool rebuild_flag)

  appends the subModel approximation

- void append_approximation (const VariablesArray &vars_array, const ResponseArray &resp_array, bool rebuild_flag)

  appends the subModel approximation

- Array< Approximation > & approximations ()

  retrieve the set of Approximations from the subModel

- const RealVectorArray & approximation_coefficients ()

  retrieve the approximation coefficients from the subModel

- void approximation_coefficients (const RealVectorArray &approx_coeffs)

  set the approximation coefficients within the subModel

- void print_coefficients (ostream &s, size_t index) const

  print a particular set of approximation coefficients within the subModel

- const RealVector & approximation_variances (const RealVector &c_vars)

  retrieve the approximation variances from the subModel

- const List< SurrogateDataPoint > & approximation_data (size_t index)

  retrieve the approximation data from the subModel

- void component_parallel_mode (short mode)

  virtual function redefinition is simply a sanity check.

- String local_eval_synchronization ()

  return subModel local synchronization setting

- int local_eval_concurrency ()

  return subModel local evaluation concurrency

- bool derived_master_overload () const

  evaluation (request forwarded to subModel)

- void derived_init_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  set up RecastModel for parallel operations (request forwarded to subModel)

- void derived_init_serial ()

set up RecastModel for serial operations (request forwarded to subModel).

- void derived_set_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  set active parallel configuration within subModel

- void derived_free_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)

  to subModel)

- void serve ()

  Completes when a termination message is received from stop_servers().

- void stop_servers ()

  when RecastModel iteration is complete.

- const String & interface_id () const

  return the subModel interface identifier

- int evaluation_id () const

  forwarded to subModel)

- void set_evaluation_reference ()

  (request forwarded to subModel)

- void fine_grained_evaluation_counters ()

  request fine-grained evaluation reporting within subModel

- void print_evaluation_summary (ostream &s, bool minimal_header=false, bool relative_count=true) const

  forwarded to subModel)

Private Member Functions

- void set_mapping (const ActiveSet &recast_set, ActiveSet &sub_model_set)

  into sub_model_set for use with subModel.

- void update_from_sub_model ()

  update current variables/labels/bounds/targets from subModel

Private Attributes

- Model subModel

  the sub-model underlying the function pointers

- Sizet2DArray varsMapIndices
  subModel variables)
- bool nonlinearVarsMapping
  Hessians are managed per function, not per variable.
- bool respMapping
  are supplied
- Sizet2DArray primaryRespMapIndices
  to RecastModel Response).
- Sizet2DArray secondaryRespMapIndices
  to RecastModel response).
- BoolDequeArray nonlinearRespMapping
  augment the subModel function value/gradient requirements.
- IntActiveSetMap recastSetMap
  Needed for currentResponse update in synchronization routines.
- IntVariablesMap recastVarsMap
  synchronization routines.
- IntVariablesMap subModelVarsMap
  synchronization routines.
- ResponseArray recastResponseArray
  array of recast responses used by RecastModel::derived_synchronize()
- IntResponseMap recastResponseMap
  map of recast responses used by RecastModel::derived_synchronize_nowait()
- void(∗ variablesMapping)(const Variables &recast_vars, Variables &sub_model_vars)
  holds pointer for variables mapping function passed in ctor/initialize
- void(∗ setMapping)(const ActiveSet &recast_set, ActiveSet &sub_model_set)
  holds pointer for set mapping function passed in ctor/initialize
- void(∗ primaryRespMapping)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)
  ctor/initialize
- void(∗ secondaryRespMapping)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response)
  ctor/initialize

8.119.1 Detailed Description

in order to recast the form of its inputs and/or outputs.

The RecastModel class uses function pointers to allow recasting of the subModel input/output into new problem forms. This is currently used to recast SBO approximate subproblems, but can be used for multiobjective, input/output scaling, and other problem modifications in the future.

8.119.2 Constructor & Destructor Documentation

8.119.2.1 RecastModel (Model & *sub_model*, size_t *num_recast_primary_fns*, size_t *num_recast_secondary_fns*, size_t *recast_secondary_offset*)

alternate constructor

This alternate constructor defers initialization of the function pointers until a separate call to initialize(), and accepts the minimum information needed to construct currentVariables, currentResponse, and userDefinedConstraints. The resulting model is sufficiently complete for passing to an Iterator.

8.119.3 Member Function Documentation

8.119.3.1 void initialize (const Sizet2DArray & *vars_map_indices*, bool *nonlinear_vars_mapping*, void(∗)(const Variables &recast_vars, Variables &sub_model_vars) *variables_map*, void(∗)(const ActiveSet &recast_set, ActiveSet &sub_model_set) *set_map*, const Sizet2DArray & *primary_resp_map_indices*, const Sizet2DArray & *secondary_resp_map_indices*, const BoolDequeArray & *nonlinear_resp_mapping*, void(∗)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response) *primary_resp_map*, void(∗)(const Variables &sub_model_vars, const Variables &recast_vars, const Response &sub_model_response, Response &recast_response) *secondary_resp_map*)

completes initialization of the RecastModel after alternate construction

This function is used for late initialization of the recasting functions. It is used in concert with the alternate constructor.

8.119.3.2 void update_from_sub_model () [private]

update current variables/labels/bounds/targets from subModel

Update inactive values and labels in currentVariables and inactive bound constraints in userDefinedConstraints from variables and constraints data within subModel.

The documentation for this class was generated from the following files:

- RecastModel.H
- RecastModel.C

8.120 Response Class Reference

Response provides the handle class.

Public Member Functions

- Response ()
  default constructor
- Response (const Variables &vars, const ProblemDescDB &problem_db)
  standard constructor built from problem description database
- Response (const ActiveSet &set)
  alternate constructor using limited data
- Response (const Response &response)
  copy constructor
- ~Response ()
  destructor
- Response operator= (const Response &response)
  assignment operator
- size_t num_functions () const
  return the number of response functions
- const ActiveSet & active_set () const
  return the active set
- void active_set (const ActiveSet &set)
  set the active set
- const ShortArray & active_set_request_vector () const
  return the active set request vector
- void active_set_request_vector (const ShortArray &asrv)
  set the active set request vector
- const UIntArray & active_set_derivative_vector () const
  return the active set derivative vector

- void active_set_derivative_vector (const UIntArray &asdv)
  set the active set derivative vector
- const String & responses_id () const
  return the response identifier
- const String & function_label (const size_t &i) const
  return a response function identifier string
- const StringArray & function_labels () const
  return the response function identifier strings
- void function_label (const String &label, const size_t &i)
  set a response function identifier string
- void function_labels (const StringArray &labels)
  set the response function identifier strings
- const Real & function_value (const size_t &i) const
  return a function value
- const RealVector & function_values () const
  return all function values
- void function_value (const Real &function_val, const size_t &i)
  set a function value
- void function_values (const RealVector &function_vals)
  set all function values
- const RealBaseVector & function_gradient (const size_t &i) const
  return a function gradient
- const RealMatrix & function_gradients () const
  return all function gradients
- void function_gradient (const RealBaseVector &function_grad, const size_t &i)
  set a function gradient
- void function_gradients (const RealMatrix &function_grads)
  set all function gradients
- const RealMatrix & function_hessian (const size_t &i) const
  return a function Hessian
- const RealMatrixArray & function_hessians () const

return all function Hessians

- void function_hessian (const RealMatrix &function_hessian, const size_t &i)

  set a function Hessian

- void function_hessians (const RealMatrixArray &function_hessians)

  set all function Hessians

- void read (istream &s)

  read a response object from an istream

- void write (ostream &s) const

  write a response object to an ostream

- void read_annotated (istream &s)

  read a response object in annotated format from an istream

- void write_annotated (ostream &s) const

  write a response object in annotated format to an ostream

- void read_tabular (istream &s)

  read responseRep::functionValues in tabular format from an istream

- void write_tabular (ostream &s) const

  write responseRep::functionValues in tabular format to an ostream

- void read (BiStream &s)

  read a response object from the binary restart stream

- void write (BoStream &s) const

  write a response object to the binary restart stream

- void read (MPIUnpackBuffer &s)

  read a response object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a response object to a packed MPI buffer

- Response copy () const

  a deep copy for use in history mechanisms

- int data_size ()

  handle class forward to corresponding body class member function

- void read_data (double *response_data)

  handle class forward to corresponding body class member function

- void write_data (double *response_data)

  handle class forward to corresponding body class member function

- void overlay (const Response &response)

  handle class forward to corresponding body class member function

- void copy_results (const Response &response)

  different derivative array sizing between the two response objects.

- void copy_results (const RealVector &source_fn_vals, const RealMatrix &source_fn_grads, const RealMatrixArray &source_fn_hessians, const ActiveSet &source_set)

  object. Care is taken to allow different derivative array sizing.

- void copy_results_partial (size_t start_index_target, size_t num_items, const Response &response, size_t start_index_source)

  The response objects may have different numbers of response functions.

- void copy_results_partial (size_t start_index_target, size_t num_items, const RealVector &source_fn_vals, const RealMatrix &source_fn_grads, const RealMatrixArray &source_fn_hessians, const ActiveSet &source_set, size_t start_index_source)

  of response functions.

- void reshape (const size_t &num_fns, const size_t &num_params, bool grad_flag, bool hess_flag)

  rehapes response data arrays

- void reset ()

  handle class forward to corresponding body class member function

- void reset_inactive ()

  handle class forward to corresponding body class member function

- bool is_null () const

  function to check responseRep (does this handle contain a body)

Private Attributes

- ResponseRep * responseRep

  pointer to the body (handle-body idiom)

Friends

- bool operator== (const Response &resp1, const Response &resp2)

  equality operator

- bool operator!= (const Response &resp1, const Response &resp2)

  inequality operator

8.120.1 Detailed Description

Response provides the handle class.

The Response class is a container class for an abstract set of functions (functionValues) and their first (functionGradients) and second (functionHessians) derivatives. The functions may involve objective and constraint functions (optimization data set), least squares terms (parameter estimation data set), or generic response functions (uncertainty quantification data set). It is not currently part of a class hierarchy, since the abstraction has been sufficiently general and has not required specialization. For memory efficiency, it employs the "handle-body idiom" approach to reference counting and representation sharing (see Coplien "Advanced C++", p. 58), for which Response serves as the handle and ResponseRep serves as the body.

8.120.2 Constructor & Destructor Documentation

8.120.2.1 Response ()

default constructor

Need a populated problem description database to build a meaningful Response object, so set the responseRep=NULL in default constructor for efficiency. This then requires a check on NULL in the copy constructor, assignment operator, and destructor.

The documentation for this class was generated from the following files:

- DakotaResponse.H
- DakotaResponse.C

8.121 ResponseRep Class Reference

ResponseRep provides the body class.

Private Member Functions

- ResponseRep ()

  default constructor

- ResponseRep (const Variables &vars, const ProblemDescDB &problem_db)

  standard constructor built from problem description database

- ResponseRep (const ActiveSet &set)

  alternate constructor using limited data

- ~ResponseRep ()

  destructor

- void read (istream &s)

  read a responseRep object from an istream

- void write (ostream &s) const

  write a responseRep object to an ostream

- void read_annotated (istream &s)

  read a responseRep object from an istream (annotated format)

- void write_annotated (ostream &s) const

  write a responseRep object to an ostream (annotated format)

- void read_tabular (istream &s)

  read functionValues from an istream (tabular format)

- void write_tabular (ostream &s) const

  write functionValues to an ostream (tabular format)

- void read (BiStream &s)

  read a responseRep object from a binary stream

- void write (BoStream &s) const

  write a responseRep object to a binary stream

- void read (MPIUnpackBuffer &s)

  read a responseRep object from a packed MPI buffer

- void write (MPIPackBuffer &s) const

  write a responseRep object to a packed MPI buffer

- int data_size ()

  double∗ response_data arrays passed into read_data and write_data.

- void read_data (double ∗response_data)

  read from an incoming double∗ array

- void write_data (double ∗response_data)

  write to an incoming double∗ array

- void overlay (const Response &response)

  add incoming response to functionValues/Gradients/Hessians

- void copy_results (const RealVector &source_fn_vals, const RealMatrix &source_fn_grads, const RealMatrixArray &source_fn_hessians, const ActiveSet &source_set)

  update this response object from components of another response object

- void copy_results_partial (size_t start_index_target, size_t num_items, const RealVector &source_fn_-vals, const RealMatrix &source_fn_grads, const RealMatrixArray &source_fn_hessians, const ActiveSet &source_set, size_t start_index_source)

  another response object

- void reshape (const size_t &num_fns, const size_t &num_params, bool grad_flag, bool hess_flag)

  rehapes response data arrays

- void reset ()

  resets all response data to zero

- void reset_inactive ()

  resets all inactive response data to zero

- void active_set_request_vector (const ShortArray &asrv)

  of response functions

- void active_set_derivative_vector (const UIntArray &asdv)

  functionGradients/functionHessians if needed

Private Attributes

- int referenceCount

  number of handle objects sharing responseRep

- RealVector functionValues

  abstract set of response functions

- RealMatrix functionGradients

  first derivatives of the response functions

- RealMatrixArray functionHessians

  second derivatives of the response functions

- ActiveSet responseActiveSet

  copy of the ActiveSet used by the Model to generate a Response instance

- StringArray functionLabels

  response function identifiers used to improve output readability

- String idResponses

  response identifier string from the input file

Friends

- class Response

  the handle class can access attributes of the body class directly

- bool operator== (const ResponseRep &rep1, const ResponseRep &rep2)

  equality operator

8.121.1 Detailed Description

ResponseRep provides the body class.

The ResponseRep class is the "representation" of the response container class. It is the "body" portion of the "handle-body idiom" (see Coplien "Advanced C++", p. 58). The handle class (Response) provides for memory efficiency in management of multiple response objects through reference counting and representation sharing. The body class (ResponseRep) actually contains the response data (functionValues, functionGradients, functionHessians, etc.). The representation is hidden in that an instance of ResponseRep may only be created by Response. Therefore, programmers create instances of the Response handle class, and only need to be aware of the handle/body mechanisms when it comes to managing shallow copies (shared representation) versus deep copies (separate representation used for history mechanisms).

8.121.2 Constructor & Destructor Documentation

8.121.2.1 ResponseRep (const Variables & *vars*, const ProblemDescDB & *problem_db*) [private]

standard constructor built from problem description database

The standard constructor used by Dakota::ModelRep.

8.121.2.2 ResponseRep (const ActiveSet & *set*) [private]

alternate constructor using limited data

Used for building a response object of the correct size on the fly (e.g., by slave analysis servers performing execute() on a local_response). functionLabels is not needed for this purpose since it's not passed in the MPI send/recv buffers. However, NPSOLOptimizer's user-defined functions option uses this constructor to build bestResponse and bestResponse needs functionLabels for I/O, so construction of functionLabels has been added.

8.121.3 Member Function Documentation

8.121.3.1 void read (istream & *s*) [private]

read a responseRep object from an istream

ASCII version of read needs capabilities for capturing data omissions or formatting errors (resulting from user error or asynch race condition) and analysis failures (resulting from nonconvergence, instability, etc.).

8.121.3.2 void write (ostream & *s*) const [private]

write a responseRep object to an ostream

ASCII version of write.

8.121.3.3 void read_annotated (istream & *s*) [private]

read a responseRep object from an istream (annotated format)

read_annotated() is used for neutral file translation of restart files. Since objects are built solely from this data, annotations are used. This version closely mirrors the BiStream version.

8.121.3.4 void write_annotated (ostream & *s*) const [private]

write a responseRep object to an ostream (annotated format)

write_annotated() is used for neutral file translation of restart files. Since objects need to be build solely from this data, annotations are used. This version closely mirrors the BoStream version, with the exception of the use of white space between fields.

8.121.3.5 void read_tabular (istream & *s*) [private]

read functionValues from an istream (tabular format)

read_tabular is used to read functionValues in tabular format. It is currently only used by ApproximationInterfaces in reading samples from a file. There is insufficient data in a tabular file to build complete response objects; rather, the response object must be constructed a priori and then its functionValues can be set.

8.121.3.6 void write_tabular (ostream & *s*) const [private]

write functionValues to an ostream (tabular format)

write_tabular is used for output of functionValues in a tabular format for convenience in post-processing/plotting of DAKOTA results.

8.121.3.7 void read (BiStream & *s*) [private]

read a responseRep object from a binary stream

Binary version differs from ASCII version in 2 primary ways: (1) it lacks formatting. (2) the Response has not been sized a priori. In reading data from the binary restart file, a ParamResponsePair was constructed with its default constructor which called the Response default constructor. Therefore, we must first read sizing data and resize all of the arrays.

8.121.3.8 void write (BoStream & *s*) const [private]

write a responseRep object to a binary stream

Binary version differs from ASCII version in 2 primary ways: (1) It lacks formatting. (2) In reading data from the binary restart file, ParamResponsePairs are constructed with their default constructor which calls the Response default constructor. Therefore, we must first write sizing data so that ResponseRep::read(BoStream& s) can resize the arrays.

8.121.3.9 void read (MPIUnpackBuffer & *s*) [private]

read a responseRep object from a packed MPI buffer

UnpackBuffer version differs from BiStream version in the omission of functionLabels. Master processor retains labels and interface ids and communicates asv and response data only with slaves.

8.121.3.10 void write (MPIPackBuffer & *s*) const [private]

write a responseRep object to a packed MPI buffer

MPIPackBuffer version differs from BoStream version only in the omission of functionLabels. The master processor retains labels and ids and communicates asv and response data only with slaves.

8.121.3.11 void copy_results (const RealVector & *source_fn_vals*, const RealMatrix & *source_fn_grads*, const RealMatrixArray & *source_fn_hessians*, const ActiveSet & *source_set*) [private]

update this response object from components of another response object

Copy function values/gradients/Hessians data _only_. Prevents unwanted overwriting of responseActiveSet, functionLabels, etc. Also, care is taken to account for differences in derivative variable matrix sizing.

8.121.3.12 void copy_results_partial (size_t *start_index_target*, size_t *num_items*, const RealVector & *source_fn_vals*, const RealMatrix & *source_fn_grads*, const RealMatrixArray & *source_fn_hessians*, const ActiveSet & *source_set*, size_t *start_index_source*) [private]

another response object

Copy function values/gradients/Hessians data _only_. Prevents unwanted overwriting of responseActiveSet, functionLabels, etc. Also, care is taken to account for differences in derivative variable matrix sizing.

8.121.3.13 void reshape (const size_t & *num_fns*, const size_t & *num_params*, bool *grad_flag*, bool *hess_flag*) [private]

rehapes response data arrays

Reshape functionValues, functionGradients, and functionHessians according to num_fns, num_params, grad_flag, and hess_flag.

8.121.3.14 void reset () [private]

resets all response data to zero

Reset all numerical response data (not labels, ids, or active set) to zero.

8.121.3.15 void reset_inactive () [private]

resets all inactive response data to zero

Used to clear out any inactive data left over from previous evaluations.

8.121.4 Member Data Documentation

8.121.4.1 RealMatrix functionGradients [private]

first derivatives of the response functions

the gradient vectors (plural) are arranged as a Jacobian matrix (singular) with (row, col) = (response fn index, variable index).

The documentation for this class was generated from the following files:

- DakotaResponse.H
- DakotaResponse.C

8.122 SequentialHybridStrategy Class Reference

models of varying fidelity.

Inheritance diagram for SequentialHybridStrategy::

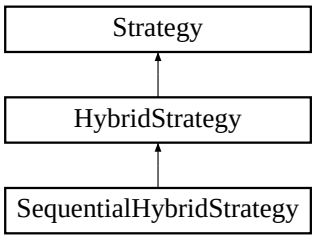

Public Member Functions

- SequentialHybridStrategy (ProblemDescDB &problem_db)

  constructor

- ~SequentialHybridStrategy ()

  destructor

Protected Member Functions

- void run_strategy ()

  iterators on different models of varying fidelity

- const Variables & variables_results () const

  return the final solution from selectedIterators (variables)

- const Response & response_results () const

  return the final solution from selectedIterators (response)

- void initialize_iterator (int job_index)

  scheduling function (serve_iterators() or static_schedule_iterators())

- void pack_parameters_buffer (MPIPackBuffer &send_buffer, int job_index)

  pack a send_buffer for assigning an iterator job to a server

- void unpack_parameters_buffer (MPIUnpackBuffer &recv_buffer)

  unpack a recv_buffer for accepting an iterator job from the scheduler

- void pack_results_buffer (MPIPackBuffer &send_buffer, int job_index)
  pack a send_buffer for returning iterator results from a server
- void unpack_results_buffer (MPIUnpackBuffer &recv_buffer, int job_index)
  unpack a recv_buffer for accepting iterator results from a server
- void update_local_results (int job_index)
  update local prpResults with current iteration results

Private Member Functions

- void run_sequential ()
  run a sequential hybrid
- void run_sequential_adaptive ()
  run a sequential adaptive hybrid
- void partition_results (int job_index, size_t &start_index, size_t &job_size)
  extraction from prpResults
- void extract_parameter_sets (int job_index, VariablesArray &partial_param_sets)
  extract partial_param_sets from prpResults based on job_index
- void extract_results_sets (int job_index, PRPArray &partial_prp_results)
  extract partial_prp_results from prpResults based on job_index
- void merge_results_sets (int job_index, PRPArray &partial_prp_results)
  merge partial_prp_results into prpResults based on job_index
- void update_local_results (PRPArray &partial_prp_results, int job_id)
  update the partial set of final results from the local iterator execution
- void initialize_iterator (const VariablesArray &param_sets)
  initialize_iterator(int) to update the active Model and Iterator

Private Attributes

- String hybridType
  sequential or sequential_adaptive
- size_t seqCount
  hybrid sequence counter: 0 to numIterators-1

- size_t numSolnsTransferred

  to the next iterator

- Real progressMetric

  a sequential adaptive hybrid

- Real progressThreshold

  sequential adaptive hybrid switches to the next method

8.122.1 Detailed Description

models of varying fidelity.

The sequential hybrid minimization strategy has two approaches: (1) the non-adaptive sequential hybrid runs one method to completion, passes its best results as the starting point for a subsequent method, and continues this succession until all methods have been executed (the stopping rules are controlled internally by each minimizer), and (2) the adaptive sequential hybrid uses adaptive stopping rules for the minimizers that are controlled externally by the strategy. Note that while the strategy is targeted at minimizers, any iterator may be used so long as it defines the notion of a final solution which can be passed as the starting point for subsequent iterators.

8.122.2 Member Function Documentation

8.122.2.1 void pack_parameters_buffer (MPIPackBuffer & *send_buffer*, int *job_index*) `[inline, protected, virtual]`

pack a send_buffer for assigning an iterator job to a server

This virtual function redefinition is executed on the dedicated master processor for self scheduling. It is not used for peer partitions.

Reimplemented from Strategy.

8.122.2.2 void unpack_parameters_buffer (MPIUnpackBuffer & *recv_buffer*) `[inline, protected, virtual]`

unpack a recv_buffer for accepting an iterator job from the scheduler

This virtual function redefinition is executed on an iterator server for dedicated master self scheduling. It is not used for peer partitions.

Reimplemented from Strategy.

8.122.2.3 void pack_results_buffer (MPIPackBuffer & *send_buffer*, int *job_index*) [inline, protected, virtual]

pack a send_buffer for returning iterator results from a server

This virtual function redefinition is executed either on an iterator server for dedicated master self scheduling or on peers 2 through n for static scheduling.

Reimplemented from Strategy.

8.122.2.4 void unpack_results_buffer (MPIUnpackBuffer & *recv_buffer*, int *job_index*) [inline, protected, virtual]

unpack a recv_buffer for accepting iterator results from a server

This virtual function redefinition is executed on an strategy master (either the dedicated master processor for self scheduling or peer 1 for static scheduling).

Reimplemented from Strategy.

8.122.2.5 void run_sequential () [private]

run a sequential hybrid

In the sequential nonadaptive case, there is no interference with the iterators. Each runs until its own convergence criteria is satisfied. Status: fully operational.

8.122.2.6 void run_sequential_adaptive () [private]

run a sequential adaptive hybrid

In the sequential adaptive case, there is interference with the iterators through the use of the ++ overloaded operator. iterator++ runs the iterator for one cycle, after which a progress_metric is computed. This progress metric is used to dictate method switching instead of each iterator's internal convergence criteria. Status: incomplete.

8.122.2.7 void extract_parameter_sets (int *job_index*, VariablesArray & *partial_param_sets*) [inline, private]

extract partial_param_sets from prpResults based on job_index

This convenience function is executed on an iterator master (static scheduling) or a strategy master (self scheduling) at run initialization time and has access to the full prpResults array (this is All-Reduced for all peers at the completion of each cycle in run_sequential()).

8.122.2.8 void extract_results_sets (int *job_index*, PRPArray & *partial_prp_results*) [inline, private]

extract partial_prp_results from prpResults based on job_index

This convenience function is executed on iterator servers 2 through n (peer partition) following iterator executions and prior to prpResults All-Reduce at bottom of run_sequential(). Therefore, some prpResults entries may be empty.

8.122.2.9 void merge_results_sets (int *job_index*, PRPArray & *partial_prp_results*) [inline, private]

merge partial_prp_results into prpResults based on job_index

This convenience function may be executed on either an iterator server (access to only a partial prpResults array) or the strategy master (access to full prpResults array).

The documentation for this class was generated from the following files:

- SequentialHybridStrategy.H
- SequentialHybridStrategy.C

8.123 SerialDirectApplicInterface Class Reference

plug-ins using assign_rep().

Inheritance diagram for SerialDirectApplicInterface::

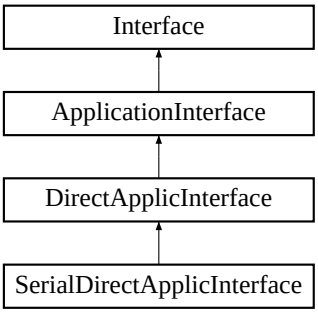

Public Member Functions

- SerialDirectApplicInterface (const Dakota::ProblemDescDB &problem_db)

  constructor

- ~SerialDirectApplicInterface ()

  destructor

Protected Member Functions

- int derived_map_ac (const Dakota::String &ac_name)

  execute an analysis code portion of a direct evaluation invocation

8.123.1 Detailed Description

plug-ins using assign_rep().

The plug-in SerialDirectApplicInterface resides in namespace SIM and uses a copy of rosenbrock() to perform serial parameter to response mappings. It may be activated by specifying the –with-plugin configure option, which activates the DAKOTA_PLUGIN macro in dakota_config.h used by main.C (which activates the plug-in code block within that file) and activates the PLUGIN_S declaration defined in Makefile.include and used in Makefile.source (which add this class to the build). Test input files should then use an analysis_driver of "plugin_-rosenbrock".

The documentation for this class was generated from the following files:

- PluginSerialDirectApplicInterface.H
- PluginSerialDirectApplicInterface.C

8.124 SingleMethodStrategy Class Reference

single model.

Inheritance diagram for SingleMethodStrategy::

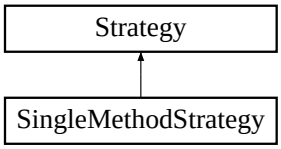

Public Member Functions

- SingleMethodStrategy (ProblemDescDB &problem_db)

  constructor

- ~SingleMethodStrategy ()

  destructor

- void run_strategy ()

  Perform the strategy by executing selectedIterator on userDefinedModel.

- const Variables & variables_results () const

  return the final solution from selectedIterator (variables)

- const Response & response_results () const

  return the final solution from selectedIterator (response)

Private Attributes

- Model userDefinedModel

  the model to be iterated

- Iterator selectedIterator

  the iterator

8.124.1 Detailed Description

single model.

This strategy executes a single iterator on a single model. Since it does not provide coordination for multiple iterators and models, it can considered to be a "fall-through" strategy in that it allows control to fall through immediately to the iterator.

The documentation for this class was generated from the following files:

- SingleMethodStrategy.H
- SingleMethodStrategy.C

8.125 SingleModel Class Reference

variables into responses.

Inheritance diagram for SingleModel::

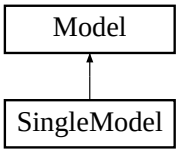

Public Member Functions

- SingleModel (ProblemDescDB &problem_db)
  constructor
- ~SingleModel ()
  destructor

Protected Member Functions

- Interface & interface ()
  return userDefinedInterface
- void derived_compute_response (const ActiveSet &set)
  (invokes a synchronous map() on userDefinedInterface)
- void derived_asynch_compute_response (const ActiveSet &set)
  (invokes an asynchronous map() on userDefinedInterface)
- const ResponseArray & derived_synchronize ()
  (invokes synch() on userDefinedInterface)
- const IntResponseMap & derived_synchronize_nowait ()
  (invokes synch_nowait() on userDefinedInterface)
- void component_parallel_mode (short mode)
  so this virtual function redefinition is simply a sanity check.
- String local_eval_synchronization ()

return userDefinedInterface synchronization setting

- int local_eval_concurrency ()
  return userDefinedInterface asynchronous evaluation concurrency
- bool derived_master_overload () const
  evaluation (request forwarded to userDefinedInterface)
- void derived_init_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)
  userDefinedInterface)
- void derived_init_serial ()
  userDefinedInterface).
- void derived_set_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)
  (request forwarded to userDefinedInterface)
- void derived_free_communicators (const int &max_iterator_concurrency, bool recurse_flag=true)
  (request forwarded to userDefinedInterface)
- void serve ()
  Completes when a termination message is received from stop_servers().
- void stop_servers ()
  operations when SingleModel iteration is complete.
- const String & interface_id () const
  return the userDefinedInterface identifier
- int evaluation_id () const
  (request forwarded to userDefinedInterface)
- void set_evaluation_reference ()
  (request forwarded to userDefinedInterface)
- void fine_grained_evaluation_counters ()
  request fine-grained evaluation reporting within the userDefinedInterface
- void print_evaluation_summary (ostream &s, bool minimal_header=false, bool relative_count=true) const

  (request forwarded to userDefinedInterface)

Private Attributes

- Interface userDefinedInterface
  the interface used for mapping variables to responses

8.125.1 Detailed Description

variables into responses.

The SingleModel class is the simplest of the derived model classes. It provides the capabilities of the original Model class, prior to the development of surrogate and nested model extensions. The derived response computation and synchronization functions utilize a single interface to perform the function evaluations.

The documentation for this class was generated from the following files:

- SingleModel.H
- SingleModel.C

8.126 SNLLBase Class Reference

Base class for OPT++ optimization and least squares methods.

Inheritance diagram for SNLLBase::

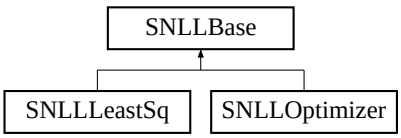

Public Member Functions

- SNLLBase ()

  default constructor

- SNLLBase (Model &model)

  standard constructor

- ~SNLLBase ()

  destructor

Protected Member Functions

- void copy_con_vals (const RealVector &local_fn_vals, NEWMAT::ColumnVector &g, const size_t &offset)

  constraint evaluator functions

- void copy_con_vals (const NEWMAT::ColumnVector &g, RealVector &local_fn_vals, const size_t &offset)

  final solution logging

- void copy_con_grad (const RealMatrix &local_fn_grads, NEWMAT::Matrix &grad_g, const size_t &offset)

  used by constraint evaluator functions

- void copy_con_hess (const RealMatrixArray &local_fn_hessians, OPTPP::OptppArray< NEWMAT::SymmetricMatrix > &hess_g, const size_t &offset)

  used by constraint evaluator functions

- void snll_pre_instantiate (const String &merit_fn, bool bound_constr_flag, const int &num_constr)

method instantiation

- void snll_post_instantiate (const int &num_cv, bool vendor_num_grad_flag, const String &finite_diff_-type, const Real &fdss, const int &max_iter, const int &max_fn_evals, const Real &conv_tol, const Real &grad_tol, const Real &max_step, bool bound_constr_flag, const int &num_constr, short output_-lev, OPTPP::OptimizeClass *the_optimizer, OPTPP::NLP0 *nlf_objective, OPTPP::FDNLF1 *fd_nlf1, OPTPP::FDNLF1 *fd_nlf1_con)

  method instantiation

- void snll_pre_run (OPTPP::NLP0 *nlf_objective, OPTPP::NLP *nlp_constraint, const RealVector &init_-pt, bool bound_constr_flag, const RealVector &lower_bnds, const RealVector &upper_bnds, const RealMatrix &lin_ineq_coeffs, const RealVector &lin_ineq_l_bnds, const RealVector &lin_ineq_u_bnds, const RealMatrix &lin_eq_coeffs, const RealVector &lin_eq_targets, const RealVector &nln_ineq_l_bnds, const RealVector &nln_ineq_u_bnds, const RealVector &nln_eq_targets)

  method invocation

- void snll_post_run (OPTPP::NLP0 *nlf_objective)

  method instantiations

Static Protected Member Functions

- static void init_fn (int n, NEWMAT::ColumnVector &x)

  An initialization mechanism provided by OPT++ (not currently used).

Protected Attributes

- String searchMethod

  trust_region, or tr_pds

- OPTPP::SearchStrategy searchStrat

  enum: LineSearch, TrustRegion, or TrustPDS

- OPTPP::MeritFcn meritFn

  enum: NormFmu, ArgaezTapia, or VanShanno

- bool constantASVFlag

  this into mode override, reliance on duplicate detection can be avoided.

Static Protected Attributes

- static Minimizer * optLSqInstance

  evaluator functions in order to avoid the need for static data

- static bool modeOverrideFlag

  Hessian requests).

- static EvalType lastFnEvalLocn

  evaluator was the last location of a function evaluation

- static int lastEvalMode

  copy of mode from constraint evaluators

- static RealVector lastEvalVars

  copy of variables from constraint evaluators

8.126.1 Detailed Description

Base class for OPT++ optimization and least squares methods.

The SNLLBase class provides a common base class for SNLLOptimizer and SNLLLeastSq, both of which are wrappers for OPT++, a C++ optimization library from the Computational Sciences and Mathematics Research (CSMR) department at Sandia's Livermore CA site.

The documentation for this class was generated from the following files:

- SNLLBase.H
- SNLLBase.C

8.127 SNLLLeastSq Class Reference

Wrapper class for the OPT++ optimization library.

Inheritance diagram for SNLLLeastSq::

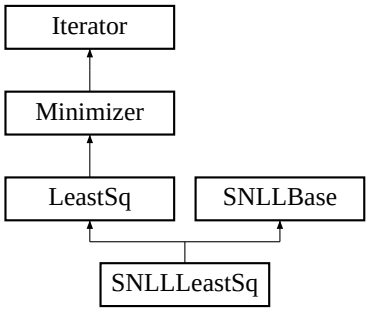

Public Member Functions

- SNLLLeastSq (Model &model)

  standard constructor

- SNLLLeastSq (const String &method_name, Model &model)

  alternate constructor for instantiations without ProblemDescDB support

- ~SNLLLeastSq ()

  destructor

- void minimize_residuals ()

  Performs the iterations to determine the least squares solution.

Protected Member Functions

- void derived_pre_run ()

  invokes SNLLBase::snll_pre_run() and performs other set-up

- void derived_post_run ()

  invokes SNLLBase::snll_post_run() and performs other solution processing

Static Private Member Functions

- static void nlf2_evaluator_gn (int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::Real &f, NEWMAT::ColumnVector &grad_f, NEWMAT::SymmetricMatrix &hess_f, int &result_mode)

  value, gradient, and Hessian using the Gauss-Newton approximation.

- static void constraint1_evaluator_gn (int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::ColumnVector &g, NEWMAT::Matrix &grad_g, int &result_mode)

  values and gradients to OPT++ Gauss-Newton methods.

- static void constraint2_evaluator_gn (int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::ColumnVector &g, NEWMAT::Matrix &grad_g, OPTPP::OptppArray< NEWMAT::SymmetricMatrix > &hess_g, int &result_mode)

  values, gradients, and Hessians to OPT++ Gauss-Newton methods.

Private Attributes

- SNLLLeastSq * prevSnllLSqInstance

  restoration in the case of iterator/model recursion

- OPTPP::NLP0 * nlfObjective

  objective NLF base class pointer

- OPTPP::NLP0 * nlfConstraint

  constraint NLF base class pointer

- OPTPP::NLP * nlpConstraint

  constraint NLP pointer

- OPTPP::NLF2 * nlf2

  pointer to objective NLF for full Newton optimizers

- OPTPP::NLF2 * nlf2Con

  pointer to constraint NLF for full Newton optimizers

- OPTPP::NLF1 * nlf1Con

  pointer to constraint NLF for Quasi Newton optimizers

- OPTPP::OptimizeClass * theOptimizer

  optimizer base class pointer

- OPTPP::OptNewton * optnewton

  Newton optimizer pointer.

- OPTPP::OptBCNewton * optbcnewton

Bound constrained Newton optimizer ptr.

- OPTPP::OptDHNIPS * optdhnips

  Disaggregated Hessian NIPS optimizer ptr.

Static Private Attributes

- static SNLLLeastSq * snllLSqInstance

  functions in order to avoid the need for static data

8.127.1 Detailed Description

Wrapper class for the OPT++ optimization library.

The SNLLLeastSq class provides a wrapper for OPT++, a C++ optimization library of nonlinear programming and pattern search techniques from the Computational Sciences and Mathematics Research (CSMR) department at Sandia's Livermore CA site. It uses a function pointer approach for which passed functions must be either global functions or static member functions. Any attribute used within static member functions must be either local to that function, a static member, or accessed by static pointer.

The user input mappings are as follows: `max_iterations`, `max_function_evaluations`, `convergence_tolerance`, `max_step`, `gradient_tolerance`, `search_method`, and `search_scheme_size` are set using OPT++'s setMaxIter(), setMaxFeval(), setFcnTol(), setMaxStep(), setGradTol(), setSearchStrategy(), and setSSS() member functions, respectively; `output` verbosity is used to toggle OPT++'s debug mode using the setDebug() member function. Internal to OPT++, there are 3 search strategies, while the DAKOTA `search_method` specification supports 4 (`value_based_line_search`, `gradient_based_line_search`, `trust_region`, or `tr_pds`). The difference stems from the "is_expensive" flag in OPT++. If the search strategy is LineSearch and "is_expensive" is turned on, then the `value_based_line_search` is used. Otherwise (the "is_expensive" default is off), the algorithm will use the `gradient_based_line_search`. Refer to [Meza, J.C., 1994] and to the OPT++ source in the Dakota/methods/OPTPP directory for information on OPT++ class member functions.

8.127.2 Member Function Documentation

8.127.2.1 void nlf2_evaluator_gn (int *mode*, int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::Real & *f*, NEWMAT::ColumnVector & *grad_f*, NEWMAT::SymmetricMatrix & *hess_f*, int & *result_mode*) `[static, private]`

value, gradient, and Hessian using the Gauss-Newton approximation.

This nlf2 evaluator function is used for the Gauss-Newton method in order to exploit the special structure of the nonlinear least squares problem. Here, fx = sum (T_i - Tbar_i)^2 and Response is made up of residual functions and their gradients along with any nonlinear constraints. The objective function and its gradient vector

and Hessian matrix are computed directly from the residual functions and their derivatives (which are returned from the Response object).

8.127.2.2 void constraint1_evaluator_gn (int *mode*, int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::ColumnVector & *g*, NEWMAT::Matrix & *grad_g*, int & *result_mode*) `[static, private]`

values and gradients to OPT++ Gauss-Newton methods.

While it does not employ the Gauss-Newton approximation, it is distinct from constraint1_evaluator() due to its need to anticipate the required modes for the least squares terms. This constraint evaluator function is used with diaggregated Hessian NIPS and is currently active.

8.127.2.3 static void constraint2_evaluator_gn (int *mode*, int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::ColumnVector & *g*, NEWMAT::Matrix & *grad_g*, OPTPP::OptppArray< NEWMAT::SymmetricMatrix > & *hess_g*, int & *result_mode*) `[static, private]`

values, gradients, and Hessians to OPT++ Gauss-Newton methods.

While it does not employ the Gauss-Newton approximation, it is distinct from constraint2_evaluator() due to its need to anticipate the required modes for the least squares terms. This constraint evaluator function is used with full Newton NIPS and is currently inactive.

The documentation for this class was generated from the following files:

- SNLLLeastSq.H
- SNLLLeastSq.C

8.128 SNLLOptimizer Class Reference

Wrapper class for the OPT++ optimization library.

Inheritance diagram for SNLLOptimizer::

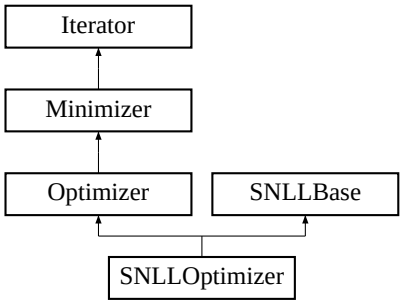

Public Member Functions

- SNLLOptimizer (Model &model)

  standard constructor

- SNLLOptimizer (const String &method_name, Model &model)

  alternate constructor for instantiations "on the fly"

- SNLLOptimizer (const RealVector &initial_point, const RealVector &var_lower_bnds, const RealVector &var_upper_bnds, const RealMatrix &lin_ineq_coeffs, const RealVector &lin_ineq_lower_bnds, const RealVector &lin_ineq_upper_bnds, const RealMatrix &lin_eq_coeffs, const RealVector &lin_eq_-targets, const RealVector &nonlin_ineq_lower_bnds, const RealVector &nonlin_ineq_upper_bnds, const RealVector &nonlin_eq_targets, void(∗user_obj_eval)(int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::Real &f, NEWMAT::ColumnVector &grad_f, int &result_mode), void(∗user_con_-eval)(int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::ColumnVector &g, NEW-MAT::Matrix &grad_g, int &result_mode))

  alternate constructor for instantiations "on the fly"

- ∼SNLLOptimizer ()

  destructor

- void find_optimum ()

  Performs the iterations to determine the optimal solution.

Protected Member Functions

- void derived_pre_run ()

  and performs other set-up

- void derived_post_run ()

  and performs other data recovery

Static Private Member Functions

- static void nlf0_evaluator (int n, const NEWMAT::ColumnVector &x, NEWMAT::Real &f, int &result_mode)

  require only function values.

- static void nlf1_evaluator (int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::Real &f, NEWMAT::ColumnVector &grad_f, int &result_mode)

  values and gradients to OPT++ methods.

- static void nlf2_evaluator (int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::Real &f, NEWMAT::ColumnVector &grad_f, NEWMAT::SymmetricMatrix &hess_f, int &result_mode)

  values, gradients, and Hessians to OPT++ methods.

- static void constraint0_evaluator (int n, const NEWMAT::ColumnVector &x, NEWMAT::ColumnVector &g, int &result_mode)

  only constraint values.

- static void constraint1_evaluator (int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::ColumnVector &g, NEWMAT::Matrix &grad_g, int &result_mode)

  values and gradients to OPT++ methods.

- static void constraint2_evaluator (int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::ColumnVector &g, NEWMAT::Matrix &grad_g, OPTPP::OptppArray< NEWMAT::SymmetricMatrix > &hess_g, int &result_mode)

  values, gradients, and Hessians to OPT++ methods.

Private Attributes

- SNLLOptimizer * prevSnllOptInstance

  restoration in the case of iterator/model recursion

- OPTPP::NLP0 * nlfObjective

  objective NLF base class pointer

- OPTPP::NLP0 * nlfConstraint

constraint NLF base class pointer

- OPTPP::NLP * nlpConstraint

  constraint NLP pointer

- OPTPP::NLF0 * nlf0

  pointer to objective NLF for nongradient optimizers

- OPTPP::NLF1 * nlf1

  pointer to objective NLF for (analytic) gradient-based optimizers

- OPTPP::NLF1 * nlf1Con

  pointer to constraint NLF for (analytic) gradient-based optimizers

- OPTPP::FDNLF1 * fdnlf1

  pointer to objective NLF for (finite diff) gradient-based optimizers

- OPTPP::FDNLF1 * fdnlf1Con

  pointer to constraint NLF for (finite diff) gradient-based optimizers

- OPTPP::NLF2 * nlf2

  pointer to objective NLF for full Newton optimizers

- OPTPP::NLF2 * nlf2Con

  pointer to constraint NLF for full Newton optimizers

- OPTPP::OptimizeClass * theOptimizer

  optimizer base class pointer

- OPTPP::OptPDS * optpds

  PDS optimizer pointer.

- OPTPP::OptCG * optcg

  CG optimizer pointer.

- OPTPP::OptLBFGS * optlbfgs

  L-BFGS optimizer pointer.

- OPTPP::OptNewton * optnewton

  Newton optimizer pointer.

- OPTPP::OptQNewton * optqnewton

  Quasi-Newton optimizer pointer.

- OPTPP::OptFDNewton * optfdnewton

  Finite Difference Newton opt pointer.

- OPTPP::OptBCNewton * optbcnewton

  Bound constrained Newton opt pointer.

- OPTPP::OptBCQNewton * optbcqnewton

  Bnd constrained Quasi-Newton opt ptr.

- OPTPP::OptBCFDNewton * optbcfdnewton

  Bnd constrained FD-Newton opt ptr.

- OPTPP::OptNIPS * optnips

  NIPS optimizer pointer.

- OPTPP::OptQNIPS * optqnips

  Quasi-Newton NIPS optimizer pointer.

- OPTPP::OptFDNIPS * optfdnips

  Finite Difference NIPS opt pointer.

- String setUpType

  NonDReliability currently uses the user_functions mode.

- RealVector initialPoint

  holds initial point passed in for "user_functions" mode.

- RealVector lowerBounds

  holds variable lower bounds passed in for "user_functions" mode.

- RealVector upperBounds

  holds variable upper bounds passed in for "user_functions" mode.

Static Private Attributes

- static SNLLOptimizer * snllOptInstance

  functions in order to avoid the need for static data

8.128.1 Detailed Description

Wrapper class for the OPT++ optimization library.

The SNLLOptimizer class provides a wrapper for OPT++, a C++ optimization library of nonlinear programming and pattern search techniques from the Computational Sciences and Mathematics Research (CSMR) department at Sandia's Livermore CA site. It uses a function pointer approach for which passed functions must be either

global functions or static member functions. Any attribute used within static member functions must be either local to that function, a static member, or accessed by static pointer.

The user input mappings are as follows: `max_iterations`, `max_function_evaluations`, `convergence_tolerance`, `max_step`, `gradient_tolerance`, `search_method`, and `search_scheme_size` are set using OPT++'s setMaxIter(), setMaxFeval(), setFcnTol(), setMaxStep(), setGradTol(), setSearchStrategy(), and setSSS() member functions, respectively; `output` verbosity is used to toggle OPT++'s debug mode using the setDebug() member function. Internal to OPT++, there are 3 search strategies, while the DAKOTA `search_method` specification supports 4 (`value_based_line_search`, `gradient_based_line_search`, `trust_region`, or `tr_pds`). The difference stems from the "is_expensive" flag in OPT++. If the search strategy is LineSearch and "is_expensive" is turned on, then the `value_based_line_search` is used. Otherwise (the "is_expensive" default is off), the algorithm will use the `gradient_based_line_search`. Refer to [Meza, J.C., 1994] and to the OPT++ source in the Dakota/methods/OPTPP directory for information on OPT++ class member functions.

8.128.2 Constructor & Destructor Documentation

8.128.2.1 SNLLOptimizer (Model & *model*)

standard constructor

This constructor is used for normal instantiations using data from the ProblemDescDB.

8.128.2.2 SNLLOptimizer (const String & *method_name*, Model & *model*)

alternate constructor for instantiations "on the fly"

This is an alternate constructor for instantiations on the fly using a Model but no ProblemDescDB.

8.128.2.3 SNLLOptimizer (const RealVector & *initial_point*, const RealVector & *var_lower_bnds*, const RealVector & *var_upper_bnds*, const RealMatrix & *lin_ineq_coeffs*, const RealVector & *lin_ineq_lower_bnds*, const RealVector & *lin_ineq_upper_bnds*, const RealMatrix & *lin_eq_coeffs*, const RealVector & *lin_eq_targets*, const RealVector & *nonlin_ineq_lower_bnds*, const RealVector & *nonlin_ineq_upper_bnds*, const RealVector & *nonlin_eq_targets*, void(∗)(int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::Real &f, NEWMAT::ColumnVector &grad_f, int &result_mode) *user_obj_eval*, void(∗)(int mode, int n, const NEWMAT::ColumnVector &x, NEWMAT::ColumnVector &g, NEWMAT::Matrix &grad_g, int &result_mode) *user_con_eval*)

alternate constructor for instantiations "on the fly"

This is an alternate constructor for performing an optimization using the passed in objective function and constraint function pointers.

8.128.3 Member Function Documentation

8.128.3.1 void nlf0_evaluator (int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::Real & *f*, int & *result_mode*) `[static, private]`

require only function values.

For use when DAKOTA computes f and gradients are not directly available. This is used by nongradient-based optimizers such as PDS and by gradient-based optimizers in vendor numerical gradient mode (opt++'s internal finite difference routine is used).

8.128.3.2 void nlf1_evaluator (int *mode*, int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::Real & *f*, NEWMAT::ColumnVector & *grad_f*, int & *result_mode*) `[static, private]`

values and gradients to OPT++ methods.

For use when DAKOTA computes f and df/dX (regardless of gradientType). Vendor numerical gradient case is handled by nlf0_evaluator.

8.128.3.3 void nlf2_evaluator (int *mode*, int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::Real & *f*, NEWMAT::ColumnVector & *grad_f*, NEWMAT::SymmetricMatrix & *hess_f*, int & *result_mode*) `[static, private]`

values, gradients, and Hessians to OPT++ methods.

For use when DAKOTA receives f, df/dX, & d^2f/dx^2 from the ApplicationInterface (analytic only). Finite differencing does not make sense for a full Newton approach, since lack of analytic gradients & Hessian should dictate the use of quasi-newton or fd-newton. Thus, there is no fdnlf2_evaluator for use with full Newton approaches, since it is preferable to use quasi-newton or fd-newton with nlf1. Gauss-Newton does not fit this model; it uses nlf2_evaluator_gn instead of nlf2_evaluator.

8.128.3.4 void constraint0_evaluator (int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::ColumnVector & *g*, int & *result_mode*) `[static, private]`

only constraint values.

For use when DAKOTA computes g and gradients are not directly available. This is used by nongradient-based optimizers and by gradient-based optimizers in vendor numerical gradient mode (opt++'s internal finite difference routine is used).

8.128.3.5 void constraint1_evaluator (int *mode*, int *n*, const NEWMAT::ColumnVector & *x*, NEWMAT::ColumnVector & *g*, NEWMAT::Matrix & *grad_g*, int & *result_mode*) `[static, private]`

values and gradients to OPT++ methods.

For use when DAKOTA computes g and dg/dX (regardless of gradientType). Vendor numerical gradient case is handled by constraint0_evaluator.

The documentation for this class was generated from the following files:

- SNLLOptimizer.H
- SNLLOptimizer.C

8.129 SOLBase Class Reference

Base class for Stanford SOL software.

Inheritance diagram for SOLBase::

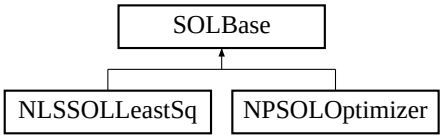

Public Member Functions

- SOLBase ()

  default constructor

- SOLBase (Model &model)

  standard constructor

- ~SOLBase ()

  destructor

Protected Member Functions

- void allocate_arrays (const int &num_cv, const size_t &num_nln_con, const RealMatrix &lin_ineq_coeffs, const RealMatrix &lin_eq_coeffs)

  Allocates miscellaneous arrays for the SOL algorithms.

- void deallocate_arrays ()

  Deallocates memory previously allocated by allocate_arrays().

- void allocate_workspace (const int &num_cv, const int &num_nln_con, const int &num_lin_con, const int &num_lsq)

  Allocates real and integer workspaces for the SOL algorithms.

- void set_options (bool speculative_flag, bool vendor_num_grad_flag, short output_lev, const int &verify_-lev, const Real &fn_prec, const Real &linesrch_tol, const int &max_iter, const Real &constr_tol, const Real &conv_tol, const String &grad_type, const Real &fdss)

  Sets SOL method options using calls to npoptn2.

- void augment_bounds (RealVector &augmented_l_bnds, RealVector &augmented_u_bnds, const RealVector &lin_ineq_l_bnds, const RealVector &lin_ineq_u_bnds, const RealVector &lin_eq_targets, const RealVector &nln_ineq_l_bnds, const RealVector &nln_ineq_u_bnds, const RealVector &nln_eq_-targets)

  augments variable bounds with linear and nonlinear constraint bounds.

Static Protected Member Functions

- static void constraint_eval (int &mode, int &ncnln, int &n, int &nrowj, int *needc, double *x, double *c, double *cjac, int &nstate)

  derivatives of the nonlinear constraint functions

Protected Attributes

- int realWorkSpaceSize

  size of realWorkSpace

- int intWorkSpaceSize

  size of intWorkSpace

- RealArray realWorkSpace

  real work space for NPSOL/NLSSOL

- IntArray intWorkSpace

  int work space for NPSOL/NLSSOL

- int nlnConstraintArraySize

  used for non-zero array sizing (nonlinear constraints)

- int linConstraintArraySize

  used for non-zero array sizing (linear constraints)

- RealArray cLambda

  CLAMBDA from NPSOL manual: Langrange multipliers.

- IntArray constraintState

  ISTATE from NPSOL manual: constraint status.

- int informResult

  INFORM from NPSOL manual: optimization status on exit.

- int numberIterations

  ITER from NPSOL manual: number of (major) iterations performed.

- int boundsArraySize

  nonlinear constraint bounds)

- double * linConstraintMatrixF77

  [A] matrix from NPSOL manual: linear constraint coefficients

- double * upperFactorHessianF77

  the Lagrangian.

- double * constraintJacMatrixF77

  [CJAC] matrix from NPSOL manual: nonlinear constraint Jacobian

- int fnEvalCntr

  counter for testing against maxFunctionEvals

- size_t constrOffset

  and NPSOLOptimizer::numObjectiveFns

Static Protected Attributes

- static SOLBase * solInstance

  functions in order to avoid the need for static data

- static Minimizer * optLSqInstance

  evaluator functions in order to avoid the need for static data

8.129.1 Detailed Description

Base class for Stanford SOL software.

The SOLBase class provides a common base class for NPSOLOptimizer and NLSSOLLeastSq, both of which are Fortran 77 sequential quadratic programming algorithms from Stanford University marketed by Stanford Business Associates.

The documentation for this class was generated from the following files:

- SOLBase.H
- SOLBase.C

8.130 Strategy Class Reference

Base class for the strategy class hierarchy.

Inheritance diagram for Strategy::

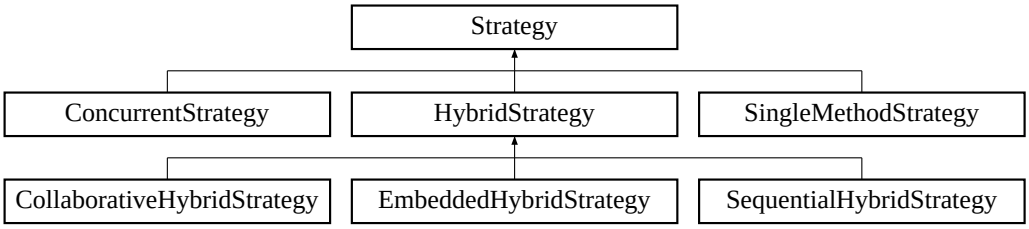

Public Member Functions

- Strategy ()
  default constructor
- Strategy (ProblemDescDB &problem_db)
  envelope constructor
- Strategy (const Strategy &strat)
  copy constructor
- virtual ~Strategy ()
  destructor
- Strategy operator= (const Strategy &strat)
  assignment operator
- virtual void run_strategy ()
  the model(s). Called from main.C.
- virtual const Variables & variables_results () const
  return the final strategy solution (variables)
- virtual const Response & response_results () const
  return the final strategy solution (response)
- ProblemDescDB & problem_description_db () const
  returns the problem description database (probDescDB)

Protected Member Functions

- Strategy (BaseConstructor, ProblemDescDB &problem_db)
  derived class constructors - Coplien, p. 139)
- virtual void initialize_iterator (int index)
  scheduling function (serve_iterators() or static_schedule_iterators())
- virtual void pack_parameters_buffer (MPIPackBuffer &send_buffer, int job_index)
  pack a send_buffer for assigning an iterator job to a server
- virtual void unpack_parameters_buffer (MPIUnpackBuffer &recv_buffer)
  unpack a recv_buffer for accepting an iterator job from the scheduler
- virtual void pack_results_buffer (MPIPackBuffer &send_buffer, int job_index)
  pack a send_buffer for returning iterator results from a server
- virtual void unpack_results_buffer (MPIUnpackBuffer &recv_buffer, int job_index)
  unpack a recv_buffer for accepting iterator results from a server
- virtual void update_local_results (int job_index)
  update local prpResults with current iteration results
- void init_iterator_parallelism ()
  parallel configuration attributes, and managing outputs and restart.
- void init_iterator (Iterator &the_iterator, Model &the_model)
  convenience function for allocating comms prior to running an iterator
- void run_iterator (Iterator &the_iterator, Model &the_model)
  due to use by MINLPNode.
- void free_iterator (Iterator &the_iterator, Model &the_model)
  convenience function for deallocating comms after running an iterator
- void schedule_iterators (Iterator &the_iterator, Model &the_model)
  static_schedule_iterators()
- void self_schedule_iterators (Model &the_model)
  among slave iterator servers (called by derived run_strategy())
- void serve_iterators (Iterator &the_iterator, Model &the_model)
  assigned by the strategy master (called by derived run_strategy())
- void static_schedule_iterators (Iterator &the_iterator, Model &the_model)
  (called by derived run_strategy())

Protected Attributes

- ProblemDescDB & probDescDB

  class member reference to the problem description database

- ParallelLibrary & parallelLib

  class member reference to the parallel library

- String strategyName

  type of strategy: single_method, hybrid, multi_start, or pareto_set.

- bool stratIterMessagePass

  flag for message passing at si level

- bool stratIterDedMaster

  flag for dedicated master part. at si level

- int worldRank

  processor rank in MPI_COMM_WORLD

- int worldSize

  size of MPI_COMM_WORLD

- int iteratorCommRank

  processor rank in iteratorComm

- int iteratorCommSize

  number of processors in iteratorComm

- int numIteratorServers

  number of concurrent iterator partitions

- int iteratorServerId

  identifier for an iterator server

- bool graph2DFlag

  flag for using 2D graphics plots

- bool tabularDataFlag

  flag for file tabulation of graphics data

- String tabularDataFile

  filename for tabulation of graphics data

- int maxConcurrency

  maximum iterator concurrency possible in Strategy

- int numIteratorJobs

  number of iterator executions to schedule

- PRPArray prpResults

  array of results corresponding to numIteratorJobs

- int paramsMsgLen

  length of MPI buffer for parameterSets instance(s)

- int resultsMsgLen

  length of MPI buffer for prpResults instance(s)

Private Member Functions

- Strategy ∗ get_strategy ()

  Used by the envelope to instantiate the correct letter class.

Private Attributes

- Strategy ∗ strategyRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing strategyRep

8.130.1 Detailed Description

Base class for the strategy class hierarchy.

The Strategy class is the base class for the class hierarchy providing the top level control in DAKOTA. The strategy is responsible for creating and managing iterators and models. For memory efficiency and enhanced polymorphism, the strategy hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (Strategy) serves as the envelope and one of the derived classes (selected in Strategy::get_strategy()) serves as the letter.

8.130.2 Constructor & Destructor Documentation

8.130.2.1 Strategy ()

default constructor

Default constructor. strategyRep is NULL in this case (a populated problem_db is needed to build a meaningful Strategy object). This makes it necessary to check for NULL in the copy constructor, assignment operator, and destructor.

8.130.2.2 Strategy (ProblemDescDB & *problem_db*)

envelope constructor

Used in main.C instantiation to build the envelope. This constructor only needs to extract enough data to properly execute get_strategy, since Strategy::Strategy(BaseConstructor, problem_db) builds the actual base class data inherited by the derived strategies.

8.130.2.3 Strategy (const Strategy & *strat*)

copy constructor

Copy constructor manages sharing of strategyRep and incrementing of referenceCount.

8.130.2.4 ∼Strategy () [virtual]

destructor

Destructor decrements referenceCount and only deletes strategyRep when referenceCount reaches zero.

8.130.2.5 Strategy (BaseConstructor, ProblemDescDB & *problem_db*) [protected]

derived class constructors - Coplien, p. 139)

This constructor is the one which must build the base class data for all inherited strategies. get_strategy() instantiates a derived class letter and the derived constructor selects this base class constructor in its initialization list (to avoid the recursion of the base class constructor calling get_strategy() again). Since the letter IS the representation, its representation pointer is set to NULL (an uninitialized pointer causes problems in ∼Strategy).

8.130.3 Member Function Documentation

8.130.3.1 Strategy operator= (const Strategy & *strat*)

assignment operator

Assignment operator decrements referenceCount for old strategyRep, assigns new strategyRep, and increments referenceCount for new strategyRep.

8.130.3.2 void pack_parameters_buffer (MPIPackBuffer & *send_buffer*, int *job_index*) [protected, virtual]

pack a send_buffer for assigning an iterator job to a server

This virtual function redefinition is executed on the dedicated master processor for self scheduling. It is not used for peer partitions.

Reimplemented in ConcurrentStrategy, and SequentialHybridStrategy.

8.130.3.3 void unpack_parameters_buffer (MPIUnpackBuffer & *recv_buffer*) [protected, virtual]

unpack a recv_buffer for accepting an iterator job from the scheduler

This virtual function redefinition is executed on an iterator server for dedicated master self scheduling. It is not used for peer partitions.

Reimplemented in ConcurrentStrategy, and SequentialHybridStrategy.

8.130.3.4 void pack_results_buffer (MPIPackBuffer & *send_buffer*, int *job_index*) [protected, virtual]

pack a send_buffer for returning iterator results from a server

This virtual function redefinition is executed either on an iterator server for dedicated master self scheduling or on peers 2 through n for static scheduling.

Reimplemented in ConcurrentStrategy, and SequentialHybridStrategy.

8.130.3.5 void unpack_results_buffer (MPIUnpackBuffer & *recv_buffer*, int *job_index*) [protected, virtual]

unpack a recv_buffer for accepting iterator results from a server

This virtual function redefinition is executed on an strategy master (either the dedicated master processor for self scheduling or peer 1 for static scheduling).

Reimplemented in ConcurrentStrategy, and SequentialHybridStrategy.

8.130.3.6 void init_iterator_parallelism () [protected]

parallel configuration attributes, and managing outputs and restart.

This function is called from derived class constructors once maxConcurrency is defined but prior to instantiating Iterators and Models.

8.130.3.7 void init_iterator (Iterator & *the_iterator*, Model & *the_model*) [protected]

convenience function for allocating comms prior to running an iterator

This is a convenience function for encapsulating the allocation of communicators prior to running an iterator. It does not require a strategyRep forward since it is only used by letter objects.

8.130.3.8 void run_iterator (Iterator & *the_iterator*, Model & *the_model*) [protected]

due to use by MINLPNode.

This is a convenience function for encapsulating the parallel features (run/serve) of running an iterator. This function omits allocation/deallocation of communicators to provide greater efficiency in those strategies which involve multiple iterator executions but only require communicator allocation/deallocation to be performed once.

It does not require a strategyRep forward since it is only used by letter objects. While it is currently a public function due to its use in MINLPNode, this usage still involves a strategy letter object.

8.130.3.9 void free_iterator (Iterator & *the_iterator*, Model & *the_model*) [protected]

convenience function for deallocating comms after running an iterator

This is a convenience function for encapsulating the deallocation of communicators after running an iterator. It does not require a strategyRep forward since it is only used by letter objects.

8.130.3.10 void schedule_iterators (Iterator & *the_iterator*, Model & *the_model*) [protected]

static_schedule_iterators()

This implementation supports the scheduling of multiple jobs using a single iterator/model pair. Additional future (overloaded) implementations could involve independent iterator instances.

8.130.3.11 void self_schedule_iterators (Model & *the_model*) [protected]

among slave iterator servers (called by derived run_strategy())

This function is adapted from ApplicationInterface::self_schedule_evaluations().

8.130.3.12 void serve_iterators (Iterator & *the_iterator*, Model & *the_model*) [protected]

assigned by the strategy master (called by derived run_strategy())

This function is similar in structure to ApplicationInterface::serve_evaluations_synch().

8.130.3.13 Strategy * get_strategy () [private]

Used by the envelope to instantiate the correct letter class.

Used only by the envelope constructor to initialize strategyRep to the appropriate derived type, as given by the strategyName attribute.

The documentation for this class was generated from the following files:

- DakotaStrategy.H

- DakotaStrategy.C

8.131 String Class Reference

Dakota::String class, used as main string class for Dakota.

Public Member Functions

- String ()

  Default constructor.

- String (const String &a)

  Copy constructor for incoming String.

- String (const String &a, size_t start_index, size_t num_items)

  Copy constructor for portion of incoming String.

- String (const char ∗c_string)

  Copy constructor for incoming char∗ array.

- String (const DAKOTA_BASE_STRING &a)

  Copy constructor for incoming base string.

- ∼String ()

  Destructor.

- String & operator= (const String &)

  Assignment operator for incoming String.

- String & operator= (const DAKOTA_BASE_STRING &)

  Assignment operator for incoming base string.

- String & operator= (const char ∗)

  Assignment operator for incoming char∗ array.

- operator const char ∗ () const

  The operator() returns pointer to standard C char array.

- String & toUpper ()

  Convert to upper case string.

- void upper ()
- String & toLower ()

  Convert to lower case string.

- void lower ()
- bool contains (const char ∗sub_string) const

  Returns true if String contains char∗ substring.

- bool begins (const char ∗sub_string) const

  Returns true if String starts with char∗ substring.

- bool ends (const char ∗sub_string) const

  Returns true if String ends with char∗ substring.

- char ∗ data () const

  Returns pointer to standard C char array.

8.131.1 Detailed Description

Dakota::String class, used as main string class for Dakota.

The Dakota::String class is the common string class for Dakota. It provides a common interface for string operations whether inheriting from the STL basic_string or the Rogue Wave RWCString class

8.131.2 Member Function Documentation

8.131.2.1 operator const char ∗ () const [inline]

The operator() returns pointer to standard C char array.

The operator () returns a pointer to a char string. Uses the STL c_str() method. This allows for the String to be used in method calls without having to call the data() or c_str() methods.

8.131.2.2 void upper ()

Private method which converts String to upper. Utilizes an STL iterator to step through the string and then calls the STL toupper() method. Needs to be done this way because STL only provides a single char toupper method.

8.131.2.3 void lower ()

Private method which converts String to lower. Utilizes an STL iterator to step through the string and then calls the STL tolower() method. Needs to be done this way because STL only provides a single char tolower method.

8.131.2.4 bool contains (const char * *sub_string*) const [inline]

Returns true if String contains char* substring.

Returns true if the String contains the char* sub_string. Uses the STL find() method.

8.131.2.5 bool begins (const char * *sub_string*) const [inline]

Returns true if String starts with char* substring.

Returns true if the String begins with the char* sub_string. Uses the STL compare() method.

8.131.2.6 bool ends (const char * *sub_string*) const [inline]

Returns true if String ends with char* substring.

Returns true if the String ends with the char* sub_string. Uses the STL compare() method.

8.131.2.7 char * data () const [inline]

Returns pointer to standard C char array.

Returns a pointer to C style char array. Needed to mimic the Rogue Wave string class. USE WITH CARE.

The documentation for this class was generated from the following files:

- DakotaString.H
- DakotaString.C

8.132 SurfpackApproximation Class Reference

Interface between Surfpack and Dakota.

Inheritance diagram for SurfpackApproximation::

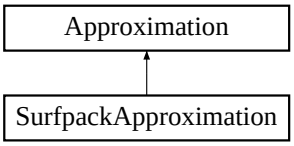

Public Member Functions

- SurfpackApproximation ()

  default constructor

- SurfpackApproximation (const ProblemDescDB &problem_db, const size_t &num_acv)

  standard constructor: Surfpack surface of appropriate type will be created

- ∼SurfpackApproximation ()

  destructor

Protected Member Functions

- int min_coefficients () const

  build the derived class approximation type in numVars dimensions

- int recommended_coefficients () const

  build the derived class approximation type in numVars dimensions

- void find_coefficients ()

  and the appropriate Surfpack build method will be invoked

- const Real & get_value (const RealVector &x)

  Return the value of the Surfpack surface for a given parameter vector x.

- const RealBaseVector & get_gradient (const RealVector &x)

  retrieve the approximate function gradient for a given parameter vector x

- const RealMatrix & get_hessian (const RealVector &x)

retrieve the approximate function Hessian for a given parameter vector x

- const Real & get_diagnostic (const String &metric_type)

  retrieve the diagnostic metric for the diagnostic type specified

- const bool diagnostics_available ()

  check if the diagnostics are available (true for the Surfpack types)

Private Member Functions

- void checkForEqualityConstraints ()

  point, gradient, and/or hessian

- SurfData ∗ surrogates_to_surf_data ()

  copy from SurrogateDataPoint to SurfPoint/SurfData

Private Attributes

- SurfpackModel ∗ model

  The native Surfpack approximation.

- SurfpackModelFactory ∗ factory

  factory for the SurfpackModel instance

- SurfData ∗ surfData

  The data used to build the approximation, in Surfpack format.

8.132.1 Detailed Description

Interface between Surfpack and Dakota.

The SurfpackApproximation class is the interface between Dakota and Surfpack. Based on the information in the ProblemDescDB that is passed in through the constructor, SurfpackApproximation builds a Surfpack Surface object that corresponds to one of the following data-fitting techniques: polynomial regression, kriging, artificial neural networks, radial basis function network, or multivariate adaptaive regression splines (MARS).

8.132.2 Member Function Documentation

8.132.2.1 void find_coefficients () [protected, virtual]

and the appropriate Surfpack build method will be invoked

surfData will be deleted in dtor

Todo

Right now, we're completely deleting the old data and then

recopying the current data into a SurfData object. This was just

the easiest way to arrive at a solution that would build and run.

This function is frequently called from addPoint rebuild, however,

and it's not good to go through this whole process every time one

more data point is added.

Reimplemented from Approximation.

8.132.2.2 const RealMatrix & get_hessian (const RealVector & *x*) [protected, virtual]

retrieve the approximate function Hessian for a given parameter vector x

Todo

Make this acceptably efficient

Reimplemented from Approximation.

8.132.2.3 void checkForEqualityConstraints () [private]

point, gradient, and/or hessian

If there is an anchor point, add an equality constraint for its response value. Also add constraints for gradient and hessian, if applicable.

Todo

improve efficiency of conversion

8.132.2.4 SurfData * surrogates_to_surf_data () [private]

copy from SurrogateDataPoint to SurfPoint/SurfData

Copy the data stored in Dakota-style SurrogateDataPoint objects into Surfpack-style SurfPoint and SurfData objects.

The documentation for this class was generated from the following files:

- SurfpackApproximation.H
- SurfpackApproximation.C

8.133 SurrBasedGlobalMinimizer Class Reference

and updates a global surrogate model without trust region controls

Inheritance diagram for SurrBasedGlobalMinimizer::

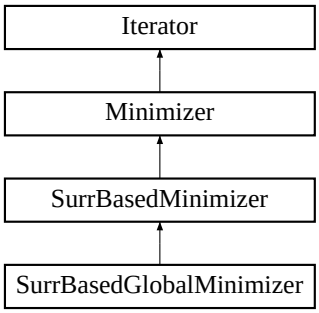

Public Member Functions

- SurrBasedGlobalMinimizer (Model &model)

  constructor

- ~SurrBasedGlobalMinimizer ()

  destructor

Protected Member Functions

- bool returns_multiple_points () const

  Global surrogate-based methods can return multiple points.

Private Member Functions

- void minimize_surrogates ()

  optimizing on and improving surrogates of the response functions.

Private Attributes

- bool replacePoints

  than continuing to append, during construction of the next surrogate

8.133.1 Detailed Description

and updates a global surrogate model without trust region controls

This method uses a SurrogateModel to perform minimization (optimization or nonlinear least squares) through a set of iterations. At each iteration, a surrogate is built, the surrogate is minimized, and the optimal points from the surrogate are then evaluated with the "true" function, to generate new points upon which the surrogate for the next iteration is built.

The documentation for this class was generated from the following files:

- SurrBasedGlobalMinimizer.H
- SurrBasedGlobalMinimizer.C

8.134 SurrBasedLocalMinimizer Class Reference

and nonlinear least squares.

Inheritance diagram for SurrBasedLocalMinimizer::

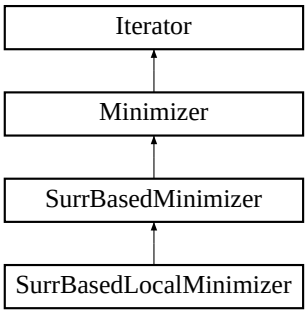

Public Member Functions

- SurrBasedLocalMinimizer (Model &model)

  constructor

- ~SurrBasedLocalMinimizer ()

  destructor

Private Member Functions

- void minimize_surrogates ()

  global, or hierarchical surrogates over a series of trust regions.

- void reset ()

  reset convergence controls in case of multiple SBLM executions

- bool tr_bounds (const RealVector &global_lower_bnds, const RealVector &global_upper_bnds, RealVector &tr_lower_bnds, RealVector &tr_upper_bnds)

  compute current trust region bounds

- void find_center_truth (const Iterator &dace_iterator, Model &truth_model)

  retrieve responseCenterTruth if possible, evaluate it if not

- void find_center_approx ()

  retrieve responseCenter_approx if possible, evaluate it if not

- void hard_convergence_check (const Response &response_truth, const RealVector &c_vars, const RealVector &lower_bnds, const RealVector &upper_bnds)

  merit function near zero)

- void tr_ratio_check (const RealVector &c_vars_star, const RealVector &tr_lower_bounds, const RealVector &tr_upper_bounds)

  region resizing) and check for soft convergence (diminishing returns)

- void update_penalty (const RealVector &fns_center_truth, const RealVector &fns_star_truth)

  initialize and update the penaltyParameter

- void relax_constraints (const RealVector &lower_bnds, const RealVector &upper_bnds)

  relax constraints by updating bounds when current iterate is infeasible

Static Private Member Functions

- static void approx_subprob_objective_eval (const Variables &surrogate_vars, const Variables &recast_vars, const Response &surrogate_response, Response &recast_response)

  static function used to define the approximate subproblem objective.

- static void approx_subprob_constraint_eval (const Variables &surrogate_vars, const Variables &recast_-vars, const Response &surrogate_response, Response &recast_response)

  static function used to define the approximate subproblem constraints.

- static void hom_objective_eval (int &mode, int &n, double ∗tau_and_x, double &f, double ∗grad_f, int &)

  homotopy constraint relaxation formulation.

- static void hom_constraint_eval (int &mode, int &ncnln, int &n, int &nrowj, int ∗needc, double ∗tau_and_-x, double ∗c, double ∗cjac, int &nstate)

  homotopy constraint relaxation formulation.

Private Attributes

- Real origTrustRegionFactor

  original user specification for trustRegionFactor

- Real trustRegionFactor

  bound - lower bound for each design variable).

- Real minTrustRegionFactor

  factor is reduced below the value of minTrustRegionFactor

- Real trRatioContractValue

  trust region ratio min value: contract tr if ratio below this value

- Real trRatioExpandValue

  trust region ratio sufficient value: expand tr if ratio above this value

- Real gammaContract

  trust region contraction factor

- Real gammaExpand

  trust region expansion factor

- short approxSubProbObj

  or AUGMENTED_LAGRANGIAN_OBJ

- short approxSubProbCon

  ORIGINAL_CON.

- Model approxSubProbModel

  involve a RecastModel recursion applied to iteratedModel

- bool recastSubProb

  flag to indicate when approxSubProbModel involves a RecastModel recursion

- short trConstraintRelax

  points: NO_RELAX or HOMOTOPY

- short meritFnType

  ADAPTIVE_PENALTY_MERIT, LAGRANGIAN_MERIT, or AUGMENTED_LAGRANGIAN_MERIT.

- short acceptLogic

  type of iterate acceptance test logic: FILTER or TR_RATIO

- int penaltyIterOffset

  for adaptive_penalty merit functions

- short convergenceFlag

  code indicating satisfaction of hard or soft convergence conditions

- short softConvCount

  count reaches softConvLimit, stop SBLM.

- short softConvLimit

  exceeded by softConvCount, stop SBLM.

- bool truthGradientFlag

flags the use/availability of truth gradients within the SBLM process

- bool approxGradientFlag

  flags the use/availability of surrogate gradients within the SBLM process

- bool truthHessianFlag

  flags the use/availability of truth Hessians within the SBLM process

- bool approxHessianFlag

  flags the use/availability of surrogate Hessians within the SBLM process

- bool correctionFlag

  of each trust region

- bool globalApproxFlag

  flags the use of a global data fit surrogate (rsm, ann, mars, kriging)

- bool multiptApproxFlag

  flags the use of a multipoint data fit surrogate (TANA)

- bool localApproxFlag

  flags the use of a local data fit surrogate (Taylor series)

- bool hierarchApproxFlag

  flags the use of a model hierarchy/multifidelity surrogate

- bool newCenterFlag

  a new trust region center

- bool daceCenterPtFlag

  evaluations for global approximations (CCD, Box-Behnken)

- bool multiLayerBypassFlag

  (responseCenterTruth and responseStarTruth).

- bool useGradsFlag

  to be evaluated for each DACE point in global surrogate builds.

- RealVector nonlinIneqLowerBndsSlack

  individual violations of nonlinear inequality constraint lower bounds

- RealVector nonlinIneqUpperBndsSlack

  individual violations of nonlinear inequality constraint upper bounds

- RealVector nonlinEqTargetsSlack

  individual violations of nonlinear equality constraint targets

- Real tau

  constraint relaxation parameter

- Real alpha

  constraint relaxation parameter backoff parameter (multiplier)

- Variables varsCenter

  variables at the trust region center

- Response responseCenterApprox

  approx response at trust region center

- Response responseStarApprox

  approx response at SBLM cycle minimum

- Response responseCenterTruth

  truth response at trust region center

- Response responseStarTruth

  truth response at SBLM cycle minimum

Static Private Attributes

- static SurrBasedLocalMinimizer * sblmInstance

  pointer to SBLM instance used in static member functions

8.134.1 Detailed Description

and nonlinear least squares.

This minimizer uses a SurrogateModel to perform minimization based on local, global, or hierarchical surrogates. It achieves provable convergence through the use of a sequence of trust regions and the application of surrogate corrections at the trust region centers.

8.134.2 Member Function Documentation

8.134.2.1 void minimize_surrogates () `[private, virtual]`

global, or hierarchical surrogates over a series of trust regions.

Trust region-based strategy to perform surrogate-based optimization in subregions (trust regions) of the parameter space. The minimizer operates on approximations in lieu of the more expensive simulation-based response functions. The size of the trust region is varied according to the goodness of the agreement between the approximations and the true response functions.

Implements SurrBasedMinimizer.

8.134.2.2 void hard_convergence_check (const Response & *response_truth*, const RealVector & *c_vars*, const RealVector & *lower_bnds*, const RealVector & *upper_bnds*) [private]

merit function near zero)

The hard convergence check computes the gradient of the merit function at the trust region center, performs a projection for active bound constraints (removing any gradient component directed into an active bound), and signals convergence if the 2-norm of this projected gradient is less than convergenceTol.

8.134.2.3 void tr_ratio_check (const RealVector & *c_vars_star*, const RealVector & *tr_lower_bnds*, const RealVector & *tr_upper_bnds*) [private]

region resizing) and check for soft convergence (diminishing returns)

Assess acceptance of SBLM iterate (trust region ratio or filter) and compute soft convergence metrics (number of consecutive failures, min trust region size, etc.) to assess whether the convergence rate has decreased to a point where the process should be terminated (diminishing returns).

8.134.2.4 void update_penalty (const RealVector & *fns_center_truth*, const RealVector & *fns_star_truth*) [private]

initialize and update the penaltyParameter

Scaling of the penalty value is important to avoid rejecting SBLM iterates which must increase the objective to achieve a reduction in constraint violation. In the basic penalty case, the penalty is ramped exponentially based on the iteration counter. In the adaptive case, the ratio of relative change between center and star points for the objective and constraint violation values is used to rescale penalty values.

8.134.2.5 void approx_subprob_objective_eval (const Variables & *surrogate_vars*, const Variables & *recast_vars*, const Response & *surrogate_response*, Response & *recast_response*) [static, private]

static function used to define the approximate subproblem objective.

Objective functions evaluator for solution of approximate subproblem using a RecastModel.

8.134.2.6 void approx_subprob_constraint_eval (const Variables & *surrogate_vars*, const Variables & *recast_vars*, const Response & *surrogate_response*, Response & *recast_response*) [static, private]

static function used to define the approximate subproblem constraints.

Constraint functions evaluator for solution of approximate subproblem using a RecastModel.

8.134.2.7 void hom_objective_eval (int & *mode*, int & *n*, double * *tau_and_x*, double & *f*, double * *grad_f*, int &) [static, private]

homotopy constraint relaxation formulation.

NPSOL objective functions evaluator for solution of homotopy constraint relaxation parameter optimization. This constrained optimization problem performs the update of the tau parameter in the homotopy heuristic approach used to relax the constraints in the original problem .

8.134.2.8 void hom_constraint_eval (int & *mode*, int & *ncnln*, int & *n*, int & *nrowj*, int * *needc*, double * *tau_and_x*, double * *c*, double * *cjac*, int & *nstate*) [static, private]

homotopy constraint relaxation formulation.

NPSOL constraint functions evaluator for solution of homotopy constraint relaxation parameter optimization. This constrained optimization problem performs the update of the tau parameter in the homotopy heuristic approach used to relax the constraints in the original problem.

The documentation for this class was generated from the following files:

- SurrBasedLocalMinimizer.H
- SurrBasedLocalMinimizer.C

8.135 SurrBasedMinimizer Class Reference

Base class for local/global surrogate-based optimization/least squares.

Inheritance diagram for SurrBasedMinimizer::

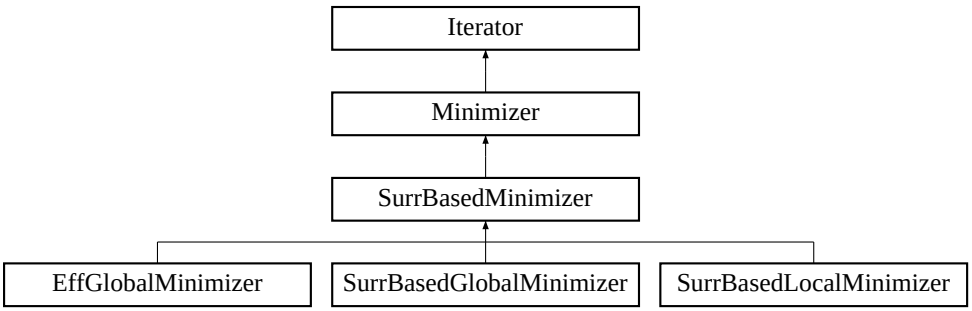

Protected Member Functions

- SurrBasedMinimizer (Model &model)

  constructor

- ~SurrBasedMinimizer ()

  destructor

- void initialize_graphics (bool graph_2d, bool tabular_data, const String &tabular_file)

  initialize graphics customized for surrogate-based iteration

- void run ()

  run the iterator; portion of run_iterator()

- void print_results (ostream &s)
- virtual void minimize_surrogates ()=0

  approach. Redefines the Iterator::run() virtual function.

- void update_lagrange_multipliers (const RealVector &fn_vals, const RealMatrix &fn_grads)

  initialize and update Lagrange multipliers for basic Lagrangian

- void update_augmented_lagrange_multipliers (const RealVector &fn_vals)

  initialize and update the Lagrange multipliers for augmented Lagrangian

- bool update_filter (const RealVector &fn_vals)

  update a filter from a set of function values

- Real lagrangian_merit (const RealVector &fn_vals, const RealVector &nln_ineq_l_bnds, const RealVector &nln_ineq_u_bnds, const RealVector &nln_eq_tgts)

  compute a Lagrangian function from a set of function values

- void lagrangian_gradient (const RealVector &fn_vals, const RealMatrix &fn_grads, const RealVector &nln_ineq_l_bnds, const RealVector &nln_ineq_u_bnds, const RealVector &nln_eq_tgts, RealBaseVector &lag_grad)

  compute the gradient of the Lagrangian function

- Real augmented_lagrangian_merit (const RealVector &fn_vals, const RealVector &nln_ineq_l_bnds, const RealVector &nln_ineq_u_bnds, const RealVector &nln_eq_tgts)

  compute an augmented Lagrangian function from a set of function values

- void augmented_lagrangian_gradient (const RealVector &fn_vals, const RealMatrix &fn_grads, const RealVector &nln_ineq_l_bnds, const RealVector &nln_ineq_u_bnds, const RealVector &nln_eq_tgts, RealBaseVector &alag_grad)

  compute the gradient of the augmented Lagrangian function

- Real penalty_merit (const RealVector &fn_vals)

  compute a penalty function from a set of function values

- void penalty_gradient (const RealVector &fn_vals, const RealMatrix &fn_grads, RealBaseVector &pen_-grad)

  compute the gradient of the penalty function

- Real objective (const RealVector &fn_vals)

  compute a composite objective value from one or more objective functions

- void objective_gradient (const RealVector &fn_vals, const RealMatrix &fn_grads, RealBaseVector &obj_-grad)

  compute the gradient of the composite objective function

- Real constraint_violation (const RealVector &fn_vals, const Real &constraint_tol)

  compute the constraint violation from a set of function values

Protected Attributes

- Iterator approxSubProbMinimizer

  approximate subproblem on each surrogate-based iteration

- int sbIterNum

  surrogate-based minimization iteration number

- bool optimizationFlag

flag for use where optimization and NLS must be distinguished

- RealVectorList sbFilter

  constraint violation) for iterate selection/rejection

- RealVector lagrangeMult

  Lagrange multipliers for basic Lagrangian calculations.

- RealVector augLagrangeMult

  Lagrange multipliers for augmented Lagrangian calculations.

- Real penaltyParameter

  penalty calculations; increased in update_penalty()

- RealVector origNonlinIneqLowerBnds

  original nonlinear inequality constraint lower bounds (no relaxation)

- RealVector origNonlinIneqUpperBnds

  original nonlinear inequality constraint upper bounds (no relaxation)

- RealVector origNonlinEqTargets

  original nonlinear equality constraint targets (no relaxation)

- Real eta

  constant used in etaSequence updates

- Real alphaEta

  power for etaSequence updates when updating penalty

- Real betaEta

  power for etaSequence updates when updating multipliers

- Real etaSequence

  Lagrangian updates (refer to Conn, Gould, and Toint, section 14.4).

8.135.1 Detailed Description

Base class for local/global surrogate-based optimization/least squares.

These minimizers use a SurrogateModel to perform optimization based either on local trust region methods or global updating methods.

8.135.2 Member Function Documentation

8.135.2.1 void run () [inline, protected, virtual]

run the iterator; portion of run_iterator()

Iterator supports a construct/pre-run/run/post-run/destruct progression. This function is the virtual run function for the iterator class hierarchy. All derived classes need to redefine it.

Reimplemented from Iterator.

8.135.2.2 void print_results (ostream & *s*) [protected, virtual]

Redefines default iterator results printing to include optimization results (objective functions and constraints).

Reimplemented from Iterator.

8.135.2.3 void update_lagrange_multipliers (const RealVector & *fn_vals*, const RealMatrix & *fn_grads*) [protected]

initialize and update Lagrange multipliers for basic Lagrangian

For the Rockafellar augmented Lagrangian, simple Lagrange multiplier updates are available which do not require the active constraint gradients. For the basic Lagrangian, Lagrange multipliers are estimated through solution of a nonnegative linear least squares problem.

8.135.2.4 void update_augmented_lagrange_multipliers (const RealVector & *fn_vals*) [protected]

initialize and update the Lagrange multipliers for augmented Lagrangian

For the Rockafellar augmented Lagrangian, simple Lagrange multiplier updates are available which do not require the active constraint gradients. For the basic Lagrangian, Lagrange multipliers are estimated through solution of a nonnegative linear least squares problem.

8.135.2.5 bool update_filter (const RealVector & *fn_vals*) [protected]

update a filter from a set of function values

Update the sbFilter with fn_vals if new iterate is non-dominated.

8.135.2.6 Real lagrangian_merit (const RealVector & *fn_vals*, const RealVector & *nln_ineq_l_bnds*, const RealVector & *nln_ineq_u_bnds*, const RealVector & *nln_eq_tgts*) [protected]

compute a Lagrangian function from a set of function values

The Lagrangian function computation sums the objective function and the Lagrange multipler terms for inequality/equality constraints. This implementation follows the convention in Vanderplaats with g<=0 and h=0. The bounds/targets passed in may reflect the original constraints or the relaxed constraints.

8.135.2.7 Real augmented_lagrangian_merit (const RealVector & *fn_vals*, const RealVector & *nln_ineq_l_bnds*, const RealVector & *nln_ineq_u_bnds*, const RealVector & *nln_eq_tgts*) [protected]

compute an augmented Lagrangian function from a set of function values

The Rockafellar augmented Lagrangian function sums the objective function, Lagrange multipler terms for inequality/equality constraints, and quadratic penalty terms for inequality/equality constraints. This implementation follows the convention in Vanderplaats with g<=0 and h=0. The bounds/targets passed in may reflect the original constraints or the relaxed constraints.

8.135.2.8 Real penalty_merit (const RealVector & *fn_vals*) [protected]

compute a penalty function from a set of function values

The penalty function computation applies a quadratic penalty to any constraint violations and adds this to the objective function(s) p = f + r_p cv.

8.135.2.9 Real objective (const RealVector & *fn_vals*) [protected]

compute a composite objective value from one or more objective functions

The composite objective computation sums up the contributions from one of more objective functions using the multiobjective weights.

8.135.2.10 void objective_gradient (const RealVector & *fn_vals*, const RealMatrix & *fn_grads*, RealBaseVector & *obj_grad*) [protected]

compute the gradient of the composite objective function

The composite objective gradient computation sums up the contributions from one of more objective function gradients using the multiobjective weights.

8.135.2.11 Real constraint_violation (const RealVector & *fn_vals*, const Real & *constraint_tol*) [protected]

compute the constraint violation from a set of function values

Compute the quadratic constraint violation defined as cv = g+^T g+ + h+^T h+. This implementation supports equality constraints and 2-sided inequalities. The constraint_tol allows for a small constraint infeasibility (used for penalty methods, but not Lagrangian methods).

The documentation for this class was generated from the following files:

- SurrBasedMinimizer.H
- SurrBasedMinimizer.C

8.136 SurrogateDataPoint Class Reference

for defining a "truth" data point.

Public Member Functions

- SurrogateDataPoint ()

  default constructor

- SurrogateDataPoint (const RealVector &x, const Real &fn_val, const RealBaseVector &fn_grad, const RealMatrix &fn_hess)

  standard constructor

- SurrogateDataPoint (const SurrogateDataPoint &sdp)

  copy constructor

- ~SurrogateDataPoint ()

  destructor

- SurrogateDataPoint & operator= (const SurrogateDataPoint &sdp)

  assignment operator

- bool operator== (const SurrogateDataPoint &sdp) const

  equality operator

- const RealVector & continuous_variables () const

  return continuousVars

- const Real & response_function () const

  return responseFn

- const RealBaseVector & response_gradient () const

  return responseGrad

- const RealMatrix & response_hessian () const

  return responseHess

- bool is_null () const

  function to check sdpRep (does this handle contain a body)

Private Attributes

- SurrogateDataPointRep * sdpRep

  pointer to the body (handle-body idiom)

8.136.1 Detailed Description

for defining a "truth" data point.

A list of these data points is contained in each Approximation instance (Approximation::currentPoints) and provides the data to build the approximation. A handle-body idiom is used to avoid excessive data copying overhead.

The documentation for this class was generated from the following file:

- DakotaApproximation.H

8.137 SurrogateDataPointRep Class Reference

or body, may be shared by multiple SurrogateDataPoint handle instances.

Private Member Functions

- SurrogateDataPointRep (const RealVector &x, const Real &fn_val, const RealBaseVector &fn_grad, const RealMatrix &fn_hess)

  constructor

- ~SurrogateDataPointRep ()

  destructor

Private Attributes

- RealVector continuousVars

  continuous variables

- Real responseFn

  truth response function value

- RealBaseVector responseGrad

  truth response function gradient

- RealMatrix responseHess

  truth response function Hessian

- int referenceCount

  number of handle objects sharing sdpRep

Friends

- class SurrogateDataPoint

  the handle class can access attributes of the body class directly

8.137.1 Detailed Description

or body, may be shared by multiple SurrogateDataPoint handle instances.

The SurrogateDataPoint/SurrogateDataPointRep pairs utilize a handle-body idiom (Coplien, Advanced C++).

The documentation for this class was generated from the following file:

- DakotaApproximation.H

8.138 SurrogateModel Class Reference

Base class for surrogate models (DataFitSurrModel and HierarchSurrModel).

Inheritance diagram for SurrogateModel::

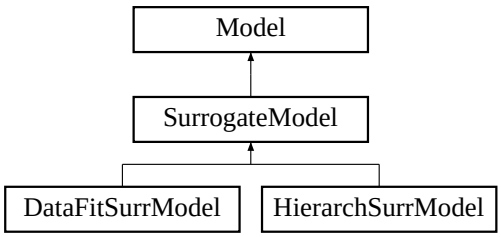

Protected Member Functions

- SurrogateModel (ProblemDescDB &problem_db)

  constructor

- SurrogateModel (ParallelLibrary &parallel_lib, const pair< short, short > &view, const ActiveSet &set, const String &corr_type, const short &corr_order)

  alternate constructor

- ~SurrogateModel ()

  destructor

- void compute_correction (const Response &truth_response, const Response &approx_response, const RealVector &c_vars)

  agreement with truth_response

- void apply_correction (Response &approx_response, const RealVector &c_vars, bool quiet_flag=false)

  apply the correction computed in compute_correction() to approx_response

- void auto_correction (bool correction_flag)

  sets autoCorrection to on (true) or off (false)

- bool auto_correction ()

  returns autoCorrection setting

- void check_submodel_compatibility (const Model &sub_model)

  HierarchSurrModel::highFidelityModel).

- bool force_rebuild ()

forced based on changes in the inactive data

- void asv_mapping (const ShortArray &orig_asv, ShortArray &actual_asv, ShortArray &approx_asv, bool build_flag)

  distributes the incoming orig_asv among actual_asv and approx_asv

- void asv_mapping (const ShortArray &actual_asv, const ShortArray &approx_asv, ShortArray &combined_asv)

  reconstitutes a combined_asv from actual_asv and approx_asv

- void response_mapping (const Response &actual_response, const Response &approx_response, Response &combined_response)

  overlays actual_response and approx_response to update combined_response

- void cached_mapping (const ResponseArray &orig_resp_array, IntResponseMap &cached_map, const IntIntMap &id_map, ResponseArray &merged_array)

  inserts a cached response map into a response array in order

Protected Attributes

- bool mixedResponseSet

  flag for mixed approximate/actual responses

- IntSet surrogateFnIndices

  subset that is approximated

- ResponseArray surrResponseArray

  array of surrogate responses used in derived_synchronize() functions

- IntResponseMap surrResponseMap

  map of surrogate responses used in derived_synchronize_nowait() functions

- IntRealVectorMap rawCVarsMap

  not contain lower level variables sets from finite differencing.

- IntIntMap truthIdMap

  DataFitSurrModel/HierarchSurrModel id.

- IntIntMap surrIdMap

  DataFitSurrModel/HierarchSurrModel ids.

- IntResponseMap cachedApproxRespMap

  portions were still pending.

- String correctionType

approximation correction approach to be used: additive or multiplicative

- short correctionOrder

  approximation correction order to be used: 0, 1, or 2

- bool autoCorrection

  and HierarchSurrModel approximate response computations

- bool correctionComputed

  and is available for application

- size_t approxBuilds

  number of calls to build_approximation()

- bool surrogateBypass

  on the underlying truth model.

- RealVector fitCLBnds

  the approximation is built; used to detect when a rebuild is required.

- RealVector fitCUBnds

  the approximation is built; used to detect when a rebuild is required.

- IntVector fitDLBnds

  the approximation is built; used to detect when a rebuild is required.

- IntVector fitDUBnds

  the approximation is built; used to detect when a rebuild is required.

- RealVector fitInactCVars

  rebuild is required.

- IntVector fitInactDVars

  rebuild is required.

Private Member Functions

- void apply_additive_correction (RealVector &alpha_corrected_fns, RealMatrix &alpha_corrected_grads, RealMatrixArray &alpha_corrected_hessians, const RealVector &c_vars, const ActiveSet &set)

  internal convenience function for applying additive corrections

- void apply_multiplicative_correction (RealVector &beta_corrected_fns, RealMatrix &beta_corrected_grads, RealMatrixArray &beta_corrected_hessians, const RealVector &c_vars, const ActiveSet &set)

  internal convenience function for applying multiplicative corrections

Private Attributes

- bool badScalingFlag

  corrections; triggers an automatic switch to additive corrections

- bool combinedFlag

  flag indicating the combination of additive/multiplicative corrections

- bool computeAdditive

  flag indicating the need for additive correction calculations

- bool computeMultiplicative

  flag indicating the need for multiplicative correction calculations

- RealVector addCorrFns

  high and low fidelity model values at x=x_center.

- RealMatrix addCorrGrads

  high/low function difference at x=x_center.

- RealMatrixArray addCorrHessians

  high/low function difference at x=x_center.

- RealVector multCorrFns

  high fidelity to low fidelity model values at x=x_center.

- RealMatrix multCorrGrads

  of the high/low function ratio at x=x_center.

- RealMatrixArray multCorrHessians

  of the high/low function ratio at x=x_center.

- RealVector combineFactors

  correction instead of a strictly local correction.

- RealVector correctionCenterPt

  (x - x_c) terms in 1st-/2nd-order corrections.

- RealVector correctionPrevCenterPt

  copy of correctionCenterPt from the previous correction cycle

- RealVector approxFnsCenter

  unavailable when applying 1st-/2nd-order multiplicative corrections.

- RealVector approxFnsPrevCenter

  copy of approxFnsCenter from the previous correction cycle

- RealMatrix approxGradsCenter
  unavailable when applying 1st-/2nd-order multiplicative corrections.
- RealVector truthFnsCenter
  Truth function values at the current correction point.
- RealVector truthFnsPrevCenter
  copy of truthFnsCenter from the previous correction cycle
- Variables subModelVars
  among differing variable views in force_rebuild()
- Constraints subModelCons
  among differing variable views in force_rebuild()

8.138.1 Detailed Description

Base class for surrogate models (DataFitSurrModel and HierarchSurrModel).

The SurrogateModel class provides common functions to derived classes for computing and applying corrections to approximations.

8.138.2 Member Function Documentation

8.138.2.1 void compute_correction (const Response & *truth_response*, const Response & *approx_response*, const RealVector & *c_vars*) [protected, virtual]

agreement with truth_response

Compute an additive or multiplicative correction that corrects the approx_response to have 0th-order consistency (matches values), 1st-order consistency (matches values and gradients), or 2nd-order consistency (matches values, gradients, and Hessians) with the truth_response at a single point (e.g., the center of a trust region). The 0th-order, 1st-order, and 2nd-order corrections use scalar values, linear scaling functions, and quadratic scaling functions, respectively, for each response function.

Reimplemented from Model.

8.138.2.2 bool force_rebuild () [protected]

forced based on changes in the inactive data

This function forces a rebuild of the approximation according to the sub-model variables view, the approximation type, and whether the active approximation bounds or inactive variable values have changed since the last approximation build.

8.138.3 Member Data Documentation

8.138.3.1 bool autoCorrection [protected]

and HierarchSurrModel approximate response computations

SurrBasedOptStrategy must toggle this value since compute_correction() no longer automatically backs out an old correction.

8.138.3.2 size_t approxBuilds [protected]

number of calls to build_approximation()

used as a flag to automatically build the approximation if one of the derived compute_response functions is called prior to build_approximation().

The documentation for this class was generated from the following files:

- SurrogateModel.H
- SurrogateModel.C

8.139 SysCallAnalysisCode Class Reference

simulations using system calls.

Inheritance diagram for SysCallAnalysisCode::

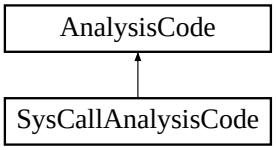

Public Member Functions

- SysCallAnalysisCode (const ProblemDescDB &problem_db)
  constructor
- ~SysCallAnalysisCode ()
  destructor
- void spawn_evaluation (const bool block_flag)
  spawn a complete function evaluation
- void spawn_input_filter (const bool block_flag)
  spawn the input filter portion of a function evaluation
- void spawn_analysis (const int &analysis_id, const bool block_flag)
  spawn a single analysis as part of a function evaluation
- void spawn_output_filter (const bool block_flag)
  spawn the output filter portion of a function evaluation

8.139.1 Detailed Description

simulations using system calls.

SysCallAnalysisCode creates separate simulation processes using the C system() command. It utilizes CommandShell to manage shell syntax and asynchronous invocations.

8.139.2 Member Function Documentation

8.139.2.1 void spawn_evaluation (const bool *block_flag*)

spawn a complete function evaluation

Put the SysCallAnalysisCode to the shell. This function is used when all portions of the function evaluation (i.e., all analysis drivers) are executed on the local processor.

8.139.2.2 void spawn_input_filter (const bool *block_flag*)

spawn the input filter portion of a function evaluation

Put the input filter to the shell. This function is used when multiple analysis drivers are spread between processors. No need to check for a Null input filter, as this is checked externally. Use of nonblocking shells is supported in this fn, although its use is currently prevented externally.

8.139.2.3 void spawn_analysis (const int & *analysis_id*, const bool *block_flag*)

spawn a single analysis as part of a function evaluation

Put a single analysis to the shell. This function is used when multiple analysis drivers are spread between processors. Use of nonblocking shells is supported in this fn, although its use is currently prevented externally.

8.139.2.4 void spawn_output_filter (const bool *block_flag*)

spawn the output filter portion of a function evaluation

Put the output filter to the shell. This function is used when multiple analysis drivers are spread between processors. No need to check for a Null output filter, as this is checked externally. Use of nonblocking shells is supported in this fn, although its use is currently prevented externally.

The documentation for this class was generated from the following files:

- SysCallAnalysisCode.H
- SysCallAnalysisCode.C

8.140 SysCallApplicInterface Class Reference

using system calls.

Inheritance diagram for SysCallApplicInterface::

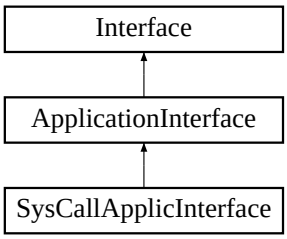

Public Member Functions

- SysCallApplicInterface (const ProblemDescDB &problem_db)

  constructor

- ~SysCallApplicInterface ()

  destructor

- void derived_map (const Variables &vars, const ActiveSet &set, Response &response, int fn_eval_id)

  that is specific to a derived class.

- void derived_map_asynch (const ParamResponsePair &pair)

  asynchronous evaluation that is specific to a derived class.

- void derived_synch (PRPList &prp_list)
- void derived_synch_nowait (PRPList &prp_list)
- int derived_synchronous_local_analysis (const int &analysis_id)
- const StringArray & analysis_drivers () const

  retrieve the analysis drivers specification for application interfaces

Private Member Functions

- void spawn_application (const bool block_flag)

  and output filter. Called from derived_map() & derived_map_asynch().

- void derived_synch_kernel (PRPList &prp_list)

  derived_synch_nowait()

- bool system_call_file_test (const String &root_file)

  the necessary results file(s)

Private Attributes

- SysCallAnalysisCode sysCallSimulator

  to a CommandShell in various combinations

- IntSet sysCallSet

  system call evaluations

- IntShortMap failCountMap

  map linking function evaluation id's to number of response read failures

8.140.1 Detailed Description

using system calls.

SysCallApplicInterface uses a SysCallAnalysisCode object for performing simulation invocations.

8.140.2 Member Function Documentation

8.140.2.1 void derived_synch (PRPList & *prp_list*) `[inline, virtual]`

Check for completion of active asynch jobs (tracked with sysCallSet). Wait for at least one completion and complete all jobs that have returned. This satisifies a "fairness" principle, in the sense that a completed job will _always_ be processed (whereas accepting only a single completion could always accept the same completion - the case of very inexpensive fn. evals. - and starve some servers).

Reimplemented from ApplicationInterface.

8.140.2.2 void derived_synch_nowait (PRPList & *prp_list*) `[inline, virtual]`

Check for completion of active asynch jobs (tracked with sysCallSet). Make one pass through sysCallSet & complete all jobs that have returned.

Reimplemented from ApplicationInterface.

8.140.2.3 int derived_synchronous_local_analysis (const int & *analysis_id*) `[inline, virtual]`

This code provides the derived function used by ApplicationInterface::serve_analyses_synch().

Reimplemented from ApplicationInterface.

The documentation for this class was generated from the following files:

- SysCallApplicInterface.H
- SysCallApplicInterface.C

8.141 TANA3Approximation Class Reference

approximation (a multipoint approximation).

Inheritance diagram for TANA3Approximation::

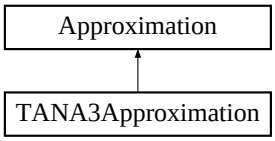

Public Member Functions

- TANA3Approximation ()

  default constructor

- TANA3Approximation (const ProblemDescDB &problem_db, const size_t &num_vars)

  standard constructor

- ~TANA3Approximation ()

  destructor

Protected Member Functions

- int min_coefficients () const

  build the derived class approximation type in numVars dimensions

- int num_constraints () const

  return the number of constraints to be enforced via anchorPoint

- void find_coefficients ()

  calculate the data fit coefficients using currentPoints and anchorPoint

- const Real & get_value (const RealVector &x)

  retrieve the approximate function value for a given parameter vector

- const RealBaseVector & get_gradient (const RealVector &x)

  retrieve the approximate function gradient for a given parameter vector

- void clear_current ()

Private Member Functions

- void find_scaled_coefficients ()

  compute TANA coefficients based on scaled inputs

- void offset (const RealVector &x, RealVector &s)

  based on minX, apply offset scaling to x to define s

Private Attributes

- RealVector pExp

  the vector of exponent values

- RealVector minX

  the vector of minimum parameter values used in scaling

- RealVector scX1

  the vector of scaled x1 values

- RealVector scX2

  the vector of scaled x2 values

- Real H

  the scalar Hessian value in the TANA-3 approximation

8.141.1 Detailed Description

approximation (a multipoint approximation).

The TANA3Approximation class provides a multipoint approximation based on matching value and gradient data from two points (typically the current and previous iterates) in parameter space. It forms an exponential approximation in terms of intervening variables.

8.141.2 Member Function Documentation

8.141.2.1 void clear_current () `[inline, protected, virtual]`

Redefine default implementation to support history mechanism.

Reimplemented from Approximation.

The documentation for this class was generated from the following files:

- TANA3Approximation.H
- TANA3Approximation.C

8.142 TaylorApproximation Class Reference

series (a local approximation).

Inheritance diagram for TaylorApproximation::

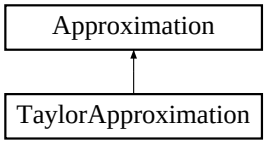

Public Member Functions

- TaylorApproximation ()

  default constructor

- TaylorApproximation (ProblemDescDB &problem_db, const size_t &num_vars)

  standard constructor

- ~TaylorApproximation ()

  destructor

Protected Member Functions

- int min_coefficients () const

  build the derived class approximation type in numVars dimensions

- void find_coefficients ()

  calculate the data fit coefficients using currentPoints and anchorPoint

- const Real & get_value (const RealVector &x)

  retrieve the approximate function value for a given parameter vector

- const RealBaseVector & get_gradient (const RealVector &x)

  retrieve the approximate function gradient for a given parameter vector

- const RealMatrix & get_hessian (const RealVector &x)

  retrieve the approximate function Hessian for a given parameter vector

8.142.1 Detailed Description

series (a local approximation).

The TaylorApproximation class provides a local approximation based on data from a single point in parameter space. It uses a first- or second-order Taylor series expansion: f(x) = f(x_c) + grad(x_c)' (x - x_c) + (x - x_c)' Hess(x_c) (x - x_c) / 2.

The documentation for this class was generated from the following files:

- TaylorApproximation.H
- TaylorApproximation.C

8.143 Variables Class Reference

Base class for the variables class hierarchy.

Inheritance diagram for Variables::

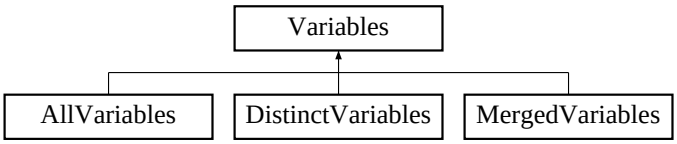

Public Member Functions

- Variables ()

  default constructor

- Variables (const ProblemDescDB &problem_db)

  standard constructor

- Variables (const pair< short, short > &view)

  alternate constructor for instantiations on the fly

- Variables (const Variables &vars)

  copy constructor

- virtual ~Variables ()

  destructor

- Variables operator= (const Variables &vars)

  assignment operator

- virtual size_t tv () const

  Returns total number of vars.

- virtual const UIntArray & merged_discrete_ids () const

  returns the list of discrete variables merged into a continuous array

- virtual const RealVector & continuous_variables () const

  return the active continuous variables

- virtual void continuous_variable (const Real &c_var, const size_t &i)

  set an active continuous variable

- virtual void continuous_variables (const RealVector &c_vars)
  set the active continuous variables
- virtual const IntVector & discrete_variables () const
  return the active discrete variables
- virtual void discrete_variable (const int &d_var, const size_t &i)
  set an active discrete variable
- virtual void discrete_variables (const IntVector &d_vars)
  set the active discrete variables
- virtual const StringArray & continuous_variable_labels () const
  return the active continuous variable labels
- virtual void continuous_variable_labels (const StringArray &cv_labels)
  set the active continuous variable labels
- virtual const StringArray & discrete_variable_labels () const
  return the active discrete variable labels
- virtual void discrete_variable_labels (const StringArray &dv_labels)
  set the active discrete variable labels
- virtual const StringArray & continuous_variable_types () const
  return the active continuous variable types
- virtual const StringArray & discrete_variable_types () const
  return the active discrete variable types
- virtual const UIntArray & continuous_variable_ids () const
  return the active continuous variable position identifiers
- virtual const RealVector & inactive_continuous_variables () const
  return the inactive continuous variables
- virtual void inactive_continuous_variables (const RealVector &i_c_vars)
  set the inactive continuous variables
- virtual const IntVector & inactive_discrete_variables () const
  return the inactive discrete variables
- virtual void inactive_discrete_variables (const IntVector &i_d_vars)
  set the inactive discrete variables

- virtual const StringArray & inactive_continuous_variable_labels () const
  return the inactive continuous variable labels
- virtual void inactive_continuous_variable_labels (const StringArray &i_c_vars)
  set the inactive continuous variable labels
- virtual const StringArray & inactive_discrete_variable_labels () const
  return the inactive discrete variable labels
- virtual void inactive_discrete_variable_labels (const StringArray &i_d_vars)
  set the inactive discrete variable labels
- virtual const UIntArray & inactive_continuous_variable_ids () const
  return the inactive continuous variable position identifiers
- virtual size_t acv () const
  returns total number of continuous vars
- virtual size_t adv () const
  returns total number of discrete vars
- virtual RealVector all_continuous_variables () const
  returns a single array with all continuous variables
- virtual void all_continuous_variables (const RealVector &a_c_vars)
  sets all continuous variables using a single array
- virtual IntVector all_discrete_variables () const
  returns a single array with all discrete variables
- virtual void all_discrete_variables (const IntVector &a_d_vars)
  sets all discrete variables using a single array
- virtual StringArray all_continuous_variable_labels () const
  returns a single array with all continuous variable labels
- virtual void all_continuous_variable_labels (const StringArray &a_c_v_labels)
  sets all continuous variable labels using a single array
- virtual StringArray all_discrete_variable_labels () const
  returns a single array with all discrete variable labels
- virtual void all_discrete_variable_labels (const StringArray &a_d_v_labels)
  sets all discrete variable labels using a single array
- virtual StringArray all_variable_labels () const

returns a single array with all variable labels

- virtual const StringArray & all_discrete_variable_types () const

  return the all discrete variable types

- virtual void read (istream &s)

  read a variables object from an istream

- virtual void write (ostream &s) const

  write a variables object to an ostream

- virtual void write_aprepro (ostream &s) const

  write a variables object to an ostream in aprepro format

- virtual void read_annotated (istream &s)

  read a variables object in annotated format from an istream

- virtual void write_annotated (ostream &s) const

  write a variables object in annotated format to an ostream

- virtual void write_tabular (ostream &s) const

  write a variables object in tabular format to an ostream

- virtual void read (BiStream &s)

  read a variables object from the binary restart stream

- virtual void write (BoStream &s) const

  write a variables object to the binary restart stream

- virtual void read (MPIUnpackBuffer &s)

  read a variables object from a packed MPI buffer

- virtual void write (MPIPackBuffer &s) const

  write a variables object to a packed MPI buffer

- size_t cv () const

  Returns number of active continuous vars.

- size_t dv () const

  Returns number of active discrete vars.

- size_t icv () const

  returns number of inactive continuous vars

- size_t idv () const

  returns number of inactive discrete vars

- const Real & continuous_variable (const size_t &i) const
  return an active continuous variable
- const int & discrete_variable (const size_t &i) const
  return an active discrete variable
- Variables copy () const
  for use when a deep copy is needed (the representation is _not_ shared)
- void reshape (const Sizet2DArray &vars_comps)
  variablesComponents
- const pair< short, short > & view () const
  returns variablesView
- pair< short, short > get_view (const ProblemDescDB &problem_db) const
  defines variablesView from problem_db attributes
- const String & variables_id () const
  returns the variables identifier string
- const Sizet2DArray & variables_components () const
  returns the number of variables for each of the constitutive components
- const StringArray & all_continuous_variable_types () const
  return all continuous variable types
- const UIntArray & all_continuous_variable_ids () const
  return all continuous variable position identifiers
- bool is_null () const
  function to check variablesRep (does this envelope contain a letter)

Protected Member Functions

- Variables (BaseConstructor, const ProblemDescDB &problem_db, const pair< short, short > &view)
  derived class constructors - Coplien, p. 139)
- virtual void copy_rep (const Variables *vars_rep)
  Used by copy() to copy the contents of a letter class.
- virtual void reshape_rep (const Sizet2DArray &vars_comps)
  Used by reshape() to reshape the contents of a letter class.

- void uncertain_var_types (size_t &acv_cntr)

  Convenience function for shared code within build_types_ids().

Protected Attributes

- pair< short, short > variablesView

  view enumerations

- Sizet2DArray variablesComponents

  design/uncertain/state (first index) by sub-type (second index)

- StringArray allContinuousVarTypes

  array of variable types for the all continuous variables array

- UIntArray allContinuousVarIds

  array of position identifiers for the all continuous variables array

- RealVector emptyRealVector

  no variables corresponding to the request

- IntVector emptyIntVector

  no variables corresponding to the request

- StringArray emptyStringArray

  no variables corresponding to the request

- UIntArray emptyUIntArray

  are no variables corresponding to the request

Private Member Functions

- Variables * get_variables (const ProblemDescDB &problem_db)

  correct letter class

- Variables * get_variables (const pair< short, short > &view) const

  and by copy() to instantiate a new letter class

Private Attributes

- String idVariables

  variables identifier string from the input file

- Variables * variablesRep

  pointer to the letter (initialized only for the envelope)

- int referenceCount

  number of objects sharing variablesRep

Friends

- bool operator== (const Variables &vars1, const Variables &vars2)

  equality operator

- bool operator!= (const Variables &vars1, const Variables &vars2)

  inequality operator

- std::size_t hash_value (const Variables &vars)

  hash_value

- bool binary_equal_to (const Variables &vars1, const Variables &vars2)

  binary_equal_to (since 'operator==' is not suitable for boost/hash_set)

8.143.1 Detailed Description

Base class for the variables class hierarchy.

The Variables class is the base class for the class hierarchy providing design, uncertain, and state variables for continuous and discrete domains within a Model. Using the fundamental arrays from the input specification, different derived classes define different views of the data. For memory efficiency and enhanced polymorphism, the variables hierarchy employs the "letter/envelope idiom" (see Coplien "Advanced C++", p. 133), for which the base class (Variables) serves as the envelope and one of the derived classes (selected in Variables::get_variables()) serves as the letter.

8.143.2 Constructor & Destructor Documentation

8.143.2.1 Variables ()

default constructor

The default constructor: variablesRep is NULL in this case (a populated problem_db is needed to build a meaningful Variables object). This makes it necessary to check for NULL in the copy constructor, assignment operator, and destructor.

8.143.2.2 Variables (const ProblemDescDB & *problem_db*)

standard constructor

This is the primary envelope constructor which uses problem_db to build a fully populated variables object. It only needs to extract enough data to properly execute get_variables(problem_db), since the constructor overloaded with BaseConstructor builds the actual base class data inherited by the derived classes.

8.143.2.3 Variables (const pair< short, short > & *view*)

alternate constructor for instantiations on the fly

This is the alternate envelope constructor for instantiations on the fly. Since it does not have access to problem_db, the letter class is not fully populated. This constructor executes get_variables(view), which invokes the default constructor of the derived letter class, which in turn invokes the default constructor of the base class.

8.143.2.4 Variables (const Variables & *vars*)

copy constructor

Copy constructor manages sharing of variablesRep and incrementing of referenceCount.

8.143.2.5 ~Variables () [virtual]

destructor

Destructor decrements referenceCount and only deletes variablesRep when referenceCount reaches zero.

8.143.2.6 Variables (BaseConstructor, const ProblemDescDB & *problem_db*, const pair< short, short > & *view*) [protected]

derived class constructors - Coplien, p. 139)

This constructor is the one which must build the base class data for all derived classes. get_variables() instantiates a derived class letter and the derived constructor selects this base class constructor in its initialization list (to avoid the recursion of the base class constructor calling get_variables() again). Since the letter IS the representation, its representation pointer is set to NULL (an uninitialized pointer causes problems in ~Variables).

8.143.3 Member Function Documentation

8.143.3.1 Variables operator= (const Variables & *vars*)

assignment operator

Assignment operator decrements referenceCount for old variablesRep, assigns new variablesRep, and increments referenceCount for new variablesRep.

8.143.3.2 Variables copy () const

for use when a deep copy is needed (the representation is _not_ shared)

Deep copies are used for history mechanisms such as bestVariables and data_pairs since these must catalogue copies (and should not change as the representation within currentVariables changes).

8.143.3.3 Variables * get_variables (const ProblemDescDB & *problem_db*) [private]

correct letter class

Initializes variablesRep to the appropriate derived type, as given by problem_db attributes. The standard derived class constructors are invoked.

8.143.3.4 Variables * get_variables (const pair< short, short > & *view*) const [private]

and by copy() to instantiate a new letter class

Initializes variablesRep to the appropriate derived type, as given by view. The default derived class constructors are invoked.

8.143.4 Member Data Documentation

8.143.4.1 UIntArray allContinuousVarIds [protected]

array of position identifiers for the all continuous variables array

These identifiers define positions of the all continuous variables array within the total variable sequence.

The documentation for this class was generated from the following files:

- DakotaVariables.H
- DakotaVariables.C

8.144 Vector Class Template Reference

Template class for the Dakota numerical vector.

Inheritance diagram for Vector::

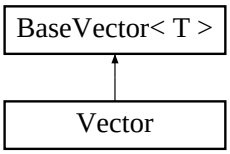

Public Member Functions

- Vector ()

  Default constructor.

- Vector (size_t len)

  Constructor which takes an initial length.

- Vector (size_t len, const T &initial_val)

  Constructor which takes an initial length and an initial value.

- Vector (const Vector< T > &a)

  Copy constructor.

- Vector (const T *p, size_t len)

  Constructor which copies len entries from T.*

- ~Vector ()

  Destructor.

- Vector< T > & operator= (const Vector< T > &a)

  Normal const assignment operator.

- Vector< T > & operator= (const T &ival)

  Sets all elements in self to the value ival.

- operator T * () const

  Use with care!

- void read (istream &s)

  Reads a Vector from an input stream.

- void read (istream &s, Array< String > &label_array)

  Reads a Vector and associated label array from an input stream.

- void read_partial (istream &s, size_t start_index, size_t num_items)

  Reads part of a Vector from an input stream.

- void read_partial (istream &s, size_t start_index, size_t num_items, Array< String > &label_array)

  Reads part of a Vector and the corresponding labels from an input stream.

- void read_tabular (istream &s)

  Reads a Vector from a tabular text input file.

- void read_annotated (istream &s, Array< String > &label_array)

  input stream

- void write (ostream &s) const

  Writes a Vector to an output stream.

- void write (ostream &s, const Array< String > &label_array) const

  Writes a Vector and associated label array to an output stream.

- void write_partial (ostream &s, size_t start_index, size_t num_items) const

  Writes part of a Vector to an output stream.

- void write_partial (ostream &s, size_t start_index, size_t num_items, const Array< String > &label_array) const

  output stream

- void write_aprepro (ostream &s, const Array< String > &label_array) const

  in aprepro format

- void write_partial_aprepro (ostream &s, size_t start_index, size_t num_items, const Array< String > &label_array) const

  output stream in aprepro format

- void write_annotated (ostream &s, const Array< String > &label_array) const

  to an output stream

- void write_tabular (ostream &s) const

  Writes a Vector in tabular form to an output stream.

- void write_partial_tabular (ostream &s, size_t start_index, size_t num_items) const

  Writes part of a Vector in tabular form to an output stream.

- void read (BiStream &s, Array< String > &label_array)

Reads a Vector and associated label array from a binary input stream.

- void write (BoStream &s, const Array< String > &label_array) const

  Writes a Vector and associated label array to a binary output stream.

- void read (MPIUnpackBuffer &s)

  Reads a Vector from a buffer after an MPI receive.

- void read (MPIUnpackBuffer &s, Array< String > &label_array)

  MPI receive.

- void write (MPIPackBuffer &s) const

  Writes a Vector to a buffer prior to an MPI send.

- void write (MPIPackBuffer &s, const Array< String > &label_array) const

  an MPI send

8.144.1 Detailed Description

template<class T> class Dakota::Vector< T >

Template class for the Dakota numerical vector.

The Dakota::Vector class is the numeric vector class. It inherits from the common vector class Dakota::BaseVector which provides the same interface for both the STL and RW vector classes. If the STL version of BaseVector is based on the valarray class then some basic vector operations such as + , ∗ are available. This class adds functionality to read/write vectors in a variety of ways

8.144.2 Constructor & Destructor Documentation

8.144.2.1 Vector (const T ∗ *p*, size_t *len*) [inline]

Constructor which copies len entries from T∗.

Assigns size values from p into array.

8.144.3 Member Function Documentation

8.144.3.1 Vector< T > & operator= (const T & *ival*) [inline]

Sets all elements in self to the value ival.

Assigns all values of array to ival. If STL, uses the vector assign method because there is no operator=(ival).

Reimplemented from BaseVector.

The documentation for this class was generated from the following file:

- DakotaVector.H

Chapter 9

DAKOTA File Documentation

9.1 dll_api.C File Reference

This file contains a DakotaRunner class, which launches DAKOTA.

Functions

- void **signal_init** ()
- void DAKOTA_DLL_FN **dakota_create** (int ∗dakota_ptr_int)
- void DAKOTA_DLL_FN **dakota_readInput** (int id, char ∗dakotaInput)
- void DAKOTA_DLL_FN **dakota_start** (int id)
- void DAKOTA_DLL_FN **dakota_destroy** (int id)
- void DAKOTA_DLL_FN dakota_stop (int ∗id)
- const char ∗DAKOTA_DLL_FN **dakota_getStatus** (int id)
- int **get_mc_ptr_int** ()
- void **set_mc_ptr_int** (int ptr_int)

Variables

- map< int, DakotaRunner ∗ > **runners**

9.1.1 Detailed Description

This file contains a DakotaRunner class, which launches DAKOTA.

9.1.2 Function Documentation

9.1.2.1 void DAKOTA_DLL_FN dakota_stop (int * *id*)

9.2 dll_api.h File Reference

API for DLL interactions.

Functions

- void DAKOTA_DLL_FN **dakota_create** (int ∗dakota_ptr_int)
- void DAKOTA_DLL_FN **dakota_readInput** (int id, char ∗dakotaInput)
- void DAKOTA_DLL_FN **dakota_start** (int id)
- void DAKOTA_DLL_FN **dakota_destroy** (int id)
- void DAKOTA_DLL_FN dakota_stop (int ∗id)
- const char ∗DAKOTA_DLL_FN **dakota_getStatus** (int id)
- int DAKOTA_DLL_FN **get_mc_ptr_int** ()
- void DAKOTA_DLL_FN **set_mc_ptr_int** (int ptr_int)

9.2.1 Detailed Description

API for DLL interactions.

9.2.2 Function Documentation

9.2.2.1 void DAKOTA_DLL_FN dakota_stop (int ∗ *id*)

9.3 JEGAOptimizer.C File Reference

Contains the implementation of the JEGAOptimizer class.

Namespaces

- namespace Dakota
- namespace **std**
- namespace **JEGA::Logging**
- namespace **eddy::utilities**

Classes

- class JEGAOptimizer::Evaluator

  An evaluator specialization that knows how to interact with Dakota.

- class JEGAOptimizer::EvaluatorCreator

  A specialization of the JEGA::FrontEnd::EvaluatorCreator that creates a new instance of a Evaluator.

- class JEGAOptimizer::Driver

  A subclass of the JEGA front end driver that exposes the individual protected methods to execute the algorithm.

Functions

- template<typename T> string asstring (const T &val)

  Creates a string from the argument val *using an ostringstream.*

9.3.1 Detailed Description

Contains the implementation of the JEGAOptimizer class.

9.4 JEGAOptimizer.H File Reference

Contains the definition of the JEGAOptimizer class.

Namespaces

- namespace **JEGA**
- namespace **JEGA::Utilities**
- namespace **JEGA::FrontEnd**
- namespace **JEGA::Algorithms**
- namespace Dakota

Classes

- class JEGAOptimizer

  A version of Dakota::Optimizer for instantiation of John Eddy's Genetic Algorithms (JEGA).

9.4.1 Detailed Description

Contains the definition of the JEGAOptimizer class.

9.5 library_mode.C File Reference

file containing a mock simulator main for testing DAKOTA in library mode

Functions

- void **nidr_set_input_string** (const char ∗)
- void run_dakota_parse (const char ∗dakota_input_file)

  mode 1: parsing an input file.

- void run_dakota_data ()

  mode 2: direct Data class instantiation.

- void run_dakota_mixed (const char ∗dakota_input_file)

  mode 3: mixed parsing and direct updating

- void **model_interface_plugins** (Dakota::ProblemDescDB &problem_db)
- int main (int argc, char ∗argv[ ])

  A mock simulator main for testing DAKOTA in library mode.

- static void **my_callback_function** (void ∗ptr)

9.5.1 Detailed Description

file containing a mock simulator main for testing DAKOTA in library mode

9.5.2 Function Documentation

9.5.2.1 void run_dakota_parse (const char ∗ *dakota_input_file*)

mode 1: parsing an input file.

This function parses from an input file to define the ProblemDescDB data.

9.5.2.2 void run_dakota_data ()

mode 2: direct Data class instantiation.

Rather than parsing from an input file, this function populates Data class objects directly using a minimal specification and relies on constructor defaults and post-processing in post_process() to fill in the rest.

9.5.2.3 void run_dakota_mixed (const char * *dakota_input_file*)

mode 3: mixed parsing and direct updating

This function showcases multiple features. For parsing, either an input file (dakota_input_file != NULL) or a default input string (dakota_input_file == NULL) are shown. This parsed input is then mixed with input from three sources: (1) input from a user-supplied callback function, (2) updates to the DB prior to Strategy instantiation, (3) updates directly to Iterators/Models following Strategy instantiation.

9.5.2.4 int main (int *argc*, char * *argv*[ ])

A mock simulator main for testing DAKOTA in library mode.

Uses alternative instantiation syntax as described in the library mode documentation within the Developers Manual. Tests several problem specification modes: (1) run_dakota_parse: reads all problem specification data from an input file (2) run_dakota_data: creates all problem specification from direct Data instance instantiations. (3) run_dakota_mixed: a mixture of input parsing (by file or default string) and direct data updates, where the data updates occur: (a) via the DB prior to Strategy instantiation, and (b) via Iterators/Models following Strategy instantiation. Usage: dakota_library_mode [-m] [dakota.in]

9.6 main.C File Reference

file containing the main program for DAKOTA

Functions

- int main (int argc, char ∗argv[ ])

  The main DAKOTA program.

9.6.1 Detailed Description

file containing the main program for DAKOTA

9.6.2 Function Documentation

9.6.2.1 int main (int *argc*, char ∗ *argv*[ ])

The main DAKOTA program.

Manage command line inputs, input files, restart file(s), output streams, and top level parallel iterator communicators. Instantiate the Strategy and invoke its run_strategy() virtual function.

9.7 restart_util.C File Reference

file containing the DAKOTA restart utility main program

Namespaces

- namespace Dakota

Functions

- void print_restart (int argc, char **argv, String print_dest)

  print a restart file

- void print_restart_tabular (int argc, char **argv, String print_dest)

  print a restart file (tabular format)

- void read_neutral (int argc, char **argv)

  read a restart file (neutral file format)

- void repair_restart (int argc, char **argv, String identifier_type)

  repair a restart file by removing corrupted evaluations

- void concatenate_restart (int argc, char **argv)

  concatenate multiple restart files

- int main (int argc, char *argv[ ])

  The main program for the DAKOTA restart utility.

9.7.1 Detailed Description

file containing the DAKOTA restart utility main program

9.7.2 Function Documentation

9.7.2.1 int main (int *argc*, char ∗ *argv*[ ])

The main program for the DAKOTA restart utility.

Parse command line inputs and invoke the appropriate utility function (print_restart(), print_restart_tabular(), read_neutral(), repair_restart(), or concatenate_restart()).

Chapter 10

Recommended Practices for DAKOTA Development

10.1 Introduction

Common code development practices can be extremely useful in multiple developer environments. Particular styles for code components lead to improved readability of the code and can provide important visual cues to other developers.

Much of this recommended practices document is borrowed from the CUBIT mesh generation project, which in turn borrows its recommended practices from other projects. As a result, C++ coding styles are fairly standard across a variety of Sandia software projects in the engineering and computational sciences.

10.2 Style Guidelines

Style guidelines involve the ability to discern at a glance the type and scope of a variable or function.

10.2.1 Class and variable styles

Class names should be composed of two or more descriptive words, with the first character of each word capitalized, e.g.:

```
class ClassName;
```

Class member variables should be composed of two or more descriptive words, with the first character of the second and succeeding words capitalized, e.g.:

```
double classMemberVariable;
```

Temporary (i.e. local) variables are lower case, with underscores separating words in a multiple word temporary variable, e.g.:

```
int temporary_variable;
```

Constants (i.e. parameters) and enumeration values are upper case, with underscores separating words, e.g.:

```
const double CONSTANT_VALUE;
```

10.2.2 Function styles

Function names are lower case, with underscores separating words, e.g.:

```
int function_name();
```

There is no need to distinguish between member and non-member functions by style, as this distinction is usually clear by context. This style convention allows member function names which set and return the value of a similarly-named private member variable, e.g.:

```
int memberVariable;
void member_variable(int a) { // set
  memberVariable = a;
}
int member_variable() const { // get
  return memberVariable;
}
```

In cases where the data to be set or returned is more than a few bytes, it is highly desirable to employ const references to avoid unnecessary copying, e.g.:

```
void continuous_variables(const RealVector& c_vars) { // set
  continuousVariables = c_vars;
}
const RealVector& continuous_variables() const {      // get
  return continuousVariables;
}
```

Note that it is not necessary to always accept the returned data as a const reference. If it is desired to be able change this data, then accepting the result as a new variable will generate a copy, e.g.:

```
const RealVector& c_vars = model.continuous_variables(); // reference to continuousVariables cannot be changed
RealVector c_vars = model.continuous_variables();        // local copy of continuousVariables can be changed
```

10.2.3 Miscellaneous

Appearance of typedefs to redefine or alias basic types is isolated to a few header files (`data_types.h`, `template_defs.h`), so that issues like program precision can be changed by changing a few lines of typedefs rather than many lines of code, e.g.:

```
typedef double Real;
```

`xemacs` is the preferred source code editor, as it has C++ modes for enhancing readability through color (turn on "Syntax highlighting"). Other helpful features include "Paren highlighting" for matching parentheses and the "New Frame" utility to have more than one window operating on the same set of files (note that this is still the same edit session, so all windows are synchronized with each other). Window width should be set to 80 internal columns, which can be accomplished by manual resizing, or preferably, using the following alias in your shell resource file (e.g., .cshrc):

```
alias xemacs "xemacs -g 81x63"
```

where an external width of 81 gives 80 columns internal to the window and the desired height of the window will vary depending on monitor size. This window width imposes a coding standard since you should avoid line wrapping by continuing anything over 80 columns onto the next line.

Indenting increments are 2 spaces per indent and comments are aligned with the code they describe, e.g.:

```
void abort_handler(int code)
{
  int initialized = 0;
  MPI_Initialized(&initialized);
  if (initialized) {
    // comment aligned to block it describes
    int size;
    MPI_Comm_size(MPI_COMM_WORLD, &size);
    if (size>1)
      MPI_Abort(MPI_COMM_WORLD, code);
    else
      exit(code);
  }
  else
    exit(code);
}
```

Also, the continuation of a long command is indented 2 spaces, e.g.:

```
  const String& iterator_scheduling
    = problem_db.get_string("strategy.iterator_scheduling");
```

and similar lines are aligned for readability, e.g.:

```
  cout << "Numerical gradients using " << finiteDiffStepSize*100. << "%"
       << finiteDiffType << " differences\nto be calculated by the "
       << methodSource << " finite difference routine." << endl;
```

Lastly, #ifdef's are not indented (to make use of syntax highlighting in xemacs).

10.3 File Naming Conventions

In addition to the style outlined above, the following file naming conventions have been established for the DAKOTA project.

File names for C++ classes should, in general, use the same name as the class defined by the file. Exceptions include:

- with the introduction of the Dakota namespace, base classes which previously utilized prepended Dakota identifiers can now safely omit the identifiers. However, since file names do not have namespace protection from name collisions, they retain the prepended Dakota identifier. For example, a class previously named DakotaModel which resided in DakotaModel.[CH], is now Dakota::Model (class Model in namespace Dakota) residing in the same filenames. The retention of the previous filenames reduces the possibility of multiple instances of a Model.H causing problems. Derived classes (e.g., NestedModel) do not require a prepended Dakota identifier for either the class or file names.
- in a few cases, it is convenient to maintain several closely related classes in a single file, in which case the file name may reflect the top level class or some generalization of the set of classes (e.g., DakotaResponse.[CH] files contain Dakota::Response and Dakota::ResponseRep classes, and DakotaBinStream.[CH] files contain the Dakota::BiStream and Dakota::BoStream classes).

The type of file is determined by one of the four file name extensions listed below:

- **.H** A class header file ends in the suffix .H. The header file provides the class declaration. This file does not contain code for implementing the methods, except for the case of inline functions. Inline functions are to be placed at the bottom of the file with the keyword inline preceding the function name.
- **.C** A class implementation file ends in the suffix .C. An implementation file contains the definitions of the members of the class.
- **.h** A header file ends in the suffix .h. The header file contains information usually associated with procedures. Defined constants, data structures and function prototypes are typical elements of this file.
- **.c** A procedure file ends in the suffix .c. The procedure file contains the actual procedures.

10.4 Class Documentation Conventions

Class documentation uses the doxygen tool available from http://www.doxygen.org and employs the JAVA-doc comment style. Brief comments appear in header files next to the attribute or function declaration. Detailed descriptions for functions should appear alongside their implementations (i.e., in the .C files for non-inlined, or in the headers next to the function definition for inlined). Detailed comments for a class or a class attribute must go in the header file as this is the only option.

NOTE: Previous class documentation utilities (class2frame and class2html) used the "//-" comment style and comment blocks such as this:

```
//- Class:       Model
//- Description: The model to be iterated by the Iterator.  Contains Variables, Interface, and Response objects.
//- Owner:       Mike Eldred
//- Version: $Id: Dev_Recomm_Pract.dox 4549 2007-09-20 18:25:03Z mseldre $
```

These tools are no longer used, so remaining comment blocks of this type are informational only and will not appear in the documentation generated by doxygen.

Chapter 11

Instructions for Modifying DAKOTA's Input Specification

11.1 Modify dakota.input.nspec

The master input specification resides in dakota.input.nspec in Dakota/src. The master input specification can be modified with the addition of new constructs using the following logical relationships:

- () for required group specifications
- [] for optional specifications
- | for "or" conditionals
- { } for functions to process keywords

These constructs can be used to define a variety of dependency relationships in the input specification. It is recommended that you review the existing specification and have an understanding of the constructs in use before attempting to add new constructs.

Warning:

- Do *not* skip this step. Attempts to modify the NIDR_keywds.H file in Dakota/src without using the NIDR table generator are very error-prone. Moreover, the input specification provides a reference to the allowable inputs of a particular executable and should be kept in synch with the parser files (modifying the parser files independent of the input specification creates, at a minimum, undocumented features).
- All keywords in dakota.input.nspec are lower case by convention. All user inputs are converted to lower case by the parser prior to keyword match testing, resulting in case insensitive parsing.
- Since the NIDR parser allows abbreviation of keywords, you *must* avoid adding a keyword that could be misinterpreted as an abbreviation for a different keyword within the same top-level keyword, such as "strategy" and "method". For example, adding the keyword "expansion" within the method specification would be a mistake if the keyword "expansion_factor" already was being used in this specification.

- The NIDR input is somewhat order-dependent, allowing the same keyword to be reused multiple times in the specification. This often happens with aliases, such as `lower_bounds`, `upper_bounds` and `initial_point`. Ambiguities are resolved by attaching a keyword to the most recently seen context in which it could appear, if such exists, or to the first relevant context that subsequently comes along in the input file. With the earlier IDR parser, non-exclusive specifications (those not in mutually exclusive blocks) were required to be unique. That is why there are such aliases for `initial_point` as `cdv_initial_point` and `ddv_initial_point`.

11.2 Rebuild NIDR_keywds.H

```
cd Dakota/packages/nidr
make
```

These steps regenerate NIDR_keywds.H and dakota.input.txt in the Dakota/src directory. As described in more detail in the next section, you must manually update NIDRProblemDescDB.C in Dakota/src to accord with changes to dakota.input.nspec. If you commit changes to a source repository, be sure to commit the updated Dakota/src/NIDR_keywds.H, Dakota/src/dakota.input.nspec, Dakota/src/dakota.input.txt, and your manually updated Dakota/src/NIDRProblemDescDB.C.

11.3 Update NIDRProblemDescDB.C in Dakota/src

Many keywords have data associated with them: an integer, a floating-point number, a string, or arrays of such entities. Data requirements are specified in dakota.input.nspec by the tokens INTEGER, REAL, STRING, INTERLIST, REALLIST, STRINGLIST. (Some keywords have no associated data and hence no such token.) After each keyword and data token, the dakota.input.nspec file specifies functions that the NIDR parser should call to record the appearance of the keyword and deal with any associated data. The general form of this specification is

{ startfcn, startdata, stopfcn, stopdata }

i.e., a brace-enclosed list of one to four functions and data pointers, with trailing entities taken to be zero if not present; zero for a function means no function will be called. The startfcn must deal with any associated data. Otherwise, the distinction between startfcn and stopfcn is relevant only to keywords that begin a group of keywords (enclosed in parentheses or square brackets). The startfcn is called before other entities in the group are processed, and the stop function is called after they are processed. Top-level keywords often have both startfcn and stopfcn; stopfcn is uncommon but possible for lower-level keywords. The startdata and (if needed) stopdata values are usually pointers to little structures that provide keyword-specific details to generic functions for startfcn and stopfcn. Some keywords that begin groups (such as "approx_problem" within the top-level "strategy" keyword) have no need of either a startfcn or a stopfcn; this is indicated by "{0}".

Most of the things within braces in dakota.input.nspec are invocations of macros defined in NIDRProblemDescDB.C. The macros simplify writing dakota.input.nspec and make it more readable. Most macro invocations refer to little structures defined in NIDRProblemDescDB.C, usually with the help of other macros, some of which have different definitions in different parts of NIDRProblemDescDB.C. When adding a keyword to dakota.input.nspec, you may need to add a structure definition or even introduce a new data type. NIDRProblemDescDB.C has sections corresponding to each top-level keyword. The top-level keywords are in alphabetical order, and most

entites in the section for a top-level keyword are also in alphabetical order. While not required, it is probably good practice to maintain this structure, as it makes things easier to find.

Any integer, real, or string data associated with a keyword are provided to the keyword's startfcn, whose second argument is a pointer to a `Values` structure, defined in header file `nidr.h`.

Example 1: if you added the specification:

```
[method_setting REAL {method_setting_start, &method_setting_details} ]
```

you would provide a function

```
    void NIDRProblemDescDB::
method_setting_start(const char *keyname, Values *val, void **g, void *v)
{ ... }
```

in NIDRProblemDescDB.C. In this example, argument `&method_setting_details` would be passed as `v`, `val->n` (the number of values) would be 1 and `*val->r` would be the REAL value given for the `method_setting` keyword. The `method_setting_start` function would suitably store this value with the help of `method_setting_details`.

For some top-level keywords, `g` (the third argument to the startfcn and stopfcn) provides access to a relevant context. For example, `method_start` (the startfcn for the top-level `method` keyword) executes

```
DataMethod *dm = new DataMethod;
*g = (void*)dm;
```

(and supplies a couple of default values to `dm`). The start functions for lower-level keywords within the `method` keyword get access to `dm` through their `g` arguments. Here is an example:

```
 void NIDRProblemDescDB::
method_str(const char *keyname, Values *val, void **g, void *v)
{
        (*(DataMethod**)g)->**(String DataMethod::**)v = *val->s;
        }
```

In this example, `v` is a pointer-to-member, and an assignment is made to one of the components of the DataMethod object pointed to by `*g`. The corresponding stopfcn for the top-level `method` keyword is

```
 void NIDRProblemDescDB::
method_stop(const char *keyname, Values *val, void **g, void *v)
{
        DataMethod *p = *(DataMethod**)g;
        pDDBInstance->dataMethodList.insert(*p);
        delete p;
        }
```

which copies the now populated DataMethod object to the right place and cleans up.

Example 2: if you added the specification

```
[method_setting REALLIST {{N_mdm(RealL,methodCoeffs)}
```

then method_RealL (defined in NIDRProblemDescDB.C) would be called as the startfcn, and methodCoeffs would be the name of a (currently nonexistent) component of DataMethod. The N_mdm macro is defined in NIDRProblemDescDB.C; among other things, it turns `RealL` into `NIDRProblemDescDB::method_RealL`. This function is used to process lists of REAL values for several keywords. By looking at the source, you can see that the list values are val->r[i] for 0 <= `i` < val->n.

11.4 Update ProblemDescDB.C in Dakota/src

11.4.1 Augment/update get_<data_type>() functions

The next update step involves extending the database retrieval functions in ProblemDescDB.C. These retrieval functions accept an identifier string and return a database attribute of a particular type, e.g. a RealVector:

```
const RealVector& get_drv(const String& entry_name);
```

The implementation of each of these functions has a simple series of if-else checks which return the appropriate attribute based on the identifier string. For example,

```
if (entry_name == "variables.continuous_design.initial_point")
  return dbRep->dataVariablesIter->continuousDesignVars;
```

appears at the top of ProblemDescDB::get_drv(). Based on the identifier string, it returns the `continuousDesignVars` attribute from a DataVariables object. Since there may be multiple variables specifications, the `dataVariablesIter` list iterator identifies which node in the list of DataVariables objects is used. In particular, `dataVariablesList` contains a list of all of the `data_variables` objects, one for each time `variables_kwhandler()` has been called by the parser. The particular variables object used for the data retrieval is managed by `dataVariablesIter`, which is set in a `set_db_list_nodes()` operation that will not be described here.

There may be multiple DataMethod, DataModel, DataVariables, DataInterface, and/or DataResponses objects. However, only one strategy specification is currently allowed so a list of DataStrategy objects is not needed. Rather, ProblemDescDB::strategySpec is the lone DataStrategy object.

To augment the get_<data_type>() functions, add `else` blocks with new identifier strings which retrieve the appropriate data attributes from the Data class object. The style for the identifier strings is a top-down hierarchical description, with specification levels separated by periods and words separated with underscores, e.g. `"keyword.group_specification.individual_specification"`. Use the `dbRep->listIter->attribute` syntax for variables, interface, responses, and method specifications. For example, the `method_setting` example attribute would be added to `get_drv()` as:

```
else if (entry_name == "method.method_name.method_setting")
  return dbRep->dataMethodIter->methodSetting;
```

A strategy specification addition would not use a list iterator, and would instead look like:

```
else if (entry_name == "strategy.strategy_name.strategy_setting")
  return dbRep->strategySpec.strategySetting;
```

11.5 Update Corresponding Data Classes

In this step, we extend the Data class definitions (DataStrategy, DataMethod, DataModel, DataVariables, DataInterface, and/or DataResponses) to include the new attributes referenced in UpdateIDRPDDBp2 and Augment/update get_<data_type>() functions.

11.5.1 Update the Data class header file

Add a new attribute to the public data for each of the new specifications. Follow the style guide for class attribute naming conventions (or mimic the existing code).

11.5.2 Update the .C file

Define defaults for the new attributes in the constructor initialization list. Add the new attributes to the assign() function for use by the copy constructor and assignment operator. Add the new attributes to the write(MPIPackBuffer&), read(MPIUnpackBuffer&), and write(ostream&) functions, paying careful attention to the use of a consistent ordering.

11.6 Use get_<data_type>() Functions

At this point, the new specifications have been mapped through all of the database classes. The only remaining step is to retrieve the new data within the constructors of the classes that need it. This is done by invoking the get_<data_type>() function on the ProblemDescDB object using the identifier string you selected in Augment/update get_<data_type>() functions. For example:

```
const String& interface_type = problem_db.get_string("interface.type");
```

passes the `"interface.type"` identifier string to the ProblemDescDB::get_string() retrieval function, which returns the desired attribute from the active DataInterface object.

Warning:

Use of the get_<data_type>() functions is restricted to class constructors, since only in class constructors are the data list iterators (i.e., `dataMethodIter`, `dataModelIter`, `dataVariablesIter`, `dataInterfaceIter`, and `dataResponsesIter`) guaranteed to be set correctly. Outside of the constructors, the database list nodes will correspond to the last set operation, and may not return data from the desired list node.

11.7 Update the Documentation

Doxygen comments should be added to the Data class headers for the new attributes, and the reference manual sections describing the portions of dakota.input.nspec that have been modified should be updated.

Chapter 12

Interfacing with DAKOTA as a Library

12.1 Introduction

Some users may be interested in linking the DAKOTA toolkit into another application for use as an algorithm library. While this is not the primary usage model for DAKOTA, certain facilities are in place to allow this type of integration.

As part of the normal DAKOTA build process, where `Dakota/configure -prefix=‘pwd‘` has been run prior to `make` and `make install`, a `libdakota.a` is created and a copy of it is placed in `Dakota/lib`. This library contains all source files from `Dakota/src` excepting the main.C, restart_util.C, and library_mode.C main programs. This library may be linked with another application through inclusion of `-ldakota` on the link line. Library and header paths may also be specified using the `-L` and `-I` compiler options (using `Dakota/lib` and `Dakota/include`, respectively). Depending on the configuration used when building this library, other libraries for the vendor optimizers and vendor packages will also be needed to resolve DAKOTA symbols for DOT, NPSOL, OPT++, SGOPT, LHS, Epetra, etc. Copies of these libraries are also placed in `Dakota/lib`. A sample XML specification of library names and paths is also available in `Dakota/examples/linked_-interfaces/linkage_spec`.

Warning:

> While users are free to interface DAKOTA as a library within other software applications for their own internal use, the GNU GPL license stipulates that any application linked with DAKOTA in this way defines a "derivative work" and can only be distributed externally under the same GNU GPL open source license. Refer to `http://www.gnu.org/licenses/gpl.html` or contact the DAKOTA team for additional information.

Attention:

> The use of DAKOTA as an algorithm library should be distinguished from the linking of simulations within DAKOTA using the direct application interface (see DirectApplicInterface). In the former, DAKOTA is providing algorithm services to another software application, and in the latter, a linked simulation is providing analysis services to DAKOTA. It is not uncommon for these two capabilities to be used in combination, where a simulation framework provides both the "front end" and the "back end" for DAKOTA.

12.2 Quick start: examples and test code

To learn by example, refer to the files PluginSerialDirectApplicInterface.[CH] and PluginParallelDirectApplicInterface.[CH] in Dakota/src for simple examples of serial and parallel plug-in interfaces. The file library_mode.C in Dakota/src provides example usage of these plug-ins within a mock simulator program that demonstrates the required object instantiation syntax in combination with the three problem database population approaches (input file parsing, data node insertion, and mixed mode). All of this code may be compiled and tested by configuring DAKOTA using the `-with-plugin` option.

12.3 Comparison to main.C

The procedure for utilizing DAKOTA as a library within another application involves a number of steps that are similar to those used in the stand-alone DAKOTA application. The stand-alone procedure can be viewed in the file main.C, and the differences for the library approach are most easily explained with reference to that file. The basic steps of executing DAKOTA include instantiating the ParallelLibrary, CommandLineHandler, and ProblemDescDB objects; managing the DAKOTA input file (ProblemDescDB::manage_inputs()); specifying restart files and output streams (ParallelLibrary::specify_outputs_restart()); and instantiating the Strategy and running it (Strategy::run_strategy()). When using DAKOTA as an algorithm library, the operations are quite similar, although command line information (argc, argv, and therefore CommandLineHandler) will not in general be accessible. In particular, main.C can pass argc and argv into the ParallelLibrary and CommandLineHandler constructors and then pass the CommandLineHandler object into ProblemDescDB::manage_inputs() and ParallelLibrary::specify_outputs_restart(). In an algorithm library approach, a CommandLineHandler object is not instantiated and overloaded forms of the ParallelLibrary constructor, ProblemDescDB::manage_inputs(), and ParallelLibrary::specify_outputs_restart() are used.

The overloaded forms of these functions are as follows. For instantiation of the ParallelLibrary object, the default constructor may be used. This constructor assumes that MPI is administered by the parent application such that the MPI configuration will be detected rather than explicitly created (i.e., DAKOTA will not call MPI_Init or MPI_Finalize). In code, the instantiation

```
ParallelLibrary parallel_lib(argc, argv);
```

is replaced with

```
ParallelLibrary parallel_lib;
```

In the case of specifying restart files and output streams, the call to

```
parallel_lib.specify_outputs_restart(cmd_line_handler);
```

should be replaced with its overloaded form in order to pass the required information through the parameter list

```
parallel_lib.specify_outputs_restart(std_output_filename, std_error_filename,
  read_restart_filename, write_restart_filename, stop_restart_evals);
```

where file names for standard output and error and restart read and write as well as the integer number of restart evaluations are passed through the parameter list rather than read from the command line of the main DAKOTA program. The definition of these attributes is performed elsewhere in the parent application (e.g., specified in the parent application input file or GUI). In this function call, specify `NULL` for any files not in use, which will elicit the desired subset of the following defaults: standard output and standard error are directed to the terminal, no restart input, and restart output to file `dakota.rst`. The `stop_restart_evals` specification is an optional parameter with a default of 0, which indicates that restart processing should process all records. If no overrides of these defaults are intended, the call to `specify_outputs_restart()` may be omitted entirely.

With respect to alternate forms of ProblemDescDB::manage_inputs(), the following section describes different approaches to populating data within DAKOTA's problem description database. It is this database from which all DAKOTA objects draw data upon instantiation. In all cases, the instantiation of the database should use the alternate constructor

```
ProblemDescDB problem_db(parallel_lib);
```

as again the command line handler is not available.

12.4 Problem database population

Now that the ProblemDescDB object has been instantiated, we must populate it with data, either via parsing an input file, direct data insertion, or a mixed approach, as described in the following sections.

12.4.1 Input file parsing

The simplest approach to linking an application with the DAKOTA library is to rely on DAKOTA's normal parsing system to populate DAKOTA's problem database (ProblemDescDB) through the reading of an input file. The disadvantage to this approach is the requirement for an additional input file beyond those already required by the parent application.

In this approach, the main.C call to

```
problem_db.manage_inputs(cmd_line_handler);
```

would be replaced with its overloaded form

```
problem_db.manage_inputs(dakota_input_file);
```

where the file name for the DAKOTA input is passed through the parameter list rather than read from the command line of the main DAKOTA program. Again, the definition of the DAKOTA input file name is performed elsewhere in the parent application (e.g., specified in the parent application input file or GUI). Refer to run_dakota_parse() in library_mode.C for a complete example listing.

ProblemDescDB::manage_inputs() invokes ProblemDescDB::parse_inputs() (which in turn invokes ProblemDescDB::check_input()), ProblemDescDB::broadcast(), and ProblemDescDB::post_process(), which are lower level functions that will be important in the following two sections. Thus, the input file parsing approach may employ a single coarse grain function to coordinate all aspects of problem database population, whereas the two approaches to follow will use lower level functions to accomplish a finer grain of control.

12.4.2 Data node insertion

This approach is more involved than the previous approach, but it allows the application to publish all needed data to DAKOTA's database directly, thereby eliminating the need for the parsing of a separate DAKOTA input file. In this case, ProblemDescDB::manage_inputs() is not called. Rather, DataStrategy, DataMethod, DataModel, DataVariables, DataInterface, and DataResponses objects are instantiated and populated with the desired problem data. These objects are then published to the problem database using ProblemDescDB::insert_node(), e.g.:

```
// instantiate the data object
DataMethod data_method;

// set the attributes within the data object
data_method.methodName = "nond_sampling";
...

// publish the data object to the ProblemDescDB
problem_db.insert_node(data_method);
```

The data objects are populated with their default values upon instantiation, so only the non-default values need to be specified. Refer to the DataStrategy, DataMethod, DataModel, DataVariables, DataInterface, and DataResponses class documentation and source code for lists of attributes and their defaults.

The default strategy is `single_method`, which runs a single iterator on a single model, and the default model is `single`, so it is not necessary to instantiate and publish a DataStrategy or DataModel object if advanced multi-component capabilities are not required. Rather, instantiation and insertion of a single DataMethod, DataVariables, DataInterface, and DataResponses object is sufficient for basic DAKOTA capabilities.

Once the data objects have been published to the ProblemDescDB object, calls to

```
problem_db.check_input();
problem_db.broadcast();
problem_db.post_process();
```

will perform basic database error checking, broadcast a packed MPI buffer of the specification data to other processors, and post-process specification data to fill in vector defaults (scalar defaults are handled in the Data class constructors), respectively. For parallel applications, processor rank 0 should be responsible for Data node population and insertion and the call to ProblemDescDB::check_input(), and all processors should participate in ProblemDescDB::broadcast() and ProblemDescDB::post_process(). Moreover, preserving the order shown assures that large default vectors are not transmitted by MPI. Refer to run_dakota_data() in library_mode.C for a complete example listing.

12.4.3 Mixed mode

In this case, we will combine the parsing of a DAKOTA input file with some direct database updates. The motivation for this approach arises in large-scale applications where large vectors can be awkward to specify in a DAKOTA input file. The first step is to parse the input file, but rather than using

```
problem_db.manage_inputs(dakota_input_file);
```

as described in Input file parsing, we will use the lower level function

```
problem_db.parse_inputs(dakota_input_file);
```

to provide a finer grain of control. The passed input file `dakota_input_file` must contain all required inputs. Since vector data like variable values/bounds/tags, linear/nonlinear constaint coefficients/bounds, etc. are optional, these potentially large vector specifications can be omitted from the input file. Only the variable/response counts, e.g.:

```
method
        linear_inequality_constraints = 500

variables
        continuous_design = 1000

responses
        num_objective_functions = 1
        num_noninear_inequality_constraints = 100000
```

are required in this case. To update the data omissions from their defaults, one uses the ProblemDescDB::set() family of overloaded functions, e.g.

```
Dakota::RealVector drv(1000, 1.); // vector of length 1000, values initialized to 1.
problem_db.set("variables.continuous_design.initial_point", drv);
```

where the string identifiers are the same identifiers used when pulling information from the database using one of the get_<datatype>() functions (refer to the source code of ProblemDescDB.C for a full list). However, the supported ProblemDescDB::set() options are a restricted subset of the database attributes, focused on vector inputs that can be large scale.

If performing these updates within the constructor of a DirectApplicInterface extension/derivation (see Defining the direct application interface), then this code is sufficient since the database is unlocked, the active list nodes of the ProblemDescDB have been set for you, and the correct strategy/method/model/variables/interface/responses specification instance will get updated. The difficulty in this case stems from the order of instantiation. Since the Variables and Response instances are constructed in the base Model class, prior to construction of Interface instances in derived Model classes, database information related to Variables and Response objects will have already been extracted by the time the Interface constructor is invoked and the database update will not propagate.

Therefore, it is preferred to perform these operations at a higher level (e.g., within your main program), prior to Strategy instantiation and execution, such that instantiation order is not an issue. However, in this case, it is necessary to explicitly manage the list nodes of the ProblemDescDB using a specification instance identifier that corresponds to an identifier from the input file, e.g.:

```
problem_db.set_db_variables_node("MY_VARIABLES_ID");
Dakota::RealVector drv(1000, 1.); // vector of length 1000, values initialized to 1.
problem_db.set("variables.continuous_design.initial_point", drv);
```

Alternatively, rather than setting just a single data node, all data nodes may be set using a method specification identifier:

```
problem_db.set_db_list_nodes("MY_METHOD_ID");
```

since the method specification is responsible for identifying a model specification, which in turn identifies variables, interface, and responses specifications. If hardwiring specification identifiers is undesirable, then

```
problem_db.resolve_top_method();
```

can also be used to deduce the active method specification and set all list nodes based on it. This is most appropriate in the case where only single specifications exist for method/model/variables/interface/responses. In each of these cases, setting list nodes unlocks the corresponding portions of the database, allowing set/get operations.

Once all direct database updates have been performed in this manner, calls to ProblemDescDB::broadcast() and ProblemDescDB::post_process() should be used on all processors. The former will broadcast a packed MPI buffer with the aggregated set of specification data from rank 0 to other processors, and the latter will post-process specification data to fill in any vector defaults that have not yet been provided through either file parsing or direct updates (Note: scalar defaults are handled in the Data class constructors). Refer to run_dakota_mixed() in library_mode.C for a complete example listing.

12.5 Instantiating the strategy

With the ProblemDescDB object populated with problem data, we may now instantiate the strategy.

```
// instantiate the strategy
Strategy selected_strategy(problem_db);
```

Following strategy construction, all MPI communicator partitioning has been performed and the ParallelLibrary instance may be interrogated for parallel configuration data. For example, the lowest level communicators in DAKOTA's multilevel parallel partitioning are the analysis communicators, which can be retrieved using:

```
// retrieve the set of analysis communicators for simulation initialization:
// one analysis comm per ParallelConfiguration (PC), one PC per Model.
Array<MPI_Comm> analysis_comms = parallel_lib.analysis_intra_communicators();
```

These communicators can then be used for initializing parallel simulation instances, where the number of MPI communicators in the array corresponds to one communicator per ParallelConfiguration instance.

12.6 Defining the direct application interface

When employing a library interface to DAKOTA, it is frequently desirable to also use a direct interface between DAKOTA and the simulation. There are two approaches to defining this direct interface.

12.6.1 Extension

The first approach involves extending the existing DirectApplicInterface class to support additional direct simulation interfaces. In this case, a new simulation interface function can be added to Dakota/src/DirectApplicInterface.[CH] for the simulation of interest. If the new function will not be a member function, then the following prototype should be used in order to pass the required data:

```
int sim(const Dakota::Variables& vars, const Dakota::ActiveSet& set,
        Dakota::Response& response);
```

If the new function will be a member function, then this can be simplified to

```
int sim();
```

since the data access can be performed through the DirectApplicInterface class attributes.

This simulation can then be added to the logic blocks in DirectApplicInterface::derived_map_ac(). In addition, DirectApplicInterface::derived_map_if() and DirectApplicInterface::derived_map_of() can be extended to perform pre- and post-processing tasks if desired, but this is not required.

While this approach is the simplest, it has the disadvantage that the DAKOTA library may need to be recompiled when the simulation or its direct interface is modified. If it is desirable to maintain the independence of the DAKOTA library from the host application, then the following derivation approach should be employed.

12.6.2 Derivation

The second approach is to derive a new interface from DirectApplicInterface in order to redefine several virtual functions. A typical derived class declaration might be

```
namespace SIM {

class SerialDirectApplicInterface: public Dakota::DirectApplicInterface
{
public:

  // Constructor and destructor

  SerialDirectApplicInterface(const Dakota::ProblemDescDB& problem_db);
  ~SerialDirectApplicInterface();

protected:

  // Virtual function redefinitions

  int derived_map_if(const Dakota::String& if_name);
  int derived_map_ac(const Dakota::String& ac_name);
  int derived_map_of(const Dakota::String& of_name);

private:

  // Data
}

} // namespace SIM
```

where the new derived class resides in the simulation's namespace. Similar to the case of Extension, the DirectApplicInterface::derived_map_ac() function is the required redefinition, and DirectApplicInterface::derived_map_if() and DirectApplicInterface::derived_map_of() are optional.

The new derived interface object (from namespace SIM) must now be plugged into the strategy. In the simplest case of a single model and interface, one could use

```
  // retrieve the interface of interest
  ModelList& all_models  = problem_db.model_list();
  Model&     first_model = *all_models.begin();
```

```
Interface& interface   = first_model.interface();
// plug in the new direct interface instance (DB does not need to be set)
interface.assign_rep(new SIM::SerialDirectApplicInterface(problem_db), false);
```

from within the Dakota namespace. In a more advanced case of multiple models and multiple interface plug-ins, one might use

```
// retrieve the list of Models from the Strategy
ModelList& models = problem_db.model_list();
// iterate over the Model list
for (ModelLIter ml_iter = models.begin(); ml_iter != models.end(); ml_iter++) {
  Interface& interface = ml_iter->interface();
  if (interface.interface_type() == "direct" &&
      interface.analysis_drivers().contains("SIM") ) {
    // set the correct list nodes within the DB prior to new instantiations
    problem_db.set_db_model_nodes(ml_iter->model_id());
    // plug in the new direct interface instance
    interface.assign_rep(new SIM::SerialDirectApplicInterface(problem_db), false);
  }
}
```

In the case where the simulation interface instance should manage parallel simulations within the context of an MPI communicator, one should pass in the relevant analysis communicator(s) to the derived constructor. For the latter case of looping over a set of models, the simplest approach of passing a single analysis communicator would use code similar to

```
const ParallelLevel& ea_level = ml_iter->parallel_configuration_iterator()->ea_parallel_level();
const MPI_Comm& analysis_comm = ea_level.server_intra_communicator();
interface.assign_rep(new SIM::ParallelDirectApplicInterface(problem_db, analysis_comm), false);
```

Since Models may be used in multiple parallel contexts and may therefore have a set of parallel configurations, a more general approach would extract and pass an array of analysis communicators to allow initialization for each of the parallel configurations.

New derived direct interface instances inherit various attributes of use in configuring the simulation. In particular, the ApplicationInterface::parallelLib reference provides access to MPI communicator data (e.g., the analysis communicators discussed in Instantiating the strategy), DirectApplicInterface::analysisDrivers provides the analysis driver names specified by the user in the input file, and DirectApplicInterface::analysisComponents provides additional analysis component identifiers (such as mesh file names) provided by the user which can be used to distinguish different instances of the same simulation interface. It is worth noting that inherited attributes that are set as part of the parallel configuration (instead of being extracted from the ProblemDescDB) will be set to their defaults following construction of the base class instance for the derived class plug-in. It is not until run-time (i.e., within derived_map_if/derived_map_ac/derived_map_of) that the parallel configuration settings are repropagated to the plug-in instance. This is the reason that the analysis communicator should be passed in to the constructor of a parallel plug-in, if the constructor will be responsible for parallel application initialization.

12.7 Additional updates

As part of strategy instantiation, all problem specification data is extracted from ProblemDescDB as various objects are constructed. Therefore, any updates that need to be performed following strategy instantiation must be performed through direct set operations on the constructed objects. In the previous section, the process for updating the Interface object used within a Model was shown. To update other data such as variable values/bounds/tags

or response bounds/targets/tags, refer to the set functions documented in Iterator and Model. As an example, the following code updates the active continuous variable values, which will be employed as the initial guess for certain classes of Iterators:

```
ModelList& all_models  = problem_db.model_list();
Model&     first_model = *all_models.begin();
Dakota::RealVector drv(1000, 1.); // vector of length 1000, values initialized to 1.
first_model.continuous_variables(drv);
```

12.8 Executing the strategy

Finally, with simulation configuration and plug-ins completed, we execute the strategy:

```
// run the strategy
selected_strategy.run_strategy();
```

12.9 Retrieving data after a run

After executing the strategy, final results can be obtained through the use of Strategy::variables_results() and Strategy::response_results(), e.g.:

```
// retrieve the final parameter values
const Variables& vars = selected_strategy.variables_results();

// retrieve the final response values
const Response& resp  = selected_strategy.response_results();
```

In the case of optimization, the final design is returned, and in the case of uncertainty quantification, the final statistics are returned.

12.10 Summary

To utilize the DAKOTA library within a parent software application, the basic steps of main.C and the order of invocation of these steps should be mimicked from within the parent application. Of these steps, ParallelLibrary instantiation, ProblemDescDB::manage_inputs() and ParallelLibrary::specify_outputs_restart() require the use of overloaded forms in order to function in an environment without direct command line access and, potentially, without file parsing. Additional optional steps not performed in main.C include the extension/derivation of the direct interface and the retrieval of strategy results after a run.

DAKOTA's library mode is now in production use within several Sandia and external simulation codes/frameworks.

Chapter 13

Performing Function Evaluations

Performing function evaluations is one of the most critical functions of the DAKOTA software. It can also be one of the most complicated, as a variety of scheduling approaches and parallelism levels are supported. This complexity manifests itself in the code through a series of cascaded member functions, from the top level model evaluation functions, through various scheduling routines, to the low level details of performing a system call, fork, or direct function invocation. This section provides an overview of the primary classes and member functions involved.

13.1 Synchronous function evaluations

For a synchronous (i.e., blocking) mapping of parameters to responses, an iterator invokes Model::compute_response() to perform a function evaluation. This function is all that is seen from the iterator level, as underlying complexities are isolated. The binding of this top level function with lower level functions is as follows:

- Model::compute_response() utilizes Model::derived_compute_response() for portions of the response computation specific to derived model classes.
- Model::derived_compute_response() directly or indirectly invokes Interface::map().
- Interface::map() utilizes ApplicationInterface::derived_map() for portions of the mapping specific to derived application interface classes.

13.2 Asynchronous function evaluations

For an asynchronous (i.e., nonblocking) mapping of parameters to responses, an iterator invokes Model::asynch_compute_response() multiple times to queue asynchronous jobs and then invokes either Model::synchronize() or Model::synchronize_nowait() to schedule the queued jobs in blocking or nonblocking fashion. Again, these functions are all that is seen from the iterator level, as underlying complexities are isolated. The binding of these top level functions with lower level functions is as follows:

- Model::asynch_compute_response() utilizes Model::derived_asynch_compute_response() for portions of the response computation specific to derived model classes.
- This derived model class function directly or indirectly invokes Interface::map() in asynchronous mode, which adds the job to a scheduling queue.
- Model::synchronize() or Model::synchronize_nowait() utilize Model::derived_synchronize() or Model::derived_synchronize_nowait() for portions of the scheduling process specific to derived model classes.
- These derived model class functions directly or indirectly invoke Interface::synch() or Interface::synch_nowait().
- For application interfaces, these interface synchronization functions are responsible for performing evaluation scheduling in one of the following modes:
  - asynchronous local mode (using ApplicationInterface::asynchronous_local_evaluations() or ApplicationInterface::asynchronous_local_evaluations_nowait())
  - message passing mode (using ApplicationInterface::self_schedule_evaluations() or ApplicationInterface::static_schedule_evaluations() on the iterator master and ApplicationInterface::serve_evaluations_synch() or ApplicationInterface::serve_evaluations_peer() on the servers)
  - hybrid mode (using ApplicationInterface::self_schedule_evaluations() or ApplicationInterface::static_schedule_evaluations() on the iterator master and ApplicationInterface::serve_evaluations_asynch() on the servers)
- These scheduling functions utilize ApplicationInterface::derived_map() and ApplicationInterface::derived_map_asynch() for portions of asynchronous job launching specific to derived application interface classes, as well as ApplicationInterface::derived_synch() and ApplicationInterface::derived_synch_nowait() for portions of job capturing specific to derived application interface classes.

13.3 Analyses within each function evaluation

The discussion above covers the parallelism level of concurrent function evaluations serving an iterator. For the parallelism level of concurrent analyses serving a function evaluation, similar schedulers are involved (ForkApplicInterface::synchronous_local_analyses(), ForkApplicInterface::asynchronous_local_analyses(), ApplicationInterface::self_schedule_analyses(), ApplicationInterface::serve_analyses_synch(), ForkApplicInterface::serve_analyses_asynch()) to support synchronous local, asynchronous local, message passing, and hybrid modes. Not all of the schedulers are elevated to the ApplicationInterface level since the system call and direct function interfaces do not yet support nonblocking local analyses (and therefore support synchronous local and message passing modes, but not asynchronous local or hybrid modes). Fork interfaces, however, support all modes of analysis parallelism.

Chapter 14

Software Tools for DAKOTA Development

14.1 Introduction

DAKOTA development relies on Subversion for revision control and the GNU Autotools for configuration management. This section lists these tools, where to acquire recommended versions, and how to configure them.

14.2 Subversion for Version Control

The DAKOTA project uses Subversion (http://subversion.tigris.org/) for software version control. To check DAKOTA out of the Subversion revision control system on development.sandia.gov, it may be necessary to install or upgrade the Subversion client on your system. We are presently using version 1.3.2 available from http://subversion.tigris.org/downloads/subversion-1.3.2.tar.gz.

To configure and build Subversion from source on your machine, the following settings should be used, since DAKOTA is hosted as a FSFS-type repository and depends on the external acro which is stored in a repository requiring SSL certificate handling:

```
tar xzf subversion-1.3.2.tar.gz
cd subversion-1.3.2
./configure --prefix=$HOME/local --with-ssl --without-berkeley-db CFLAGS=-O2
cd neon
./configure --prefix=$HOME/local --enable-shared --with-ssl --without-berkeley-db CFLAGS=-O2
cd ..
make && make check && make -k install
```

The make command as specified will ensure that Subversion is only installed if it passes all its self-tests, as well as making sure that the client install works correctly. Under some conditions, the Subversion build will attempt to write to /usr/lib, even when a -prefix option is passed to ./configure. This error may be disregarded when building the Subversion client, hence the -k option.

Once Subversion is working, DAKOTA (including externals) can be checked out with the single command

```
svn checkout svn+ssh://development.sandia.gov/usr/local/svn/Dakota/trunk Dakota
```

If you experience server timeouts when SVN attempts to fetch external packages through a proxy server, you might need to make a change to your $HOME/.subversion/servers file (generated for you the first time you run svn) by adding

```
[global]
http-proxy-exceptions = localhost, *.intranet.mydomain.com
http-proxy-host = wwwproxy.mydomain.com
```

to the bottom of the file. You should no longer get server timeouts when getting acro from software.sandia.gov. If you find that checking these three packages out from software is unacceptably slow, you may add your hostname to the end of the http-proxy-exceptions line. Finally, svn will prompt you as to whether you wish to accept the SSL certificate from software; type 'p' for permanent.

To set the default editor for Subversion commits, you may add the following to .cshrc:

```
setenv EDITOR "xemacs -g 81X50"
```

14.3 GNU Autotools for Configuration Management

DAKOTA uses the GNU Autotools (http://www.gnu.org/software/autoconf/) for configuration management. Developers are currently using the following versions:

1. m4-1.4.3 (http://ftp.gnu.org/gnu/m4/m4-1.4.3.tar.gz)
2. libtool-1.5.24 (http://ftp.gnu.org/gnu/libtool/libtool-1.5.24.tar.gz)
3. automake-1.9.6 (http://ftp.gnu.org/gnu/automake/automake-1.9.6.tar.gz)
4. autoconf-2.60 (http://ftp.gnu.org/gnu/autoconf/autoconf-2.60.tar.gz)

Building the tools in the order listed above should satisfy dependencies. For each PACKAGE the following build process should suffice:

```
tar xzf $PACKAGE.tar.gz
cd $PACKAGE
./configure --prefix=$HOME/local
make
[make check]
make install
```

(Make check is useful for debugging builds of these packages, but optional and does take considerable time for some packages.)

Index

~Approximation
Dakota::Approximation, 179
~BasisPolynomial
Dakota::BasisPolynomial, 207
~BiStream
Dakota::BiStream, 212
~Constraints
Dakota::Constraints, 248
~EffGlobalMinimizer
Dakota::EffGlobalMinimizer, 330
~Interface
Dakota::Interface, 378
~Iterator
Dakota::Iterator, 393
~Model
Dakota::Model, 480
~ProblemDescDB
Dakota::ProblemDescDB, 630
~Strategy
Dakota::Strategy, 692
~Variables
Dakota::Variables, 744
_initPts
Dakota::JEGAOptimizer, 408
_model
Dakota::JEGAOptimizer::Evaluator, 419

A
Dakota::CONMINOptimizer, 241
accepts_multiple_points
Dakota::JEGAOptimizer, 407
actualModel
Dakota::DataFitSurrModel, 260
add_datapoint
Dakota::Graphics, 358
AllConstraints
Dakota::AllConstraints, 148
allContinuousVarIds
Dakota::Variables, 745
AllVariables
Dakota::AllVariables, 154
alpha_stat
Dakota::BasisPolynomial, 208
append_approximation
Dakota::ApproximationInterface, 184
Dakota::DataFitSurrModel, 259
approx_subprob_constraint_eval
Dakota::SurrBasedLocalMinimizer, 710
approx_subprob_objective_eval
Dakota::SurrBasedLocalMinimizer, 710
approxBuilds
Dakota::SurrogateModel, 726
Approximation
Dakota::Approximation, 178, 179
APPSEvalMgr
Dakota::APPSEvalMgr, 186
APPSOptimizer
Dakota::APPSOptimizer, 189
Array
Dakota::Array, 193
array
Dakota::BaseVector, 199
assign_rep
Dakota::Interface, 379
Dakota::Iterator, 396
Dakota::Model, 483
asstring
Dakota, 86
asynchronous_local_analyses
Dakota::ForkApplicInterface, 338
asynchronous_local_evaluations
Dakota::ApplicationInterface, 172
asynchronous_local_evaluations_nowait
Dakota::ApplicationInterface, 172
augmented_lagrangian_merit
Dakota::SurrBasedMinimizer, 715
autoCorrection
Dakota::SurrogateModel, 726

B
Dakota::CONMINOptimizer, 240
BaseVector

Dakota::BaseVector, 197
BasisPolynomial
Dakota::BasisPolynomial, 206, 207
begins
Dakota::String, 698
beta_stat
Dakota::BasisPolynomial, 208
BiStream
Dakota::BiStream, 211, 212
BoStream
Dakota::BoStream, 215, 216
BPA
Dakota::NonDEvidence, 532
BPAC
Dakota::NonDEvidence, 533
build_approximation
Dakota::ApproximationInterface, 184
Dakota::DataFitSurrModel, 258
build_global
Dakota::DataFitSurrModel, 260
build_local_multipoint
Dakota::DataFitSurrModel, 260

C
Dakota::CONMINOptimizer, 240
check_input
Dakota::NonDSparseGrid, 574
check_status
Dakota::ForkAnalysisCode, 335
checkForEqualityConstraints
Dakota::SurfpackApproximation, 701
clear_all
Dakota::Approximation, 180
clear_current
Dakota::Approximation, 180
Dakota::TANA3Approximation, 733
Clone
Dakota::JEGAOptimizer::Evaluator, 419
close_streams
Dakota::ParallelLibrary, 611
CMAX
Dakota::NonDEvidence, 533
CMIN
Dakota::NonDEvidence, 533
ColinPoint, 224
compute_correction
Dakota::SurrogateModel, 725
compute_statistics
Dakota::NonDExpansion, 537
concatenate_restart
Dakota, 89
conminInfo
Dakota::CONMINOptimizer, 238
constraint0_evaluator
Dakota::SNLLOptimizer, 683
constraint1_evaluator
Dakota::SNLLOptimizer, 683
constraint1_evaluator_gn
Dakota::SNLLLeastSq, 677
constraint2_evaluator_gn
Dakota::SNLLLeastSq, 677
constraint_violation
Dakota::SurrBasedMinimizer, 716
constraintMappingIndices
Dakota::CONMINOptimizer, 239
Dakota::DOTOptimizer, 327
constraintMappingMultipliers
Dakota::CONMINOptimizer, 239
Dakota::DOTOptimizer, 327
constraintMappingOffsets
Dakota::CONMINOptimizer, 239
Dakota::DOTOptimizer, 327
Constraints
Dakota::Constraints, 248
constraintValues
Dakota::CONMINOptimizer, 238
Dakota::DOTOptimizer, 326
contains
Dakota::List, 435
Dakota::String, 697
continuousVarIds
Dakota::DistinctVariables, 322
Dakota::MergedVariables, 447
copy
Dakota::Constraints, 249
Dakota::Variables, 744
copy_results
Dakota::ResponseRep, 657
copy_results_partial
Dakota::ResponseRep, 657
count
Dakota::List, 436
create_plots_2d
Dakota::Graphics, 358
create_tabular_datastream
Dakota::Graphics, 358
CreateEvaluator
Dakota::JEGAOptimizer::EvaluatorCreator, 420

CT
Dakota::CONMINOptimizer, 240
CtelRegexp, 251

DakFuncs0
Dakota, 89
Dakota, 35
asstring, 86
concatenate_restart, 89
DakFuncs0, 89
eval_id_compare, 87
eval_id_compare_by_ptr, 87
eval_id_sort_fn, 87
FIELD_NAMES, 89
flush, 85
getdist, 85
getRmax, 86
id_vars_exact_compare, 86
id_vars_set_compare, 87
id_vars_set_compare_by_ptr, 87
kw_1, 90
kw_10, 92
kw_100, 115
kw_101, 115
kw_102, 115
kw_103, 116
kw_104, 116
kw_105, 116
kw_106, 116
kw_107, 117
kw_108, 117
kw_109, 117
kw_11, 93
kw_110, 117
kw_111, 118
kw_112, 118
kw_113, 118
kw_114, 119
kw_115, 119
kw_117, 119
kw_118, 119
kw_119, 119
kw_12, 93
kw_120, 120
kw_121, 120
kw_122, 120
kw_123, 120
kw_124, 121
kw_125, 121
kw_126, 121
kw_127, 121
kw_128, 122
kw_129, 122
kw_13, 93
kw_130, 122
kw_131, 122
kw_132, 123
kw_133, 123
kw_134, 123
kw_135, 124
kw_136, 124
kw_137, 124
kw_138, 124
kw_139, 125
kw_14, 93
kw_140, 125
kw_141, 125
kw_142, 125
kw_143, 125
kw_144, 126
kw_145, 126
kw_146, 126
kw_147, 126
kw_148, 127
kw_149, 127
kw_15, 94
kw_150, 127
kw_151, 127
kw_152, 128
kw_153, 128
kw_154, 128
kw_155, 128
kw_156, 129
kw_157, 129
kw_158, 129
kw_159, 129
kw_16, 94
kw_160, 130
kw_161, 130
kw_162, 130
kw_163, 130
kw_164, 131
kw_165, 131
kw_166, 131
kw_167, 131
kw_168, 132
kw_169, 132
kw_17, 94
kw_170, 132

kw_171, 132
kw_172, 133
kw_173, 133
kw_174, 133
kw_175, 134
kw_176, 134
kw_177, 134
kw_178, 135
kw_179, 135
kw_18, 94
kw_180, 135
kw_181, 135
kw_182, 136
kw_183, 136
kw_184, 136
kw_185, 137
kw_186, 137
kw_187, 137
kw_188, 138
kw_189, 138
kw_19, 95
kw_190, 138
kw_191, 139
kw_2, 90
kw_20, 95
kw_21, 95
kw_22, 95
kw_23, 96
kw_24, 96
kw_25, 96
kw_26, 97
kw_27, 97
kw_28, 97
kw_29, 97
kw_3, 90
kw_30, 97
kw_31, 98
kw_32, 98
kw_33, 98
kw_34, 99
kw_35, 99
kw_36, 99
kw_37, 99
kw_38, 100
kw_39, 100
kw_4, 90
kw_40, 100
kw_41, 101
kw_42, 101
kw_43, 101
kw_44, 101
kw_45, 101
kw_46, 102
kw_47, 102
kw_48, 102
kw_49, 102
kw_5, 91
kw_50, 103
kw_51, 103
kw_52, 103
kw_53, 103
kw_54, 104
kw_55, 104
kw_56, 104
kw_57, 104
kw_58, 105
kw_59, 105
kw_6, 91
kw_60, 105
kw_61, 105
kw_62, 106
kw_63, 106
kw_64, 106
kw_65, 106
kw_66, 106
kw_67, 107
kw_68, 107
kw_69, 107
kw_7, 91
kw_70, 107
kw_71, 108
kw_72, 108
kw_73, 108
kw_74, 108
kw_75, 109
kw_76, 109
kw_77, 109
kw_78, 109
kw_79, 110
kw_8, 92
kw_80, 110
kw_81, 110
kw_82, 110
kw_83, 111
kw_84, 111
kw_85, 111
kw_86, 111
kw_87, 112

kw_88, 112
kw_89, 112
kw_9, 92
kw_90, 112
kw_91, 113
kw_92, 113
kw_93, 113
kw_94, 113
kw_95, 114
kw_96, 114
kw_97, 114
kw_98, 114
kw_99, 115
lookup_by_val, 88
mindist, 86
mindistindx, 86
operator==, 85
print_restart, 88
print_restart_tabular, 88
read_neutral, 88
repair_restart, 88
set_compare, 86
set_compare_by_ptr, 86
UncLbl, 139
var_mp_bndchk, 139
var_mp_bndchku, 140
var_mp_ibndchk, 140
Dakota::ActiveSet, 143
Dakota::ActiveSet
derivVarsVector, 145
requestVector, 145
Dakota::AllConstraints, 146
Dakota::AllConstraints
AllConstraints, 148
Dakota::AllVariables, 150
Dakota::AllVariables
AllVariables, 154
Dakota::AnalysisCode, 155
Dakota::Analyzer, 159
evaluate_parameter_sets, 161
print_vbd, 161
var_based_decomp, 161
volumetric_quality, 161
Dakota::ApplicationInterface, 163
Dakota::ApplicationInterface
asynchronous_local_evaluations, 172
asynchronous_local_evaluations_nowait, 172
duplication_detect, 171
init_serial, 169
map, 169
self_schedule_analyses, 170
self_schedule_evaluations, 171
serve_analyses_synch, 171
serve_evaluations, 170
serve_evaluations_asynch, 172
serve_evaluations_peer, 173
serve_evaluations_synch, 172
static_schedule_evaluations, 171
stop_evaluation_servers, 170
synch, 169
synch_nowait, 170
synchronous_local_evaluations, 172
Dakota::Approximation, 174
∼Approximation, 179
Approximation, 178, 179
clear_all, 180
clear_current, 180
get_approx, 180
operator=, 179
Dakota::ApproximationInterface, 181
Dakota::ApproximationInterface
append_approximation, 184
build_approximation, 184
functionSurfaces, 184
update_approximation, 183
Dakota::APPSEvalMgr, 185
Dakota::APPSEvalMgr
APPSEvalMgr, 186
isWaiting, 187
recv, 187
spawn, 187
Dakota::APPSOptimizer, 188
APPSOptimizer, 189
find_optimum, 190
initialize_variables_and_constraints, 190
set_apps_parameters, 190
Dakota::Array, 191
Array, 193
data, 194
operator T ∗, 193
operator(), 194
operator=, 193
operator[], 194
Dakota::BaseConstructor, 195
Dakota::BaseVector, 196
Dakota::BaseVector
array, 199
BaseVector, 197

data, 198
length, 198
operator(), 198
operator[], 198
reshape, 198
Dakota::BasisPolyApproximation, 200
Dakota::BasisPolyApproximation
expansionCoeffGrads, 203
Dakota::BasisPolynomial, 204
Dakota::BasisPolynomial
∼BasisPolynomial, 207
alpha_stat, 208
BasisPolynomial, 206, 207
beta_stat, 208
factorial, 209
factorial_ratio, 209
gauss_points, 208
gauss_weights, 208
get_gradient, 207
get_polynomial, 209
get_value, 207
interpolation_points, 209
n_choose_k, 209
norm_squared, 208
operator=, 207
pochhammer, 209
reset_gauss, 208
Dakota::BiStream, 210
Dakota::BiStream
∼BiStream, 212
BiStream, 211, 212
operator>>, 212
Dakota::BoStream, 214
Dakota::BoStream
BoStream, 215, 216
operator<<, 216
Dakota::COLINApplication, 217
DoEval, 218
map_response, 219
next_eval, 219
synchronize, 218
Dakota::COLINOptimizer, 220
find_optimum, 222
set_method_parameters, 223
set_runtime_parameters, 223
set_standard_method_parameters, 222
Dakota::CollaborativeHybridStrategy, 225
Dakota::CommandLineHandler, 227
Dakota::CommandShell, 229
Dakota::CommandShell
flush, 230
Dakota::ConcurrentStrategy, 231
Dakota::ConcurrentStrategy
pack_parameters_buffer, 232
pack_results_buffer, 233
unpack_parameters_buffer, 233
unpack_results_buffer, 233
Dakota::CONMINOptimizer, 234
A, 241
B, 240
C, 240
conminInfo, 238
constraintMappingIndices, 239
constraintMappingMultipliers, 239
constraintMappingOffsets, 239
constraintValues, 238
CT, 240
DF, 241
G1, 240
G2, 240
IC, 241
ISC, 241
MS1, 240
N1, 239
N2, 239
N3, 239
N4, 239
N5, 240
optimizationType, 238
printControl, 238
S, 240
SCAL, 241
Dakota::Constraints, 242
∼Constraints, 248
Constraints, 248
copy, 249
get_constraints, 249
manage_linear_constraints, 249
operator=, 249
reshape, 249
Dakota::DataFitSurrModel, 253
Dakota::DataFitSurrModel
actualModel, 260
append_approximation, 259
build_approximation, 258
build_global, 260
build_local_multipoint, 260
derived_asynch_compute_response, 257

derived_compute_response, 257
derived_init_communicators, 259
derived_synchronize, 257
derived_synchronize_nowait, 258
evaluation_id, 259
update_actual_model, 260
update_approximation, 258
update_from_actual_model, 260
Dakota::DataInterface, 261
Dakota::DataMethod, 263
Dakota::DataMethodRep, 265
Dakota::DataModel, 277
Dakota::DataModelRep, 279
Dakota::DataResponses, 283
Dakota::DataResponsesRep, 285
Dakota::DataStrategy, 289
Dakota::DataStrategyRep, 291
Dakota::DataVariables, 294
Dakota::DataVariablesRep, 296
Dakota::DDACEDesignCompExp, 302
Dakota::DDACEDesignCompExp
DDACEDesignCompExp, 304
resolve_samples_symbols, 304
Dakota::DirectApplicInterface, 306
Dakota::DirectApplicInterface
derived_map_ac, 311
derived_synchronous_local_analysis, 311
Dakota::DistinctConstraints, 312
Dakota::DistinctConstraints
DistinctConstraints, 315
Dakota::DistinctVariables, 316
Dakota::DistinctVariables
continuousVarIds, 322
DistinctVariables, 321
inactiveContinuousVarIds, 322
operator==, 321
Dakota::DOTOptimizer, 323
constraintMappingIndices, 327
constraintMappingMultipliers, 327
constraintMappingOffsets, 327
constraintValues, 326
dotFDSinfo, 326
dotInfo, 325
dotMethod, 326
intCntlParmArray, 326
optimizationType, 326
printControl, 326
realCntlParmArray, 326
Dakota::EffGlobalMinimizer, 328
Dakota::EffGlobalMinimizer
~EffGlobalMinimizer, 330
Dakota::EmbeddedHybridStrategy, 331
Dakota::ForkAnalysisCode, 334
Dakota::ForkAnalysisCode
check_status, 335
Dakota::ForkApplicInterface, 336
Dakota::ForkApplicInterface
asynchronous_local_analyses, 338
derived_synchronous_local_analysis, 337
fork_application, 337
serve_analyses_asynch, 338
synchronous_local_analyses, 338
Dakota::FSUDesignCompExp, 339
Dakota::FSUDesignCompExp
enforce_input_rules, 341
FSUDesignCompExp, 341
Dakota::FunctionCompare, 343
Dakota::GaussProcApproximation, 344
Dakota::GaussProcApproximation
GPmodel_apply, 348
Dakota::GenLaguerreOrthogPolynomial, 350
Dakota::GetLongOpt, 352
Dakota::GetLongOpt
enroll, 354
GetLongOpt, 354
parse, 354
retrieve, 354
usage, 355
Dakota::Graphics, 356
add_datapoint, 358
create_plots_2d, 358
create_tabular_datastream, 358
new_dataset, 358
show_data_3d, 358
Dakota::GridApplicInterface, 360
Dakota::GridApplicInterface
derived_synchronous_local_analysis, 361
Dakota::HermiteOrthogPolynomial, 363
Dakota::HierarchSurrModel, 365
Dakota::HierarchSurrModel
derived_asynch_compute_response, 367
derived_compute_response, 367
derived_synchronize, 368
derived_synchronize_nowait, 368
evaluation_id, 368
Dakota::HybridStrategy, 369
Dakota::Interface, 371
~Interface, 378

assign_rep, 379
get_interface, 379
Interface, 378
operator=, 378
rawResponseArray, 379
rawResponseMap, 379
Dakota::InterpPolyApproximation, 381
Dakota::InterpPolyApproximation
get_mean, 384
get_mean_gradient, 384
get_variance, 385
get_variance_gradient, 385
polynomialBasis, 385
smolyakMultiIndex, 386
Dakota::Iterator, 387
∼Iterator, 393
assign_rep, 396
derived_post_run, 396
derived_pre_run, 396
fdGradStepSize, 397
fdHessByFnStepSize, 397
fdHessByGradStepSize, 397
get_iterator, 397
initialize_graphics, 394
Iterator, 393, 394
operator=, 394
Phi, 397
post_run, 395, 396
pre_run, 395
print_results, 395
run, 394
run_iterator, 395
Dakota::JacobiOrthogPolynomial, 399
Dakota::JEGAOptimizer, 401
_initPts, 408
accepts_multiple_points, 407
find_optimum, 407
GetBestMOSolution, 406
GetBestSolution, 405
GetBestSOSolution, 406
initial_points, 407, 408
JEGAOptimizer, 403
LoadAlgorithmConfig, 404
LoadDakotaResponses, 404
LoadProblemConfig, 404
LoadTheConstraints, 405
LoadTheDesignVariables, 405
LoadTheObjectiveFunctions, 405
LoadTheParameterDatabase, 404
resize_response_results_array, 407
resize_variables_results_array, 406
returns_multiple_points, 407
ToDoubleMatrix, 406
Dakota::JEGAOptimizer::Driver, 409
DestroyAlgorithm, 410
Driver, 409
ExtractAllData, 410
PerformIterations, 410
Dakota::JEGAOptimizer::Evaluator, 412
_model, 419
Clone, 419
Description, 415
Evaluate, 418
Evaluator, 414
GetContinuumVariableValues, 415, 416
GetDescription, 419
GetDiscreteVariableValues, 416
GetName, 418
GetNumberLinearConstraints, 417
GetNumberNonLinearConstraints, 417
Name, 415
RecordResponses, 417
SeparateVariables, 416
Dakota::JEGAOptimizer::EvaluatorCreator, 420
Dakota::JEGAOptimizer::EvaluatorCreator
CreateEvaluator, 420
EvaluatorCreator, 420
Dakota::LagrangeInterpPolynomial, 422
Dakota::LagrangeInterpPolynomial
get_gradient, 423
get_value, 423
precompute_data, 423
Dakota::LaguerreOrthogPolynomial, 425
Dakota::LeastSq, 427
Dakota::LeastSq
derived_post_run, 429
derived_pre_run, 429
get_confidence_intervals, 430
LeastSq, 429
primary_resp_recast, 430
print_results, 429
read_observed_data, 430
run, 429
Dakota::LegendreOrthogPolynomial, 431
Dakota::List, 433
contains, 435
count, 436
find, 435

get, 434
index, 435, 436
insert, 435
operator[], 436
remove, 435
removeAt, 435
Dakota::Matrix, 437
operator=, 439
Dakota::MergedConstraints, 440
Dakota::MergedConstraints
MergedConstraints, 442
Dakota::MergedVariables, 443
Dakota::MergedVariables
continuousVarIds, 447
inactiveContinuousVarIds, 447
MergedVariables, 447
Dakota::Minimizer, 448
derived_post_run, 453
derived_pre_run, 453
initialize_scaling, 454
lin_coeffs_modify_n2s, 455
Minimizer, 453
modify_n2s, 454
modify_s2n, 454
need_resp_trans_byvars, 454
response_modify_n2s, 455
response_modify_s2n, 455
secondary_resp_recast, 454
variables_recast, 454
Dakota::Model, 456
∼Model, 480
assign_rep, 483
derivative_concurrency, 483
estimate_derivatives, 484
estimate_message_lengths, 483
get_model, 484
init_communicators, 483
init_serial, 483
interface, 482
interface_id, 482
local_eval_concurrency, 482
local_eval_synchronization, 482
manage_asv, 485
Model, 480
operator=, 481
subordinate_iterator, 481
subordinate_models, 482
surrogate_model, 481
synchronize_derivatives, 484
truth_model, 481
update_from_subordinate_model, 481
update_quasi_hessians, 484
update_response, 484
Dakota::MPIPackBuffer, 486
Dakota::MPIUnpackBuffer, 489
Dakota::NCSUOptimizer, 492
NCSUOptimizer, 494
Dakota::NestedModel, 495
Dakota::NestedModel
derived_asynch_compute_response, 498
derived_compute_response, 498
derived_init_communicators, 499
derived_master_overload, 499
evaluation_id, 499
response_mapping, 499
subModel, 500
Dakota::NIDRProblemDescDB, 501
Dakota::NIDRProblemDescDB
derived_manage_inputs, 504
Dakota::NL2Res, 506
Dakota::NL2SOLLeastSq, 507
Dakota::NLPQLPOptimizer, 510
Dakota::NLSSOLLeastSq, 515
Dakota::NLSSOLLeastSq
NLSSOLLeastSq, 516
Dakota::NoDBBaseConstructor, 517
Dakota::NonD, 518
Dakota::NonD
derived_post_run, 523
derived_pre_run, 523
initialize_final_statistics, 523
initialize_random_variable_parameters, 524
initialize_random_variable_types, 524
initialize_random_variables, 523
run, 523
set_u_to_x_mapping, 524
vars_u_to_x_mapping, 524
Dakota::NonDAdaptImpSampling, 525
Dakota::NonDAdaptImpSampling
initialize, 527
Dakota::NonDEvidence, 529
Dakota::NonDEvidence
BPA, 532
BPAC, 533
CMAX, 533
CMIN, 533
IP, 533
IPBEL, 533

IPPLA, 533
MAXINTVLS, 532
NCMB, 532
NI, 533
NV, 532
VMAX, 532
VMIN, 532
X, 533
Y, 532
Dakota::NonDExpansion, 535
Dakota::NonDExpansion
compute_statistics, 537
Dakota::NonDGlobalReliability, 538
Dakota::NonDIncremLHSSampling, 541
Dakota::NonDIncremLHSSampling
NonDIncremLHSSampling, 542
quantify_uncertainty, 542
Dakota::NonDIntegration, 544
Dakota::NonDIntegration
NonDIntegration, 545
Dakota::NonDLHSSampling, 547
Dakota::NonDLHSSampling
NonDLHSSampling, 548
quantify_uncertainty, 549
Dakota::NonDLocalReliability, 550
Dakota::NonDLocalReliability
dg_ds_eval, 555
initial_taylor_series, 554
initialize_class_data, 554
initialize_level_data, 554
initialize_mpp_search_data, 554
probability, 555
reliability, 555
update_level_data, 555
update_mpp_search_data, 555
update_pma_reliability_level, 555
Dakota::NonDPolynomialChaos, 557
Dakota::NonDQuadrature, 559
Dakota::NonDQuadrature
NonDQuadrature, 560
sampling_reset, 560
Dakota::NonDReliability, 562
Dakota::NonDReliability
PMA_constraint_eval, 565
PMA_objective_eval, 565
RIA_constraint_eval, 564
RIA_objective_eval, 564
Dakota::NonDSampling, 566
Dakota::NonDSampling
get_parameter_sets, 571
NonDSampling, 570
sampling_reset, 570
Dakota::NonDSparseGrid, 572
Dakota::NonDSparseGrid
check_input, 574
level_to_order_closed, 574
level_to_order_open, 574
NonDSparseGrid, 573
sampling_reset, 574
Dakota::NonDStochCollocation, 576
Dakota::NPSOLOptimizer, 577
NPSOLOptimizer, 579
Dakota::Optimizer, 581
derived_post_run, 584
derived_pre_run, 583
multi_objective_retrieve, 584
Optimizer, 583
primary_resp_recast, 584
print_results, 584
run, 583
weighted_sum, 584
Dakota::OrthogonalPolynomial, 586
Dakota::OrthogPolyApproximation, 588
Dakota::OrthogPolyApproximation
expectation, 593
get_mean, 591
get_mean_gradient, 591, 592
get_variance, 592
get_variance_gradient, 592
gradient_check, 593
integration, 593
regression, 593
Dakota::ParallelConfiguration, 595
Dakota::ParallelLevel, 599
Dakota::ParallelLibrary, 602
Dakota::ParallelLibrary
close_streams, 611
increment_parallel_configuration, 612
init_communicators, 612
manage_outputs_restart, 611
ParallelLibrary, 610, 611
resolve_inputs, 612
specify_outputs_restart, 611
Dakota::ParamResponsePair, 613
Dakota::ParamResponsePair
evalId, 616
idInterface, 616
ParamResponsePair, 615

read, 615
write, 616
Dakota::ParamStudy, 617
Dakota::partial_prp_equality, 620
Dakota::partial_prp_hash, 621
Dakota::ProblemDescDB, 622
Dakota::ProblemDescDB
~ProblemDescDB, 630
get_db, 631
manage_inputs, 631
operator=, 631
parse_inputs, 631
ProblemDescDB, 630
Dakota::PStudyDACE, 633
Dakota::PStudyDACE
print_results, 634
run, 634
Dakota::PSUADEDesignCompExp, 636
Dakota::PSUADEDesignCompExp
enforce_input_rules, 638
PSUADEDesignCompExp, 638
Dakota::RecastBaseConstructor, 639
Dakota::RecastModel, 640
Dakota::RecastModel
initialize, 645
RecastModel, 645
update_from_sub_model, 645
Dakota::Response, 647
Response, 651
Dakota::ResponseRep, 652
Dakota::ResponseRep
copy_results, 657
copy_results_partial, 657
functionGradients, 657
read, 655, 656
read_annotated, 655
read_tabular, 656
reset, 657
reset_inactive, 657
reshape, 657
ResponseRep, 655
write, 655, 656
write_annotated, 655
write_tabular, 656
Dakota::SequentialHybridStrategy, 659
Dakota::SequentialHybridStrategy
extract_parameter_sets, 662
extract_results_sets, 662
merge_results_sets, 663
pack_parameters_buffer, 661
pack_results_buffer, 661
run_sequential, 662
run_sequential_adaptive, 662
unpack_parameters_buffer, 661
unpack_results_buffer, 662
Dakota::SingleMethodStrategy, 666
Dakota::SingleModel, 668
Dakota::SNLLBase, 671
Dakota::SNLLLeastSq, 674
Dakota::SNLLLeastSq
constraint1_evaluator_gn, 677
constraint2_evaluator_gn, 677
nlf2_evaluator_gn, 676
Dakota::SNLLOptimizer, 678
constraint0_evaluator, 683
constraint1_evaluator, 683
nlf0_evaluator, 683
nlf1_evaluator, 683
nlf2_evaluator, 683
SNLLOptimizer, 682
Dakota::SOLBase, 685
Dakota::Strategy, 688
~Strategy, 692
free_iterator, 694
get_strategy, 694
init_iterator, 693
init_iterator_parallelism, 693
operator=, 692
pack_parameters_buffer, 692
pack_results_buffer, 693
run_iterator, 694
schedule_iterators, 694
self_schedule_iterators, 694
serve_iterators, 694
Strategy, 691, 692
unpack_parameters_buffer, 693
unpack_results_buffer, 693
Dakota::String, 696
begins, 698
contains, 697
data, 698
ends, 698
lower, 697
operator const char *, 697
upper, 697
Dakota::SurfpackApproximation, 699
Dakota::SurfpackApproximation
checkForEqualityConstraints, 701

find_coefficients, 700
get_hessian, 701
surrogates_to_surf_data, 701
Dakota::SurrBasedGlobalMinimizer, 703
Dakota::SurrBasedLocalMinimizer, 705
Dakota::SurrBasedLocalMinimizer
approx_subprob_constraint_eval, 710
approx_subprob_objective_eval, 710
hard_convergence_check, 710
hom_constraint_eval, 711
hom_objective_eval, 711
minimize_surrogates, 709
tr_ratio_check, 710
update_penalty, 710
Dakota::SurrBasedMinimizer, 712
Dakota::SurrBasedMinimizer
augmented_lagrangian_merit, 715
constraint_violation, 716
lagrangian_merit, 715
objective, 716
objective_gradient, 716
penalty_merit, 716
print_results, 715
run, 714
update_augmented_lagrange_multipliers, 715
update_filter, 715
update_lagrange_multipliers, 715
Dakota::SurrogateDataPoint, 717
Dakota::SurrogateDataPointRep, 719
Dakota::SurrogateModel, 721
Dakota::SurrogateModel
approxBuilds, 726
autoCorrection, 726
compute_correction, 725
force_rebuild, 725
Dakota::SysCallAnalysisCode, 727
Dakota::SysCallAnalysisCode
spawn_analysis, 728
spawn_evaluation, 727
spawn_input_filter, 728
spawn_output_filter, 728
Dakota::SysCallApplicInterface, 729
Dakota::SysCallApplicInterface
derived_synch, 730
derived_synch_nowait, 730
derived_synchronous_local_analysis, 730
Dakota::TANA3Approximation, 732
clear_current, 733
Dakota::TaylorApproximation, 735
Dakota::Variables, 737
∼Variables, 744
allContinuousVarIds, 745
copy, 744
get_variables, 745
operator=, 744
Variables, 743, 744
Dakota::Vector, 746
operator=, 748
Vector, 748
dakota_stop
dll_api.C, 751
dll_api.h, 753
data
Dakota::Array, 194
Dakota::BaseVector, 198
Dakota::String, 698
DDACEDesignCompExp
Dakota::DDACEDesignCompExp, 304
derivative_concurrency
Dakota::Model, 483
derived_asynch_compute_response
Dakota::DataFitSurrModel, 257
Dakota::HierarchSurrModel, 367
Dakota::NestedModel, 498
derived_compute_response
Dakota::DataFitSurrModel, 257
Dakota::HierarchSurrModel, 367
Dakota::NestedModel, 498
derived_init_communicators
Dakota::DataFitSurrModel, 259
Dakota::NestedModel, 499
derived_manage_inputs
Dakota::NIDRProblemDescDB, 504
derived_map_ac
Dakota::DirectApplicInterface, 311
derived_master_overload
Dakota::NestedModel, 499
derived_post_run
Dakota::Iterator, 396
Dakota::LeastSq, 429
Dakota::Minimizer, 453
Dakota::NonD, 523
Dakota::Optimizer, 584
derived_pre_run
Dakota::Iterator, 396
Dakota::LeastSq, 429
Dakota::Minimizer, 453
Dakota::NonD, 523

Dakota::Optimizer, 583
derived_synch
Dakota::SysCallApplicInterface, 730
derived_synch_nowait
Dakota::SysCallApplicInterface, 730
derived_synchronize
Dakota::DataFitSurrModel, 257
Dakota::HierarchSurrModel, 368
derived_synchronize_nowait
Dakota::DataFitSurrModel, 258
Dakota::HierarchSurrModel, 368
derived_synchronous_local_analysis
Dakota::DirectApplicInterface, 311
Dakota::ForkApplicInterface, 337
Dakota::GridApplicInterface, 361
Dakota::SysCallApplicInterface, 730
derivVarsVector
Dakota::ActiveSet, 145
Description
Dakota::JEGAOptimizer::Evaluator, 415
DestroyAlgorithm
Dakota::JEGAOptimizer::Driver, 410
DF
Dakota::CONMINOptimizer, 241
dg_ds_eval
Dakota::NonDLocalReliability, 555
DistinctConstraints
Dakota::DistinctConstraints, 315
DistinctVariables
Dakota::DistinctVariables, 321
dll_api.C, 751
dakota_stop, 751
dll_api.h, 753
dakota_stop, 753
DoEval
Dakota::COLINApplication, 218
dotFDSinfo
Dakota::DOTOptimizer, 326
dotInfo
Dakota::DOTOptimizer, 325
dotMethod
Dakota::DOTOptimizer, 326
Driver
Dakota::JEGAOptimizer::Driver, 409
duplication_detect
Dakota::ApplicationInterface, 171

ends
Dakota::String, 698
enforce_input_rules
Dakota::FSUDesignCompExp, 341
Dakota::PSUADEDesignCompExp, 638
enroll
Dakota::GetLongOpt, 354
ErrorTable, 333
estimate_derivatives
Dakota::Model, 484
estimate_message_lengths
Dakota::Model, 483
eval_id_compare
Dakota, 87
eval_id_compare_by_ptr
Dakota, 87
eval_id_sort_fn
Dakota, 87
evalId
Dakota::ParamResponsePair, 616
Evaluate
Dakota::JEGAOptimizer::Evaluator, 418
evaluate_parameter_sets
Dakota::Analyzer, 161
evaluation_id
Dakota::DataFitSurrModel, 259
Dakota::HierarchSurrModel, 368
Dakota::NestedModel, 499
Evaluator
Dakota::JEGAOptimizer::Evaluator, 414
EvaluatorCreator
Dakota::JEGAOptimizer::EvaluatorCreator, 420
expansionCoeffGrads
Dakota::BasisPolyApproximation, 203
expectation
Dakota::OrthogPolyApproximation, 593
extract_parameter_sets
Dakota::SequentialHybridStrategy, 662
extract_results_sets
Dakota::SequentialHybridStrategy, 662
ExtractAllData
Dakota::JEGAOptimizer::Driver, 410

factorial
Dakota::BasisPolynomial, 209
factorial_ratio
Dakota::BasisPolynomial, 209
fdGradStepSize
Dakota::Iterator, 397
fdHessByFnStepSize
Dakota::Iterator, 397
fdHessByGradStepSize

Dakota::Iterator, 397
FIELD_NAMES
Dakota, 89
find
Dakota::List, 435
find_coefficients
Dakota::SurfpackApproximation, 700
find_optimum
Dakota::APPSOptimizer, 190
Dakota::COLINOptimizer, 222
Dakota::JEGAOptimizer, 407
flush
Dakota, 85
Dakota::CommandShell, 230
force_rebuild
Dakota::SurrogateModel, 725
fork_application
Dakota::ForkApplicInterface, 337
free_iterator
Dakota::Strategy, 694
FSUDesignCompExp
Dakota::FSUDesignCompExp, 341
functionGradients
Dakota::ResponseRep, 657
functionSurfaces
Dakota::ApproximationInterface, 184

G1
Dakota::CONMINOptimizer, 240
G2
Dakota::CONMINOptimizer, 240
gauss_points
Dakota::BasisPolynomial, 208
gauss_weights
Dakota::BasisPolynomial, 208
get
Dakota::List, 434
get_approx
Dakota::Approximation, 180
get_confidence_intervals
Dakota::LeastSq, 430
get_constraints
Dakota::Constraints, 249
get_db
Dakota::ProblemDescDB, 631
get_gradient
Dakota::BasisPolynomial, 207
Dakota::LagrangeInterpPolynomial, 423
get_hessian
Dakota::SurfpackApproximation, 701
get_interface
Dakota::Interface, 379
get_iterator
Dakota::Iterator, 397
get_mean
Dakota::InterpPolyApproximation, 384
Dakota::OrthogPolyApproximation, 591
get_mean_gradient
Dakota::InterpPolyApproximation, 384
Dakota::OrthogPolyApproximation, 591, 592
get_model
Dakota::Model, 484
get_parameter_sets
Dakota::NonDSampling, 571
get_polynomial
Dakota::BasisPolynomial, 209
get_strategy
Dakota::Strategy, 694
get_value
Dakota::BasisPolynomial, 207
Dakota::LagrangeInterpPolynomial, 423
get_variables
Dakota::Variables, 745
get_variance
Dakota::InterpPolyApproximation, 385
Dakota::OrthogPolyApproximation, 592
get_variance_gradient
Dakota::InterpPolyApproximation, 385
Dakota::OrthogPolyApproximation, 592
GetBestMOSolution
Dakota::JEGAOptimizer, 406
GetBestSolution
Dakota::JEGAOptimizer, 405
GetBestSOSolution
Dakota::JEGAOptimizer, 406
GetContinuumVariableValues
Dakota::JEGAOptimizer::Evaluator, 415, 416
GetDescription
Dakota::JEGAOptimizer::Evaluator, 419
GetDiscreteVariableValues
Dakota::JEGAOptimizer::Evaluator, 416
getdist
Dakota, 85
GetLongOpt
Dakota::GetLongOpt, 354
GetName
Dakota::JEGAOptimizer::Evaluator, 418
GetNumberLinearConstraints
Dakota::JEGAOptimizer::Evaluator, 417

GetNumberNonLinearConstraints
Dakota::JEGAOptimizer::Evaluator, 417
getRmax
Dakota, 86
GPmodel_apply
Dakota::GaussProcApproximation, 348
gradient_check
Dakota::OrthogPolyApproximation, 593

hard_convergence_check
Dakota::SurrBasedLocalMinimizer, 710
hom_constraint_eval
Dakota::SurrBasedLocalMinimizer, 711
hom_objective_eval
Dakota::SurrBasedLocalMinimizer, 711

IC
Dakota::CONMINOptimizer, 241
id_vars_exact_compare
Dakota, 86
id_vars_set_compare
Dakota, 87
id_vars_set_compare_by_ptr
Dakota, 87
idInterface
Dakota::ParamResponsePair, 616
inactiveContinuousVarIds
Dakota::DistinctVariables, 322
Dakota::MergedVariables, 447
increment_parallel_configuration
Dakota::ParallelLibrary, 612
index
Dakota::List, 435, 436
init_communicators
Dakota::Model, 483
Dakota::ParallelLibrary, 612
init_iterator
Dakota::Strategy, 693
init_iterator_parallelism
Dakota::Strategy, 693
init_serial
Dakota::ApplicationInterface, 169
Dakota::Model, 483
initial_points
Dakota::JEGAOptimizer, 407, 408
initial_taylor_series
Dakota::NonDLocalReliability, 554
initialize
Dakota::NonDAdaptImpSampling, 527
Dakota::RecastModel, 645
initialize_class_data
Dakota::NonDLocalReliability, 554
initialize_final_statistics
Dakota::NonD, 523
initialize_graphics
Dakota::Iterator, 394
initialize_level_data
Dakota::NonDLocalReliability, 554
initialize_mpp_search_data
Dakota::NonDLocalReliability, 554
initialize_random_variable_parameters
Dakota::NonD, 524
initialize_random_variable_types
Dakota::NonD, 524
initialize_random_variables
Dakota::NonD, 523
initialize_scaling
Dakota::Minimizer, 454
initialize_variables_and_constraints
Dakota::APPSOptimizer, 190
insert
Dakota::List, 435
intCntlParmArray
Dakota::DOTOptimizer, 326
integration
Dakota::OrthogPolyApproximation, 593
Interface
Dakota::Interface, 378
interface
Dakota::Model, 482
interface_id
Dakota::Model, 482
interpolation_points
Dakota::BasisPolynomial, 209
IP
Dakota::NonDEvidence, 533
IPBEL
Dakota::NonDEvidence, 533
IPPLA
Dakota::NonDEvidence, 533
ISC
Dakota::CONMINOptimizer, 241
isWaiting
Dakota::APPSEvalMgr, 187
Iterator
Dakota::Iterator, 393, 394

JEGAOptimizer
Dakota::JEGAOptimizer, 403
JEGAOptimizer.C, 754

JEGAOptimizer.H, 755

kw_1
Dakota, 90
kw_10
Dakota, 92
kw_100
Dakota, 115
kw_101
Dakota, 115
kw_102
Dakota, 115
kw_103
Dakota, 116
kw_104
Dakota, 116
kw_105
Dakota, 116
kw_106
Dakota, 116
kw_107
Dakota, 117
kw_108
Dakota, 117
kw_109
Dakota, 117
kw_11
Dakota, 93
kw_110
Dakota, 117
kw_111
Dakota, 118
kw_112
Dakota, 118
kw_113
Dakota, 118
kw_114
Dakota, 119
kw_115
Dakota, 119
kw_117
Dakota, 119
kw_118
Dakota, 119
kw_119
Dakota, 119
kw_12
Dakota, 93
kw_120
Dakota, 120
kw_121
Dakota, 120
kw_122
Dakota, 120
kw_123
Dakota, 120
kw_124
Dakota, 121
kw_125
Dakota, 121
kw_126
Dakota, 121
kw_127
Dakota, 121
kw_128
Dakota, 122
kw_129
Dakota, 122
kw_13
Dakota, 93
kw_130
Dakota, 122
kw_131
Dakota, 122
kw_132
Dakota, 123
kw_133
Dakota, 123
kw_134
Dakota, 123
kw_135
Dakota, 124
kw_136
Dakota, 124
kw_137
Dakota, 124
kw_138
Dakota, 124
kw_139
Dakota, 125
kw_14
Dakota, 93
kw_140
Dakota, 125
kw_141
Dakota, 125
kw_142
Dakota, 125
kw_143

Dakota, 125
kw_144
Dakota, 126
kw_145
Dakota, 126
kw_146
Dakota, 126
kw_147
Dakota, 126
kw_148
Dakota, 127
kw_149
Dakota, 127
kw_15
Dakota, 94
kw_150
Dakota, 127
kw_151
Dakota, 127
kw_152
Dakota, 128
kw_153
Dakota, 128
kw_154
Dakota, 128
kw_155
Dakota, 128
kw_156
Dakota, 129
kw_157
Dakota, 129
kw_158
Dakota, 129
kw_159
Dakota, 129
kw_16
Dakota, 94
kw_160
Dakota, 130
kw_161
Dakota, 130
kw_162
Dakota, 130
kw_163
Dakota, 130
kw_164
Dakota, 131
kw_165
Dakota, 131
kw_166
Dakota, 131
kw_167
Dakota, 131
kw_168
Dakota, 132
kw_169
Dakota, 132
kw_17
Dakota, 94
kw_170
Dakota, 132
kw_171
Dakota, 132
kw_172
Dakota, 133
kw_173
Dakota, 133
kw_174
Dakota, 133
kw_175
Dakota, 134
kw_176
Dakota, 134
kw_177
Dakota, 134
kw_178
Dakota, 135
kw_179
Dakota, 135
kw_18
Dakota, 94
kw_180
Dakota, 135
kw_181
Dakota, 135
kw_182
Dakota, 136
kw_183
Dakota, 136
kw_184
Dakota, 136
kw_185
Dakota, 137
kw_186
Dakota, 137
kw_187
Dakota, 137
kw_188

Dakota, 138
kw_189
Dakota, 138
kw_19
Dakota, 95
kw_190
Dakota, 138
kw_191
Dakota, 139
kw_2
Dakota, 90
kw_20
Dakota, 95
kw_21
Dakota, 95
kw_22
Dakota, 95
kw_23
Dakota, 96
kw_24
Dakota, 96
kw_25
Dakota, 96
kw_26
Dakota, 97
kw_27
Dakota, 97
kw_28
Dakota, 97
kw_29
Dakota, 97
kw_3
Dakota, 90
kw_30
Dakota, 97
kw_31
Dakota, 98
kw_32
Dakota, 98
kw_33
Dakota, 98
kw_34
Dakota, 99
kw_35
Dakota, 99
kw_36
Dakota, 99
kw_37
Dakota, 99
kw_38
Dakota, 100
kw_39
Dakota, 100
kw_4
Dakota, 90
kw_40
Dakota, 100
kw_41
Dakota, 101
kw_42
Dakota, 101
kw_43
Dakota, 101
kw_44
Dakota, 101
kw_45
Dakota, 101
kw_46
Dakota, 102
kw_47
Dakota, 102
kw_48
Dakota, 102
kw_49
Dakota, 102
kw_5
Dakota, 91
kw_50
Dakota, 103
kw_51
Dakota, 103
kw_52
Dakota, 103
kw_53
Dakota, 103
kw_54
Dakota, 104
kw_55
Dakota, 104
kw_56
Dakota, 104
kw_57
Dakota, 104
kw_58
Dakota, 105
kw_59
Dakota, 105
kw_6

Dakota, 91
kw_60
Dakota, 105
kw_61
Dakota, 105
kw_62
Dakota, 106
kw_63
Dakota, 106
kw_64
Dakota, 106
kw_65
Dakota, 106
kw_66
Dakota, 106
kw_67
Dakota, 107
kw_68
Dakota, 107
kw_69
Dakota, 107
kw_7
Dakota, 91
kw_70
Dakota, 107
kw_71
Dakota, 108
kw_72
Dakota, 108
kw_73
Dakota, 108
kw_74
Dakota, 108
kw_75
Dakota, 109
kw_76
Dakota, 109
kw_77
Dakota, 109
kw_78
Dakota, 109
kw_79
Dakota, 110
kw_8
Dakota, 92
kw_80
Dakota, 110
kw_81
Dakota, 110
kw_82
Dakota, 110
kw_83
Dakota, 111
kw_84
Dakota, 111
kw_85
Dakota, 111
kw_86
Dakota, 111
kw_87
Dakota, 112
kw_88
Dakota, 112
kw_89
Dakota, 112
kw_9
Dakota, 92
kw_90
Dakota, 112
kw_91
Dakota, 113
kw_92
Dakota, 113
kw_93
Dakota, 113
kw_94
Dakota, 113
kw_95
Dakota, 114
kw_96
Dakota, 114
kw_97
Dakota, 114
kw_98
Dakota, 114
kw_99
Dakota, 115

lagrangian_merit
Dakota::SurrBasedMinimizer, 715
LeastSq
Dakota::LeastSq, 429
length
Dakota::BaseVector, 198
level_to_order_closed
Dakota::NonDSparseGrid, 574
level_to_order_open
Dakota::NonDSparseGrid, 574
library_mode.C, 756

main, 757
run_dakota_data, 756
run_dakota_mixed, 756
run_dakota_parse, 756
lin_coeffs_modify_n2s
Dakota::Minimizer, 455
LoadAlgorithmConfig
Dakota::JEGAOptimizer, 404
LoadDakotaResponses
Dakota::JEGAOptimizer, 404
LoadProblemConfig
Dakota::JEGAOptimizer, 404
LoadTheConstraints
Dakota::JEGAOptimizer, 405
LoadTheDesignVariables
Dakota::JEGAOptimizer, 405
LoadTheObjectiveFunctions
Dakota::JEGAOptimizer, 405
LoadTheParameterDatabase
Dakota::JEGAOptimizer, 404
local_eval_concurrency
Dakota::Model, 482
local_eval_synchronization
Dakota::Model, 482
lookup_by_val
Dakota, 88
lower
Dakota::String, 697

main
library_mode.C, 757
main.C, 758
restart_util.C, 759
main.C, 758
main, 758
manage_asv
Dakota::Model, 485
manage_inputs
Dakota::ProblemDescDB, 631
manage_linear_constraints
Dakota::Constraints, 249
manage_outputs_restart
Dakota::ParallelLibrary, 611
map
Dakota::ApplicationInterface, 169
map_response
Dakota::COLINApplication, 219
MAXINTVLS
Dakota::NonDEvidence, 532
merge_results_sets
Dakota::SequentialHybridStrategy, 663
MergedConstraints
Dakota::MergedConstraints, 442
MergedVariables
Dakota::MergedVariables, 447
mindist
Dakota, 86
mindistindx
Dakota, 86
minimize_surrogates
Dakota::SurrBasedLocalMinimizer, 709
Minimizer
Dakota::Minimizer, 453
Model
Dakota::Model, 480
modify_n2s
Dakota::Minimizer, 454
modify_s2n
Dakota::Minimizer, 454
MS1
Dakota::CONMINOptimizer, 240
multi_objective_retrieve
Dakota::Optimizer, 584

N1
Dakota::CONMINOptimizer, 239
N2
Dakota::CONMINOptimizer, 239
N3
Dakota::CONMINOptimizer, 239
N4
Dakota::CONMINOptimizer, 239
N5
Dakota::CONMINOptimizer, 240
n_choose_k
Dakota::BasisPolynomial, 209
Name
Dakota::JEGAOptimizer::Evaluator, 415
NCMB
Dakota::NonDEvidence, 532
NCSUOptimizer
Dakota::NCSUOptimizer, 494
need_resp_trans_byvars
Dakota::Minimizer, 454
new_dataset
Dakota::Graphics, 358
next_eval
Dakota::COLINApplication, 219
NI
Dakota::NonDEvidence, 533

nlf0_evaluator
Dakota::SNLLOptimizer, 683
nlf1_evaluator
Dakota::SNLLOptimizer, 683
nlf2_evaluator
Dakota::SNLLOptimizer, 683
nlf2_evaluator_gn
Dakota::SNLLLeastSq, 676
NLSSOLLeastSq
Dakota::NLSSOLLeastSq, 516
NonDIncremLHSSampling
Dakota::NonDIncremLHSSampling, 542
NonDIntegration
Dakota::NonDIntegration, 545
NonDLHSSampling
Dakota::NonDLHSSampling, 548
NonDQuadrature
Dakota::NonDQuadrature, 560
NonDSampling
Dakota::NonDSampling, 570
NonDSparseGrid
Dakota::NonDSparseGrid, 573
norm_squared
Dakota::BasisPolynomial, 208
NPSOLOptimizer
Dakota::NPSOLOptimizer, 579
NV
Dakota::NonDEvidence, 532

objective
Dakota::SurrBasedMinimizer, 716
objective_gradient
Dakota::SurrBasedMinimizer, 716
operator const char ∗
Dakota::String, 697
operator T ∗
Dakota::Array, 193
operator()
Dakota::Array, 194
Dakota::BaseVector, 198
operator<<
Dakota::BoStream, 216
operator=
Dakota::Approximation, 179
Dakota::Array, 193
Dakota::BasisPolynomial, 207
Dakota::Constraints, 249
Dakota::Interface, 378
Dakota::Iterator, 394
Dakota::Matrix, 439
Dakota::Model, 481
Dakota::ProblemDescDB, 631
Dakota::Strategy, 692
Dakota::Variables, 744
Dakota::Vector, 748
operator==
Dakota, 85
Dakota::DistinctVariables, 321
operator>>
Dakota::BiStream, 212
operator[]
Dakota::Array, 194
Dakota::BaseVector, 198
Dakota::List, 436
optimizationType
Dakota::CONMINOptimizer, 238
Dakota::DOTOptimizer, 326
Optimizer
Dakota::Optimizer, 583

pack_parameters_buffer
Dakota::ConcurrentStrategy, 232
Dakota::SequentialHybridStrategy, 661
Dakota::Strategy, 692
pack_results_buffer
Dakota::ConcurrentStrategy, 233
Dakota::SequentialHybridStrategy, 661
Dakota::Strategy, 693
ParallelLibrary
Dakota::ParallelLibrary, 610, 611
ParamResponsePair
Dakota::ParamResponsePair, 615
parse
Dakota::GetLongOpt, 354
parse_inputs
Dakota::ProblemDescDB, 631
penalty_merit
Dakota::SurrBasedMinimizer, 716
PerformIterations
Dakota::JEGAOptimizer::Driver, 410
Phi
Dakota::Iterator, 397
PMA_constraint_eval
Dakota::NonDReliability, 565
PMA_objective_eval
Dakota::NonDReliability, 565
pochhammer
Dakota::BasisPolynomial, 209
polynomialBasis
Dakota::InterpPolyApproximation, 385

post_run
Dakota::Iterator, 395, 396
pre_run
Dakota::Iterator, 395
precompute_data
Dakota::LagrangeInterpPolynomial, 423
primary_resp_recast
Dakota::LeastSq, 430
Dakota::Optimizer, 584
print_restart
Dakota, 88
print_restart_tabular
Dakota, 88
print_results
Dakota::Iterator, 395
Dakota::LeastSq, 429
Dakota::Optimizer, 584
Dakota::PStudyDACE, 634
Dakota::SurrBasedMinimizer, 715
print_vbd
Dakota::Analyzer, 161
printControl
Dakota::CONMINOptimizer, 238
Dakota::DOTOptimizer, 326
probability
Dakota::NonDLocalReliability, 555
ProblemDescDB
Dakota::ProblemDescDB, 630
PSUADEDesignCompExp
Dakota::PSUADEDesignCompExp, 638

quantify_uncertainty
Dakota::NonDIncremLHSSampling, 542
Dakota::NonDLHSSampling, 549

rawResponseArray
Dakota::Interface, 379
rawResponseMap
Dakota::Interface, 379
read
Dakota::ParamResponsePair, 615
Dakota::ResponseRep, 655, 656
read_annotated
Dakota::ResponseRep, 655
read_neutral
Dakota, 88
read_observed_data
Dakota::LeastSq, 430
read_tabular
Dakota::ResponseRep, 656
realCntlParmArray
Dakota::DOTOptimizer, 326
RecastModel
Dakota::RecastModel, 645
RecordResponses
Dakota::JEGAOptimizer::Evaluator, 417
recv
Dakota::APPSEvalMgr, 187
regression
Dakota::OrthogPolyApproximation, 593
reliability
Dakota::NonDLocalReliability, 555
remove
Dakota::List, 435
removeAt
Dakota::List, 435
repair_restart
Dakota, 88
requestVector
Dakota::ActiveSet, 145
reset
Dakota::ResponseRep, 657
reset_gauss
Dakota::BasisPolynomial, 208
reset_inactive
Dakota::ResponseRep, 657
reshape
Dakota::BaseVector, 198
Dakota::Constraints, 249
Dakota::ResponseRep, 657
resize_response_results_array
Dakota::JEGAOptimizer, 407
resize_variables_results_array
Dakota::JEGAOptimizer, 406
resolve_inputs
Dakota::ParallelLibrary, 612
resolve_samples_symbols
Dakota::DDACEDesignCompExp, 304
Response
Dakota::Response, 651
response_mapping
Dakota::NestedModel, 499
response_modify_n2s
Dakota::Minimizer, 455
response_modify_s2n
Dakota::Minimizer, 455
ResponseRep
Dakota::ResponseRep, 655
restart_util.C, 759

main, 759
retrieve
Dakota::GetLongOpt, 354
returns_multiple_points
Dakota::JEGAOptimizer, 407
RIA_constraint_eval
Dakota::NonDReliability, 564
RIA_objective_eval
Dakota::NonDReliability, 564
run
Dakota::Iterator, 394
Dakota::LeastSq, 429
Dakota::NonD, 523
Dakota::Optimizer, 583
Dakota::PStudyDACE, 634
Dakota::SurrBasedMinimizer, 714
run_dakota_data
library_mode.C, 756
run_dakota_mixed
library_mode.C, 756
run_dakota_parse
library_mode.C, 756
run_iterator
Dakota::Iterator, 395
Dakota::Strategy, 694
run_sequential
Dakota::SequentialHybridStrategy, 662
run_sequential_adaptive
Dakota::SequentialHybridStrategy, 662

S
Dakota::CONMINOptimizer, 240
sampling_reset
Dakota::NonDQuadrature, 560
Dakota::NonDSampling, 570
Dakota::NonDSparseGrid, 574
SCAL
Dakota::CONMINOptimizer, 241
schedule_iterators
Dakota::Strategy, 694
secondary_resp_recast
Dakota::Minimizer, 454
self_schedule_analyses
Dakota::ApplicationInterface, 170
self_schedule_evaluations
Dakota::ApplicationInterface, 171
self_schedule_iterators
Dakota::Strategy, 694
SeparateVariables
Dakota::JEGAOptimizer::Evaluator, 416
serve_analyses_asynch
Dakota::ForkApplicInterface, 338
serve_analyses_synch
Dakota::ApplicationInterface, 171
serve_evaluations
Dakota::ApplicationInterface, 170
serve_evaluations_asynch
Dakota::ApplicationInterface, 172
serve_evaluations_peer
Dakota::ApplicationInterface, 173
serve_evaluations_synch
Dakota::ApplicationInterface, 172
serve_iterators
Dakota::Strategy, 694
set_apps_parameters
Dakota::APPSOptimizer, 190
set_compare
Dakota, 86
set_compare_by_ptr
Dakota, 86
set_method_parameters
Dakota::COLINOptimizer, 223
set_runtime_parameters
Dakota::COLINOptimizer, 223
set_standard_method_parameters
Dakota::COLINOptimizer, 222
set_u_to_x_mapping
Dakota::NonD, 524
show_data_3d
Dakota::Graphics, 358
SIM, 141
SIM::ParallelDirectApplicInterface, 597
SIM::SerialDirectApplicInterface, 664
smolyakMultiIndex
Dakota::InterpPolyApproximation, 386
SNLLOptimizer
Dakota::SNLLOptimizer, 682
spawn
Dakota::APPSEvalMgr, 187
spawn_analysis
Dakota::SysCallAnalysisCode, 728
spawn_evaluation
Dakota::SysCallAnalysisCode, 727
spawn_input_filter
Dakota::SysCallAnalysisCode, 728
spawn_output_filter
Dakota::SysCallAnalysisCode, 728
specify_outputs_restart
Dakota::ParallelLibrary, 611

static_schedule_evaluations
Dakota::ApplicationInterface, 171
stop_evaluation_servers
Dakota::ApplicationInterface, 170
Strategy
Dakota::Strategy, 691, 692
subModel
Dakota::NestedModel, 500
subordinate_iterator
Dakota::Model, 481
subordinate_models
Dakota::Model, 482
surrogate_model
Dakota::Model, 481
surrogates_to_surf_data
Dakota::SurfpackApproximation, 701
synch
Dakota::ApplicationInterface, 169
synch_nowait
Dakota::ApplicationInterface, 170
synchronize
Dakota::COLINApplication, 218
synchronize_derivatives
Dakota::Model, 484
synchronous_local_analyses
Dakota::ForkApplicInterface, 338
synchronous_local_evaluations
Dakota::ApplicationInterface, 172

ToDoubleMatrix
Dakota::JEGAOptimizer, 406
tr_ratio_check
Dakota::SurrBasedLocalMinimizer, 710
truth_model
Dakota::Model, 481

UncLbl
Dakota, 139
unpack_parameters_buffer
Dakota::ConcurrentStrategy, 233
Dakota::SequentialHybridStrategy, 661
Dakota::Strategy, 693
unpack_results_buffer
Dakota::ConcurrentStrategy, 233
Dakota::SequentialHybridStrategy, 662
Dakota::Strategy, 693
update_actual_model
Dakota::DataFitSurrModel, 260
update_approximation
Dakota::ApproximationInterface, 183
Dakota::DataFitSurrModel, 258
update_augmented_lagrange_multipliers
Dakota::SurrBasedMinimizer, 715
update_filter
Dakota::SurrBasedMinimizer, 715
update_from_actual_model
Dakota::DataFitSurrModel, 260
update_from_sub_model
Dakota::RecastModel, 645
update_from_subordinate_model
Dakota::Model, 481
update_lagrange_multipliers
Dakota::SurrBasedMinimizer, 715
update_level_data
Dakota::NonDLocalReliability, 555
update_mpp_search_data
Dakota::NonDLocalReliability, 555
update_penalty
Dakota::SurrBasedLocalMinimizer, 710
update_pma_reliability_level
Dakota::NonDLocalReliability, 555
update_quasi_hessians
Dakota::Model, 484
update_response
Dakota::Model, 484
upper
Dakota::String, 697
usage
Dakota::GetLongOpt, 355

var_based_decomp
Dakota::Analyzer, 161
var_mp_bndchk
Dakota, 139
var_mp_bndchku
Dakota, 140
var_mp_ibndchk
Dakota, 140
Variables
Dakota::Variables, 743, 744
variables_recast
Dakota::Minimizer, 454
vars_u_to_x_mapping
Dakota::NonD, 524
Vector
Dakota::Vector, 748
VMAX
Dakota::NonDEvidence, 532
VMIN
Dakota::NonDEvidence, 532

volumetric_quality
Dakota::Analyzer, 161

weighted_sum
Dakota::Optimizer, 584
write
Dakota::ParamResponsePair, 616
Dakota::ResponseRep, 655, 656
write_annotated
Dakota::ResponseRep, 655
write_tabular
Dakota::ResponseRep, 656

X
Dakota::NonDEvidence, 533

Y
Dakota::NonDEvidence, 532